


4-4 FIXING OF A REAR BODY

Fixing with U-bolt is recommended in ISUZU MOTORS.

Do not weld the sub frame with chassis frame directly or bolt on flange to fix rear body.

- 1 Location and pitch of fixing
 - The first fixing location
 - Fixing should be distant from the cab back by 1,000mm or less.
 - Pitch of fixing
 - Fixing other than those in the rear axle area should be spaced no longer than 1,000mm.
 Securely fasten them on a chassis frame.

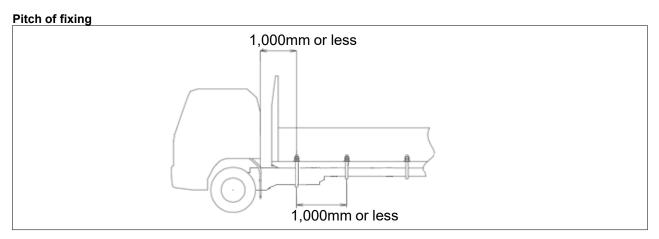

- •The recommended position of the first position of the U-bolt
 - The recommended position of the first position of the U-bolt is shown below. When
 inserting the U-bolt into the chassis frame, detach the exhaust pipe and the under cover
 as necessary.
 - After inserting the U-bolt, restore the removed parts by all means. Do not to restore the parts may cause law nonconformity and adversely affect running performance.
 - Use anti-shifting bracket described in "5 Precautions of using anti-shifting" together.

