


- •Note the following when fixing together to factory-installed harness with band clips.
- Put the additional harness in the vinyl chloride tube or the corrugate tube, use nylon clip to fix along the wire harness for the vehicle.

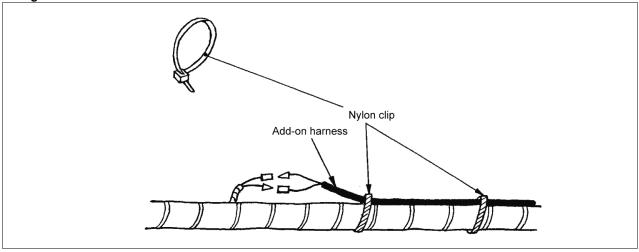



If an additional harness is to be laid along the factory-installed harnesses, it should be firmly secured so as to avoid flip-flop movement induced by vibration of engine and vehicle, protecting factory-installed harnesses from being damaged. Fix clips at a the portion of the factory-installed harness which is protected by the materials such as COT-TUBE, polyvinyl chloride tube, hard tube, and protector, should be chosen to do so.

