AN1902

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages Rev. 8.0 — 6 February 2018 Application

Application note

Document information

Information	Content
Keywords	QFN, SON, PCB, Assembly, Soldering
Abstract	This document provides guidelines for the handling and board mounting of QFN and SON packages including recommendations for printed-circuit board (PCB) design, soldering, and rework.



Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

Revision history

Rev	Date	Description
v.8	20180206	Rewrote to combine Freescale AN1902 and NXP AN10365 application notes into a single document.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

1 Introduction

This application note provides guidelines for the handling and board mounting of NXP's QFN and SON packages including recommendations for printed-circuit board (PCB) design, board mounting, and rework. Generic information of package properties such as moisture sensitivity level (MSL) rating, board level reliability, mechanical and thermal resistance data are also provided. Semiconductor components are electrical (ESD) and mechanical sensitive devices. Proper precautions for handling, packing and processing are described.

2 Scope

This application note contains generic information about various QFN and SON packages assembled at NXP and NXP's assembly and test vendors. Refer to Section 9 "Downloading package information from NXP website" of this application note for step by step instructions for retrieving package information. For more details about NXP products, visit www.nxp.com or contact the appropriate product application team. Development efforts are required to optimize the board assembly process and application design per individual product requirements. Additionally, industry standards (such as IPC and JEDEC), and prevalent practices in the board assembly environment are good references.

3 SON and QFN packages

3.1 Package description

The small outline no-lead (SON)/quad flat no-lead (QFN) is a small size, lead-less plastic package with a low profile, moderate thermal dissipation, and good electrical performance. It is a surface mount package with metallized terminal pads located at the bottom surface of the package. SON have terminal pads along two opposite edges of the package versus QFN with terminal pads along the four edges of the bottom surface. SON is sometimes also referred as DFN: Dual flat no-lead package.


QFN/SON are also designed with the die attach pad exposed at the bottom side to create an efficient heat path to the PCB. Heat transfer can be further facilitated by metal vias in the thermal land pattern of the PCB. The exposed pad also enables ground connection.


QFN/SON are suitable for a broad range of applications in consumer, industrial, and automotive area, including sensor and power applications.

QFN/SON main features are:

- Package size: < 1 × 1 mm² to 12 × 12 mm²
- Maximum seated height: 0.35 mm to 2.10 mm (standard: 0.85 mm)
- · Terminal counts:
 - Single row 4 to 72
 - Multi-row up to 184
- Terminal pitch: 0.35 mm to 0.90 mm
- · Terminal plating: Ni-Pd-Au, Sn
- Meets RoHS, ELV and REACH
- Halogen-free and lead-free compliant

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

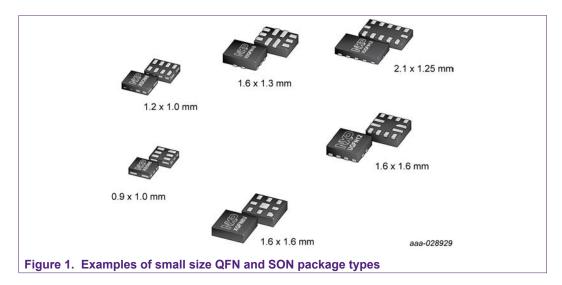

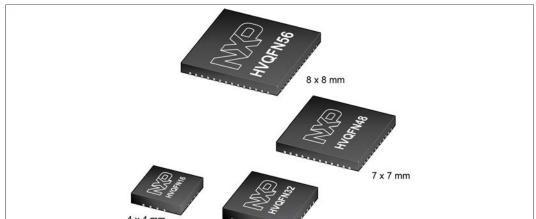

aaa-028930

NXP adopted the package design rules under JEDEC, documents MO-220 (standard QFN), and MO-229, MO-241 (SON/DFN), respectively.


3.2 Punch- and sawn-type packages

The QFN/SON package are assembled using two different methods:

Figure 2. Examples of large size QFN and SON package types

- The sawn-type is molded in a single mold cavity or mold array process (MAP) and separated into individual packages during a final saw process.
- The punch-type is molded in individual cavities and separated using a punch tool.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

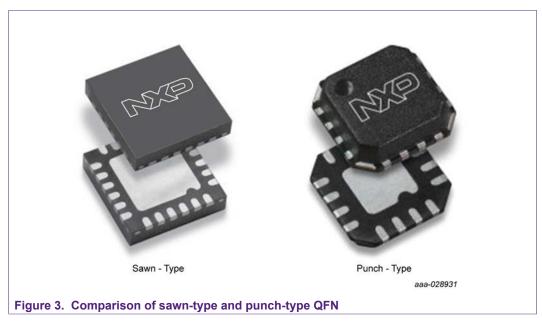

Both package types are JEDEC-compliant designs. The MAP-molded, sawn type is the standard for NXP's packages.

3.3 Package design

<u>Figure 4</u> shows a cross-section of a typical sawn QFN/SON. The package design is leadframe based. The die is usually glued to the die pad of the leadframe, either with a conductive or nonconductive adhesive. Electrical interconnections from the die to the terminal pads are made with wire bonding. The die pad is exposed external to the package.



Chip-on-lead (COL) package designs enable a near chip-scale integration (Figure 5). The die is placed on internally extended terminal fingers using an insulating, but thermally conductive adhesive. This allows a larger die to be assembled in the same package size using conventional wire bonding, and also enables flip chip interconnects with solder bumps or copper pillars.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages



3.4 Package terminal types

QFN/SON terminal pads can vary in design, shape, and dimensions. Two different terminal designs are common for sawn QFN distinguishable by the geometry of the outer terminal ends.

3.4.1 Fully-exposed terminal ends

This is the standard design of NXP packages (Figure 6). Terminal ends are exposed all the way to the edge of the package when viewed from the bottom of the package. The lead ends are fully exposed to the side of the package. It is possible that a solder fillet is formed up the side of the component if the terminal end is properly wetted. This may not be the case if the bare copper has been oxidized during NXP dry-bake step or during customer storage.



Figure 6. Fully-exposed terminal ends (package bottom and side view)

3.4.2 Pull-back terminal ends

The terminal ends are pulled back from the package edge (Figure 7). Mold compound is visible at the package edge between the edge and the end of the terminal when viewed from the package bottom side. The terminal end is slightly recessed, no solder fillet is expected after the solder reflow process.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

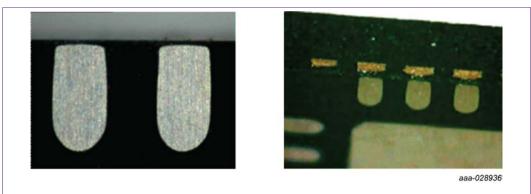


Figure 7. Pull-back terminal ends (package bottom and side view)

3.4.3 Terminal ends with side wettable flank


Wettable flanks (WF) are modifications to the fully-exposed terminal ends, which promote solder wetting for the formation of a solder fillet. Uniform solder fillets are needed to enable inspection for solder failures using automatic optical inspection (AOI) and avoids the need for x-ray inspection, with additional cost and layout restrictions for the PCB.


<u>Figure 8</u> shows that NXP's primary WF features are step cuts and dimples at the terminal ends. The step cut is formed during the package singulation process, while the "dimpled" terminal is formed during the half-etching step of the leadframe fabrication process. The fillets are formed and should be visible on the PCB after the solder reflow process, as shown in <u>Figure 9</u> and <u>Figure 10</u>.

Fillet formation, size and shape is highly dependent upon solder paste, stencil design, board layout, reflow profile, and other PCB assembly parameters. To get optimal results, follow the guidelines in <u>Section 4.2 "PCB footprint design"</u>.



Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

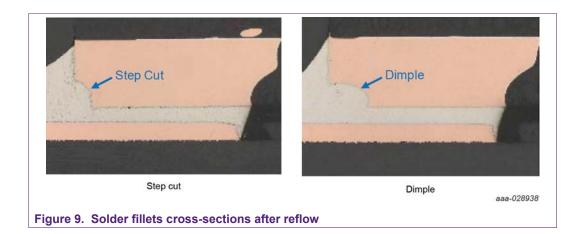

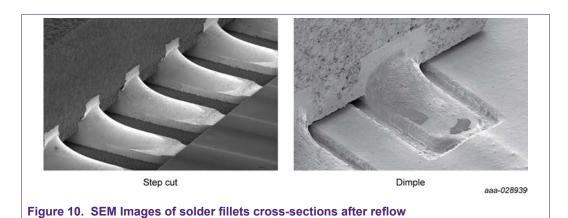

4 Printed-circuit board (PCB) guidelines

4.1 PCB design guidelines and requirements


As the package size shrinks and the terminal count increases, the dimensional tolerance and positioning accuracy affects subsequent processes. Part interchangeability is also a concern when two separate suppliers provide production parts for the PCB. The optimized PCB layout for one supplier may have issues (manufacturing yield and/or solder joint life) with the other supplier's parts. When more than one source is expected, the PCB layout should be optimized for both parts. Additional information of this topic is provided in this section.

A proper PCB footprint and stencil design is critical to surface mount assembly yields and subsequent electrical and mechanical performance of the mounted package. The design starts with obtaining the correct package drawing. Package outline drawings are available at www.nxp.com (follow the procedure described in Section 9"Downloading package information from NXP website"). The drawing contains the package dimensions as well as the recommended footprint (land pattern) for soldering.


<u>Figure 11</u> shows an example package outline drawing for a HVQFN48 (plastic thermal enhanced very thin, quad flat package; no leads; 48 terminals; body 7 × 7 × 0.85 mm³).

Figure 12 shows a proposal for the reflow soldering footprint of this HVQFN48 package.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

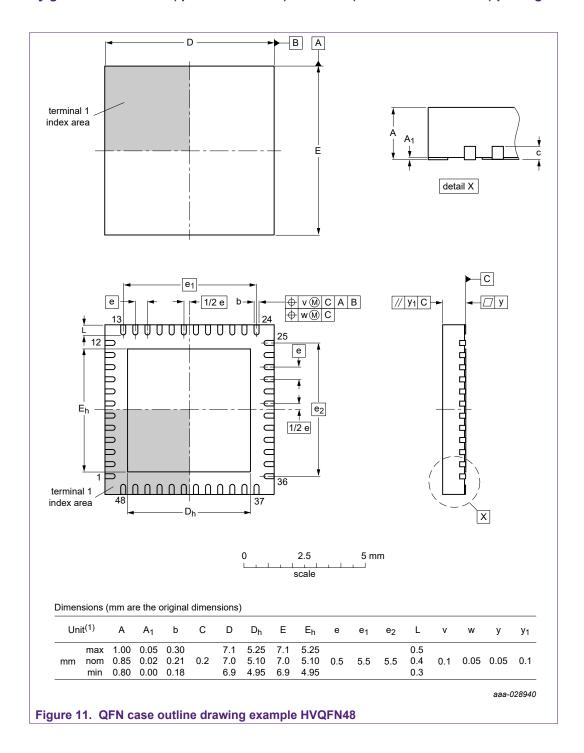


Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

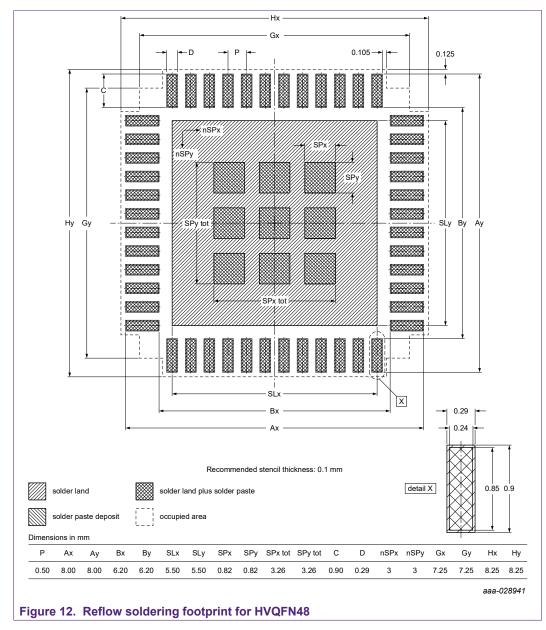

Note: This footprint is meant be used as guideline and a starting point for individual PCB designs. To achieve optimum assembly quality, the user must adapt the footprint to meet needs, assembly, and application environment.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

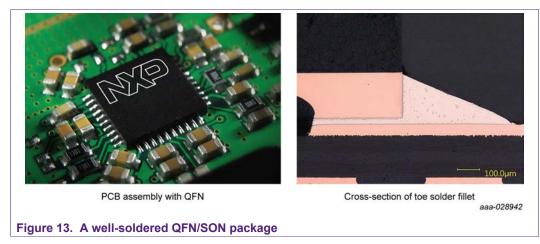

The cross-section picture in <u>Figure 13</u> shows the goal of a well-soldered QFN/SON terminal, void-free solder joint and a smooth solder fillet.

4.2 PCB footprint design

4.2.1 Guidelines for perimeter land patterns

A land is the conductive pattern on the PCB used for the solder connection of a component. The land pattern is a combination of lands intended for the board mounting of a particular component. In NXP documents land patterns are also referred as footprint for reflow soldering.

NXP follows the generic requirements for surface mount design and land pattern standards from the Institute for Printed Circuits (IPC) document IPC-7351. The document can be purchased from the IPC's website http://www.ipc.org/ online store, and includes guidelines for a large number of QFN/SONs, based on assumed package dimensions.


NXP also recommends considering the guidelines given in IPC-7093 Design and Assembly Process Implementation for Bottom Termination Components for QFN/SON PCB and process design.

4.2.1.1 Guidelines for size of perimeter Cu-lands:

All PCB land calculation should be based on the nominal size of the package terminal. Length of perimeter lands:

- The land should extend ~0.05 mm towards the center of the package (Figure 14).
- The land should extend ≥ 0.20 mm from the package edge to the exterior for QFN/SON with fully-exposed lead ends.
- The land should extend ≥ 0.40 mm from the package edge to the exterior for QFN/SON with side wettable flanks to form inspectable toe solder fillets (Figure 14). If board space allows, a longer land extension (such as 0.60 mm) will generally result in more consistent fillet formation because it will be influenced less by PCB assembly issues (e.g. misalignment).
- The PCB land should not extend beyond the package edge for packages with pull-back terminal ends.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

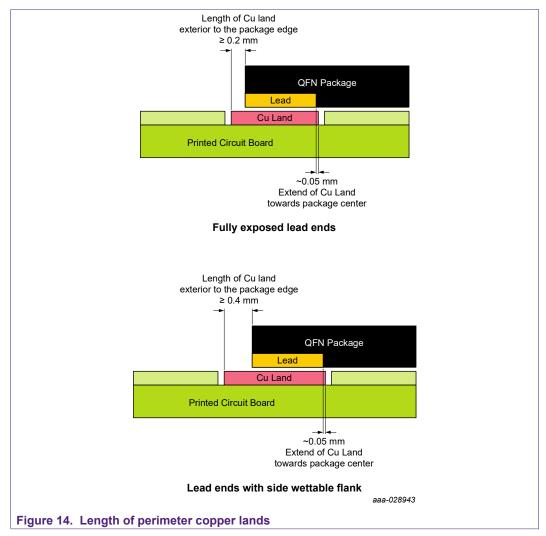

Width of perimeter lands:

- The PCB land width should be approximately the same as the nominal package terminal width (see <u>Table 1</u>).
- Terminal pitch needs to be designed using the exact dimensions of 0.40, 0.50, 0.65, 0.80, and 1.00 mm.

Table 1. Recommended land width as a function of terminal pitch


Terminal pitch (mm)	Land width (mm)		
0.40	0.200		
0.50	0.250		
0.65	0.370		
0.80	0.400		
1.00	0.500		

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

4.2.1.2 Solder mask guidelines for perimeter lands


For perimeter PCB lands, it is recommended to use non-solder mask-defined (NSMD), because they provide significant advantages over solder mask-defined (SMD) lands in terms of dimensional tolerances and registration accuracy. The NSMD has a solder mask opening that is larger than the copper land, and the PCB pad area is controlled by the size of the copper land. Since the copper etching process is capable and stable, a smaller size copper land can be defined more accurately. Figure 15 shows the pad design concepts.

The solder mask should be pulled away from the perimeter lands to account for the registration tolerance of the solder mask. The opening should be 0.12 to 0.15 mm larger than the land size resulting in 0.060 to 0.075 mm clearance between the copper land and solder mask (IPC-7351).

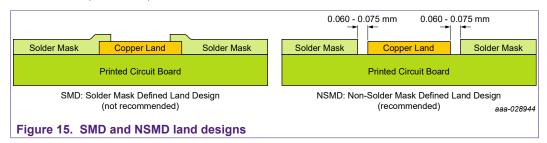

Each land should have its own solder mask opening with a web of solder mask between two adjacent leads (Figure 16). IPC-7351 recommends having at least 0.075 mm of web width to ensure adhesion to the PCB surface is sufficient. Minimum solder mask width will also depend on PCB manufacturer capabilities.

Individual solder mask openings will not work for pitches ≤ 0.40 mm, taking requirements for minimum spacing and width of solder mask into account. A single large solder mask opening for all lands can be used as an alternative design for small pitches (Figure 16).

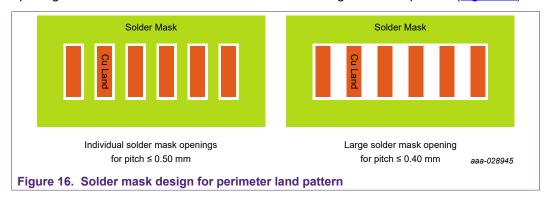

4.2.1.3 Clearance to vias and adjacent components


Placement of exposed, not covered by solder mask, PCB vias and traces near package corners should be avoided to eliminate potential shorting between exposed package tiebar features.

Other surface mount devices and insertion components (THT or through hole technology) should be placed sufficiently away from package land pattern area to avoid potential package and board defects.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

4.2.1.4 Pin 1 keep out area

Different design features are used to identify the package orientation and location of "Pin 1" on package bottom side. This can either be a small square pad (left), a notch in the exposed pad (middle), or a chamfer in the exposed pad corner (right) as shown in Figure 17. The feature is not necessarily included in the package outline drawing as published. In the event of an open trace on the PC-board, there may be unintentional contact between this trace and the small square pad, leading to a malfunction. To prevent this, NXP prescribes a "keep out" area for the corner/pin 1 area of the PC-board, as indicated in Figure 17, which applies to all designs.

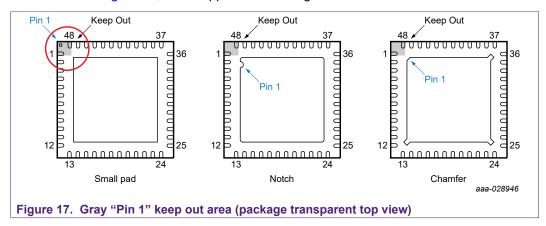

4.2.1.5 Keep out areas for QFN accelerometer sensors


Avoid positioning screw holes for PCB attachment near the accelerometer location. Doing so may flex the PCB and affect product performance.

To prevent the risk of package tie-bar shorting with PCB traces, it is recommended that vias and other insertion components are kept at least 2 mm away from the package edge.

4.2.2 Guideline for exposed pad land patterns

QFN/SON packages with an exposed pad (EP) on the bottom, enhance the thermal and electrical performance of the package. The die is attached directly to the exposed pad thus providing an efficient heat removal path, as well as excellent electrical grounding to the PCB as shown in Figure 18. To further optimize thermal performance, the PCB design should include thermal vias and a thermal plane(s).

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

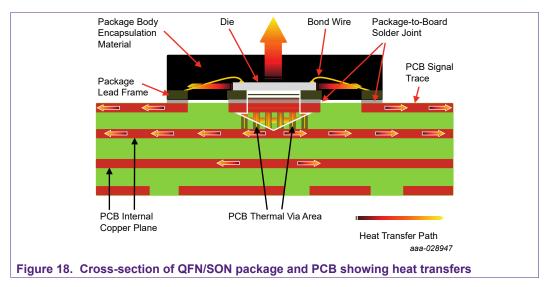


Although the land pattern design of the perimeter lands for exposed pad packages should be the same as that for non-thermally/electrically enhanced packages, extra features are required during the PCB design and assembly stage for effectively mounting thermally/electrically enhanced packages. In addition, repair and rework of assembled exposed pad packages may involve some extra steps, depending upon the current rework practice within the company.

4.2.2.1 Spacing between perimeter and exposed pad land pattern

The design of the land pattern and the size of the exposed thermal pad depends strongly on the thermal characteristics and power dissipation of the specific product and application. To maximize both removal of heat from the package and electrical performance, a land pattern must be incorporated on the PCB within the footprint of the package corresponding to the exposed metal pad (as shown in Figure 19).

The size of the land pattern can be larger, smaller, or even take on a different shape than the exposed pad on the package. However, the area that can be soldered (which should be defined by the solder mask) should be approximately the same size/shape as the exposed pad area on the package to maximize the thermal/electrical performance. A clearance of at least 0.25 mm should be designed on the PCB between the outer edges of the exposed pad land pattern and the inner edges of perimeter land pattern to avoid any shorts.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

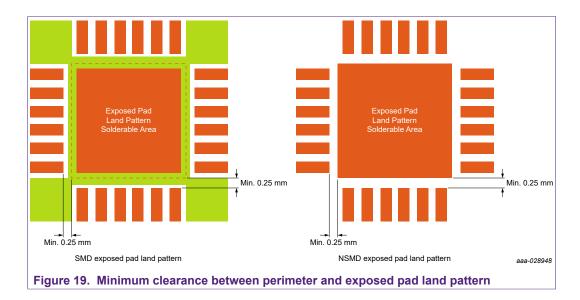


4.2.2.2 Segmented exposed pad land pattern design

Alternatively, the land pattern for the exposed pad can be segmented into a symmetric array of square or rectangular lands, as shown in <u>Figure 20</u>. The land array can be created either by segmentation of a full copper area by solder mask openings, or by NSDM defined copper lands.

- Recommended edge length/width of a matrix land is between 1.0 to 2.0 mm
- Distance between the lands should be 0.40 mm

The segmented PCB design facilitates the solder paste flux outgassing during reflow, thereby promoting a lower voiding level of the completed solder joint. The maximum size of a single solder void is limited by the dimensions of a single matrix segment at the same time.

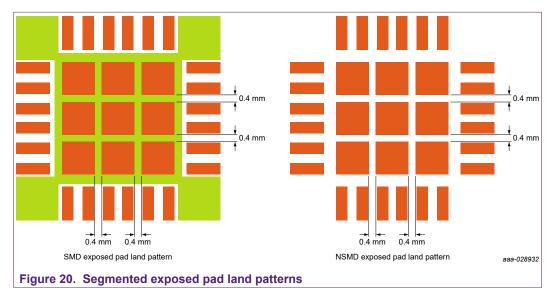


Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

4.2.2.3 Thermal vias in the exposed pad land pattern


While the land pattern on the PCB provides a means of heat transfer/electrical grounding from the package to the board through a solder joint, thermal vias are necessary to effectively conduct the heat from the surface of the PCB to the ground plane(s). These vias act as "heat pipes". The number of vias is application specific and depends upon the product power dissipation and electrical conductivity requirements.

- Thermal and electrical analysis and/or testing are recommended to determine the minimum number of vias required.
- Maximum thermal and electrical performance is achieved when an array of vias is incorporated in the land pattern at a 1.20 mm grid, as shown in Figure 21.
- It is recommended that the via diameter be 0.30 to 0.33 mm with 35 µm Cu plating thickness (1.0 oz/ft²). This is desirable to avoid any solder-wicking inside the via during the soldering process, which may result in solder voids in the joint between the exposed pad and the thermal land.
- If the copper plating does not plug the vias, then the thermal vias can be "tented" with solder mask on the top surface of the PCB to avoid solder wicking inside the via during assembly. The solder mask diameter should be at least 0.10 mm larger than the via diameter.

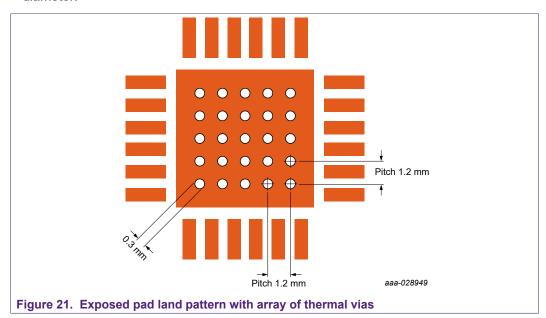

Design options for combination of vias with a segmented exposed pad land pattern are shown in Figure 22.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

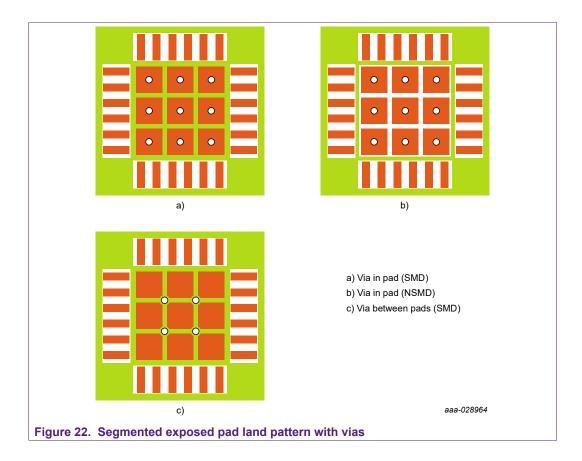

4.2.3 Pad surface finish

Almost all PCB finishes are compatible with QFN/SONs, including:

- Organic solderability protectant (OSP)
- Electroless nickel immersion gold (ENIG)
- Immersion Sn
- Immersion Ag


Hot air solder leveled (HASL) finish may cause uneven surface issues and extra caution is required.

5 Board assembly

5.1 Assembly process flow

<u>Figure 23</u> shows a typical surface mount technology (SMT) process flow. Use of standard pick and place process and equipment is recommended and manual or hand soldering should be avoided.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

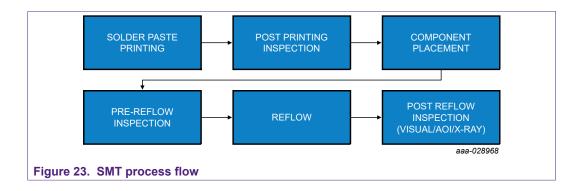

5.2 Solder paste printing

5.2.1 Solder paste

Solder paste is a homogenous mixture of fine metal alloy particles, flux, and viscosity modifiers to adjust printing and reflow properties. The main features of solder pastes are:

· Solder alloy:

NXP recommends using lead-free solder paste, in line with environment legislation (RoHS, ELV). A variety of lead-free alloys is available for PCB assembly, with different physical properties and melting temperatures. Common solders alloys are combinations of Tin, Silver, and Copper: SnAg3Cu0.5 (SAC305), SnAg4Cu0.5 (SAC405), or SnAg3.8Cu0.7 (SAC387), with a melting range between 217 to 220 °C. The peak reflow temperature for these alloys shall be > 235 °C.

· Solder spheres:

A main component of the paste is the low-oxide spherical powder made from the solder alloy. The amount of solder powder in the paste is referred to as the metal load and is typically in the range of 83 to 92 % by weight. The spherical shape and controlled size of the powder particles ensures a uniform printing and a stable paste volume for each solder land. The solder pastes are classified by spheres size according to IPC standard J-STD-005 (see <u>Table 2</u>). Smaller spheres allow higher printing resolution and smaller pitches. The rule of thumb is that the minimum dimension of the smallest stencil opening shall be larger than 4 to 6 sphere diameters.

Table 2. Solder paste type

Paste type	Sphere diameter		
	Min. (μm)	Max. (μm)	
3	25	45	
4	20	38	
5	10	25	
6	5	15	

• Flux:

Flux is needed to remove surface oxidation, prevents oxidation during reflow and improves the wetting of the solder alloy. Solder pastes are classified into three types based on the flux type according to IPC standard J-STD-004:

- Rosin-based flux
- Water-soluble flux

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

- No-clean flux

Rosin-based and water-soluble fluxes require cleaning of the PCB after reflow process. Standard rosin chemistries are normally cleaned with solvents, semi-aqueous solutions or aqueous/saponifier solutions, while the water-soluble chemistries are cleaned with pure water.

No-clean flux doesn't require cleaning, but normally a little residue remains on the PCB after soldering. In general, it is recommended to use a no-clean solder paste, because cleaning of flux residues from underneath the package is not feasible for a QFN/SON-style package (due to the low package standoff).

5.2.2 Stencil thickness

The thickness of the stencil determines the amount of solder paste deposited onto the printed circuit board land pattern. Due to the fine pitch and small terminal geometry used, care must be taken when printing the solder paste on to the PCB. Typical stencil thicknesses are given in <u>Table 3</u>.


Table 3. Typical Stencil Thickness

Package pitch (mm)	Stencil thickness (µm)
0.50	150
0.40	100 to 125

Since QFN/SON are (most likely) not the only package on the actual production PCB, the recommended stencil thickness for the other packages may be thicker than desired. For such a case, a step-down stencil is recommended, where most of the stencil for the PCB has a typical thickness, but the area for the QFN/SON would be reduced to 100 to 150 μ m, depending on the package pitch.


5.2.3 Stencil design

The dimension of the stencil openings should be a minimum 25 to 30 μ m (5 to 10 %) smaller than the size of the corresponding copper lands to account for alignment and PCB tolerances. A fillet at the corners reduces the adhesion to the solder paste and improves the paste release (Figure 24). The fillet radius depends on the solder paste type; i.e. it should be larger than the diameter of the solder spheres.

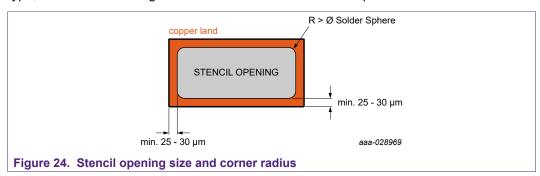


A minimum aperture size is needed to ensure the proper release of the solder paste during stencil printing (Figure 24). The area ratio and the aspect ratio between stencil opening and stencil thickness are used to determine the minimum dimensions, respectively.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

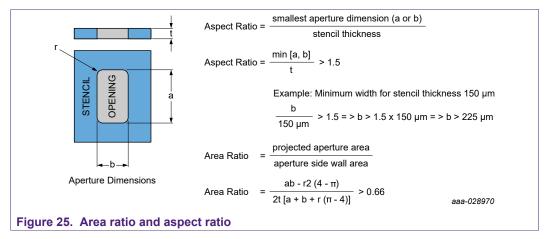

Maximum thermal/electrical performance requires that the exposed pad of the package is soldered to the land pattern on the PCB. The maximum aperture size of the stencil should not exceed > 5 mm on either side (Figure 26a). Larger openings should be subdivided into an array of smaller openings as shown in Figure 26b. The spacing between segments on the stencil should be 0.150 mm or more. Narrower spacing between segments can become a manufacturing issue.

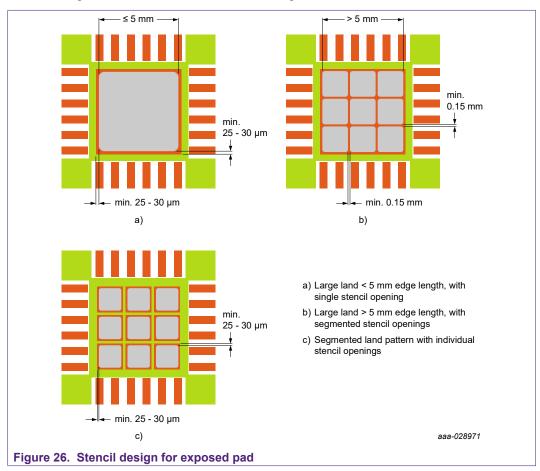

An array of smaller paste deposits for exposed pad land supports outgassing of the flux during reflow. Otherwise the evaporated flux is entrapped in the solder joint and creates

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

large solder voids. Smaller QFN/SON packages can take advantage of this stencil design even for exposed pad size < 5 mm.

The target solder paste coverage of the land should be about 60 % to 65 % of the lands area to achieve a good solder joint. Smaller solder paste volumes could have adverse effects on the solder joint reliability. If the product dissipates a large amount of heat, the solder paste deposit can be increased. Too much paste can cause the component to float and have misconnections of terminals. Solder paste deposits should be arranged so that paste is never printed directly over an unplugged via.

5.3 Component placement

Increased package interconnection density requires precise and accurate pick and place tools. To meet this tight requirement, a placement machine equipped with an optical recognition system for the centering of the PCB and the components during the pick-and-place motion is recommended. A placement accuracy study is suggested to calculate compensations required.

Products in QFN/SON packages are assembled on NXP's production lines and production lines operated by NXP's assembly and test vendors. Packages with the same outline can have different design features to identify the package orientation and location of pin 1 when the package is viewed from bottom side (see Section 4.2.1.4 "Pin 1 keep out area"). Also, the leadframe finish may reflect differently in the vision system. If parts are supplied by more than one assembly line, then it is necessary to create dedicated equipment recipes.

Refer to <u>Section 10.4 "Packing of devices"</u>, for package orientation and location of pin 1 in JEDEC trays or tape and reel carriers.


5.4 Reflow soldering

The temperature profile is the most important control in reflow soldering, and it must be fine tuned to establish a robust process. The actual profile parameters depend upon the solder paste and alloy used; the recommendations from paste manufacturers should be followed. Nitrogen reflow is recommended to improve solderability and to reduce defects (like solder balls).

When a board is exposed to the reflow oven temperature, certain areas on the board will heat faster than others depending on the thermal mass. Large components and large copper areas in the board will heat up slower than small components and board areas with little copper. The actual temperature shall be measured with thermocouples at various places on the PCB surface to ensure that the reflow temperature is reached everywhere on the board.

The temperature of package top surface shall be monitored at the same time, to validate that the peak package body temperature (T_P) does not exceed the MSL classification of individual devices (see IPC/JEDEC J-STD020).

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

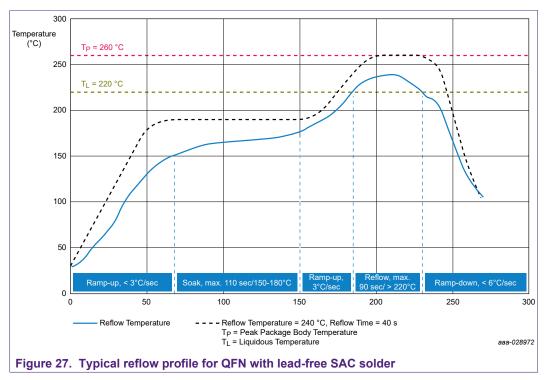

<u>Figure 27</u> shows a typical time/temperature profile (blue) for reflow soldering with lead-free SAC solder alloys using a multi-zone reflow oven. The maximum allowed package body temperature at every stage of the process (depending on the IPC/JEDEC J-STD-020 classification of the package) is represented by the dashed gray line.

The reflow profile is divided into five stages:

Ramp-up to soak

The printed circuit board should be heated evenly to avoid overheating of components. Volatile solvents in the solder paste start to outgas during ramp up. Too fast temperature increase could cause solder balling. The maximum ramp-up rate shall not exceed 3 °C/second to avoid overstress to the package.

· Pre-heat and soak

The PCB assembly is held at 150 to 180 °C temperature for 60 to 120 seconds during thermal soak. The volatiles in the solder paste will be removed and the flux is being activated to reduce oxides from the pads and lands. Time and temperature are recommended by the paste supplier depending on the flux type.

· Ramp-up to reflow

The PCB assembly is uniformly heated above the liquidous temperature of the solder alloy. Again, the maximum ramp-up rate shall not exceed 3 °C/second to avoid overstress to the package.

Reflow

The recommended peak reflow temperature for SAC alloys shall be > 235 °C. The period above the liquidous temperature (T_L) is called the reflow time. It shall be long enough to allow the liquid solder to uniformly wet the pad and land surfaces and to form an intermetallic phase. Too long reflow time may lead to brittle solder joints and could cause damage to the board and components. The peak package body temperature (T_P) must not exceed 260 °C and the time above 255 °C must not exceed 30 seconds depending on IPC/JEDEC classification.

· Cool down

AN1902

All information provided in this document is subject to legal disclaimers

© NXP B.V. 2018. All rights reserved

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

Fast cool down prevents excess intermetallic formation and creates a fine grain structure of the solder alloy. The ramp-down rate can be faster than the ramp-up, but shall not exceed 6 °C/second to avoid overstress.

The reflow profile for exposed pad packages need not be any different than the one used for non-thermally/electrically enhanced packages.

Cross referencing with the device data sheet is recommended for any additional board assembly guidelines specific to the exact product used.

5.5 Inspection

Unlike traditional leaded components, the solder joints of QFN/SON are formed primarily underneath the package. To verify any open or short circuits (bridging) after reflow soldering, optical inspection and x-ray inspection are recommended. Micro-sectioning is another method of inspecting solder joint quality during process optimizations, but it is less suitable to production inspection (due to slow processing).

Figure 28 shows the x-ray image of a soldered QFN44 package with exposed pad and pull-back terminal ends. The dark gray areas represent the solder joints. Light gray spots within the solder joints are due to solder voids. The perimeter lands are well soldered with very little voiding. The land pattern for the exposed pad is segmented with a thermal via within each square. The voids around the vias are not regarded as defects.


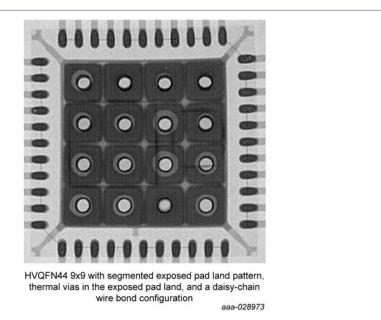


Figure 28. X-ray inspection of a QFN package after soldering

<u>Figure 29</u> shows an example of shorted solder joints caused by excess spread of solder paste during reflow or high solder amount.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

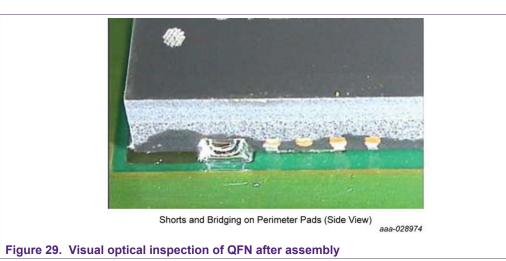

<u>Figure 30</u> shows an issue with excess solder voids at the exposed pad. The large single copper land used for the exposed pad prevents the proper outgassing of volatile solvents from the solder paste. The perimeter solder joints show either poor wetting or shorts

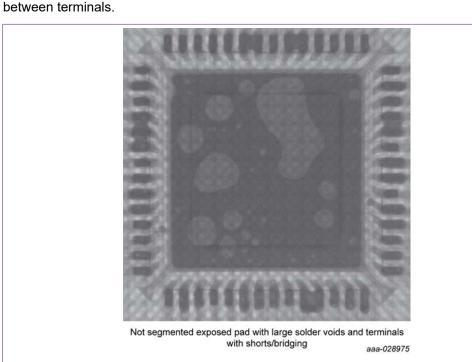


Figure 30. X-ray of QFN package after assembly

6 Repair and rework procedure

6.1 Repairing

Repairing a single solder joint of QFN/SON or the soldered exposed die pad is not recommended. The solder joints of terminals and exposed pad underneath the package cannot be soldered in a controlled way.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

6.2 Reworking

If a defective component is observed after board assembly, the device can be removed and replaced by a new one. This rework can be performed using the method described in this section.

When performing the rework:

- In any rework, the PCB is heated. The thermal limits of PCB and components (e.g., MSL information) must be followed.
- During heating, the combination of rapid moisture expansion, materials mismatch, and material interface degradation can damage the component and PCB. To prevent moisture induced failures, it is recommended that the PCB assembly and components have had strict storage control with a controlled environment such as dry air or nitrogen. In addition, a pre-bake can help to remove the moisture.
- The influence of the heating on adjacent packages must be minimized. Do not exceed the temperature rating of the adjacent packages.
- Heating conditions will differ due to differences in the heat capacities of the PCB (board thickness, number of layers) and mounted components used; thus, the conditions must be set to correspond to the actual product and its mounted components.
- NXP follows industry-standard component level qualification requirements, which
 include three solder reflow passes. The three reflow passes simulate board level attach
 to a double-sided board and includes one rework pass.
- The removed QFN/SON package should be properly disposed of, so that it is not accidentally mixed with new components.

A typical QFN/SON rework flow process comprises seven stages:

- 1. Tooling preparation
- 2. Component removal
- 3. Site preparation
- 4. Solder paste printing
- 5. Component placement
- 6. Reflow soldering
- 7. Inspection

Individual process steps for reworking a QFN/SON package are described in subsequent sections.

Note: NXP product quality guaranty/warranty does not apply to products that have been removed, thus, component reuse should be avoided.

6.2.1 Tooling preparation

Various rework systems for SMD are available on the market. In general, the rework station should have a split light system, an XY table for alignment, and a hot air system with a top and bottom heater for component removal. For processing QFN/SON packages, a system should meet the requirements described in the following sections.

6.2.1.1 Heating system

The hot air temperature and the air flow must be controlled so that the component is heated in a targeted and controlled manner. The heating should be appropriate for the package size and thermal mass. PCB preheating from bottom side is recommended.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

Infrared heating can be applied for preheating of the PCB, but it should only augment the hot air flow to the component side. Nitrogen can be used instead of air.

6.2.1.2 Vision system

The bottom side of the package as well as the site on the PCB should be observable. For precise alignment of the package to PCB, a split light system should be implemented. Microscope magnification and resolution should be appropriate for the pitch of the device.

6.2.1.3 Moving and additional tools

Placement equipment should have good accuracy. In addition, special vacuum tools may be required to remove solder residue from PCB pads.

6.2.2 Component removal

If a component is suspected to be defective and is returned, no further defects must be introduced to the device during removal of the component from the PCB, because this may interfere with subsequent failure analysis. The following recommendations are intended to reduce the chances of damaging a component during removal.

6.2.2.1 Moisture removal

Dry bake components before removal at 125 $^{\circ}$ C for 16 to 24 hours for boards with SMT components, or at 95 $^{\circ}$ C for 16 to 24 hours for boards with temperature-sensitive components.

6.2.2.2 Temperature profile

During de-soldering, ensure that the package peak temperature is not higher and that the temperature ramps are not steeper than the standard assembly reflow process.

6.2.2.3 Mechanical


Do not to apply high mechanical forces for removal. High force can damage the component and/or the PCB, which may limit failure analysis of the package.

- For large packages, pipettes can be used (implemented on most rework systems)
- For small packages, tweezers may be more practical

If suspected components are fragile, then it is especially necessary to determine if they can be electrically tested directly after de-soldering, or if these components must be preconditioned prior to testing. In this case, or if safe removal of the suspected component is not possible (or too risky), the whole PCB (or the part of the PCB containing the defective component) should be returned.

An air nozzle of correct size should be used to conduct the heat to the QFN/SON component leads, so that a vacuum pick-up tool can properly remove the component (see Figure 31). The temperature setting for the top heater and the bottom heater depends on the component rating. A PCB bottom temperature setting of 150 °C is recommended. Many assembly sites have extensive in-house knowledge on rework, and their experts should be consulted for further guidance.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

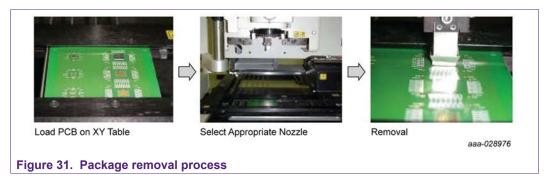

If the PCB is large, it is important to avoid bending of the printed circuit material due to thermal stress, so a bending prevention tool must be placed on the bottom of the printed circuit board, and a bottom heater installed (to allow heating of the entire printed circuit board, to raise work efficiency).

Reuse of removed semiconductor packages is not recommended.

6.2.3 Site preparation

After the component is removed, the PCB pads must be cleaned to remove solder residue, to prepare for the new component placement. This may be completed by vacuum de-soldering, solder sucker, solder wick braid, etc., after applying flux. Remaining solder residue and projections can cause the solder stencil to not closely adhere to the substrate during solder paste printing, leading to improper solder paste supply during component mount.

Moreover, when the solder residue flows all the way to an adjacent through-hole, the solder paste printed on the pad can be transferred via suction, to the through-hole during reflow, which may cause improper connection. A solvent may be necessary to clean the PCB of flux residue. A de-soldering station can be used for solder dressing. It should be noted that the applied temperature should not exceed the rating of PCB material which can contribute to pad peeling from the PCB. This is typically a manual operation that is directly attributed to experience and skill.


Non-abrasive or soft bristle brushes should be used as abrasive brushes (e.g., steel brushes) can contribute to bad solder joints. Before placing a new component on the site, solder paste should be applied to each PCB pad (by printing or dispensing). A no-clean solder paste is recommended.

6.2.4 Solder paste printing

Solder supply during rework is done using specialized templates and tools. A mini-stencil with the same stencil thickness, aperture opening, and pattern as the normal stencil are placed in the component site. A mini-metal squeegee blade deposits solder paste in the specific area (see <u>Figure 32</u>). The printed pad should be inspected, to ensure even and sufficient solder paste before component placement.

If neighboring parts are so close to the QFN/SON components that the mini-stencil method is not an option, then apply solder paste carefully on each component pad using a paste dispensing system. The volume of solder paste must be controlled, to prevent shorting on the component and/or neighboring components. Preferably, the same type of solder paste should be used as was originally applied on the board.


Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

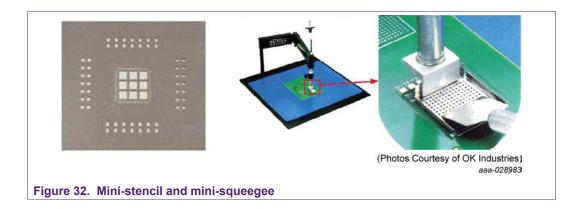

6.2.5 Component placement

The last step of the repair process is to solder the new semiconductor component on the board. When remounting the component, consider using rework equipment that has good optical or video vision capability. A split-light system displays images of both package leads and PCB pads by superimposing two images. Alignment of the leads and pads is completed with an adjusting XY which enables correct soldering (see Figure 33).

Regular lead array QFN/SON exhibits self alignment in any direction, including X-axis shift, Y-axis shift, and rotational misplacement. Exposed pads may not exhibit a strong self-alignment capability, so precise placement of the component on the PCB is required.

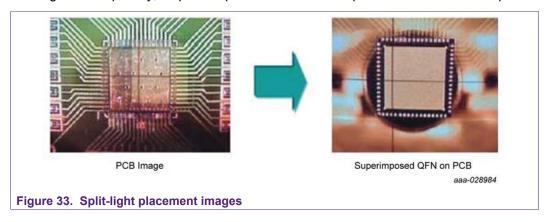

6.2.6 Reflow soldering

The new component is soldered to the PCB using the same temperature profile as the normal reflow soldering process (see <u>Section 5.4 "Reflow soldering"</u>). During soldering, the package peak temperature and temperature ramps must not exceed those of the normal assembly reflow process. Note that it may be necessary to dry bake the board before it is exposed to reflow temperatures a second time.

The PCB might need to be cleaned if they do not get clean in the "normal" process, or if the rework was not done using "no clean" materials.

6.2.7 Inspection

To verify any open or short circuits (bridging) after soldering, optical inspection and x-ray inspection are recommended.

AN1902

All information provided in this document is subject to legal disclaimers.

© NXP B.V. 2018. All rights reserved

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

7 Board-level reliability

7.1 Solder joint reliability testing


Solder joint reliability (SJR) testing is performed to determine a measure of board level reliability when exposed to thermal cycling. The information provided here is based on experiments performed on a QFN/SON device using a daisy-chain bond configuration. Actual surface mount process and design optimizations are recommended to develop an application specific solution.

- For automotive grade product applications, NXP typically prefers to reach a minimum of 2000 cycles before first solder joint failure in SJR experiments. The widely accepted temperature range for testing is -40 °C to +125 °C.
- Consumer SJR temperature cycling conditions may vary widely, depending on the application and specific user. Typically, NXP consumer SJR testing is performed from 0° C to +100 °C.
- <u>Table 4</u> shows the NXP standard test set-up for performing board-level solder joint reliability testing. Example of daisy-chain test PCB and QFN package is shown in <u>Figure 34</u>.

Table 4. Board-level reliability testing: Material and test setup

	1.58 mm thickness
PCB board	4 Cu layers
	OSP surface finish
	Pb-free solder paste (SAC387, SAC405,)
Test board assembly	Reflow peak temperature for SAC assembly ~240 °C
	Pb solder paste Sn63Pb37
	Reflow peak temperature for SnPb assembly ~220 °C
	Stencil: 0.100 mm thickness, stainless steel, Ni plated, laser cut and electro-polished
	Continuous in-situ daisy chain monitoring per IPC-9701 and IPC-SM-785
	Air temperature cycling (ATC) for automotive
	-40 °C to +125 °C
	15 minutes ramp/15 minutes dwell
Cycling conditions	One hour cycle time
	ATC for commercial and industrial
	0 °C to +100 °C
	10 minutes ramp/10 minutes dwell
	40 minutes cycle time
	Production bill of materials (BOM) package including die
Package test vehicle	(die mechanically present, without wire bond connection)
	Daisy chain in package connecting pairs of terminal pads.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

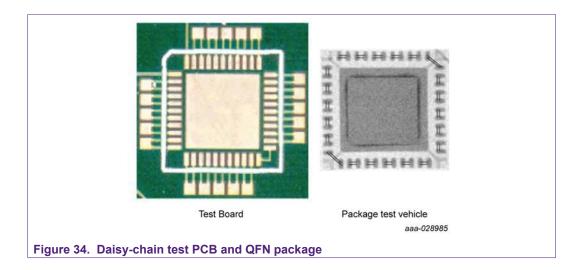

7.2 Solder joint reliability results

NXP experimentally gathers board-level reliability data for a variety of packages. To get results from these experiments (including Weibull plots), contact the NXP sales team.

8 Package thermal characteristics

8.1 General thermal performance

Since the thermal performance of the package in the final application will depend on a number of factors (like board design, power dissipation of other components on the same board, ambient temperature), the thermal package properties provided by NXP should only serve as a reference. In applications where the thermal performance is considered to be critical, NXP recommends running application-specific thermal calculations in the design phase, to confirm the on-board thermal performance. NXP can generate so-called compact thermal models (CTM) of the specific product, that can be used in system level simulations. In order to obtain such a model please contact your NXP sales team.

Exposed pad packages may require the exposed pad to be connected to the PCB for thermal and/or electrical measurement. For optimized thermal performance, it is recommended to form a thermal pass into the PCB, by connecting the exposed pad to the top and/or bottom and/or inner copper layers of the PCB. The PCB copper area and number of thermal vias connected to the exposed pad required to achieve the proper thermal performance on the PCB is application specific, and depends on the package power dissipation and the individual board properties (thermal resistance of the application PCB).

8.2 Package thermal characteristics

Junction temperature is a function of die size, on-chip power dissipation, package characteristics, mounting site (board) temperature, ambient temperature, air flow, power dissipation of other components on the board, and board thermal technology.

Additional factors to be considered in PCB design and the thermal rating of the final application (amongst others) are:

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

- Thermal characteristics of the PCB (metal density, number of thermal vias, thermal conductivity of thermal vias)
- Quality and size of PCB solder joints (effective PCB pad size, potential solder voiding in the thermal path solder joints that may reduce the effective solder area)

The stated values are meant to define the package thermal performance in a standardized environment (one package on a standardized board).

Thermal properties of the individual products are usually given in the NXP product data sheets as appropriate. Product data sheets are available at http://www.nxp.com. For more details on thermal properties, contact NXP.

8.3 Package thermal properties definition


The thermal performance of QFN/SON packages with and without exposed pads is typically specified by thermal properties such as $R_{\theta JA},\,R_{\theta JC}$ and Ψ_{JT} (in °C/W). Thermal characterization is performed by physical measurement and by running complex simulation models under the following conditions:

- · One thermal board type:
 - Four-layer board (2s2p), per JEDEC JESD51-7 and JESD51-5 (exposed pad packages only)
- Two boundary conditions:
 - Natural convection (still air), per JEDEC JESD51-2
 - Cold plate method, per MIL SPEC-883 method 1012.1

8.3.1 R_{BJA}: Theta junction-to-ambient natural convection (still air)

Junction-to-ambient thermal resistance (Theta-JA or $R_{\theta JA}$ per JEDEC JESD51-2) is a one-dimensional value that measures the conduction of heat from the junction (of the hottest temperature on die) to the environment (ambient) near the package in a still air environment. The heat that is generated on the die surface reaches the immediate environment along two paths:

- · Convection and radiation off the exposed surface of the package, and
- Conduction into-and-through the test board, followed by convection and radiation off the exposed board surfaces.

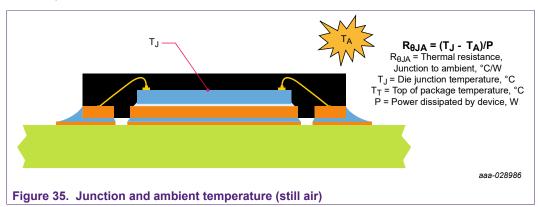


Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

8.3.2 $R_{\theta JC}$: Theta junction-to-case

Junction-to-case thermal resistance (Theta-JC or $R_{\theta JC}$ per MIL SPEC-883 Method 1012.1) indicates the average thermal resistance between the die and the case top surface, as measured by the cold plate method per MIL SPEC-883 Method 1012.1, with the cold plate temperature used for the case temperature. The case temperature is defined as


- Either the temperature at the top of the package (for non-exposed pad packages), or
- The temperature at the bottom of the exposed pad surface (for exposed pad packages).

For exposed pad packages where the pad would be expected to be soldered, the junction-to-case thermal resistance is a simulated value from the junction to the exposed pad without contact resistance. $R_{\theta JC}$ can be used to estimate the thermal performance of a package when the board is adhered to a metal housing or heat sink, or when a complete thermal analysis is done.

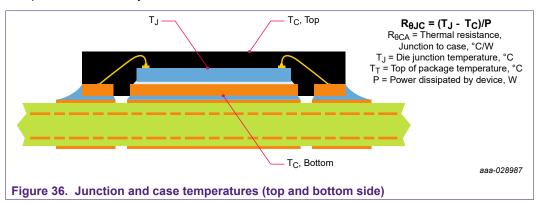

8.3.3 Ψ_{JT} (Psi JT): Junction-to-package top

Junction-to-package top (Psi JT or Ψ_{JT}) indicates the temperature difference between the package top and the junction temperature, optionally measured in a still air condition (per JEDEC JESD51-2) or in a forced convection environment (per JEDEC JESD51-6). Ψ_{JT} must not be confused with the parameter $R_{\theta JC}$: $R_{\theta JC}$ is the thermal resistance from the device junction to the external surface of the package, with the package surface held at a constant temperature, while Ψ_{JT} is the value of the temperature difference between the package surface and the junction temperature, usually in natural convection.

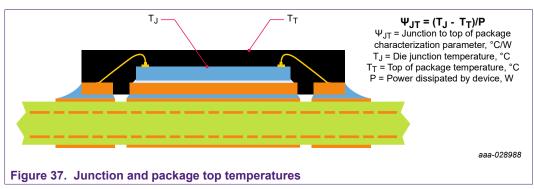

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

8.4 Example of package thermal properties

<u>Table 5</u> shows an example of the thermal characteristics typically shown in a NXP product data sheet. The example applies to a package size 7.0 mm x 7.0 mm x 0.85 mm, 5.1 mm x 5.1 mm exposed pad, IO pitch 0.5 mm, and die size ~4.7 mm x 4.7 mm.

Note: NXP gathers all thermal data for a variety of packages. To obtain thermal properties (such as $R_{\theta JA}$, $R_{\theta JC}$, and Ψ_{JT}) for a specific package, contact the NXP sales team.

Table 5. Thermal parameters of a HVQFN36 7 x 7 package

Rating	Board type	Parameter	Value	Unit	Notes
Junction-to-ambient (natural convection)	Four-layer board (2s2p)	$R_{\theta JA}$	28	°C/W	[1] [2]
Junction-to-case (bottom)	Four-layer board (2s2p)	R _{θJC}	0.8	°C/W	[3]
Junction-to-package-top	Natural convection	$\Psi_{ m JT}$	1.0	°C/W	[4]

^[1] Junction temperature is a function of die size, on-chip power dissipation, package thermal resistance, mounting site (board temperature) ambient temperature air flow power dissipation of other components on the board, and the thermal resistance.

[2] Per JEDEC JESD51-6 with the board (JESD51-7) horizontal.

9 Downloading package information from NXP website

9.1 Performing a product search on NXP website

The package outline drawing and the material composition declaration sheet (MCD, in IPC-1752 reporting format) can be downloaded from the NXP website. Information on product specific moisture sensitivity levels (MSL) is available on the website, too. Note that the website screen appearance is regularly changed and may look different from the one shown in this section. However, the general procedure described should mostly apply.


To download the documents:

- Go to www.nxp.com.
- In the text box on the upper right of the screen, click and select "Products" from the drop-down menu.


^[3] Thermal resistance between the die and the exposed pad surface as measured by the cold plate method (MIL Spec-883 Method 1012.1).

^[4] Thermal characterization parameter indicating the temperature difference between the package top and the junction temperature per JEDEC JESD51-2. When Greek letters are not available, the thermal characterization parameter is written as Psi-JT.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

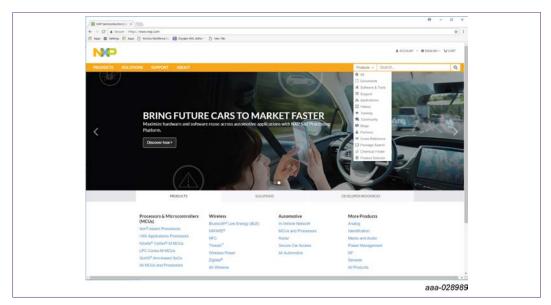


- Enter the NXP product part number in the "Search ..." box.
- The next screen returns search results, and lists all part numbers and documents related to the search term.

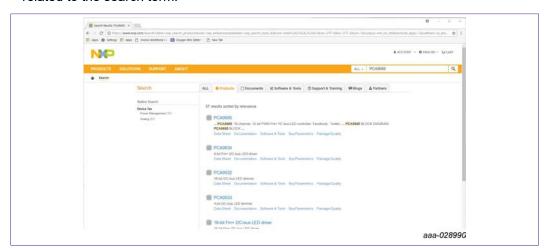


- On the search results screen, select the desired part number.
- The next screen shows the "Product Overview Page" with information on Product Documentation, Software & Tools, Buy/Parametrics, Package/Quality, Training & Support.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

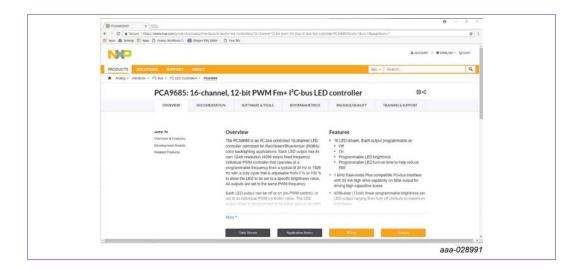


9.2 Retrieving package outline drawing, MCD and MSL rating

• Click on the "Package/Quality" tab to view environmental and quality information

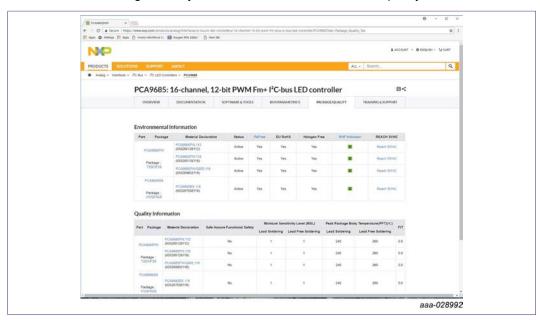




Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

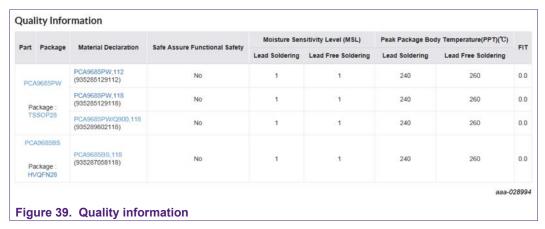


- Click on the "Material Declaration" link to go to the "Chemical Content" site. Material information is displayed. MCD sheet can be downloaded in XLS, XLM, and PDF format.
- Click the "Package" link to go to the "Package Overview" site. Package information is displayed. PDF file with package outline drawing can be downloaded.

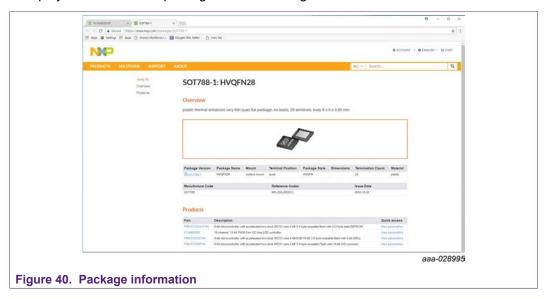

9.3 Retrieving the packing information for the product

• Click on the "Buy/Parametrics" tab on the "Product Overview Page" to view available product options

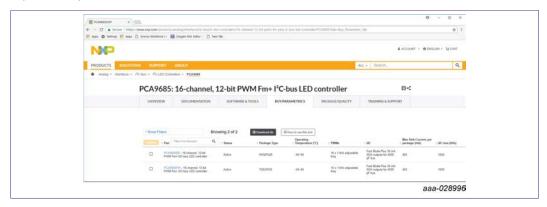


AN1902

All information provided in this document is subject to legal disclaimers.


© NXP B.V. 2018. All rights reserved.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

• Select the preferred part number from the list and click on the link to view details of the part number.

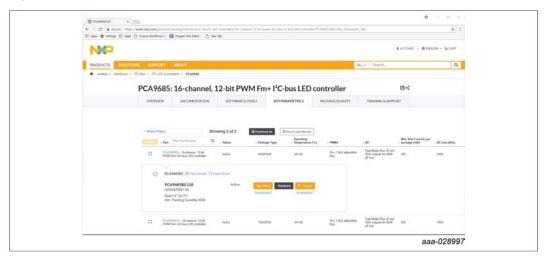

Click on the "Parts Detail" link to show the product details view.

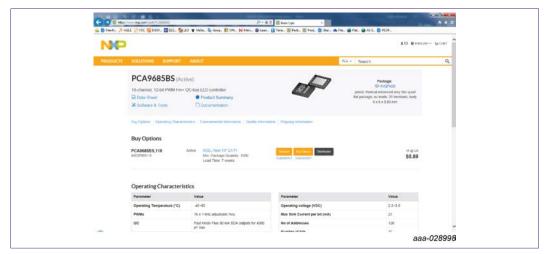

• Find the link to the Packing Information next to the product number and download the PDF file.

10 Package handling

10.1 Handling of ESD sensitive devices

Semiconductor integrated circuits (ICs) and components are electrostatic discharge sensitive (ESDS) devices, so proper precautions are required for handling and processing them. Electrostatic discharge (ESD) is one of the significant factors leading to damage and failure of semiconductor ICs and components, and comprehensive ESD controls to protect ESDS devices during handling and processing should be considered.

The following industry standards describe detailed requirements of proper ESD controls; NXP recommends meeting the standards before handling and processing ESDS devices. Detailed ESD specifications of devices are available in each device data sheet.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

- JEDEC JESD625: Requirements for Handling Electrostatic-Discharge-Sensitive (ESDS) Devices
- IEC-61340-5-1: Protection of electronic devices from electrostatic phenomena General requirements


10.2 Handling of moisture-sensitive surface mount devices

Some SON/QFN packages are moisture sensitive surface mount devices (SMD) and proper precautions are required for handling, packing, shipping and use.


Moisture from atmospheric humidity enters permeable plastic package materials by diffusion. When the package is exposed to rapid temperature rise and high temperature during reflow solder process, moisture expansion, materials mismatch, and material interface degradation can result in package cracking and/or de-lamination of critical interfaces ("popcorn" effect).

Therefore, moisture-sensitive components are dried and sealed in a moisture barrier bags (MBB) before shipping per IPC/JEDEC J-STD-033. The components are stored together with a desiccant and a moisture indicator card in the vacuum sealed bag. Only remove the moisture-sensitive components immediately prior to assembly onto the PCB. If partial lots are used, the remaining SMD packages must be resealed or placed in safe storage within one hour of bag opening.

A label on the moisture barrier bag (MBB) indicates that it contains moisture sensitive components (Figure 41). The "Moisture Sensitivity Caution Label" contains information about the moisture sensitivity level (MSL) and maximum allowed peak body temperature of the products. Same information is shown on the barcode labels of the shipping box and reels.

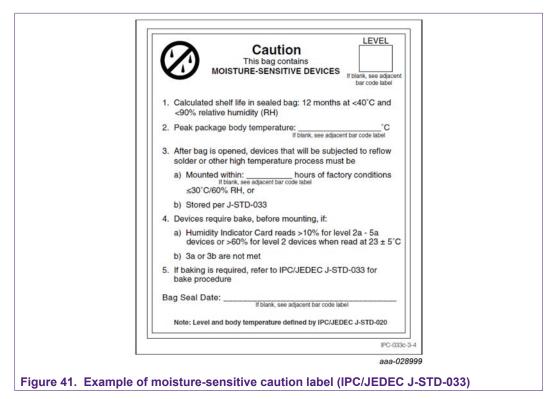

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

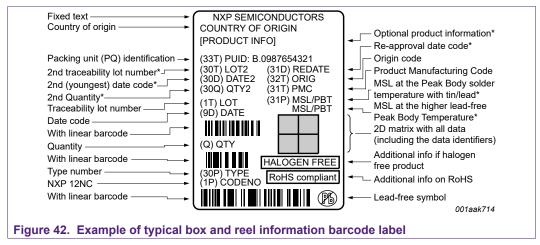

The MSL indicates the floor life of the component, its storage conditions, and handling precautions after the original container has been opened. The permissible time, from opening the moisture barrier bag until the final solder reflow process, that a component can remain outside the moisture barrier bag is a measure of the sensitivity of the component to ambient humidity.

Table 6 presents the floor life definitions per IPC/JEDEC J-STD-033. Components must be mounted and reflowed within the allowable period of time (floor life out of the bag), and component temperature must not exceed the maximum peak body temperature during reflow process at the customer's facility.

Table 6. Moisture classification level of floor live (IPC/JEDEC J-STD-033)

Moisture sensitivity level	Floor life (out of bag) at factory ambient ≤ 30 °C/60 % RH or as stated
1	Unlimited at ≤ 30 °C/85 % RH
2	1 Year
2a	4 Weeks
3	168 Hours
4	72 Hours
5	48 Hours
5a	24 Hours
6	Mandatory bake before use. After bake, must be reflowed within the limit specified on the label.

Upon opening the MBB, the floor-life clock starts. If components have been exposed to ambient air for longer than the specified time, or if the humidity indicator card indicates too much moisture after opening a moisture barrier bag, then the components are required to be rebaked prior to the assembly process. Refer to IPC/JEDEC J-STD-033 for bake procedure.


10.3 Handling of thin QFN/SON packages

The small, near chip scale size of QFN/SON packages enables higher integration on board level compared to leaded type packages. Care must be taken, especially with thin QFN/SON package types \leq 0.50 mm maximum seated height, to avoid overstressing the parts during handling, e.g. pick and place or test.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

Figure 43 shows two load cases to be considered during different handling operations:

 Force F_(Top) applied on package top side, where bending stress at the die backside could exceeds silicon fracture strength

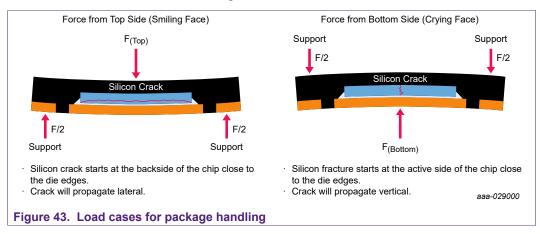


• Force F_(Bottom) applied on package bottom side, where bending stress at the active die surface could exceeds silicon fracture strength

Bending of the devices during handling should be avoided when possible. Ideally, the device should be mechanically supported from the opposite side. The graphs in Figure 45 provide a guideline for maximum allowable bending moments depending on package size and package height.

The critical load depends on package height and on die-to-package ratio. Thicker packages and larger die in the same package are more robust.

The guideline assumes a symmetrical square package with exposed pad. The strength of other package designs may vary significantly. Contact the NXP sales team for data of such packages.

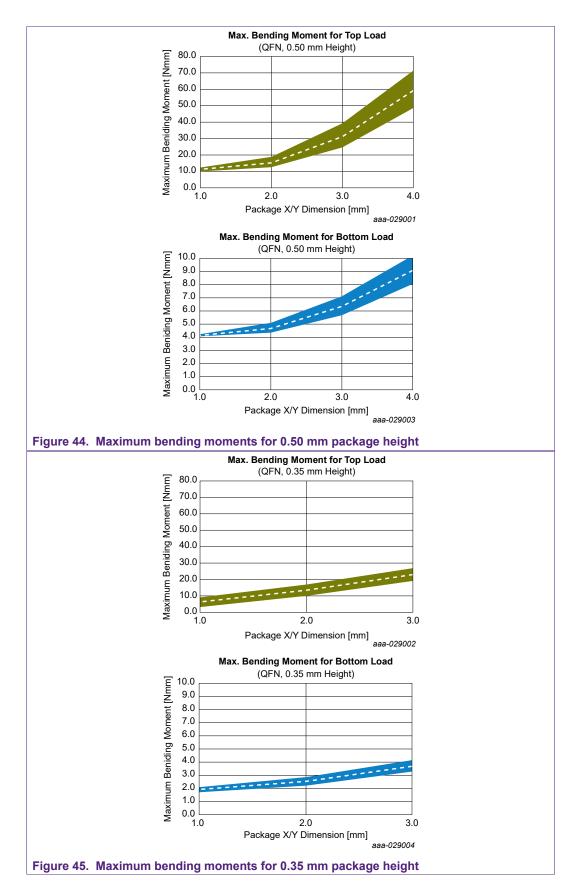

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

10.4 Packing of devices

QFN/SON devices are contained in tray or tape and reel configurations. The packing media are design to protect devices from electrical, mechanical and chemical damages (as well as moisture absorption).

Devices are shipped with dry packing or non-dry packing depending on the MSL level of the device per IPC/JEDEC J-STD-033 (<u>Table 7</u>). Moisture sensitive devices are dry packed for transportation and storage with a vacuum sealed moisture barrier bag, including a desiccant and a moisture indicator card (refer to <u>Section 10.2 "Handling of moisture-sensitive surface mount devices"</u>). MSL1 components do not require dry packing, but for devices with Sulphur sensitive Au/Ag plating alloy NXP is using a Sulphur barrier pack to protect the device also from airborne Sulphur contamination.

Proper handling and storage of dry packs are recommended. Improper handling and storage (dropping dry packs, storage exceeding 40 °C/90 % RH environment, excessive stacking of dry packs, etc.) will increase various quality and reliability risks.

Table 7 Dry	nacking	requirements	(IPC/JEDEC J-STD-0	33)
Table 1. DIV	Dackilla	i eddii eiiieiilə		J J1

MSL level	Dry before bag	MBB with HIC	Desiccant	MSID label	Caution label
1	Optional	Optional	Optional	Not Required	Not required if classified at 220 to 225 °C Required if classified at other than 220 to 225 °C
2	Optional	Required	Required	Required	Required
2a to 5a	Required	Required	Required	Required	Required
6	Optional	Optional	Optional	Required	Required

- · MBB: Moisture barrier bag
- · HIC: Humidity indicator card
- MSID: Moisture sensitive identification

The packing method, product orientation, dimensions, and labels are described in the Packing Information document. This document can be downloaded from NXP's website at the Buy Options for each device. The different packing methods are also indicated by the ending of either the orderable part number (3-digit number or single letter), or the ending of the ordering code (3-digit number).

Note: Packing information can be found on NXP's website following the steps described in Section 9.3 "Retrieving the packing information for the product".

NXP complies with following environmental standards conformance guidelines/directives:

- ISPM 15, Guidelines for Regulating Wood Packaging Material in International Trade.
- European Parliament and Council Directive 94/62/EC of 20 December 1994, packaging and packaging waste.

10.4.1 Trays


- NXP complies with standard JEDEC tray design configuration (see Figure 46).
- Devices will be oriented with pin 1 toward the chamfered corner of the tray.
- Trays are designed to be baked for moisture-sensitive SMDs, but the temperature rating of tray should NOT be exceeded when the devices are baked. The temperature

AN1902

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages


rating can be found on the end-tab of the tray. The recommended baking temperature of trays is 125 $^{\circ}$ C.


• Trays are typically banded together with 5 + 1 (five fully-loaded trays and one cover tray) stacking, and dry packed in a moisture barrier bag (MBB). Partial stacking (1 + 1, 2 + 1, etc.) is also available, depending on individual requirements.

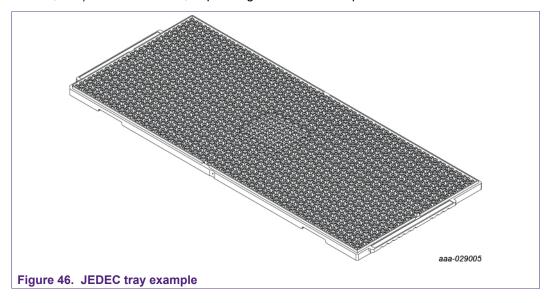

10.4.2 Tape and reel

- NXP tape and reel carriers are in accordance with ANSI/EIA-481 (Figure 47).
- The packing information document (which can be either in PDF format or Excel table format) provides detail information on:
 - Packing method
 - Reel dimensions (Figure 50 and Table 9)
 - Packing quantity
 - Product pin 1 orientation
 - Carrier tape dimensions and tolerances (Figure 49 and Table 8)
- The product pin 1 orientation in the carrier tape (Figure 48) follows the orientation guide of ANSI/EIA-481 standard, but exceptions are possible depending on the product characteristics. Refer to the Buy Options on NXP's website to confirm the individual product orientation.
- Tape and reels are NOT designed to be baked at high temperatures.
- Each tape and reel is typically dry packed in a moisture barrier bag.

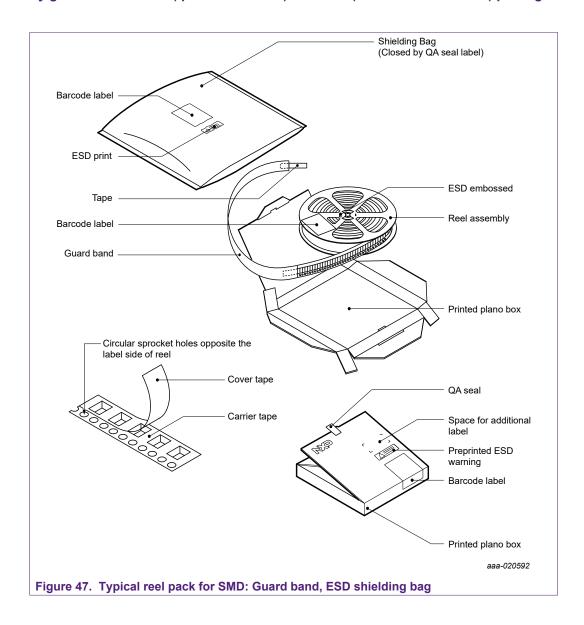

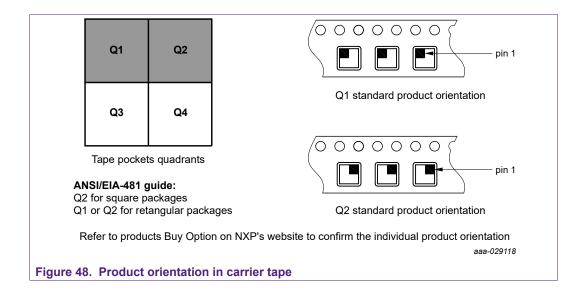

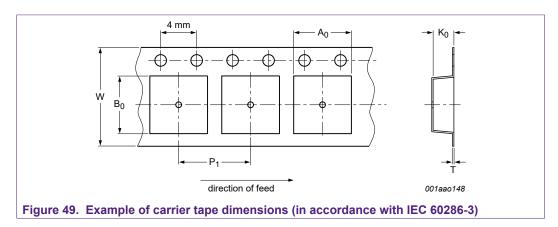


Table 8. Example of carrier tape dimensions

A _g (mm)	B _g (mm)	K _g (mm)	T (mm)	P ₁ (mm)	W (mm)
2.30 ± 0.10	2.30 ± 0.10	0.75 ± 0.10	0.30 ± 0.05	4.0 ± 0.1	0.80 ± 0.3

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

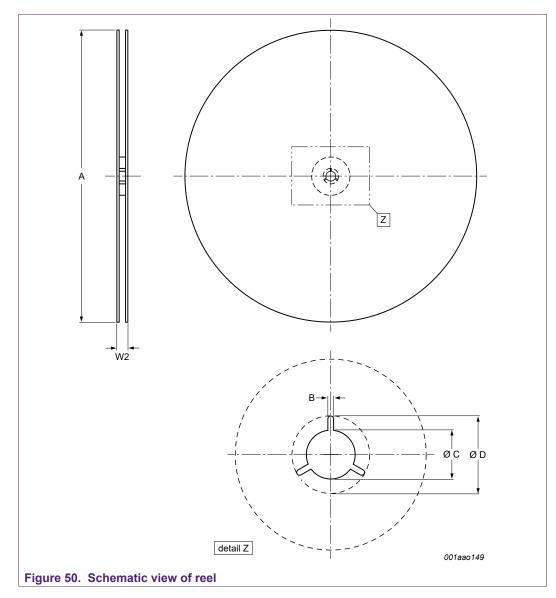


Table 9. Reel dimensions (in accordance with IEC 60286-3)

A [nom] (mm)	W2 (mm)	B [min] (mm)	C [min] (mm)	D [min] (mm)
180 (7")	Depending	1.5	12.8	20.2
330 (13")	on tape width	1.5		

11 References

- [1] JEDEC MO-220, Thermally Enhanced Plastic Very Thin and Very Very Thin Fine Pitch Quad Flat No Lead Package
- [2] JEDEC MO-229, Thermally Enhanced Plastic Very Thin, Very Very Thin and Ultra Thin Fine Pitch Small Outline No Lead Package
- [3] IEC 60286-3, Packaging of components for automatic handling. Part 3: Packaging of surface mount components on continuous tapes

AN1902

- [4] JESD51-2, Integrated Circuits Thermal Test Method Environment Conditions Natural Convection (Still Air)
- [5] JESD51-3, Low Effective Thermal Conductivity Test Board for Leaded Surface Mount Packages
- [6] JESD51-5, Extension of Thermal Test Board Standards for Packages with Direct Thermal Attachment Mechanisms
- [7] JESD 51-6, Integrated Circuits Thermal Test Method Environment Conditions Forced Convection (Moving Air)
- [8] JESD51-7, High Effective Thermal Conductivity Test Board for Leaded Surface Mount Packages, February 1999
- [9] JESD51-7, High Effective Thermal Conductivity Test Board for Leaded Surface Mount Packages
- [10] JESD51-8, Integrated Circuit Thermal Test Method Environmental Conditions Junction-to-Board, October 1999
- [11] IPC/JEDEC J-STD-020, Moisture/reflow sensitivity classification for nonhermetic surface mount devices
- [12] IPC/JEDEC J-STD-033, Handling, packing, shipping, and use of moisture/reflow sensitive surface-mount devices
- [13] MIL-STD-883, Method 1012.1 Thermal Characteristics
- [14] IPC-7351B, Generic Requirements for Surface Mount Design and Land Pattern Standards
- [15] IPC-7093, Design and Assembly Process Implementation for Bottom Termination SMT Components
- [16] IPC, J-STD-004, Requirements for Soldering Fluxes
- [17] IPC, J-STD-005, Requirements for Soldering Pastes
- [18] IPC, J-STD-006, Requirements for Electronic Grade Solder Alloys
- [19] ANSI/EIA-481, 8 mm Through 200 mm Embossed Carrier Taping and 8 mm & 12 mm Punched Carrier Taping of Surface Mount Components for Automatic Handling

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

12 Legal information

12.1 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

12.2 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors. In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory. Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental

damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification. Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products. NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Translations — A non-English (translated) version of a document is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

12.3 Trademarks

Notice: All referenced brands, product names, service names and trademarks are the property of their respective owners.

Freescale — is a trademark of NXP B.V.

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

Tables

Tab. 1.	Recommended land width as a function of terminal pitch	.12	Tab. 6.	Moisture classification level of floor live (IPC/ JEDEC J-STD-033)	40
Tab. 2.	Solder paste type	. 19	Tab. 7.	Dry packing requirements (IPC/JEDEC J-	
Tab. 3.	Typical Stencil Thickness			STD-033)	43
Tab. 4.	Board-level reliability testing: Material and		Tab. 8.	Example of carrier tape dimensions	46
	test setup	.30	Tab. 9.	Reel dimensions (in accordance with IEC	
Tab. 5.	Thermal parameters of a HVQFN36 7 x 7			60286-3)	47
	package	. 34		,	
Figur	es				
Fig. 1.	Examples of small size QFN and SON		Fig. 24.	Stencil opening size and corner radius	. 20
•	package types	4	Fig. 25.	Area ratio and aspect ratio	
Fig. 2.	Examples of large size QFN and SON		Fig. 26.	Stencil design for exposed pad	
•	package types	4	Fig. 27.	Typical reflow profile for QFN with lead-free	
Fig. 3.	Comparison of sawn-type and punch-type		· ·	SAC solder	23
•	QFN	5	Fig. 28.	X-ray inspection of a QFN package after	
Fig. 4.	Cross-section of a sawn QFN with exposed		· ·	soldering	24
-	pad	5	Fig. 29.	Visual optical inspection of QFN after	
Fig. 5.	Chip-on-lead (COL) package design	6		assembly	25
Fig. 6.	Fully-exposed terminal ends (package		Fig. 30.	X-ray of QFN package after assembly	25
	bottom and side view)	6	Fig. 31.	Package removal process	28
Fig. 7.	Pull-back terminal ends (package bottom		Fig. 32.	Mini-stencil and mini-squeegee	29
	and side view)	7	Fig. 33.	Split-light placement images	29
Fig. 8.	Wettable flank (WF) features of QFN/SON		Fig. 34.	Daisy-chain test PCB and QFN package	. 31
	terminal ends	7	Fig. 35.	Junction and ambient temperature (still air)	32
Fig. 9.	Solder fillets cross-sections after reflow	8	Fig. 36.	Junction and case temperatures (top and	
Fig. 10.	SEM Images of solder fillets cross-sections			bottom side)	33
	after reflow	8	Fig. 37.	Junction and package top temperatures	. 33
Fig. 11.	QFN case outline drawing example		Fig. 38.	Environmental information	36
	HVQFN48	9	Fig. 39.	Quality information	37
Fig. 12.	Reflow soldering footprint for HVQFN48	. 10	Fig. 40.	Package information	37
Fig. 13.	A well-soldered QFN/SON package		Fig. 41.	Example of moisture-sensitive caution label	
Fig. 14.	Length of perimeter copper lands	. 12		(IPC/JEDEC J-STD-033)	39
Fig. 15.	SMD and NSMD land designs	. 13	Fig. 42.	Example of typical box and reel information	
Fig. 16.	Solder mask design for perimeter land			barcode label	
	pattern	. 13	Fig. 43.	Load cases for package handling	. 41
Fig. 17.	Gray "Pin 1" keep out area (package		Fig. 44.	Maximum bending moments for 0.50 mm	
	transparent top view)	14		package height	42
Fig. 18.	Cross-section of QFN/SON package and		Fig. 45.	Maximum bending moments for 0.35 mm	
	PCB showing heat transfers	.15		package height	
Fig. 19.	Minimum clearance between perimeter and		Fig. 46.	JEDEC tray example	44
	exposed pad land pattern	. 16	Fig. 47.	Typical reel pack for SMD: Guard band, ESD	
Fig. 20.	Segmented exposed pad land patterns	.16		shielding bag	
Fig. 21.	Exposed pad land pattern with array of		Fig. 48.	Product orientation in carrier tape	46
	thermal vias	.17	Fig. 49.	Example of carrier tape dimensions (in	
Fig. 22.	Segmented exposed pad land pattern with			accordance with IEC 60286-3)	
	vias		Fig. 50.	Schematic view of reel	47
Fig. 23.	SMT process flow	. 19			

Assembly guidelines for QFN (quad flat no-lead) and SON (small outline no-lead) packages

Contents

1	Introduction3
2	Scope3
3	SON and QFN packages3
3.1	Package description3
3.2	Punch- and sawn-type packages 4
3.3	Package design5
3.4	Package terminal types6
3.4.1	Fully-exposed terminal ends6
3.4.2	Pull-back terminal ends6
3.4.3	Terminal ends with side wettable flank7
4	Printed-circuit board (PCB) guidelines8
4.1	PCB design guidelines and requirements8
4.2	PCB footprint design11
4.2.1	Guidelines for perimeter land patterns11
4.2.1.1	Guidelines for size of perimeter Cu-lands: 11
4.2.1.2	Solder mask guidelines for perimeter lands 13
4.2.1.3	Clearance to vias and adjacent components13
4.2.1.4	Pin 1 keep out area14
4.2.1.5	Keep out areas for QFN accelerometer
4.2.2	sensors
4.2.2 4.2.2.1	
4.2.2.1	Spacing between perimeter and exposed pad land pattern
4.2.2.2	Segmented exposed pad land pattern
4.2.2.2	design16
4.2.2.3	Thermal vias in the exposed pad land pattern 17
4.2.2.3	Pad surface finish18
4.2.3 5	Board assembly
5 5.1	Assembly process flow
5.2	Solder paste printing
5.2.1	Solder paste
5.2.2	Stencil thickness
5.2.3	Stencil design
5.3	Component placement22
5.4	Reflow soldering
5.5	Inspection24
6	Repair and rework procedure25
6.1	Repairing25
6.2	Reworking26
6.2.1	Tooling preparation26
6.2.1.1	Heating system26
6.2.1.2	Vision system27
6.2.1.3	Moving and additional tools27
6.2.2	Component removal27
6.2.2.1	Moisture removal27
6.2.2.2	Temperature profile27
6.2.2.3	Mechanical27
6.2.3	Site preparation28
6.2.4	Solder paste printing
6.2.5	Component placement29
6.2.6	Reflow soldering29
6.2.7	Inspection29
7	Board-level reliability30

7.1	Solder joint reliability testing	30
7.2	Solder joint reliability results	
8	Package thermal characteristics	
8.1	General thermal performance	
8.2	Package thermal characteristics	31
8.3	Package thermal properties definition	32
8.3.1	RθJA: Theta junction-to-ambient natural	
	convection (still air)	32
8.3.2	RθJC: Theta junction-to-case	33
8.3.3	ΨJT (Psi JT): Junction-to-package top	33
8.4	Example of package thermal properties	34
9	Downloading package information from	
	NXP website	34
9.1	Performing a product search on NXP	
	website	34
9.2	Retrieving package outline drawing, MCD	
	and MSL rating	36
9.3	Retrieving the packing information for the	
	product	
10	Package handling	
10.1	Handling of ESD sensitive devices	38
10.2	Handling of moisture-sensitive surface	
	mount devices	
10.3	Handling of thin QFN/SON packages	
10.4	Packing of devices	43
10.4.1	Trays	43
10.4.2	Tape and reel	
11	References	47
12	Legal information	49

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'

© NXP B.V. 2018.

All rights reserved.