




Product Data Sheet



Doughty Hanging Clamp with Pink Eye



A standard half coupler fitted with a 750Kg Pink Eye Nut Can be loaded in multiple directions	
Part Nos	T57203 - Polished T57204 - Powder Painted Satin Black
Tube Diameter	Ø48 - 51mm
Materials	Main Body - AW6082 T6 Aluminium Roll Pins - Stainless Steel Eyebolt Assy - Grade 8.8
Max Tightening Torque	30Nm
Fixings	Pink Eye Nut
WLL	750Kg
Weight	0.90Kg
Factor of Safety	5:1
Approval	TÜV Approved

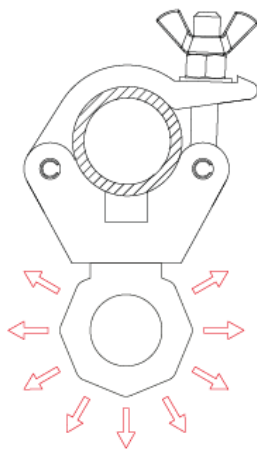

Unfavourable Loads

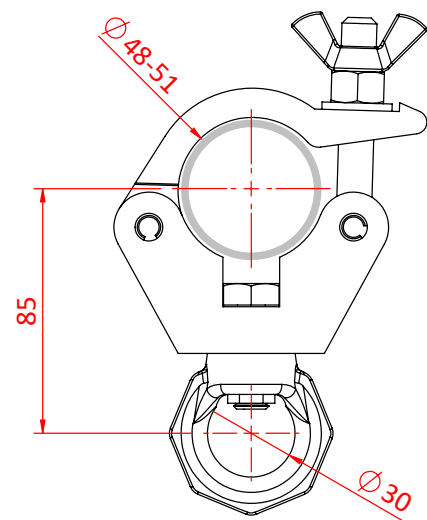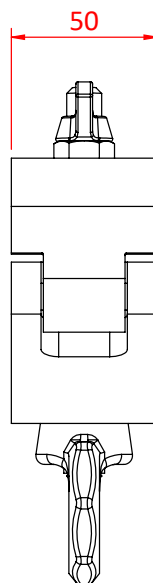

Hanging Clamp with Pink Eye

Equipment information and pre-use inspection checks for compliance portal use

Equipment name	Hanging Clamp with Pink Eye
Typical example	Doughty Hanging Clamp with Pink Eye, T57203 silver / T57204 black
Equipment type	Rigging clamp / suspension fixing
Typical SWL/WLL	750 kg
Tube size	48-51 mm diameter
Typical weight	0.90 kg
Material	AW6082 T6 aluminium clamp body with articulated Pink Eye assembly
Typical fixing	Articulated M12 RUD Pink Eye nut
Manufacturer notes	50 mm clamp width, 30 Nm maximum tightening torque, 5:1 factor of safety
Use	Creates a rated, articulated eye attachment point from a truss chord, lighting bar, or scaffold tube.

Equipment Info

A hanging clamp with Pink Eye is used to provide a secure suspension point from a suitable 48-51 mm tube. The clamp fixes around the tube, while the articulated Pink Eye provides a rated eye point for suitable rigging hardware such as wire rope assemblies, shackles, quick links, or other approved suspension components.

The Pink Eye version is designed for applications where the load direction may not be perfectly vertical. Unlike a standard eye nut, the articulated Pink Eye can accommodate less favourable load directions when used correctly.

It is commonly used for suspending wire-hung loads, scenic items, signs, drapes, practicals, loudspeakers, or other approved rigged items where a rated eye point is required.

This equipment should only be installed and used by competent persons, within its stated WLL/SWL, and as part of a properly assessed rigging system.

Important: the articulated Pink Eye is designed to align into the load direction. It should not be used in a way that allows the eye or bolt to rotate under load, bind, twist, or loosen.

What to Check

Before use, check that the clamp is the correct type and rating for the intended application. Confirm that the suspended load does not exceed the stated WLL/SWL of the clamp or any other item in the rigging assembly.

Check that the tube or truss chord is suitable for the clamp. The Doughty Hanging Clamp with Pink Eye is intended for 48-51 mm diameter tubes. Do not use it on undersized, oversized, damaged, crushed, heavily painted, or otherwise unsuitable tube.

Inspect the clamp body for cracks, distortion, dents, excessive wear, corrosion, or impact damage. The clamp should close correctly around the tube and sit squarely without needing to be forced.

Check the Pink Eye assembly is present, correctly fitted, and free from damage. Inspect the eye for cracks, elongation, deformation, corrosion, sharp edges, or excessive wear. The articulated section should move as intended and should not be seized, loose, distorted, or damaged.

Check all bolts, nuts, washers, roll pins, and moving parts are present and in good condition. Threads should be clean, undamaged, and should tighten correctly. Do not overtighten beyond the manufacturer guidance.

When installed, check that the clamp is fully seated on the tube, correctly tightened, and positioned so that the load is applied through the Pink Eye as intended. Avoid unnecessary twisting, shock loading, incompatible side loading, or any arrangement that causes the eye or connected hardware to bind.

Check that any connected shackles, wires, links, steels, or other rigging accessories are correctly rated, compatible with the eye, and suitable for the load path. The overall system rating must be based on the lowest-rated component.

Do not use the clamp if it has been overloaded, dropped from height, modified, drilled, welded, repaired without manufacturer approval, or if its history is unknown. Damaged or suspect clamps should be removed from service, quarantined, and reported for inspection.

Portal Checklist Version

Check item	Pass criteria
Correct item selected	Hanging clamp with Pink Eye is suitable for the task
Rating known	WLL/SWL confirmed, typically 750 kg for Doughty version
Tube compatibility	Suitable for 48-51 mm tube/truss chord
Clamp body condition	No cracks, distortion, corrosion, or impact damage
Pink Eye condition	Eye is secure, articulated, undamaged, and not elongated
Articulation	Pink Eye moves correctly and is not seized, loose, or distorted
Threads and fixings	Threads clean; bolts, nuts, washers, and pins present and secure
Torque	Tightened correctly; not overtightened beyond manufacturer guidance
Identification	Product and rating can be identified
Installation	Clamp fully seated and tightened correctly
Load path	Load applied correctly with no binding, twisting, or incompatible side loading
Compatibility	Shackles, wires, links, or other attachments are correctly rated and suitable
User competence	Installed/checked by a competent person
Exclusions	Not overloaded, modified, repaired, damaged, or dropped
Action if failed	Remove from service, quarantine, and report for inspection

Source Notes

Manufacturer data referenced: Doughty Hanging Clamp 750 kg product information and T57203/T57204 data sheet.

Key source data used in this document: 750 kg WLL, 48-51 mm tube range, 50 mm clamp width, 0.90 kg weight, articulated Pink Eye, 30 Nm maximum tightening torque, and 5:1 factor of safety.

This PDF is an equipment information aid. It does not replace manufacturer instructions, LOLER/PUWER requirements, site-specific risk assessment, lifting plan, or inspection by a competent person.

Prepared for Stage Electrics compliance portal use.