
SUSP-05, Rear Sway Bar Removal and Installation

Tools


- Metric Socket / Wrench Set
- Floor Jack / Jack Stands

Procedure

- 1. Raise the vehicle on jack stands.
- 2. Removing the rear wheels makes the job a bit easier but is not required.
- 3. Remove the two bolts/nuts on either end of the sway bar that attach the sway bar to the drop links.

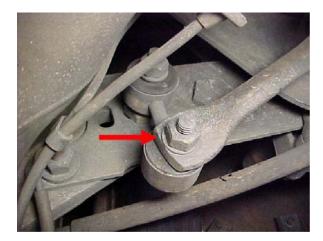

4. Remove the bolts (4 - 2 on each side) that hold the sway bar to the torque tube carrier and remove the sway bar from the vehicle.

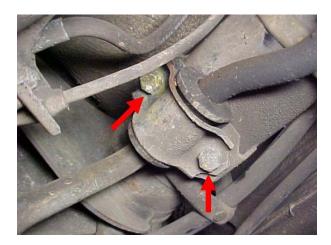

5.	Installation	is	the	reverse	of removal.

Clark's Garage © 1998