
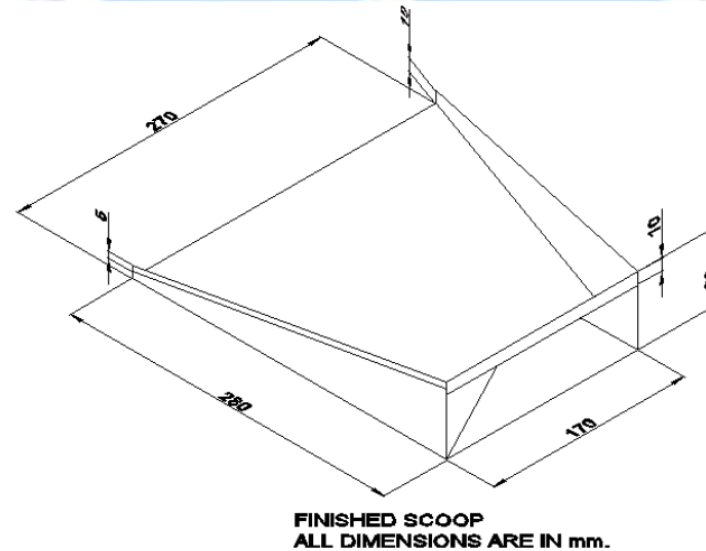


Mark, Cut And Bend Sheet Metal To Make A Scoop

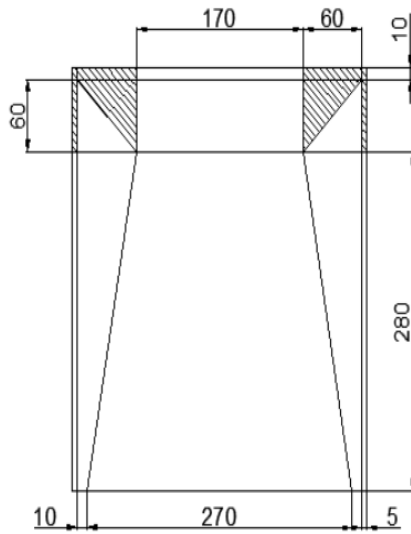

Aim :

To make a big Scoop of given specification from a sheet metal piece.

Application :

It is a device use to carry, pick and transfer things.

Material Specifications

Material : Galvanized Iron

Sheet of dimensions: 300mm x 350mm thickness 33 gauge

Tools required

1. Steel Rule 2. Scriber 3. Straight Snip 4. Stake 5. Anvil 6. Mallet

Sequence of operation

1. Checking 2. Layout 3. Shearing 4. Folding, locking and finishing

Layout Marking

1. Place the given sheet over working table, so that side of dimension 350mm is horizontal.
2. From reference point to draw the vertical line 208mm, 60mm and remaining portion 10mm for hemming allowance .(Given interval 280mm for base and 60mm for top height).
3. Now place 300mm side, first to be drawn 5mm line both sided. These lines provided for hemming. Next to be marked 10mm both side.
4. On the 280mm line to be mark both side 60mm point. (Note: Should be mark after hemming line. Then draw vertical line at both points (Connect the points above and the below)
5. Now you get square on top both side and draw the diagonal from the bottom.
6. Draw hatch line shown in the figure.

Shearing

1. Remove the unwanted portion shown in the layout with the help of snip.
2. While cutting, cut along the proper line and remove the unwanted portion

Folding

1. Keep the pattern over square and fold the 5mm hemming portion with 180° towards marking side.
2. The Fold 60mm height portion with 90° opposite to marking side.
3. Again fold two slant lines opposite to the marking line.
4. The Scoop is having two incomplete corners. In align the corner of Stake, fold triangular shape both side help of Mallet.

Locking and Finishing

1. Fold the remaining portion 180° outward using a Stake and Mallet to lock the folds.
2. To perfect shape using Mallet.
3. Check for the dimension.

Video :

- <https://youtu.be/R6EDUHvulUY>

Feedback : Practical Activity