

Different Common Types of Rivets

1. Specialist Rivet



- It is used where there's load spread.

3. Structural Steel Rivet



- It is used in thin sheets.

5. Friction Lock Rivet



- It is used in trains and aircraft.

7. Split Rivet



- It is used to join softer materials.

Video :

- <https://youtu.be/4Ck78sBoBi8>

Feedback : Activity

2. Open and Close Rivet



- It is used where tight sealing is required.

4. Blind Rivet



- It is used where space is limited.

6. Tubular Rivet



- It is used where movement is required.

8. Flush Rivet



- It is on external metal surfaces.

Kwa Thema Skills School

Subject : Maintenance

Grade : Year 3

Date : / /

Marks : 8

Time : 30 mins

Question:1

1. Name the uses of each of the following different types of Rivets.

Specialist Rivet



1.1 _____

Structural Steel Rivet



1.3 _____

Open and Close Rivet



1.2 _____

Blind Rivet



1.4 _____

Friction Lock Rivet



Tubular Rivet



1.5 _____

Split Rivet



1.7 _____


Flush Rivet



1.8 _____

Measure And drill Before Riveting

1. Drill hole same as Rivet size (diameter).

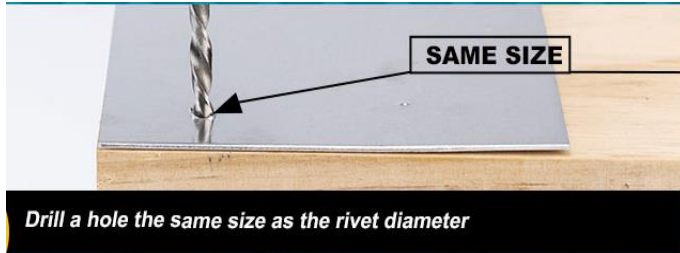

2. Place Rivet in hole.



3. Squeeze handle to pull and cut off excess mandrel.



Video :

- <https://youtu.be/ZyWqWJKAV6k>

Feedback : Practical Demonstration.