

Knowledge And Safety Of Electric Tools



1. Make sure the machine guard is in position.
2. Make sure the equipment is properly grounded before use
3. Check that the keys and adjusting wrenches are removed before turning on the machine.
4. Inspect stock nails, staples, loose knots etc.
5. Make sure that all machines have a start and stop buttons.
6. Ensure that all cutting tools and blades are clean.
7. Turn the power off and unplug the power cord before inspection.
8. Use a “push stick” to push material into cutting area.
9. Use good lighting.
10. Use extension tables for large workpiece.
11. Woodworking machines should be fitted with exhaust ventilation system.
12. Electric power cords should be above head level.

Video:

- <https://youtu.be/tKWs5tcvlll>

Feedback : Activity

Kwa Thema Skills School

Subject : Maintenance

Marks : 10

Grade : Year 4

Time : 30 mins

Date : / /2024

Question:1

1. Underline the correct word in brackets
 - 1.1 Make sure the machine (gun: guard) is in position.
 - 1.2 (Inspect: Ignore) stock nails, staples, loose knots etc.
 - 1.3 Electric power cords should be (above: below) head level
 - 1.4 Check that the keys and adjusting (rangers: wrenches) are removed before turning on the machine.
 - 1.5 Make sure that all machines have a (star: start) and stop buttons.
 - 1.6 Ensure that all (casting: cutting) tools and blades are clean.
 - 1.7 Turn the power (off: on) and unplug the power cord before inspection.
 - 1.8 Ensure that all cutting tools and blades are (lean: clean).
 - 1.9 Use good (lighting: lightning).
 - 1.10 Use extension (tables: cables) for large workpiece.

(10)

Manufacture A Small SA Pine Timber Project : Free Standing Towel Rack



Tools

Saw of your choice: Mitre saw, Circular saw, Jigsaw, or Hacksaw.

Orbit Sander with 120 grit Sandpaper Disc

Power Drill

Paint Brush, Measuring Tape and Pencil

Speed Square and 3mm Drill Bit

Cutting List

2 x 32mm x 1200mm (Sides of longest Wood Towel Bar)

2 x 32mm x 800mm (Sides of shorter Wood Towel Bar)x

2 x 32mm x 700mm (Length of Cross Towel Bar)

2 x 32mm x 220mm (Base of Towel Rack)

2 x 32mm x 156mm (Support braces between the two size Towel Bars)

Materials

COL Pine timber 3x32mmx2,4 bars

Wood Glue and 2 x clamps.

Wood Stain and clear Sealer

4 x 45mm Wood / Clipboard wood screws and Driver Bit

How to Build Free Standing Towel Rack

Step 1 : Measure The Lengths



Step 3 : Sand




Step 5 : Drill



Step 2 : Cut



Step 4 : Mark Pilot Holes

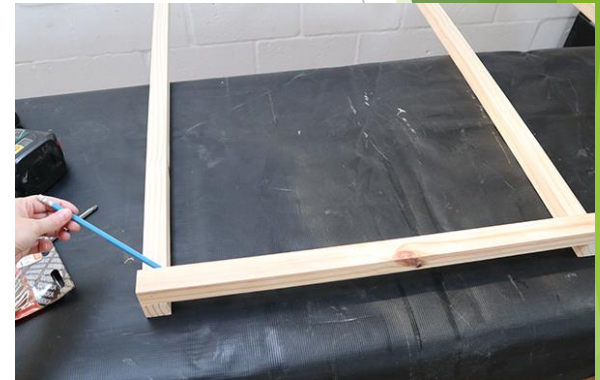

Step 6 : Secure

