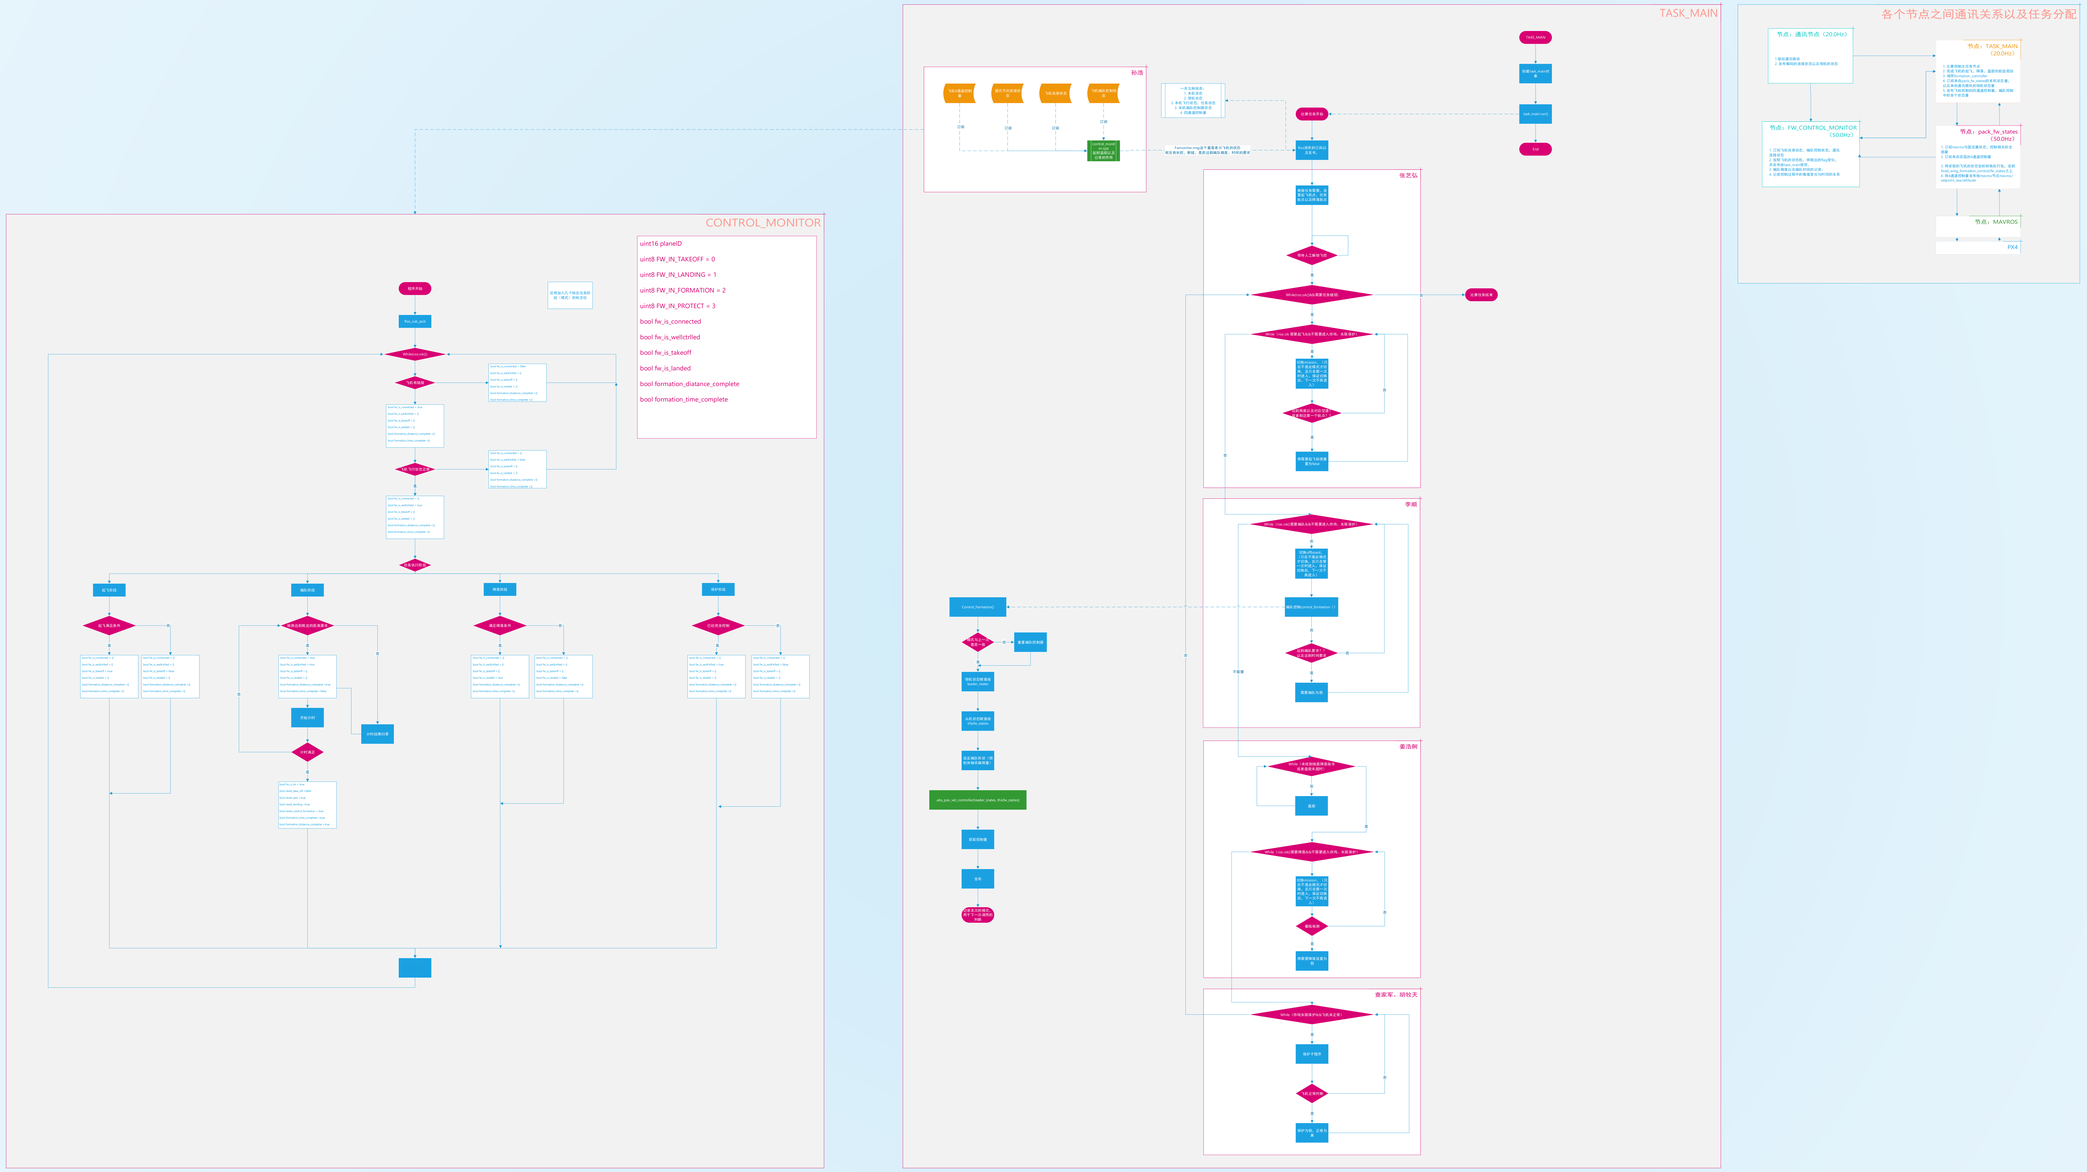
CONTROL_MONITOR
uint16 planeID
uint8 FW_IN_TAKEOFF = 0
uint8 FW_IN_LANDING = 1
uint8 FW_IN_FORMATION = 2
uint8 FW_IN_PROTECT = 3
bool fw_is_connected
bool fw_is_wellcrtlled
bool fw_is_takeoff
bool fw_is_landed
bool formation_diatance_complete
bool formation_time_complete
程序开始
fw_is_sub_job
MPC(500Hz)执行
飞机等待
飞机编队
飞机已经成功起飞
飞机已经成功起飞
飞机已经成功起飞