



TEMPLATE FOR DUCT FABRICATION

**Y-Ducting: (A x B)->(C x D)
x(E x F x R) x L = 1nos.**

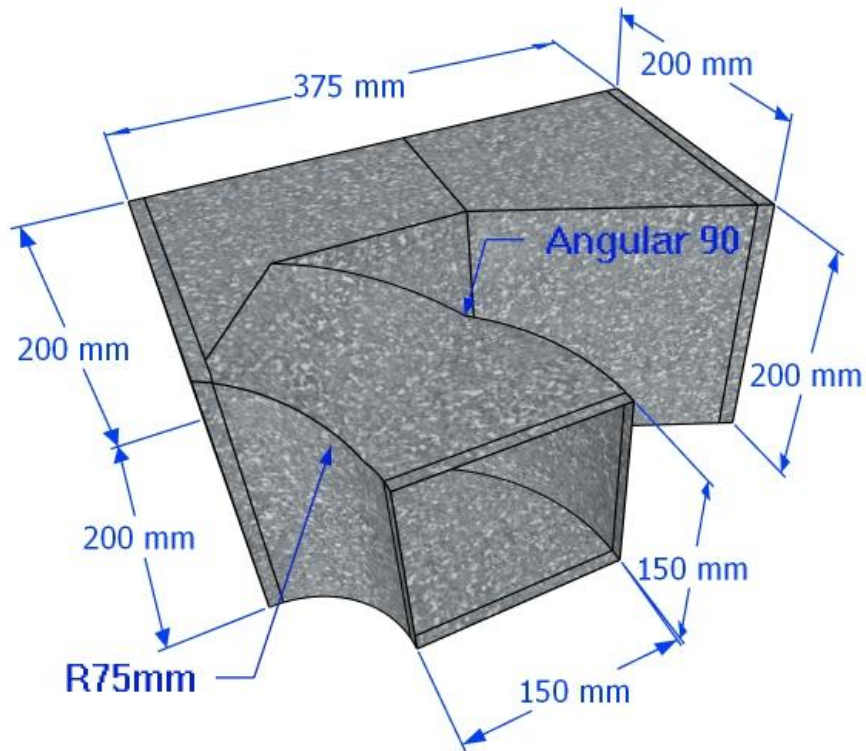

3D VIEW

**Ex: Y-Ducting: (200x200)->(200x200)
x(150x150xR75)xL375 = 1nos**

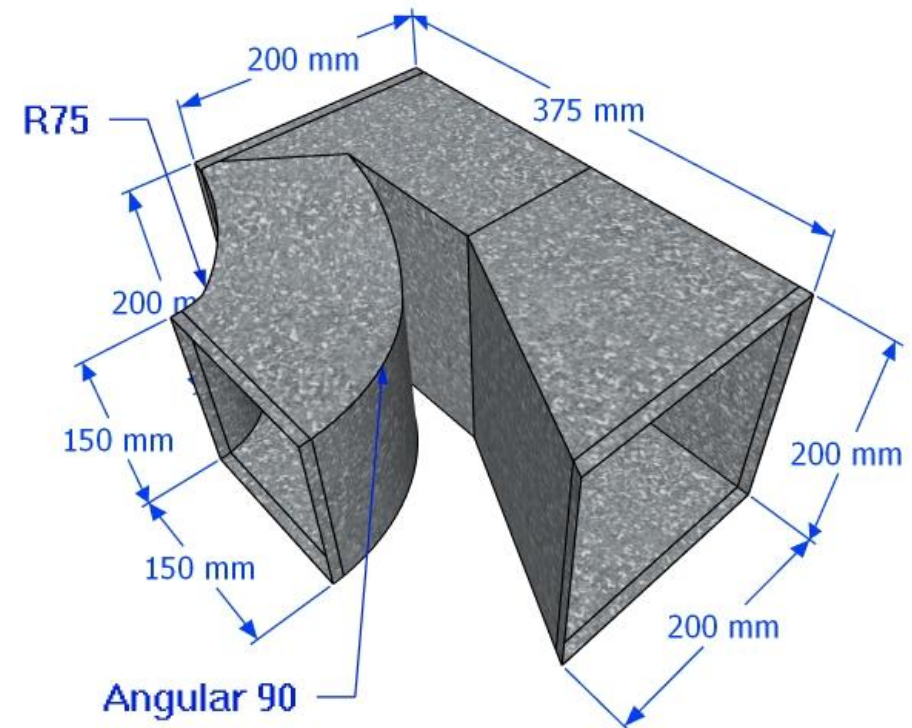


3D VIEW

TEMPLATE FOR DUCT FABRICATION


R-TYPE DUCT:

$AXB \rightarrow E \times F \leftrightarrow C \times D \times R \times L = (1\text{Nos})$

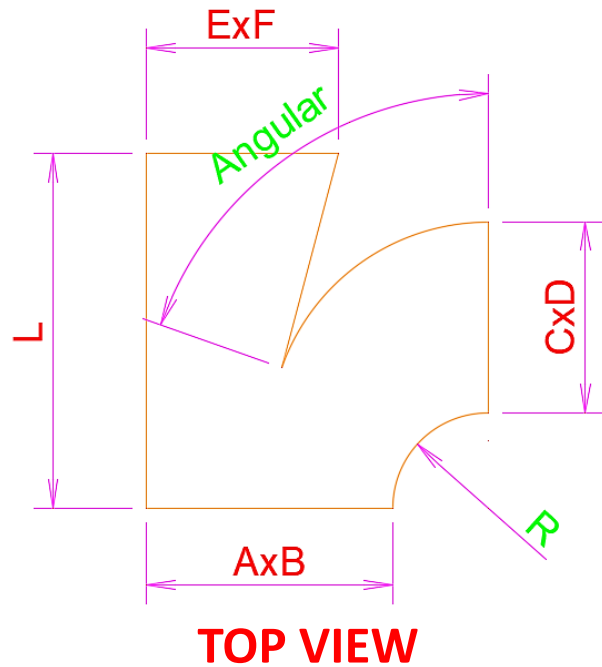

R-TYPE DUCT:


$450 \times 250\text{mm} \rightarrow 350 \times 250 \leftrightarrow 350 \times 250 \times R71 \times L650 = (1\text{Nos})$

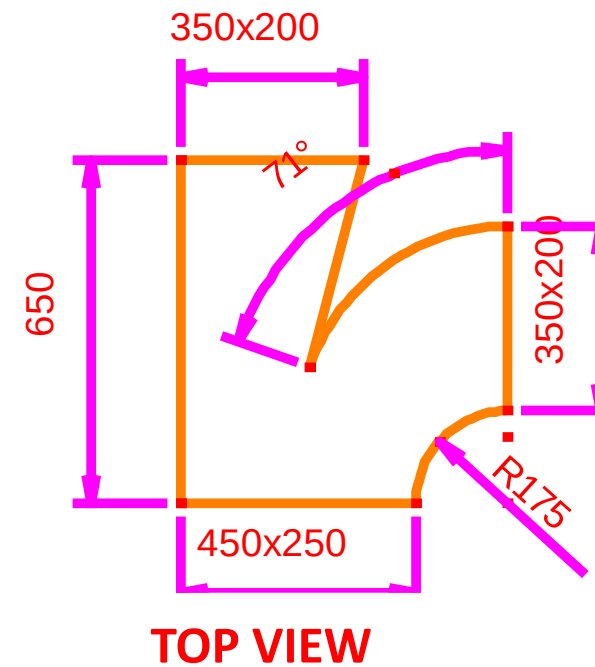

TEMPLATE FOR DUCT FABRICATION

R-TYPE DUCT:


AXB -> E x F <-> C x D x R x L= (1Nos)

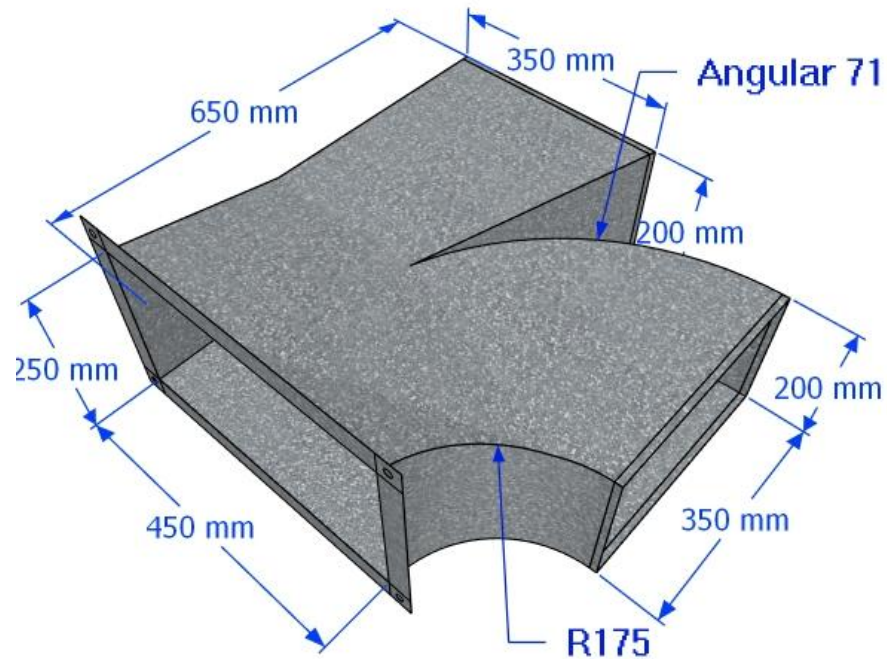

3D VIEW

R-TYPE DUCT:

**450X250mm->350x250<->350x250xR71xL650
= (1Nos)**

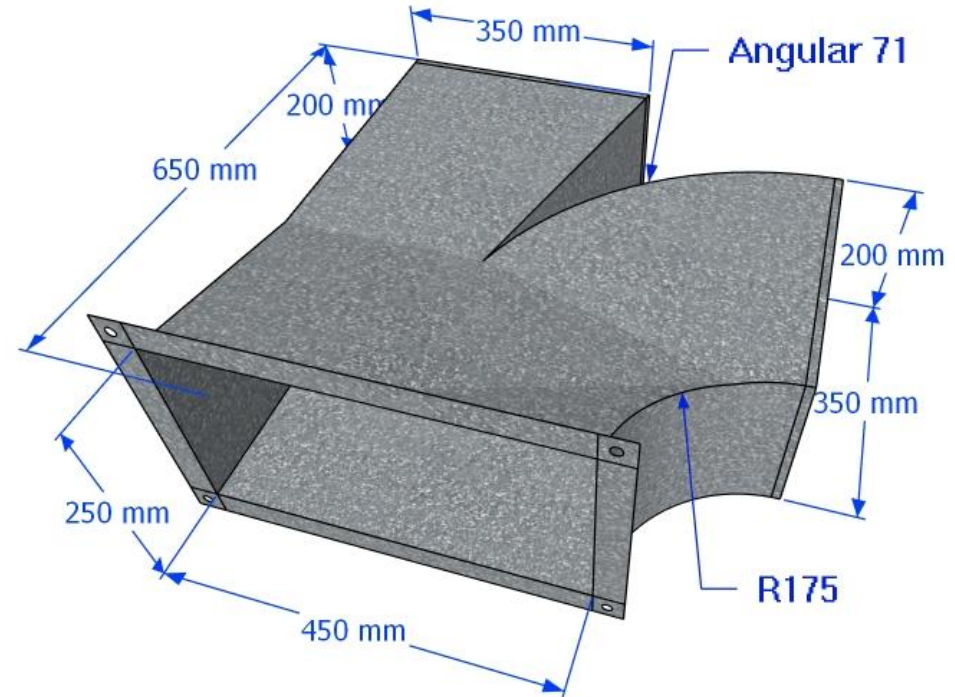


3D VIEW

TEMPLATE FOR DUCT FABRICATION


BUTTERFLY DUCT: AXB

->ExFxR1<->Cx DxR2 = (1Nos)

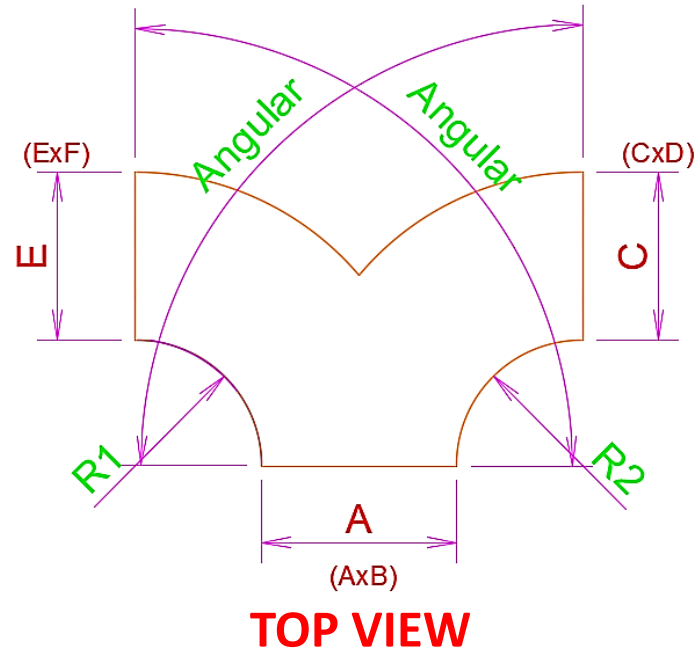

BUTTERFLY DUCT: 350X300mm


->300X300xR225<->300X300xR225 = (1Nos)

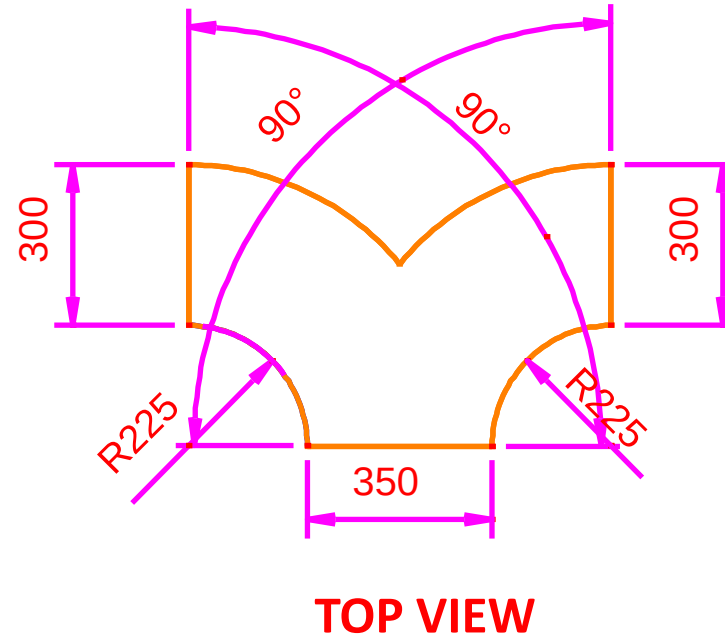

TEMPLATE FOR DUCT FABRICATION

BUTTERFLY DUCT: AXB


->ExFxR1<->Cx DxR2 = (1Nos)

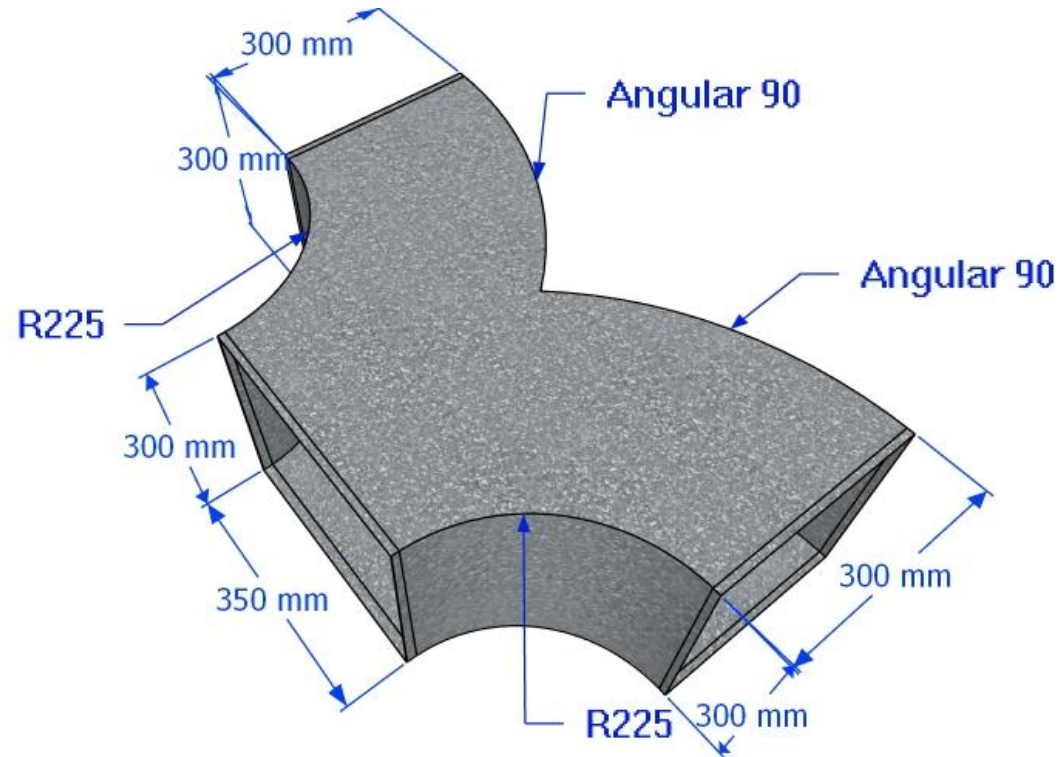

3D VIEW

BUTTERFLY DUCT: 350X300mm

->300X300xR225<->300X300xR225 = (1Nos)

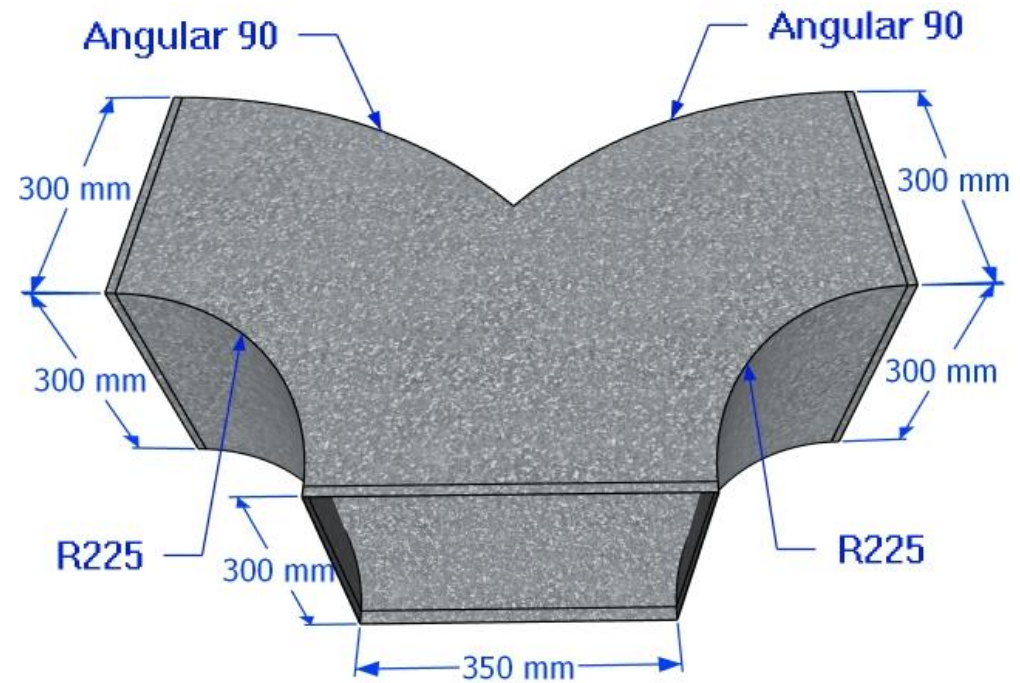


3D VIEW

TEMPLATE FOR DUCT FABRICATION

BUTTERFLY DUCT:


A x B -> $\emptyset 1 \times R1 \leftrightarrow \emptyset 2 \times R2 = 1\text{nos}$

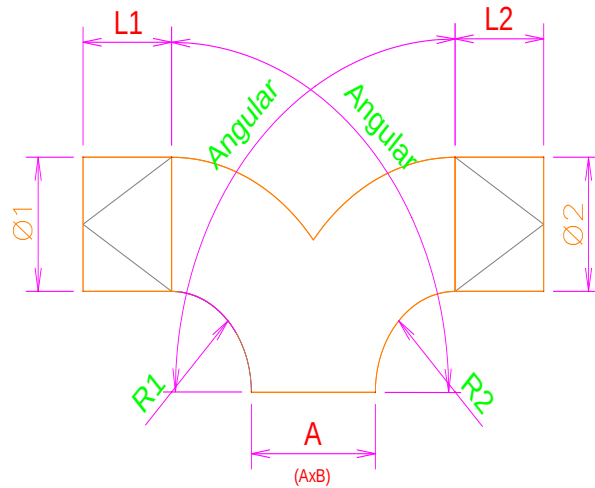

TOP VIEW

Ex: BUTTERFLY DUCT:

350X300mm-> $\emptyset 300 \times R225 \leftrightarrow \emptyset 300 \times 225 = (1\text{Nos})$

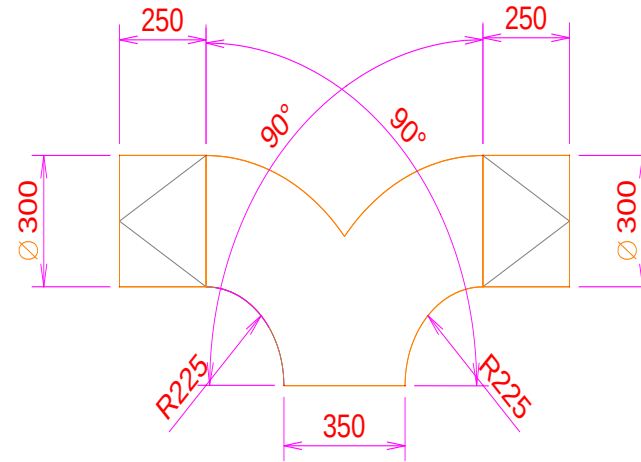

TOP VIEW


TEMPLATE FOR DUCT FABRICATION

BUTTERFLY DUCT:


A x B -> $\emptyset 1 \times R1 \leftrightarrow \emptyset 2 \times R2 = 1\text{nos}$

Ex: BUTTERFLY DUCT:

350X300mm-> $\emptyset 300 \times R225 \leftrightarrow \emptyset 300 \times 225$
=(1Nos)

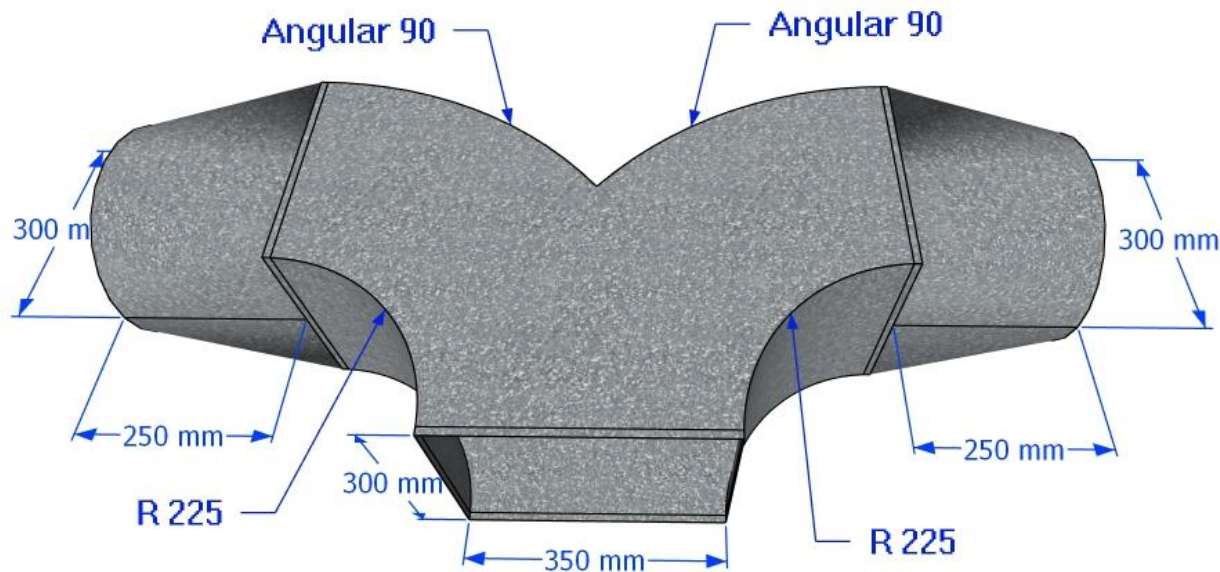

3D VIEW

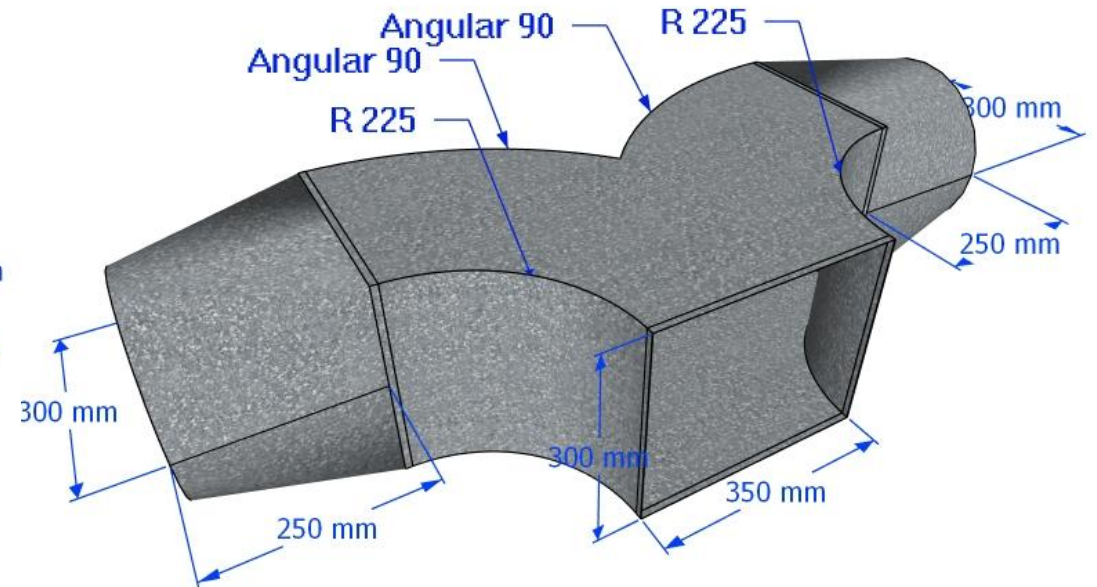


3D VIEW

TEMPLATE FOR DUCT FABRICATION


BUTTERFLY DUCT:

$A \times B \rightarrow \emptyset \times R1 \times L \leftrightarrow C \times D \times R2 = 1 \text{ nos}$

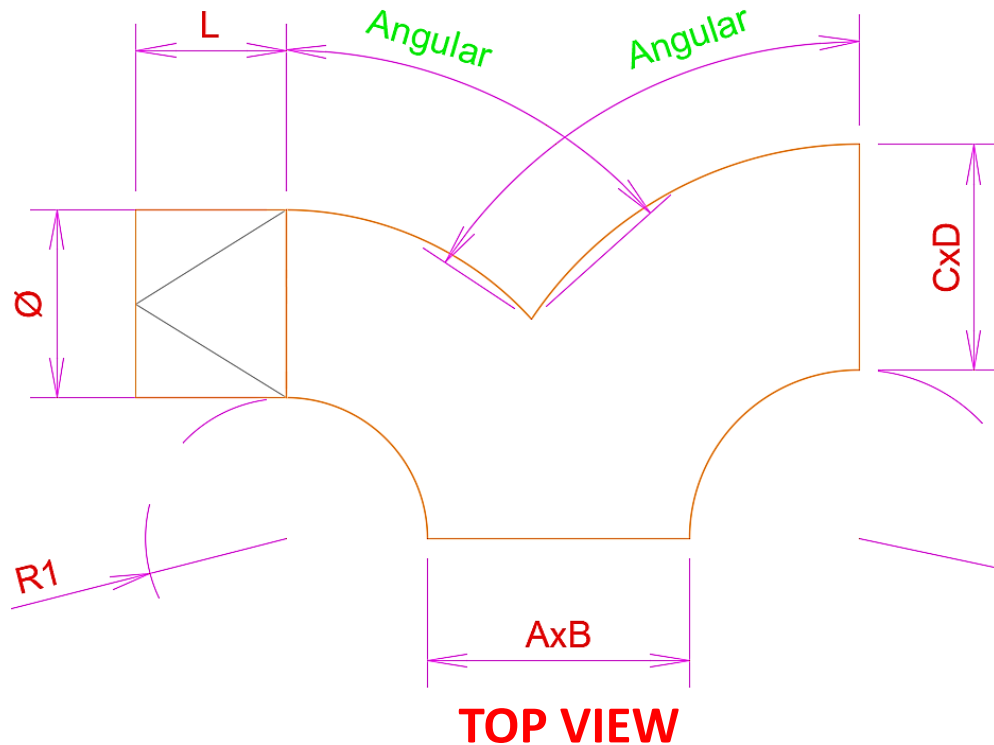

BUTTERFLY DUCT:


$350 \times 250 \text{ mm} \rightarrow \emptyset 200 \times R190 \times 200$
 $\leftrightarrow 300 \times 250 \times R225 = 1 \text{ Nos}$

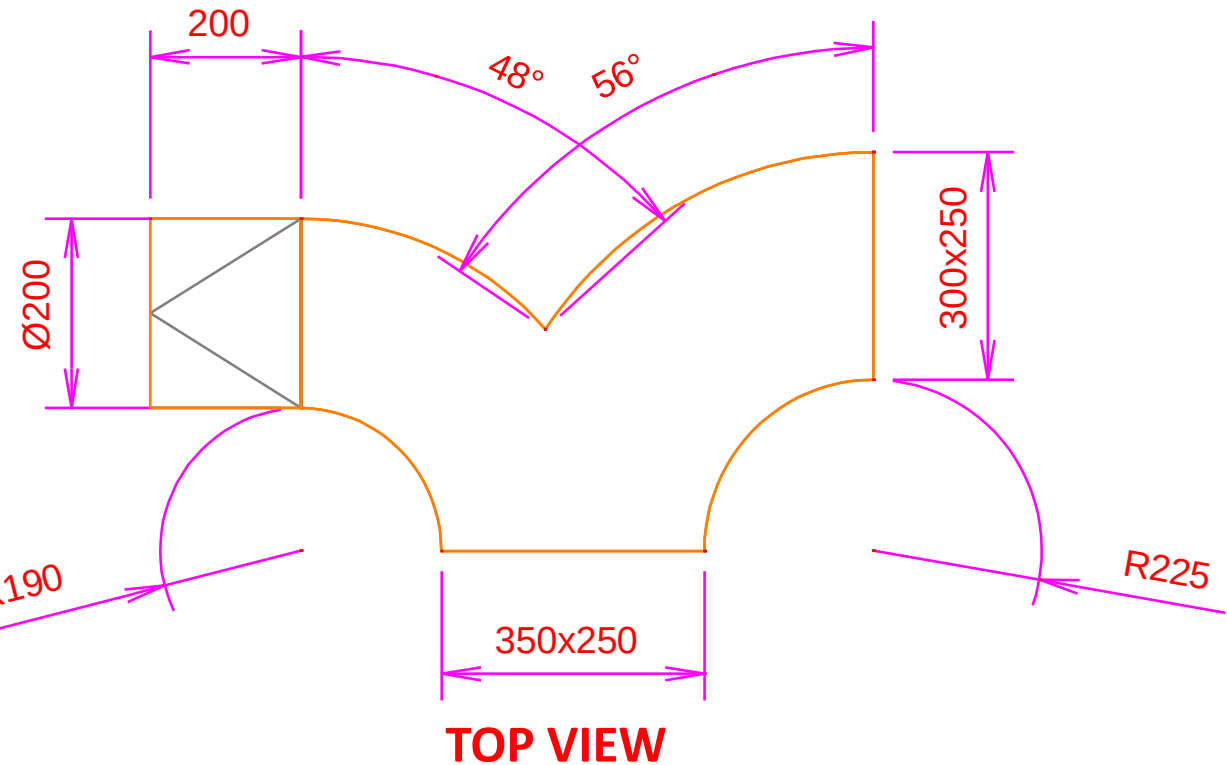

TEMPLATE FOR DUCT FABRICATION

BUTTERFLY DUCT:

A x B -> $\emptyset \times R1 \times L \leftrightarrow C \times D \times R2 = 1 \text{ nos}$

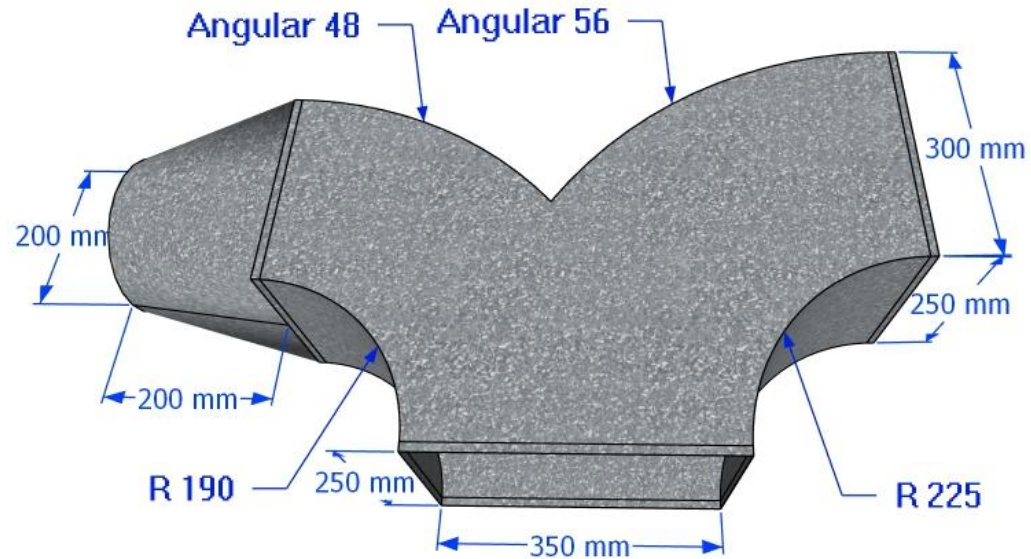


3D VIEW

BUTTERFLY DUCT:

350X250mm-> $\emptyset 200 \times R190 \times 200$

$\leftrightarrow 300 \times 250 \times R225 = 1 \text{ Nos}$

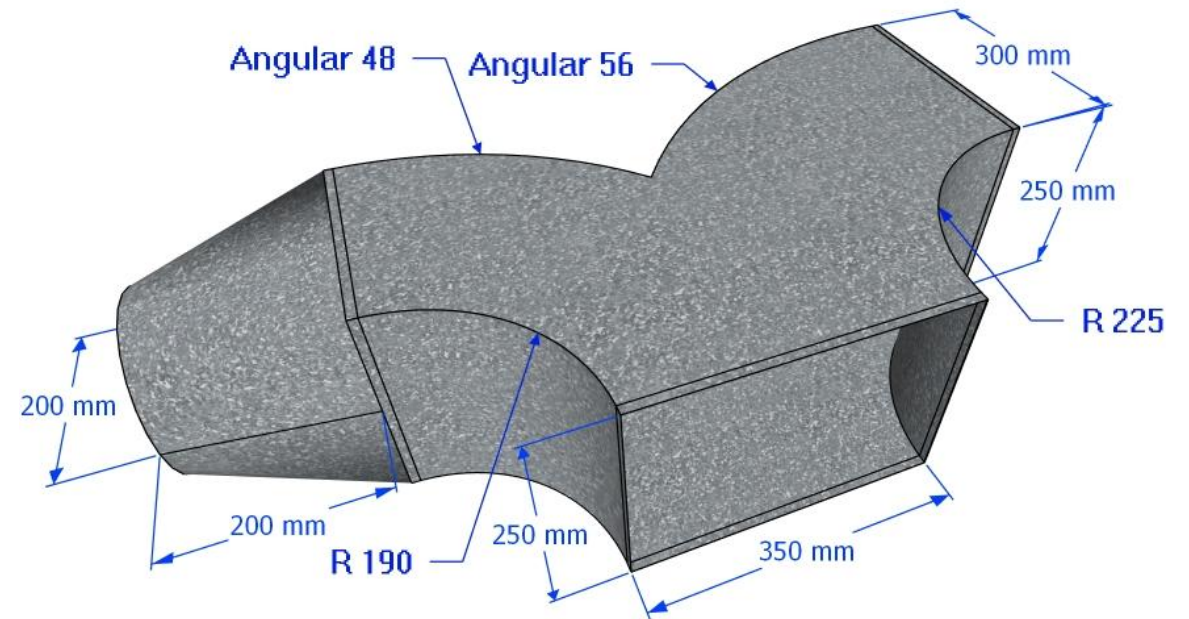


3D VIEW

TEMPLATE FOR DUCT FABRICATION

R-TYPE DUCT:


A X B-> $\varnothing 1 \leftrightarrow \varnothing 2 \times R150 = (1\text{Nos})$

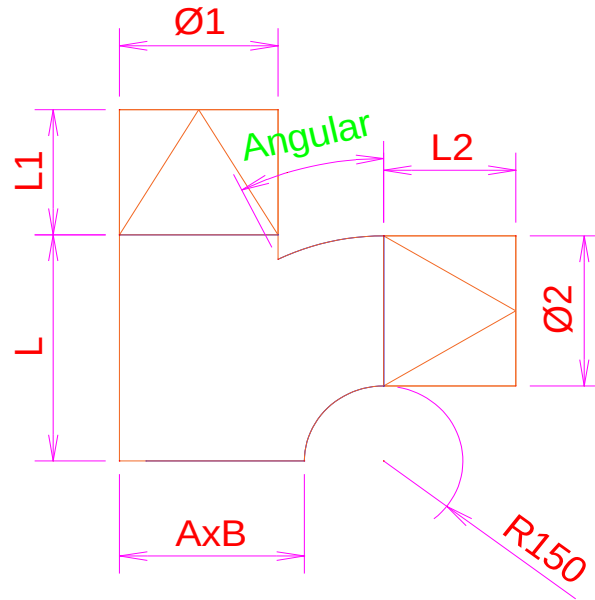

TOP VIEW

R-TYPE DUCT:

350X250mm-> $\varnothing 300 \leftrightarrow \varnothing 300 \times R150 = (1\text{Nos})$

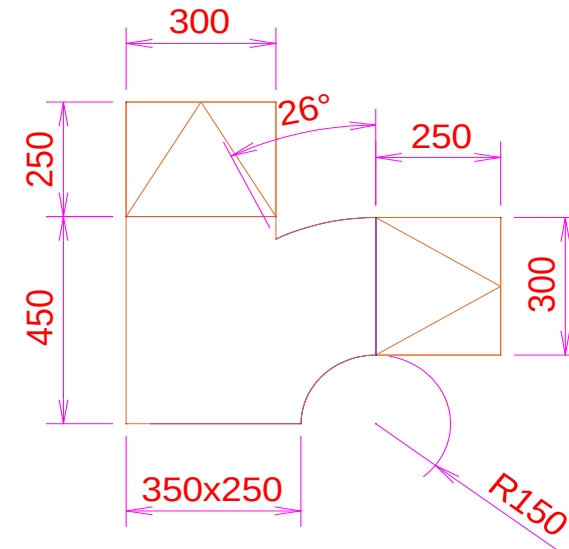


TOP VIEW

TEMPLATE FOR DUCT FABRICATION

R-TYPE DUCT:


A X B->Ø1<->Ø2xR150=(1Nos)

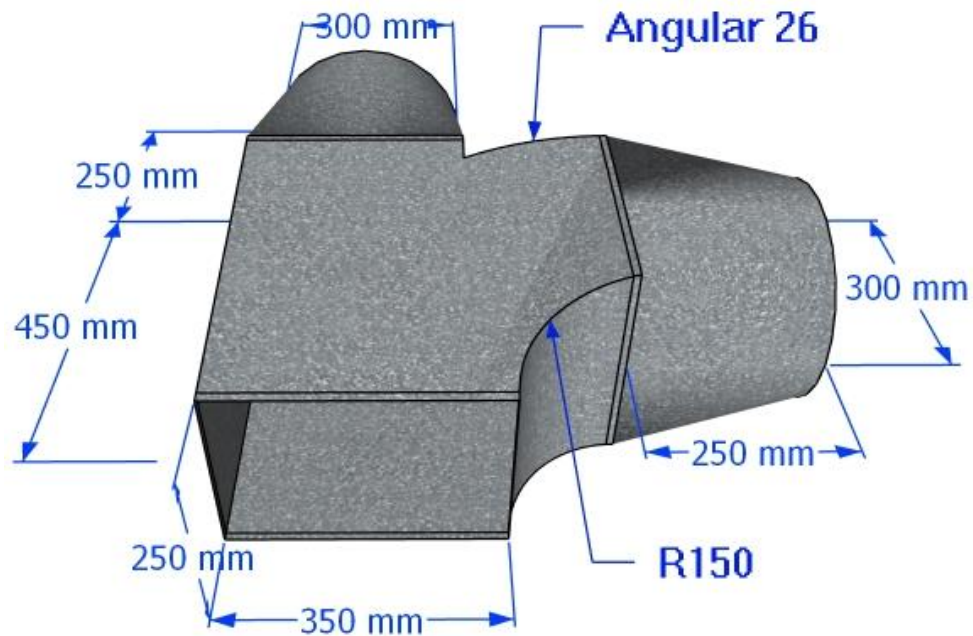

3D VIEW

R-TYPE DUCT:


350X250mm->Ø300<->Ø300xR150= (1Nos)

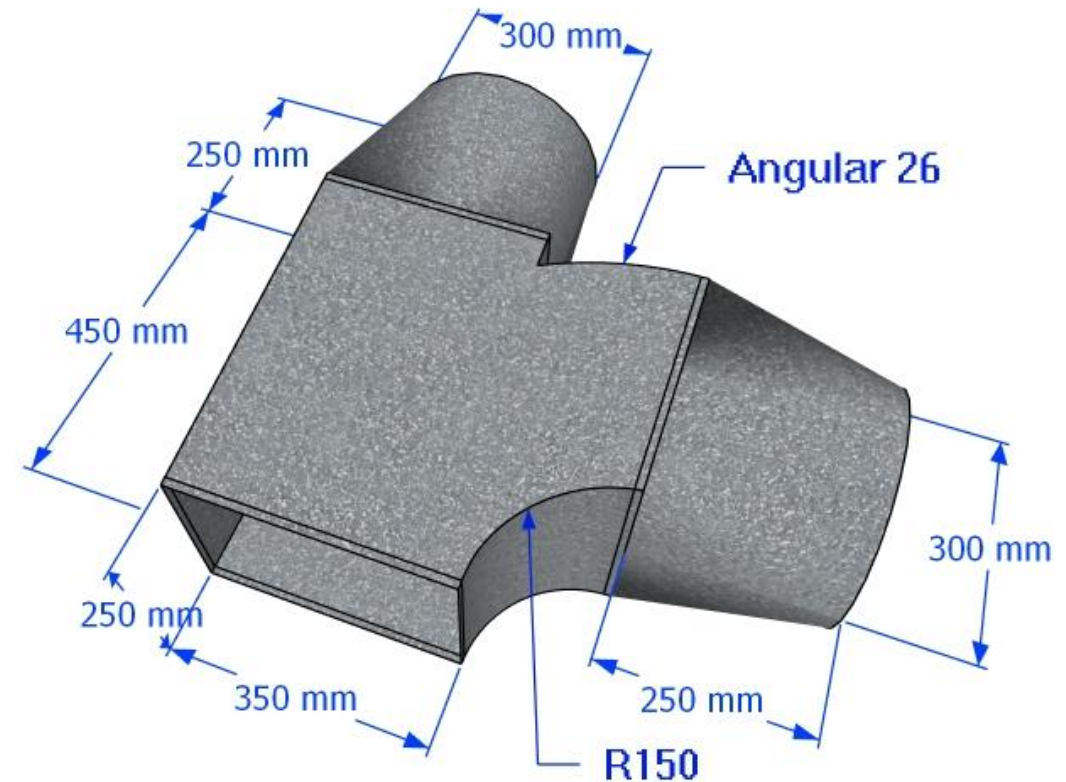


3D VIEW

TEMPLATE FOR DUCT FABRICATION

**REDUCER DUCT: A x B -> C x D x L
= (1Nos)**

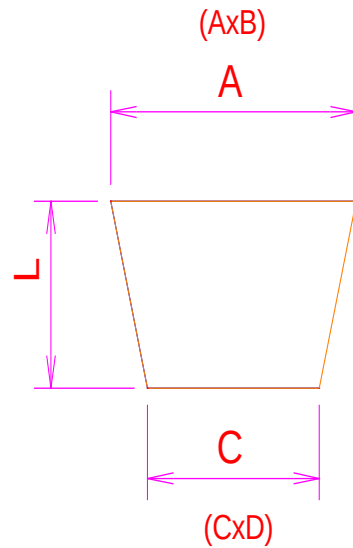


TOP VIEW

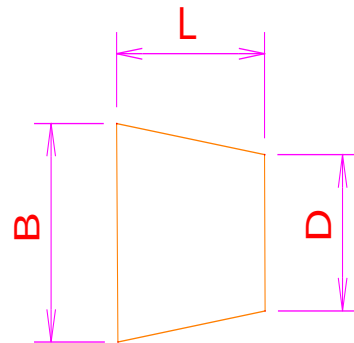


SIDE VIEW

**REDUCER DUCT: 500x350mm->
350x250mm xL300mm =(1Nos)**

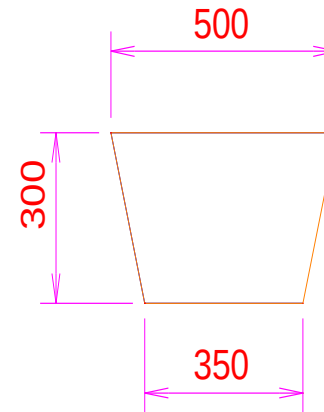


TOP VIEW

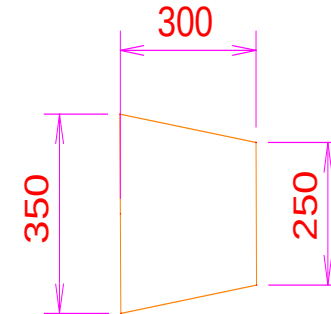

SIDE VIEW


TEMPLATE FOR DUCT FABRICATION

**FAN CONNECTION:
AXB TO CXDXL1=1Nos**

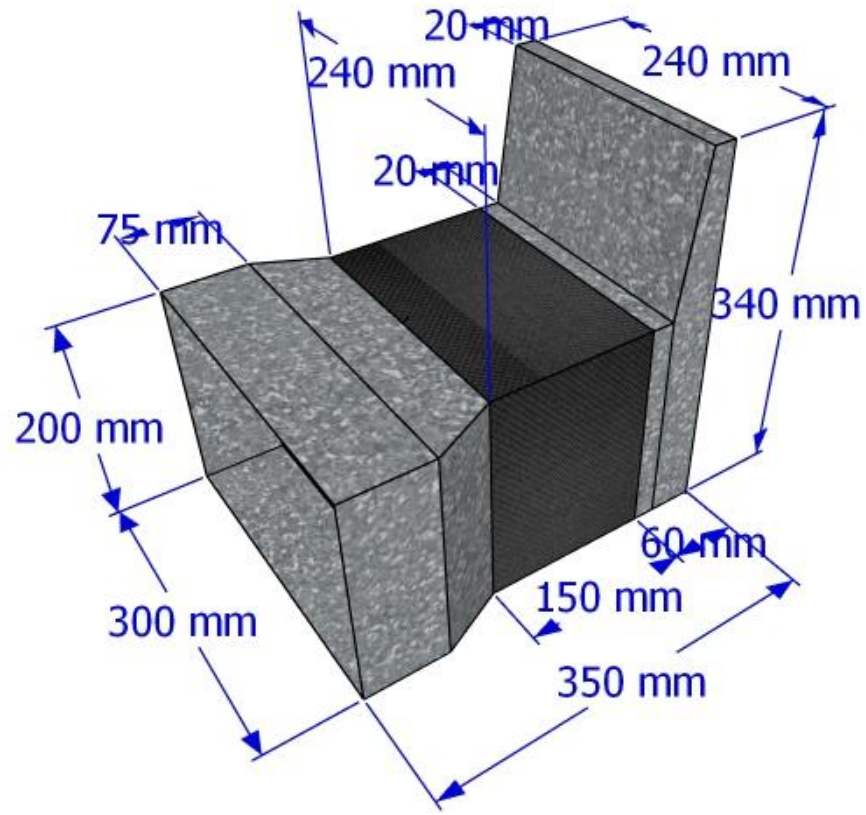

3D VIEW

**FAN CONNECTION:300X200 TO
240X340XL350=1Nos**

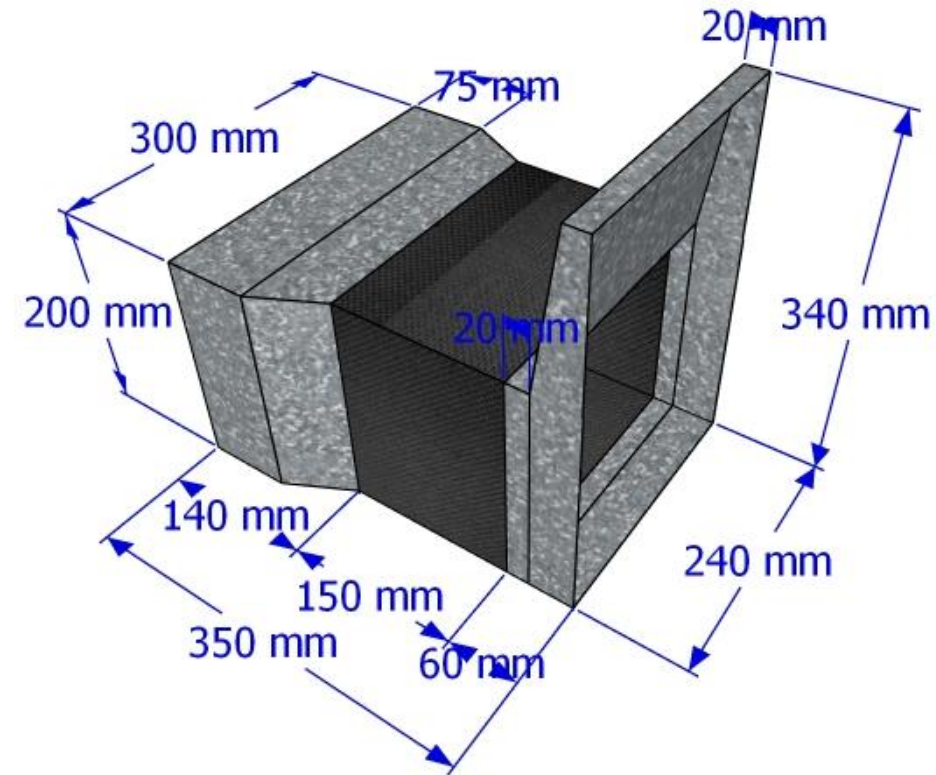



3D VIEW

TEMPLATE FOR DUCT FABRICATION

**FAN CONNECTION:
AXB TO CXDXL1=1Nos**





**FAN CONNECTION:300X200 TO
240X340XL350=1Nos**

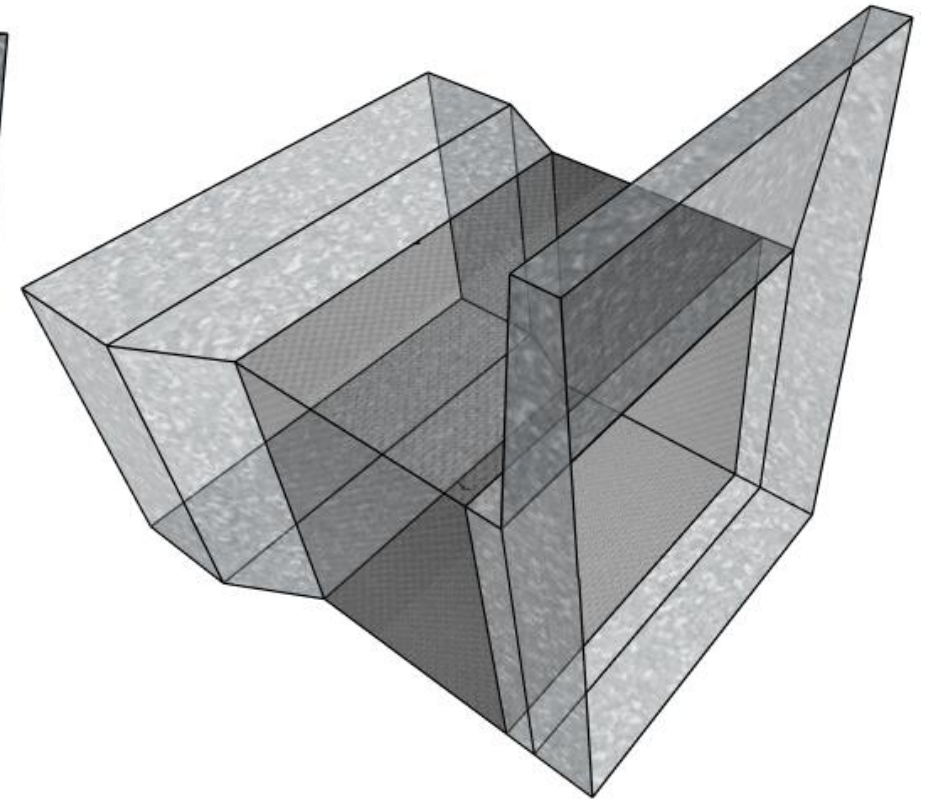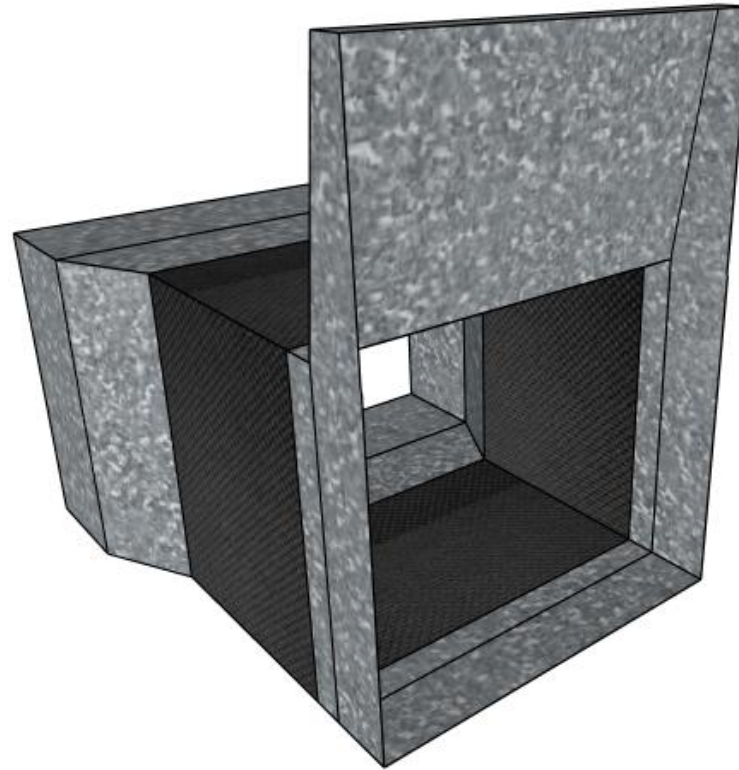

3D VIEW

TEMPLATE FOR DUCT FABRICATION


Ex: TRANSFER AIR DUCT:900x500mm

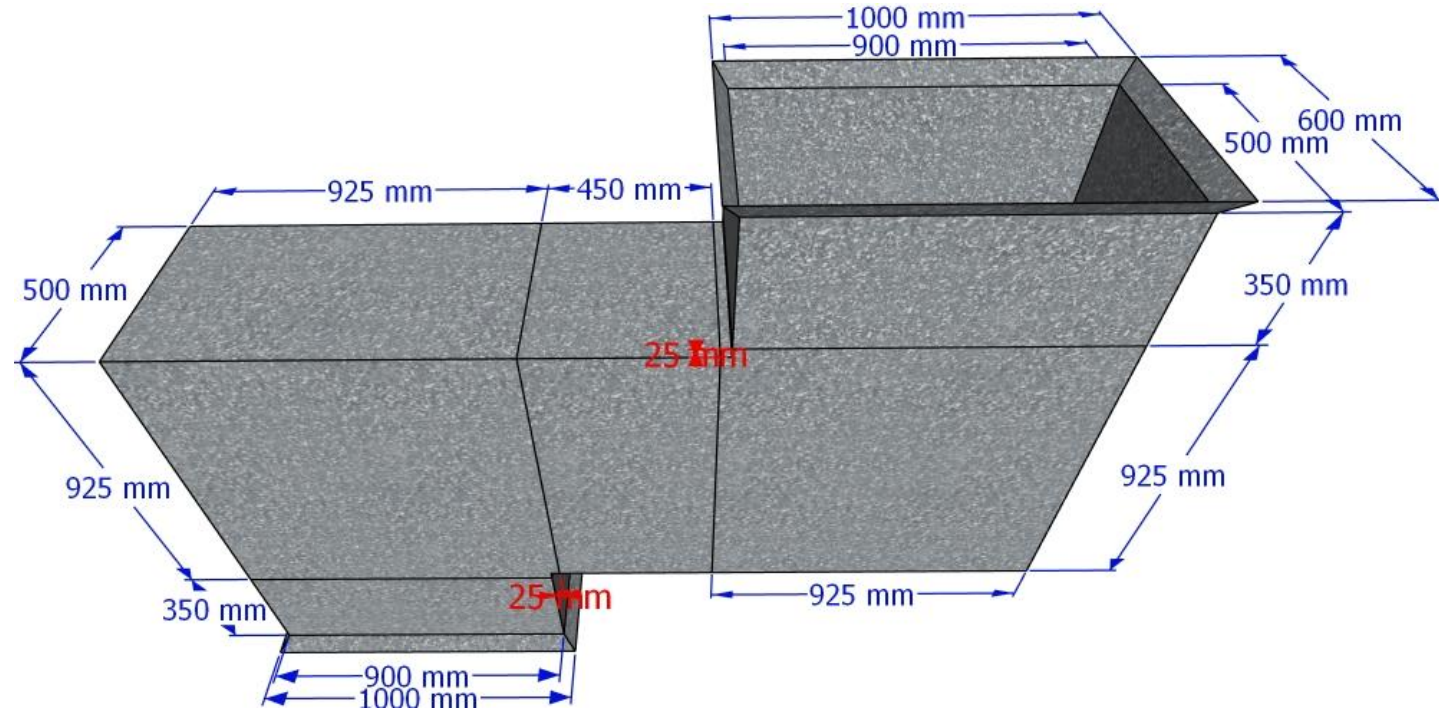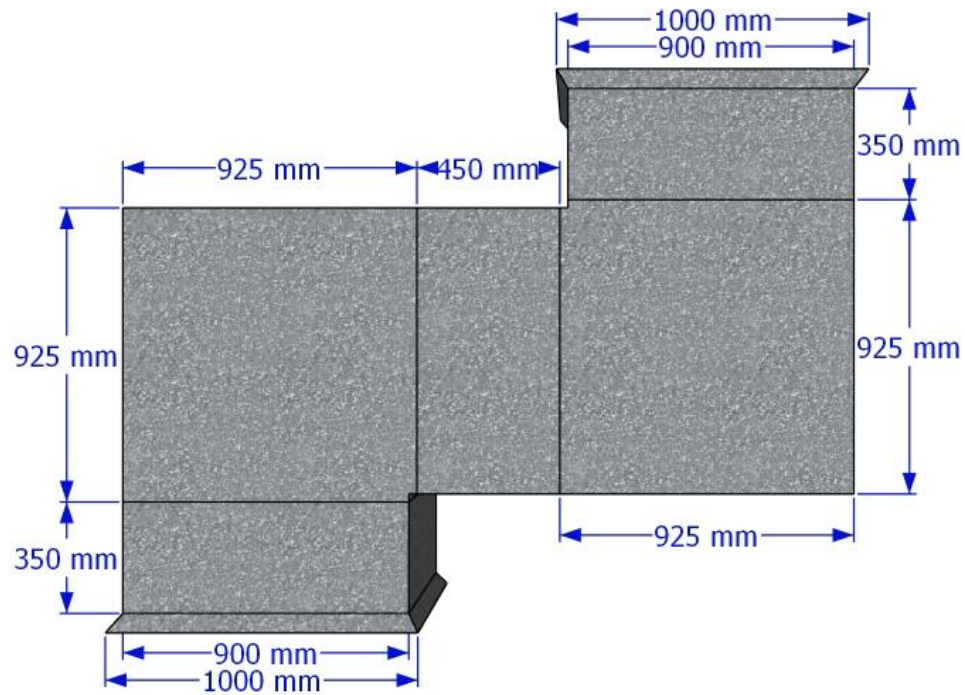

3D VIEW


TEMPLATE FOR DUCT FABRICATION

**4-WAYS:AXB->CXD<->EXFXR1<->
GXHXR2XL=(1Nos)**

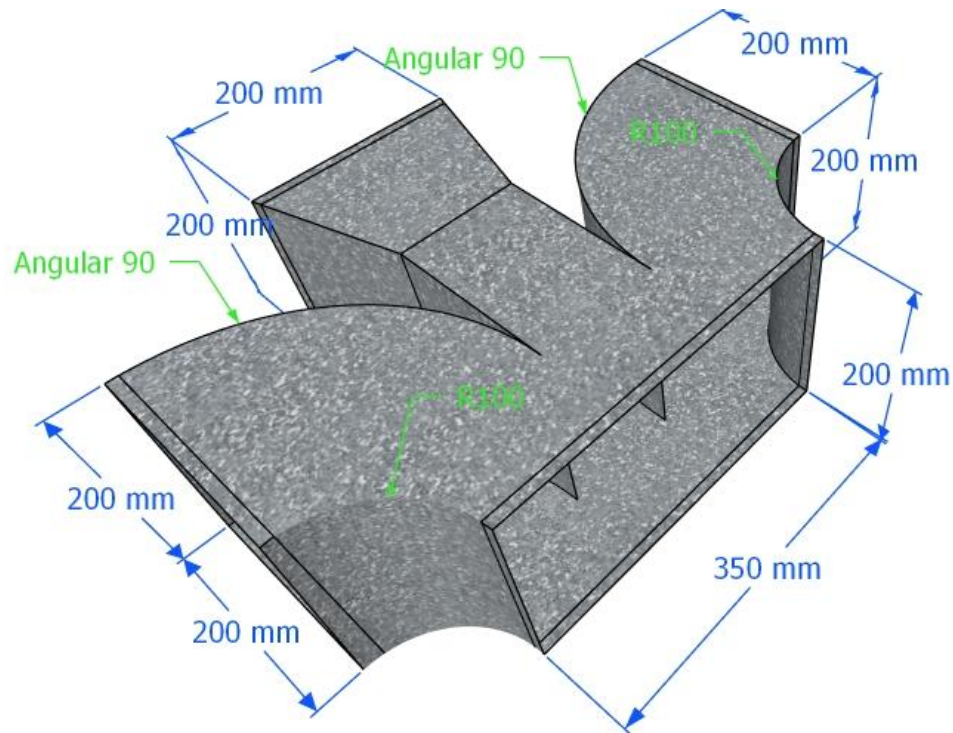

3D VIEW

**4-WAYS:350X200mm->200X200<->
200X200XR100<->200X200R100X
L400=(1Nos)**

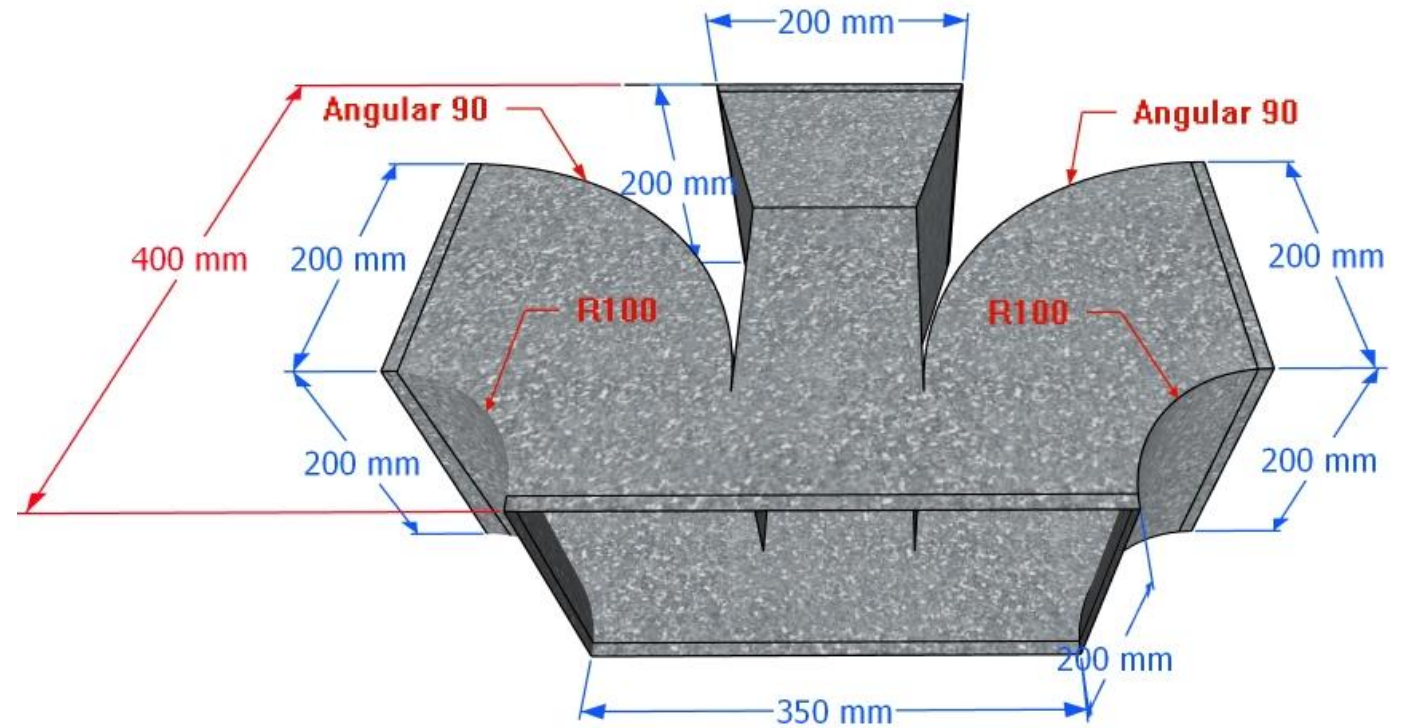

3D VIEW