C Programming

Lecture 08

Josh Brake
Harvey Mudd College

Outline

- C refresher
 - Common idioms to set/clear bits
 - Pointers and arrays
 - Structures
- Writing a simple device driver: GPIO
 - Finding information in documentation
 - Writing code to properly configure the peripheral

Learning Objectives

By the end of this lecture you should be able to...

- Recall basic C programming idioms and concepts (e.g., pointers, arrays, structures).
- Write a simple device driver to control the peripherals in your MCU using memory-mapped I/O.

C Programming Review

Important Concepts in C

- C is libertarian by nature. You can stomp on any memory address you want!
- There is no memory management built in. You must manually allocate (and deallocate!) any memory you need.

Primitive Data Types in C

Table eC.2 Primitive data types and sizes

Type	Size (bits)	Minimum	Maximum
char	8	$-2^{-7} = -128$	$2^7 - 1 = 127$
unsigned char	8	0	$2^8 - 1 = 255$
short	16	$-2^{15} = -32,768$	$2^{15} - 1 = 32,767$
unsigned short	16	0	$2^{16} - 1 = 65,535$
long	32	$-2^{31} = -2,147,483,648$	$2^{31} - 1 = 2,147,483,647$
unsigned long	32	0	$2^{32} - 1 = 4,294,967,295$
long long	64	-2^{63}	$2^{63} - 1$
unsigned long	64	0	$2^{64} - 1$
int	machine-dependent		
unsigned int	machine-dependent		
float	32	$\pm 2^{-126}$	±2 ¹²⁷
double	64	$\pm 2^{-1023}$	±2 ¹⁰²²

Primitive Data Types in stdint.h

Table eC.2 Primitive data types and sizes

Type	Size (bits)	Minimum	Maximum
char	8	$-2^{-7} = -128$	$2^7 - 1 = 127$
unsigned char	8	0	$2^8 - 1 = 255$
int	machine-dependent		
unsigned int	machine-dependent		
int16_t	16	$-2^{15} = -32,768$	$2^{15} - 1 = 32,767$
uint16_t	16	0	$2^{16} - 1 = 65,535$
int32_t	32	$-2^{31} = -2,147,483,648$	$2^{31} - 1 = 2,147,483,647$
uint32_t	32	0	$2^{32} - 1 = 4,294,967,295$
int64_t	64	-2^{63}	$2^{63} - 1$
uint64_t	64	0	$2^{64} - 1$
float	32	±2 ⁻¹²⁶	±2 ¹²⁷
double	64	$\pm 2^{-1023}$	±2 ¹⁰²²

Operators and Operator Precedence

Table eC.3 Operators listed by decreasing precedence

Category	Operator	Description	Example
Unary	++	post-increment	a++; // a = a+1
		post-decrement	x; // x = x-1
	&	memory address of a variable	x = &y // x = the memory // address of y
	~	bitwise NOT	Z = ~a;
	!	Boolean NOT	!x
	-	negation	y = -a;
	++	pre-increment	++a; // a = a+1
		pre-decrement	x; // x = x-1
	(type)	casts a variable to (type)	<pre>x = (int)c; // cast c to an // int and assign it to x</pre>
	sizeof()	size of a variable or type in bytes	long int y; x = sizeof(y); // x = 4
Multiplicative	*	multiplication	y = x * 12;
	/	division	z = 9 / 3; // z = 3
	%	modulo	z = 5 % 2; // z = 1
Additive	+	addition	y = a + 2;
	_	subtraction	y = a - 2;
Bitwise Shift	<<	bitshift left	z = 5 << 2; // z = 0b00010100
	>>	bitshift right	x = 9 >> 3; // $x = 0b00000001$
Relational	==	equals	y == 2
	!=	not equals	x != 7
	<	less than	y < 12
	>	greater than	val > max
	<=	less than or equal	z <= 2
	>=	greater than or equal	y >= 10

Table eC.3 Operators listed by decreasing precedence—Cont'd

Category	Operator	Description	Example
Bitwise	&	bitwise AND	y = a & 15;
	^	bitwise XOR	y = 2 ^ 3;
	1	bitwise OR	y = a b;
Logical	&&	Boolean AND	х && у
	П	Boolean OR	x y
Ternary	?:	ternary operator	y = x ? a : b; // if x is TRUE, // y=a, else y=b
Assignment	=	assignment	x = 22;
	+=	addition and assignment	y += 3; $// y = y + 3$
	-=	subtraction and assignment	z -= 10; // z = z - 10
	*=	multiplication and assignment	x *= 4; // x = x * 4
	/=	division and assignment	y /= 10; // y = y / 10
	%=	modulo and assignment	x %= 4; // x = x % 4
	>>=	bitwise right-shift and assignment	x >>= 5; // x = x>>5
	<<=	bitwise left-shift and assignment	x <<= 2; // x = x<<2
	&=	bitwise AND and assignment	y &= 15; // y = y & 15
	=	bitwise OR and assignment	x = y; // x = x y
	^=	bitwise XOR and assignment	x ^= y; // x = x ^ y

Operator Precedence Tip!

You should only have to remember multiplication/division before addition/subtraction. For everything else, use parentheses!

Important Keywords in C

- volatile prevents the compiler from using a cached value (forces load)
- const "read-only". Prevents you from assigning a value to the variable.
- static
 - Inside a function: retains its values between calls.
 - Applied to a function: visible only in this file
- extern
 - Applied to a function definition: has global scope (redundant)
 - Applied to a variable: defined elsewhere
- void
 - As return type of function: doesn't return a value
 - In a pointer declaration, the type of a generic pointer
 - In a parameter list: takes no parameters

Important Libraries

- stdint h standard fixed-width types (e.g., uint32_t)
- stdio.h standard input and output. Contains functions like printf or fprintf.
- stdlib.h standard library: random number generation (rand and srand), allocating or freeing memory (malloc and free).
- math.h math library: standard math functions like sin, cos, sqrt, log, exp, floor, ceil.
- string.h string library: functions to compare, copy, concatenate, and determine the length of a string.

Setting and Clearing Bits

C Idioms for Setting and Clearing Bits

```
1 #define GPIOA_BASE 0x48000000
2 #define GPIOA_MODER (*((volatile unsigned long *) (GPIOA_BASE + 0x00)))
3
4 // Set bit 3 of the GPIOA_MODER to 1.
5
6
7 // Clear bit 7 of the GPIOA_MODER (i.e., set to 0)
8
9

② GPIOA_MODER | = (1 << 3)*</pre>
```

```
① GPIOA_MODER |= (1 << 3);
② GPIOA_MODER &= ~(1 << 7);
```

Pointers and Arrays

Pointers and Arrays in C: Arrays

```
1 int * p = (int*) 0x20000000;
2
3 int a = *p;
4
5 int b = *(p+3);
6
7 *(p+5) = b;
3
```

- ① Equivalent to a= p [0]
- ② Equivalent to b = p[3], address 0×20000000
- 3 Equivalent to p[5] = b, address 0×20000014

Pointers and Arrays in C: Strings

```
1 char * str = (char *) 0x20001000;
2
3 str[13] = 'A';
①
```

① Address $0 \times 2000100D = 0 \times 41$

Dereferencing

- ① Equivalent to a = p [0]
- 2 aptr stores address of a
- 3 same as a=3
- 4 ptr= 0x200000000
- ⑤ ptr= 0x20000014
- 6 p [5] = 42

Structures

```
1 struct optional_tag {
2    type_1 identifier_1;
3    type_2 identifier_2;
4    ...
5    type_N identifier_N;
6 } optional_variable_definitions;
```

Structures

```
1 struct contact {
2    char name[30];
3    unsigned long long phone;
4    float height;
5 };
6
7 struct contact jbrake; // example variable definition
```

How many bytes does this structure occupy in memory?

```
30*sizeof(char) + sizeof(unsigned long long) + sizeof(float)
= 30 B + 8 B + 4 B = 42 Bytes
```

Using structures as part of a new type

Can also wrap in a typedef to avoid needing to use the struct keyword.

Arrow Operator

Use a structure to access a chunk of memory in a specific location.

```
typedef struct {
char first_name[30];
unsigned long long phone;
float height;
} contact_type;

contact_type jbrake;
strcpy(jbrake.first_name, "Josh Brake");
jbrake.phone = (unsigned long long) 9096218553;
contact_type * contact_type_ptr = &jbrake;
unsigned long long phone_num = contact_type_ptr->phone;
```

Writing Device Drivers: GPIO Example

GPIO Block Diagram

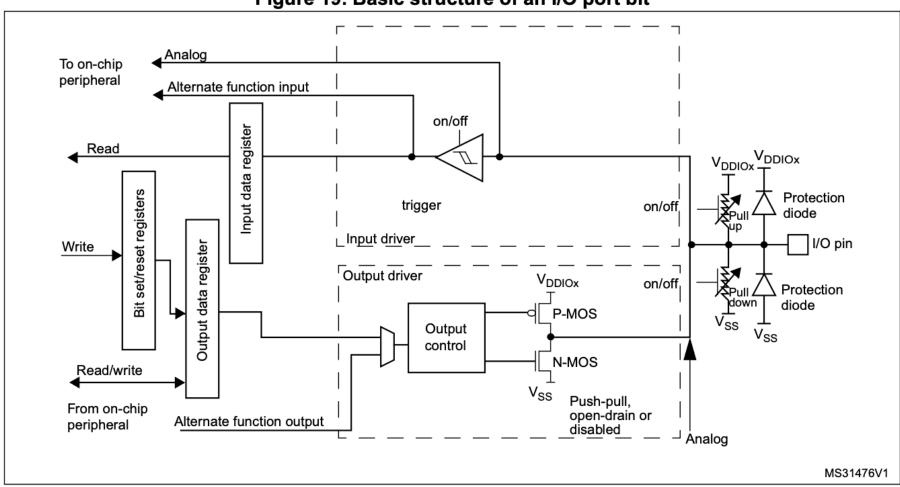


Figure 19. Basic structure of an I/O port bit

GPIO Register Map

Table 37. GPIO register map and reset values


Offset	Register name	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	œ	7	9	5	4	3	2	-	0
0x00	GPIOA_MODER	MODE15[1:0]	MODE 3 .0	MODE14[1:0]		MODE13[1-0]		MODE12[1:0]	i I	MODE 11[1:0]		MODE10[1:0]		MODE9[1:0]		MODE8[1:0]	MODE 0[1:0]	MODE 7[1:0]	· · · · · · · · · · · · · · · · · · ·	MODE6[1:0]	[2]	MODE5[1:0]	[o]	MODE4[1:0]		MODE 2(1-0)	MODES 1.0]	MODE 211-01		MODE 1[1:0]	[2::1::20:::	MODE0[1:0]	
	Reset value	1	0	1	0	1	0	1	1	1	1	1	1	1 1		1	1	1	1	1 1		1	1	1	1	1	1	1	1	1	1	1	1
0x00	GPIOB_MODER	MODE15[1-0]	MODE IST. U	MODE14[1:0]	[c].	MODE13[1:0]	MODE 19[1.9]	MODE12[1:0]-		MODE 11[1:0]		MODE10[1:0]		MODE911:01		MODE8[1:0]		MODE 7[1:0]	<u>.</u>	MODE671:01	[o]	MODE5[1:0]	[o]o	MODE4[1:0]	[o:-]t-]	MODE 2(1-0)	MODES 1.0]	MODE 211-01		MODE 111-01	[5::1]	MODE0[1:0]	
	Reset value	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	1	0	1	1	1	1	1	1
0x00	GPIOx_MODER (where x = CE,H)	MODE15[1:0]	MODE 13[1.0]	MODE 14[1:0]	[o].	MODE13[1:0]	100 L 10 L 10 L	MODE 12[1:0]		MODE 11[1:0]	[o]	MODE 10[1:0]		MODE9[1:0]		MODE 8[1:0]	[0:-]00	MODE 7[1:0]	[o]	MODE671:01	[o]	MODE511-01	[o]o	MODE4[1:0]	[o:-]t-]	MODE 214-01	[6:15]	MODE 211:01	[0::1]	MODE 1[1:0]	[o:.].	MODE0[1:0]	
	Reset value	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
0x04	GPIOx_OTYPER (where x = AE,H)	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	OT15	OT14	OT13	OT12	OT11	OT10	ОТЭ	ОТ8	017	ОТ6	ОТ5	OT4	ОТЗ	ОТ2	OT1	0T0
	Reset value																	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Steps for writing a device driver for a new peripheral

- 1. Look at block diagram
- 2. Note what elements in the diagram need to be configured
- 3. Find relevant registers and bits
- 4. Write code
 - 1. Base address for peripheral
 - 2. Create structure to define registers

Blink LED

On-board LED connected to pin PB3.

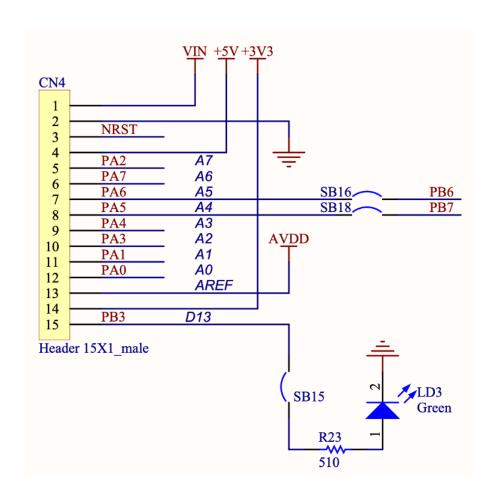

UM1956 p. 33

Enabling peripheral clock

6.2.18 Peripheral clock enable register (RCC_AHBxENR, RCC_APBxENRy)

Each peripheral clock can be enabled by the xxxxEN bit of the RCC_AHBxENR, RCC_APBxENRy registers.


When the peripheral clock is not active, the peripheral registers read or write accesses are not supported.

The enable bit has a synchronization mechanism to create a glitch free clock for the peripheral. After the enable bit is set, there is a 2 clock cycles delay before the clock be active.

Caution: Just a

Just after enabling the clock for a peripheral, software must wait for a delay before accessing the peripheral registers.

RM0394 p. 191

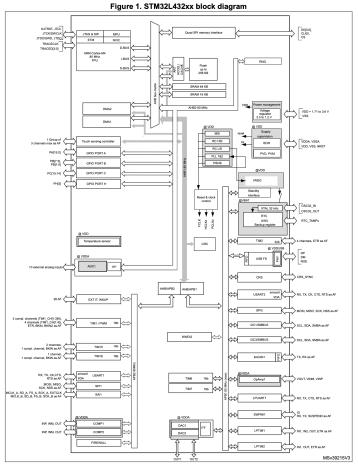

Note: AF: alternate function on I/O pins.

DS11451 p. 13

Finding clock enable bit for GPIOB

6.4.16 AHB2 peripheral clock enable register (RCC_AHB2ENR)

Address offset: 0x4C

Reset value: 0x0000 0000

Access: no wait state, word, half-word and byte access

Note: When the peripheral clock is not active, the peripheral registers read or write access is not

supported.

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	RNG EN	res.	AESEN (1)
													rw		rw
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Res.	res.	ADCEN	res.	Res.	Res.	Res.	res.	GPIOH EN	res.	res.	GPIOE EN	GPIOD EN	GPIOC EN	GPIOB EN	GPIOA EN

^{1.} Available on STM32L42xxx, STM32L44xxx and STM32L46xxx devices only.

Where is that bit located?

- 1. Look in system and memory overview section
- 2. Look RCC register mapping to find register and bit offsets

																									٠.,				٠,				11,000170	_									
																						t			0x4	100	2 4	000 -	- 0x	4002 43F	F	1 KB	TSC		Se	ction	n 23.	.6.11	: TS	C regi	ster ma	ap	
																								Ī	0x4	100	2 3	400 -	- 0x	4002 3FF	F	1 KB	Reserve	d						-			
																									0x4	100	2 3	000 -	- 0x	4002 33F	F	1 KB	CRC		Se	ctior	n 14.	.4.6:	CRC	c regis	ster ma	p	
																									0x4	100	2 2	400 -	- 0x	4002 2FF	F	3 KB	Reserve	d						-			
																									0x4	100	2 2	000 -	- 0x	4002 23F	F	1 KB	FLASH registers	ı	Se	ction	n 3.7	7.13:	FLA	SH re	gister r	nap	
																							AHI	31 [0x4	100	2 1	400 -	- 0x	4002 1FF	F	3 KB	Reserve	d						-			
																									0x4	100	2 1	000 -	- 0x	4002 13F	F	1 KB	RCC		Se	ction	n 6.4	1.32:	RCC	C regis	ster ma	p	
																									0x4	100	2 0	800 -	- 0x	4002 0FF	F	2 KB	Reserve	d						-			
			+	+		+	+	SST						Ļ	T L		SST	+	- -	SST		+		Н		+		SST		4002 07F	F	1 KB	DMA2			ctior lues		6.8:	DMA	\ regis	ter ma	p and	reset
0x40	RCC_ APB2RSTR	Res.	Res.	Zes.	Res.	Res.	Res.	DFSDM1RST	Res.	Res.	SAI1RST	Res.	Res.	Kes.	TIM15RST	Res.	USART1RST	Res.	TIMIRS	SDMMC1RST	Res.	Res.	Res.	Res.	Res.	Res.	Res.	SYSCFGRST		4002 03F		1 KB	DMA1			ctior lues		6.8:	DMA	\ regis	ter ma	p and	reset
	Desetualus		+	+	+	+	+	0	-		0	\dashv	+	+	0 0		0	۷,	1	0 5	Н		+	Н	+	+	+	0 S		4001 EEE	E	30 KB	Pacania	d						-			
\vdash	Reset value		+	+	+	+	+	+			0	\dashv	+	+	+		-	+	+	10	1 1	z	+		+	+	+																
0x48	RCC_AHB1 ENR	Res.	Res.	Zes.	Res.	Res.	Res	Res.	Res.	Res.	Res.	Res.	Res.	Kes.	TSCEN	Res.	Res.	Res.	אבו הפארה הפארה	Res.		FLASHEN	Res.	Res.	Res.	Res.	Res.	DMAZEN DMA1EN															
	Reset value		\top	†	Ť	†	T	T				\exists		†	0		П	7)		П	1	†			\top	(0 0															
0x4C	RCC_AHB2 ENR	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	Res.	KNGEN	AESEN	Res.	Res.	ADCEN	Pac	Res.	Res.	Res.	Res.	Res.	GPIOEEN	GPIODEN	GPIOCEN	GPIOBEN															
	Reset value												(0	0			0				C			0	0	0 (0 0															

Configuration steps to enable basic GPIO: RCC

Turn on clock domain in Reset and Clock Control (RCC)

RCC base address: 0x40020400

RCC_AHB2ENR register offset: 0x4C

Bit for GPIOB_EN: 1

Configure pin as output in GPIO register block

Configure pin as an output (GPIO_MODER)

Base address of GPIOB: 0x48000400

Offset of MODER register: 0×00

Bits in MODER to be set: 6 and 7

Value for relevant bits to configure pin as output: 01

Blink Demo: Includes

```
1 // Nucleo-L432KC Blink demo
2 // Josh Brake
3 // jbrake@hmc.edu
4 // 9/21/22
5 #include <stdint.h>
6 #define GPIOB_BASE_ADR (0x48000400UL)
7 #define RCC_BASE_ADR (0x40021000UL)
8 #define RCC_AHB2ENR ((uint32_t *) (RCC_BASE_ADR + 0x4C))
9 #define GPIOB_MODER ((uint32_t *) (GPIOB_BASE_ADR + 0x00))
10 #define GPIOB_ODR ((uint32_t *) (GPIOB_BASE_ADR + 0x14))
11 #define DUMMY_DELAY 100000
12
13 ...
```

Blink Demo: main

```
int main(void) {
   // Initialization code
   *RCC_AHB2ENR |= (1 << 1);
   // Set PB3 as output (MODER bit 7 to 0 and bit 6 to 1)
   *GPIOB_MODER &= ~(1 << 7);
   *GPIOB_MODER |= (1 << 6);
   while(1) {
    for(volatile int i = 0; i < DUMMY_DELAY; i++);
    *GPIOB_ODR ^= (1 << 3);
}</pre>
```

Miscellanous Notes

Using MCU while connected to development board

- Make sure that you have the MCU_+5V header connected. This ensures the on-board voltage regulators work which makes sure the reset signal is held high. If not, you won't be able to connect to your MCU to program it (the reset pin will float and the MCU will always be in reset!)
- Remove jumper that came installed by default on the Nucleo board (connects reset to ground!)

Using structures to model memory-mapped I/O

```
1 // Base addresses for GPIO ports
2 #define GPIOA BASE (0x48000000U)
 3 typedef struct
   IO uint32 t MODER; /*!< GPIO port mode register, Address offset: 0x00 */
   __IO uint32_t OTYPER; /*!< GPIO port output type register, Address offset: 0x04 >
   __IO uint32_t OSPEEDR; /*!< GPIO port output speed register, Address offset: 0x08
   __IO uint32_t PUPDR; /*!< GPIO port pull-up/pull-down register, Address offset:
   IO uint32 t IDR; /*!< GPIO port input data register, Address offset: 0x10 */
  IO uint32 t ODR; /*!< GPIO port output data register, Address offset: 0x14 */
  __IO uint32_t BSRR; /*!< GPIO port bit set/reset register, Address offset: 0x18
  IO uint32 t LCKR; /*! < GPIO port configuration lock register, Address offset:
  ___IO uint32_t AFR[2]; /*!< GPIO alternate function registers, Address offset: 0x2
  IO uint32 t BRR; /*!< GPIO Bit Reset register, Address offset: 0x28 */
15 } GPIO TypeDef;
```

___IO is defined with a #define statement to one of the C keywords we discussed earlier. Which one?

Wrap Up

- C is libertarian will allow you to do many things, not all of which are good for you.
- Understanding certain C data structures like pointers and structures will enable you to more easily and naturally write code to control your MCU.
- The MCU reference manual contains the information needed to write code to configure and manipulate the peripherals using memory-mapped I/O.