# VETORVI Smart Water Leak Protection System
# APP Setup Guide

**Thank you for choosing the VETORVI Smart Water Leak Protection System. Before installing the valve controller on your main water valve, please connect all devices to the app and test the automation to make sure the system works properly.**

Smart Life

Tuya

## Before You Begin

✓ Connect your phone to a 2.4 GHz Wi-Fi network.
✓ Turn on Bluetooth on your phone.
✓ Enable Location permission for the Smart Life or Tuya Smart app.
✓ Make sure the gateway is powered on.
✓ Install batteries in the water leak sensors.
✓ Install batteries in the valve controller.
✓ Open the Smart Life or Tuya Smart app, then sign in or create an account.

## 1. Connect the Gateway to the App

**On the app home screen, tap "+" in the upper-right corner → Add Device → scroll down and select "Gateway" → Wireless Zigbee Gateway → select your 2.4 GHz Wi-Fi network and enter the password → tap "Next". Connect the gateway to power, then press and hold the reset button for 5 seconds. Release the button when the blue light stays on and the red light starts flashing. Tap "Confirm the indicator is blinking" in the app to start pairing. When the gateway name appears in the app, the gateway has been added successfully.**


**Note: If pairing fails while the red light is flashing quickly, close and reopen the app, then put the gateway back into pairing mode. Press and hold the gateway reset button again until the blue light stays on and the red light flashes slowly, then repeat the setup steps.**











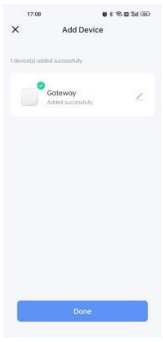


## 2. Add the Water Leak Sensors

**After the gateway has been added, go to the app home screen and tap the gateway → Add subdevice → More reset methods → scroll down and select Water Leak Sensor. Press and hold the water drop icon on the sensor for 5 seconds until the indicator starts blinking. In the app, tap "Confirm the indicator is blinking." When pairing is complete, repeat the same steps to add each sensor. Rename each sensor so it is easy to identify, such as "Kitchen Sink," "Bathroom," or "Water Heater."**

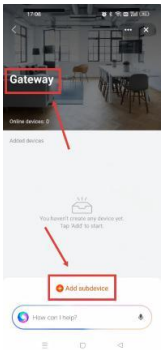

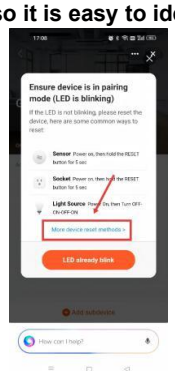









## 3. Add the Valve Controller

**Go to the app home screen and tap the gateway → Add subdevice → More reset methods → scroll down and select Water Valve Controller. Quickly press the SET button on the valve controller three times until the indicator light flashes quickly, then complete pairing in the app.**

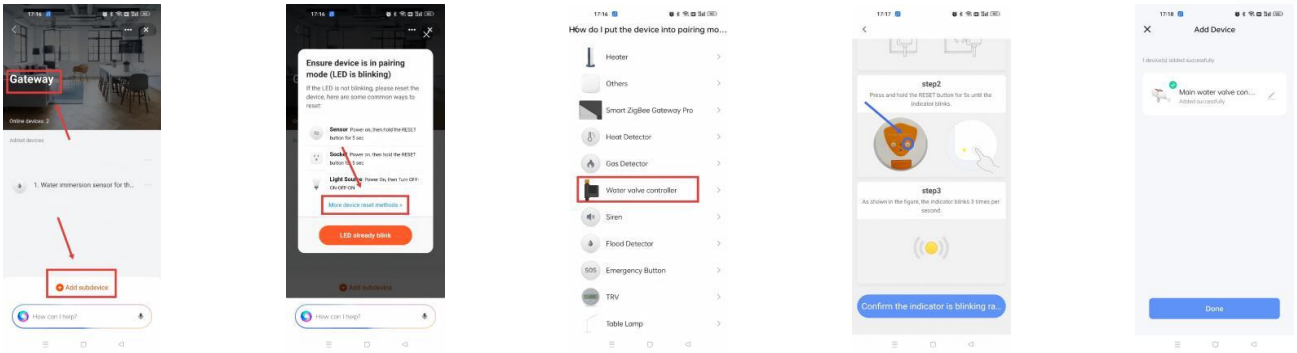



## 4. Create the Automation

**Important: Create the automation from inside the gateway page.**

**On the app home screen, tap the gateway → tap the water leak sensor → scroll down and tap Automation → tap "+" → Create Scene. Under "If," select "When any condition is met" and choose the condition that the water leak sensor detects water. Under "Then," tap "+" → Device → select the valve controller → Switch → OFF/Close → Confirm → Save. Name the scene, then save it.**

**After saving, check that the automation is set correctly: tap "..." in the upper-right corner of the scene, then tap "..." again. If the execution method shows "Local Scene," the automation has been set correctly. You may also rename the valve controller so it is easier to identify. If the test fails, check the automation settings and confirm that Local Scene is enabled.**

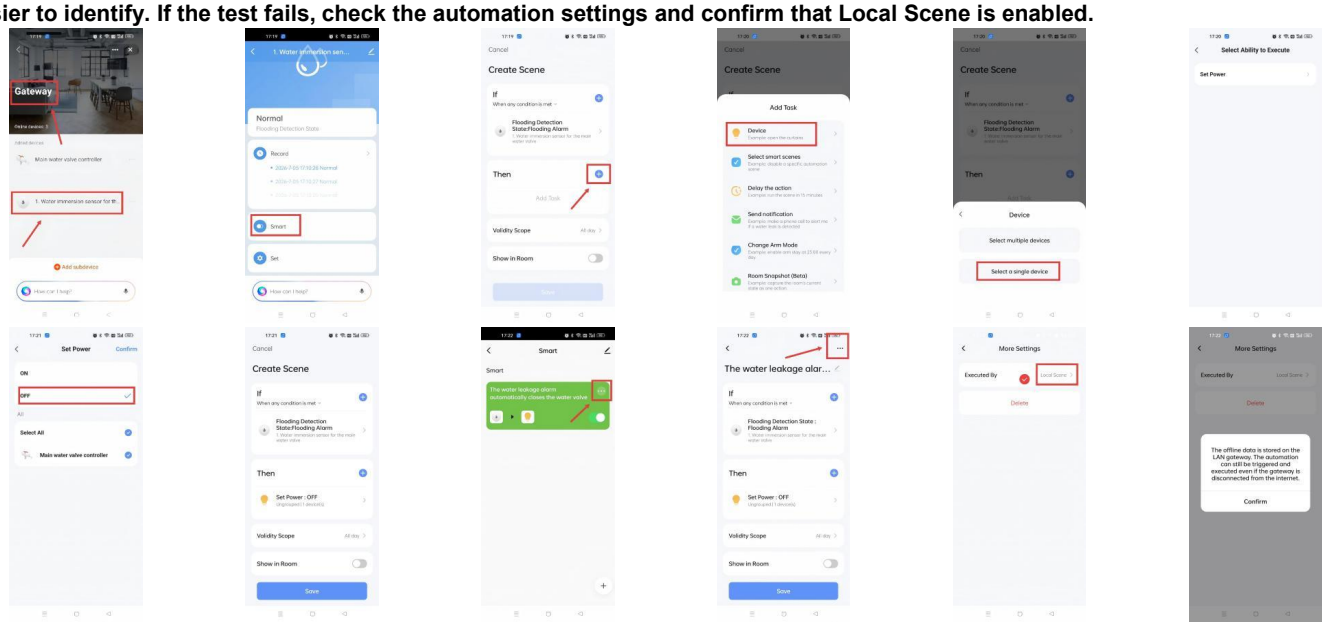


## 5. Test the Automation

**Touch the water leak sensor probes with a damp paper towel.**

**Make sure the app receives a water leak alert.**

**Make sure the valve controller closes the valve automatically.**

**Open the valve again in the app after the test is complete.**

## 6. Important Notes

- **All devices must be added to the same gateway.**
- **All devices must be added under the same Home in the app.**
- **Do not place devices beyond the normal Zigbee communication range.**
- **If the gateway loses power, the local automation cannot run. For better protection during a power outage, you may power the gateway through a backup power source, such as a USB Mini UPS. As long as the gateway remains powered, the local automation can continue to operate. Actual runtime depends on the capacity of the backup power source.**
- **After installation, test the system at least once a month.**

## 7. Troubleshooting

**Problem: Device cannot be found**

**Solution: Put the device back into pairing mode and try again.**

**Problem: Automation does not run**

**Solution: Check whether the scene shows "Local Scene."**

**Problem: No alert is received in the app**

**Solution: Check notification permission for the Smart Life or Tuya Smart app.**

**Problem: Device is offline**

**Solution: Check that the gateway is powered on and that the device is within Zigbee communication range.**

**Before installing the valve controller on your main water valve, complete setup and verify that the automation is working properly.**

**Need Help? Email: hengrongbeimei@gmail.com Contact us at the email address above to activate your 6-Year Extended Warranty.Note: The warranty does not cover damage caused by misuse, abuse, accidents, unauthorized modifications, or normal wear and tear.**