

15.基于 GenericApp 串口无线控制 LED 灯

1. 代码分析

```
void GenericApp_MessageMSGCB( afIncomingMSGPacket_t *pkt )
{
 byte data;
 switch (pkt->clusterId)
 {
  case GENERICAPP_CLUSTERID:
#if defined(ZDO COORDINATOR)
   // "the" message
 #if defined( LCD_SUPPORTED )
    HalLcdWriteScreen( (char*)pkt->cmd.Data, "rcvd" );
 #elif defined( WIN32 )
    WPRINTSTR( pkt->cmd.Data );
 #endif
#else
   data = pkt->cmd.Data[0]; //osal memcpy(&data, pkt->cmd.Data, 1);
   if(data == 0x10)
    HalLedSet(HAL_LED_1, HAL_LED_ON);
  else if(data == 0x11)
    HalLedSet(HAL_LED_1, HAL_LED_OFF);
  else if(data == 0x20)
    HalLedSet(HAL LED 2, HAL LED ON);
  else if(data == 0x21)
    HalLedSet(HAL_LED_2, HAL_LED_OFF);
   else if(data == 0x30)
```

科技共赢!


创造奇迹 思索未来



```
HalLedSet(HAL_LED_3, HAL_LED_ON);
   else if(data == 0x31)
    HalLedSet(HAL LED 3, HAL LED OFF);
#endif
   break;
 }
}
```


2. 实验方法

协调器用 USB 连接电脑, 打开 sscom32 软件, 串口以 16 进制数发 10 或 11 给协调器, 协 调器收到后无线发给终端,控制终端的 D1 亮灭。同理发 20、21 控制 D2,30 31 控制 D3。

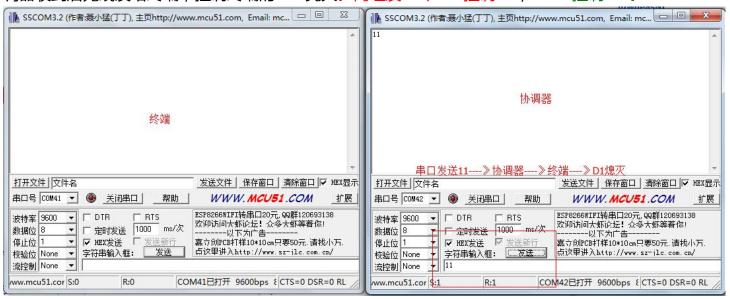

讲了好几个串口的实验,串口也是我们以后实际工作中常用的,希望大家认真掌握,这个实 验和前面的基本相同就留给大家自己分析了,如果还不能看懂,建议重做前面的实验。



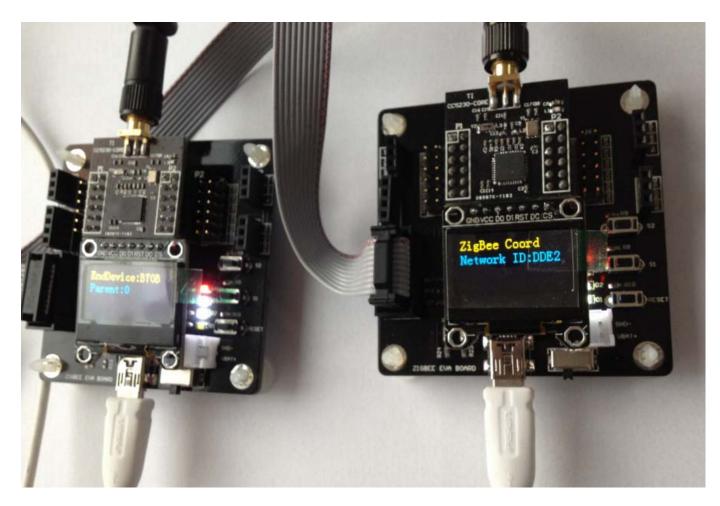

D1 熄灭