


Drawer Assembly 1/8

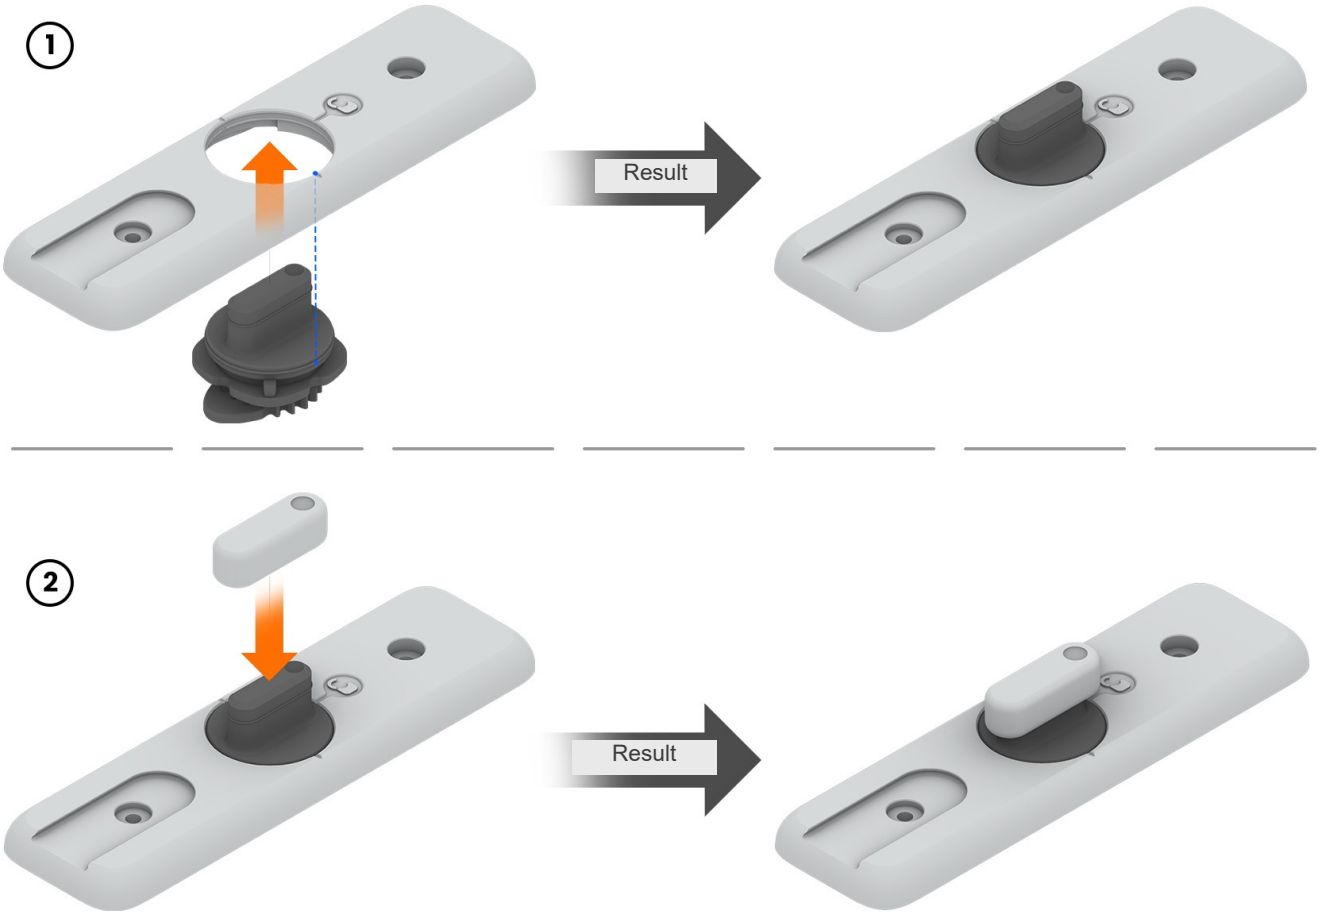


1. Insert key lock into facade with orientation shown above; 2. Press key cap onto key using a mallet.

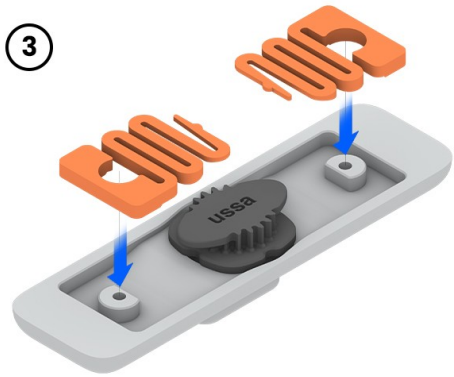

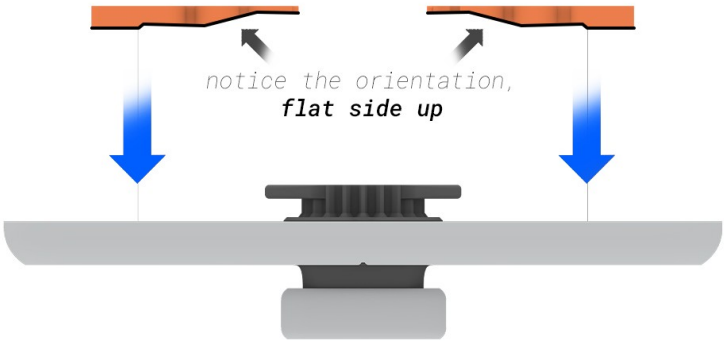




3. Push the springs into the facade, ensuring the springs flat side is facing UP.

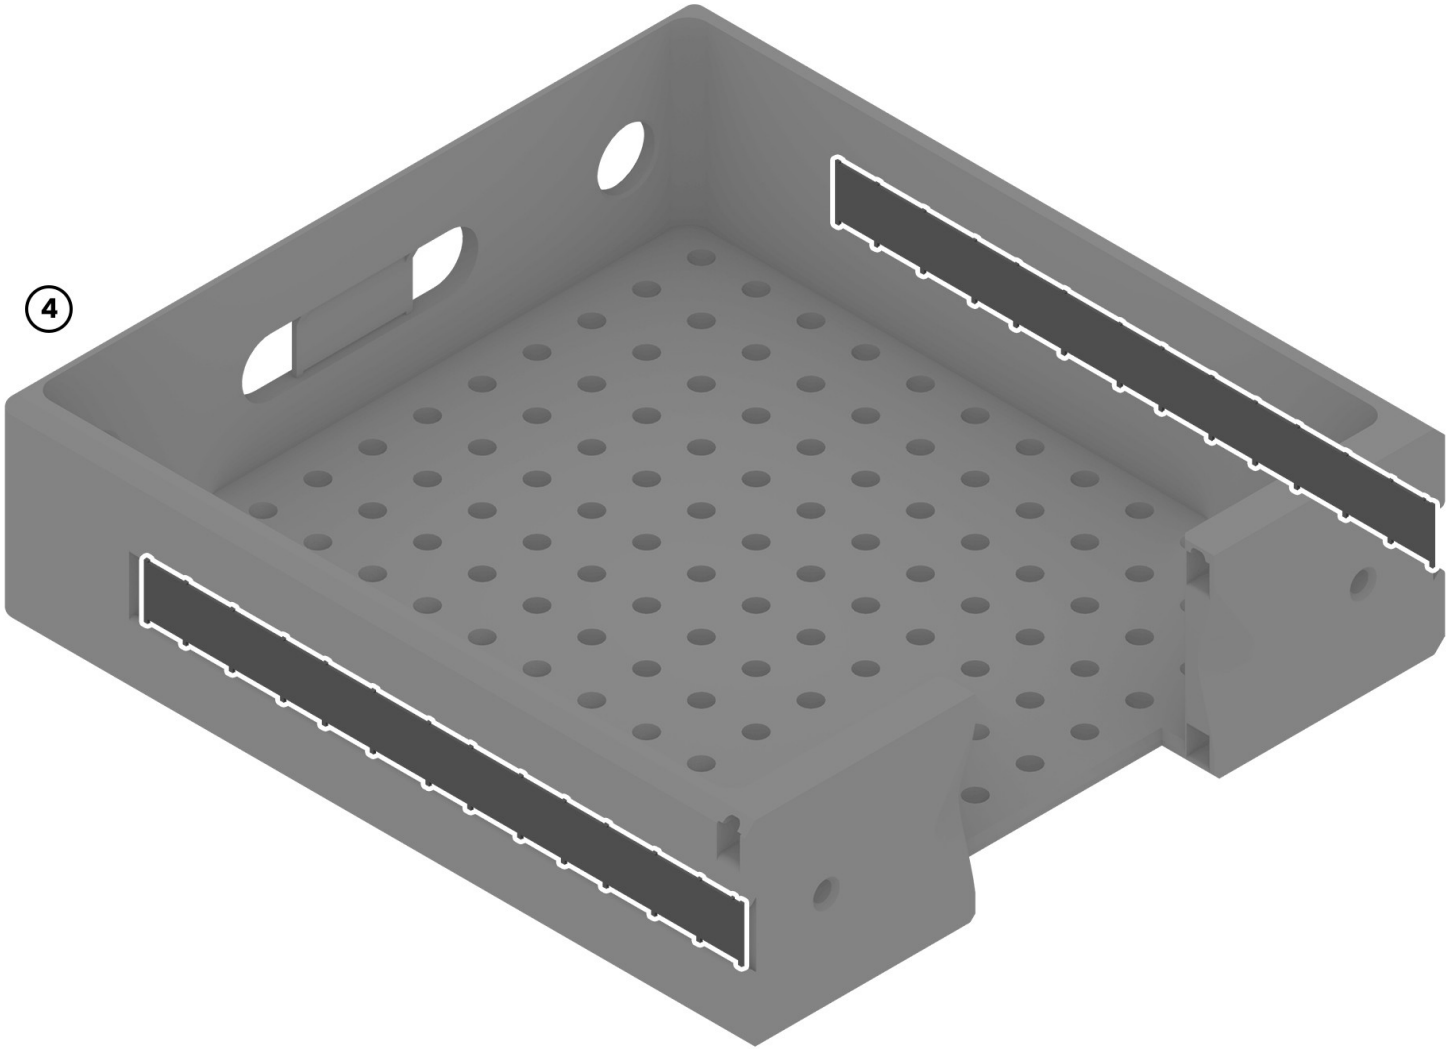


4. Remove all manual print supports thoroughly from the drawer box.

Drawer Assembly 4/8


5 Optional

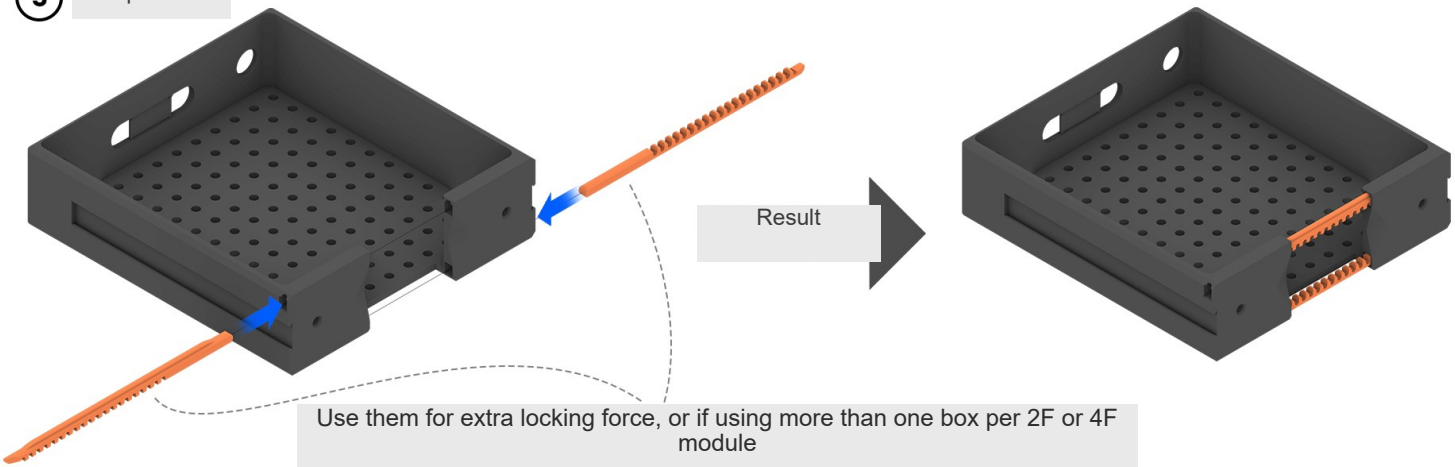

6

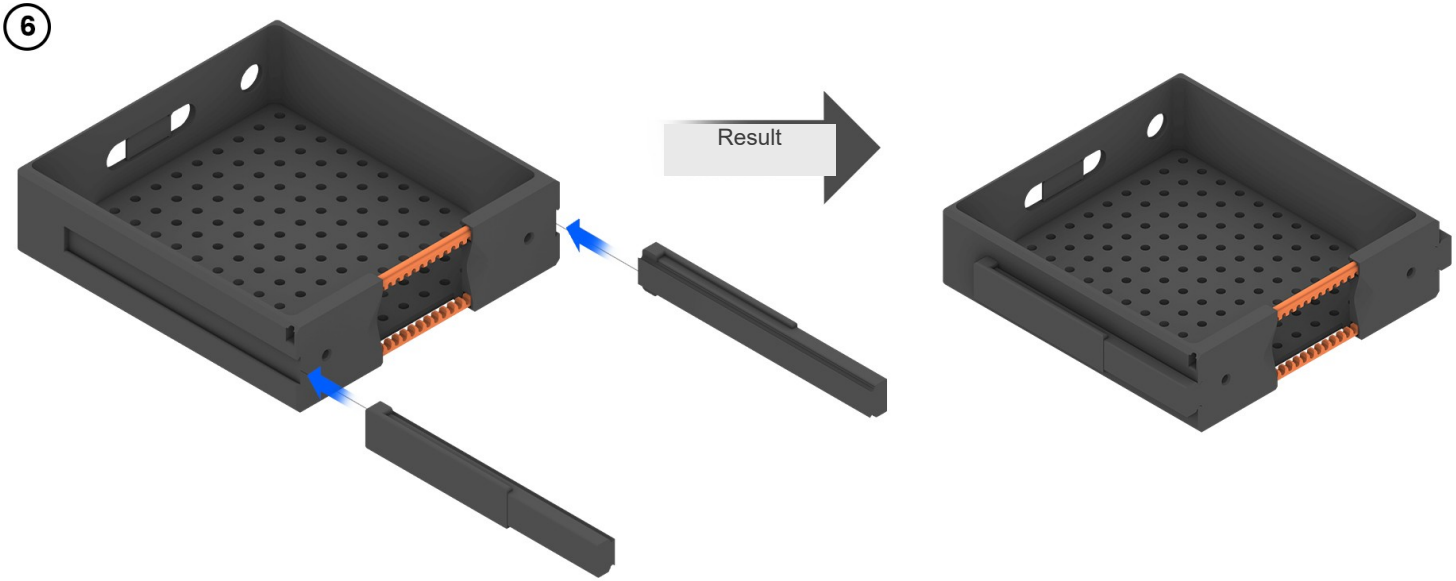

5. Place top & bottom geared rails into box; 6. Slide slides to limit (OPTIONAL for extra locking force).

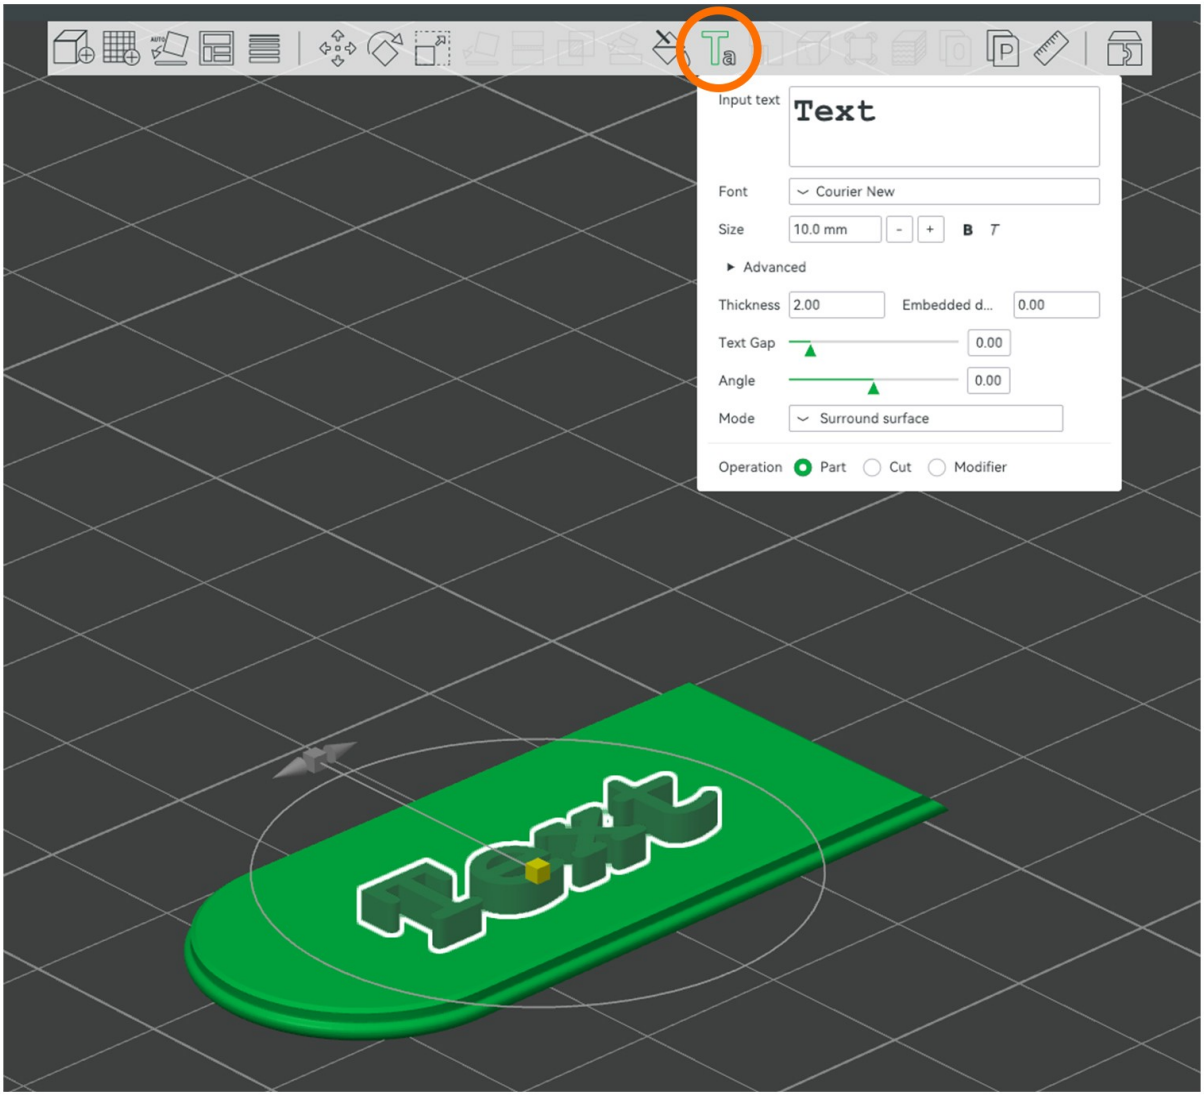


you can write custom text on a label, in any slicer by using text function


Tip: You can write custom text on a label in any slicer using the text tool (e.g. Courier New, 10mm, 2.0mm thick).

Drawer Assembly 6/8

7

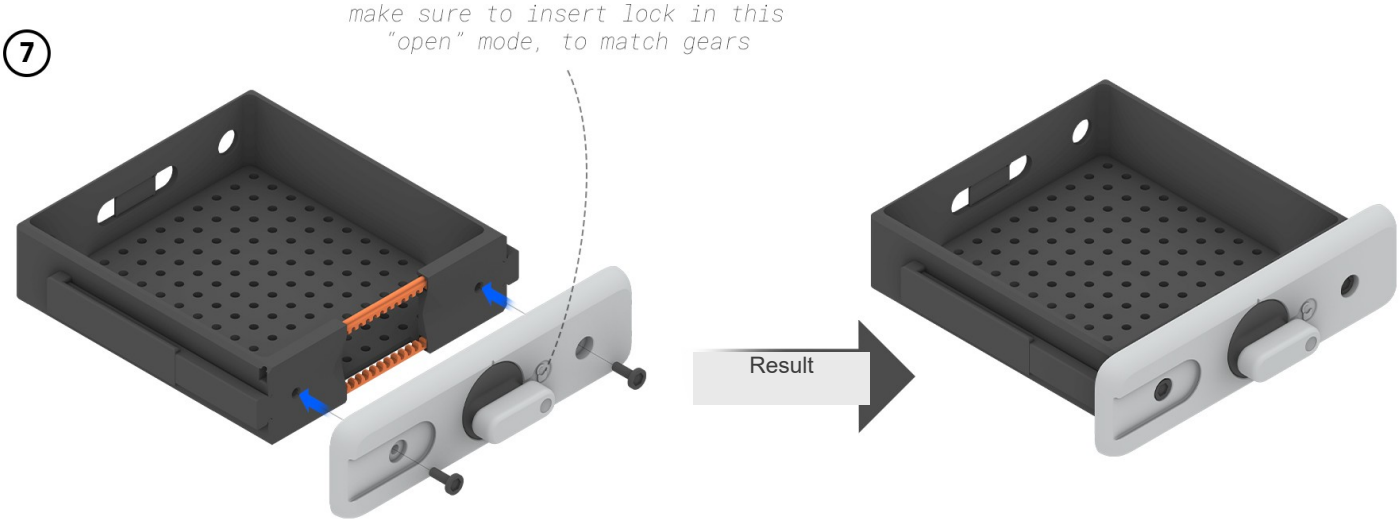



8

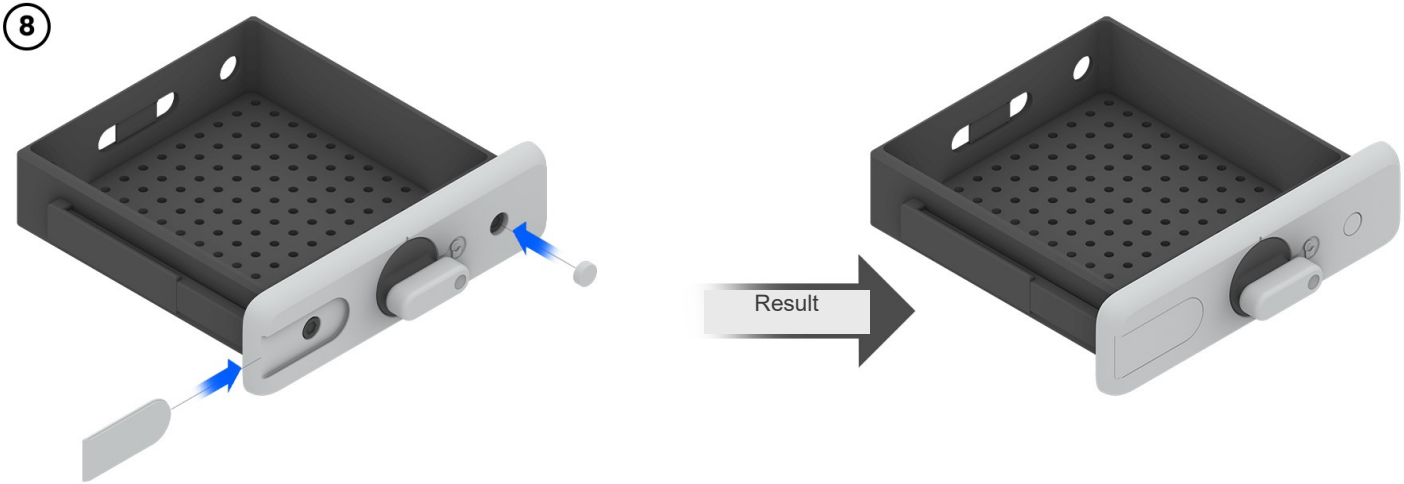

7. Fix facade to box using M4 14mm bolts; 8. Insert gears in "open" mode to match teeth, slide label & snap cap.


Drawer Assembly 7/8

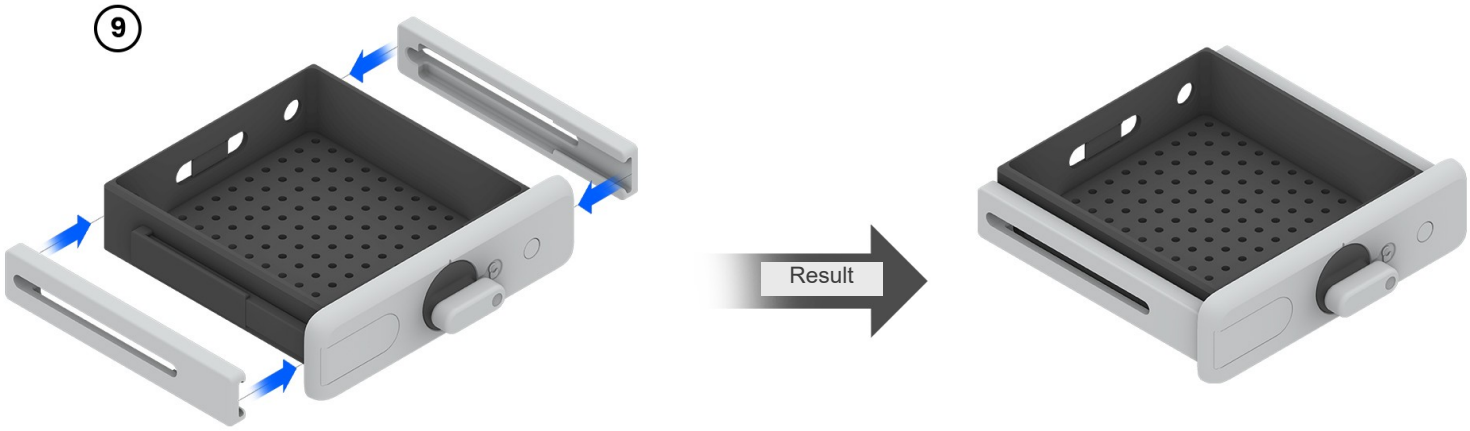


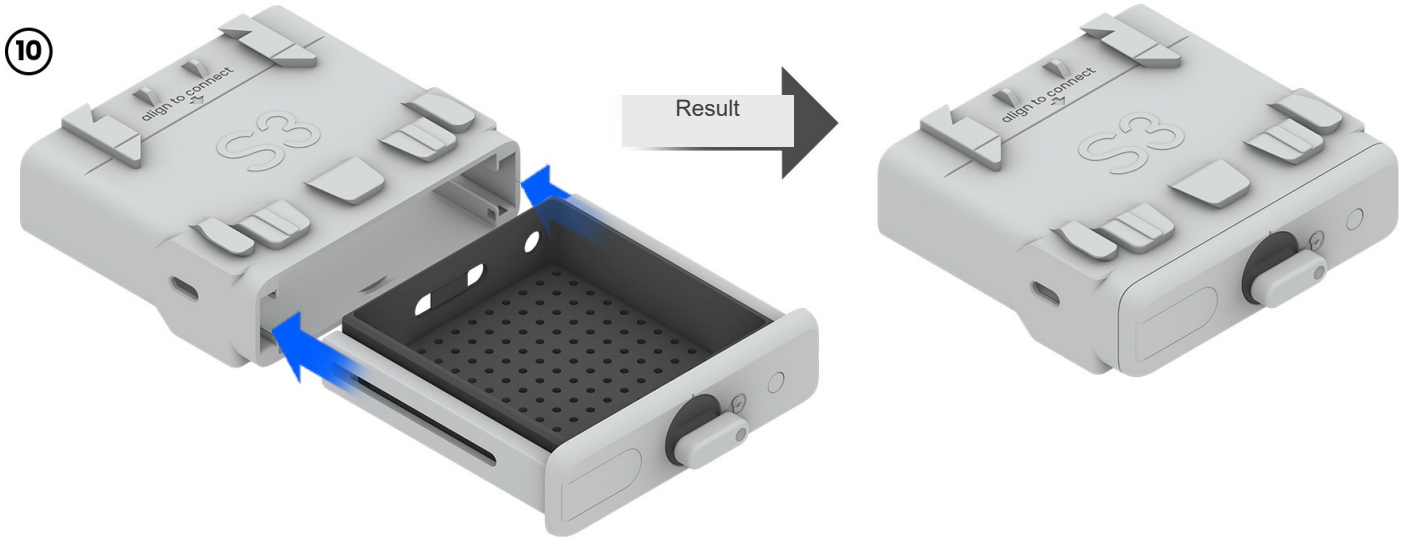

9. Put on the runner guides; 10. Slide the whole assembled setup smoothly inside the outer module.

Drawer Assembly 8/8

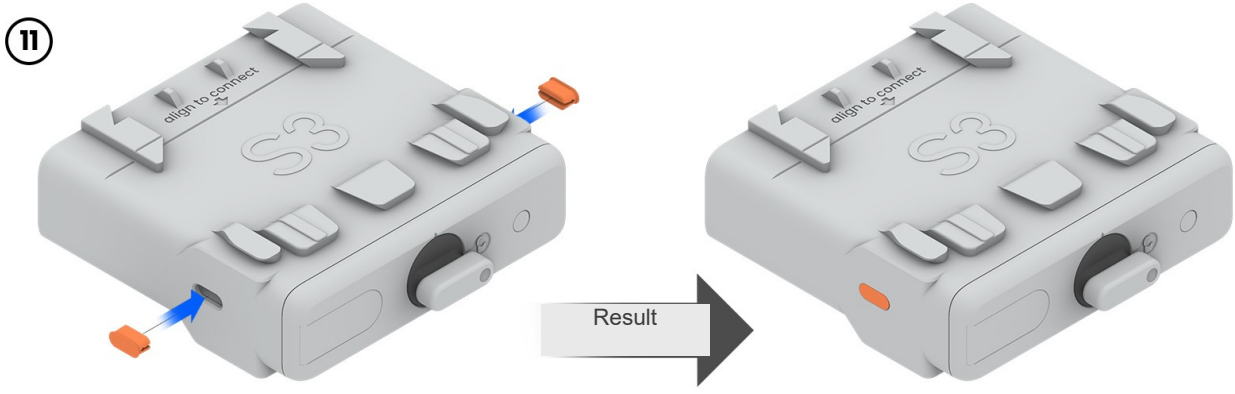

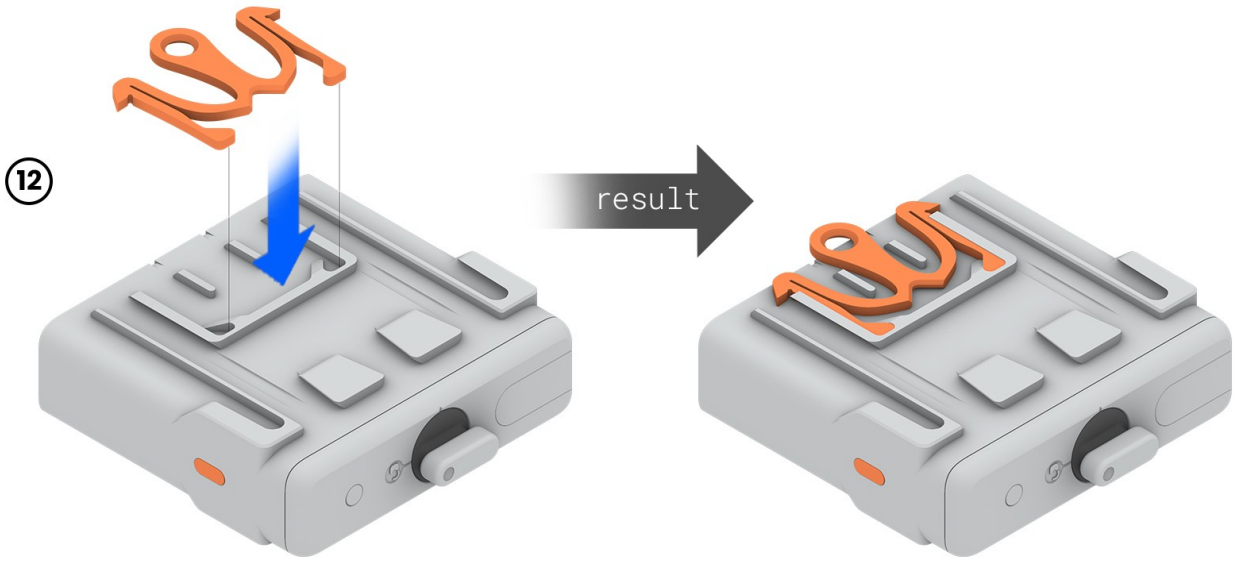

11. Flip module; only after box is fully inside, push runner stoppers in; 12. Push latch into place.