



Sustainers Assembly 1/7

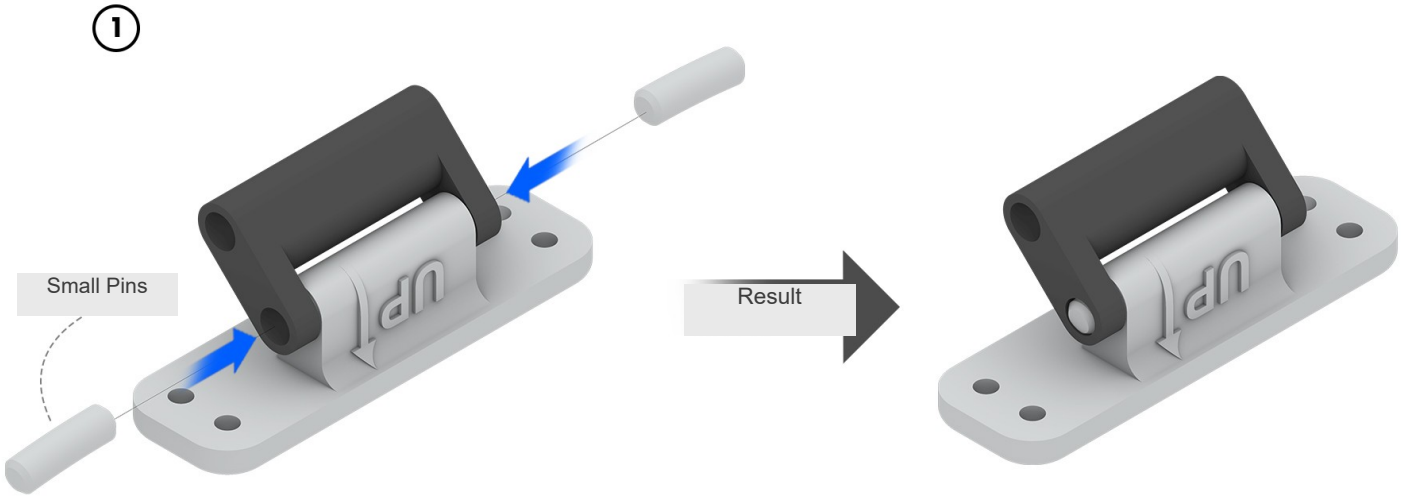

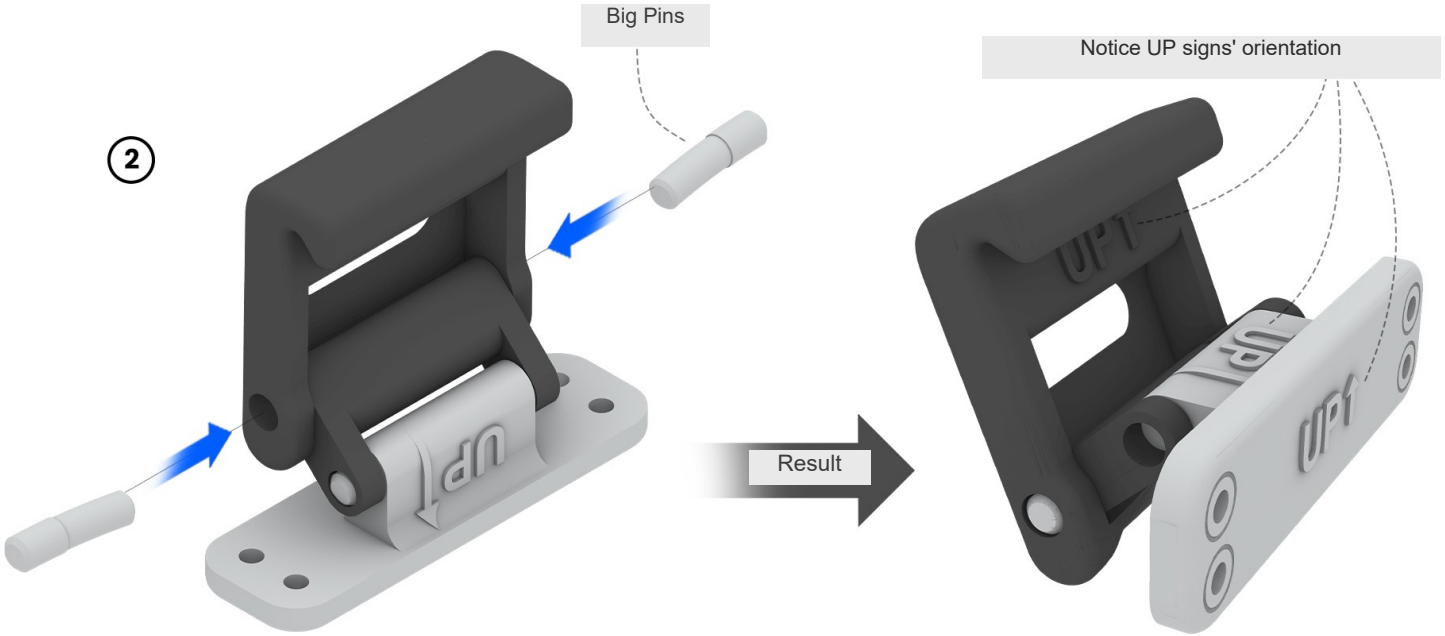


1. Attach lock inner part to lock holder (notice UP signs) with small pins; 2. Attach outer part with big pins.

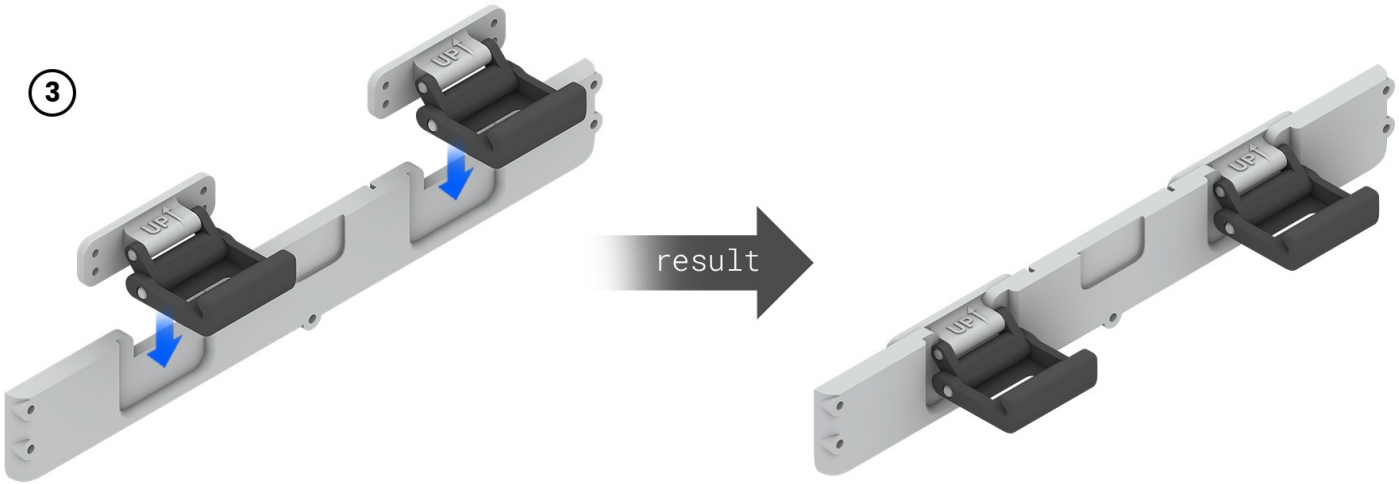


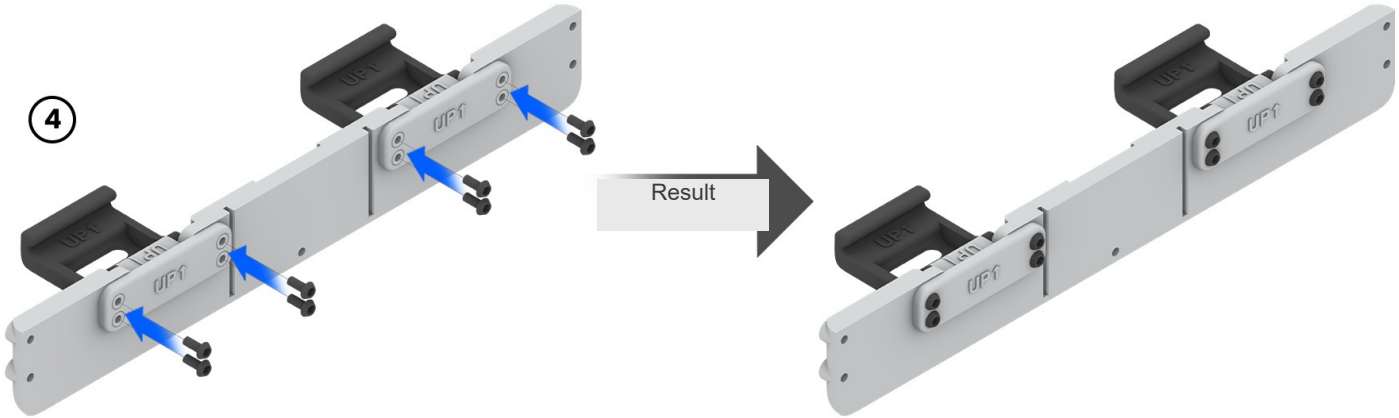

3. Fix lock on facade with UP sign looking up; 4. Secure firmly with M4 14mm bolts.


Sustainers Assembly 3/7

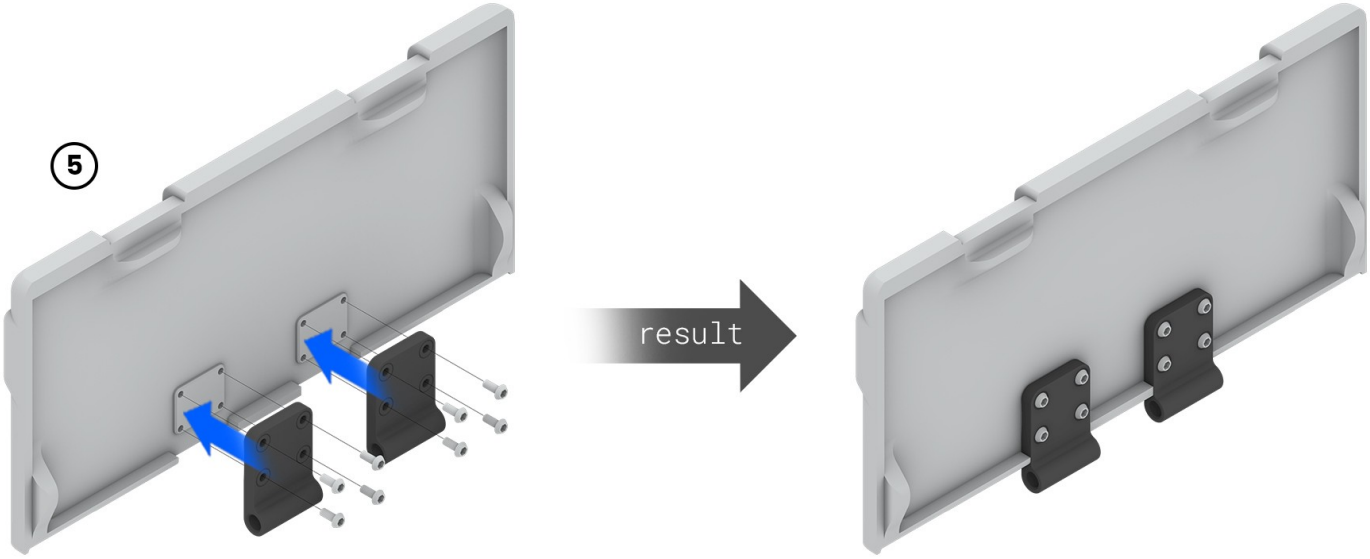


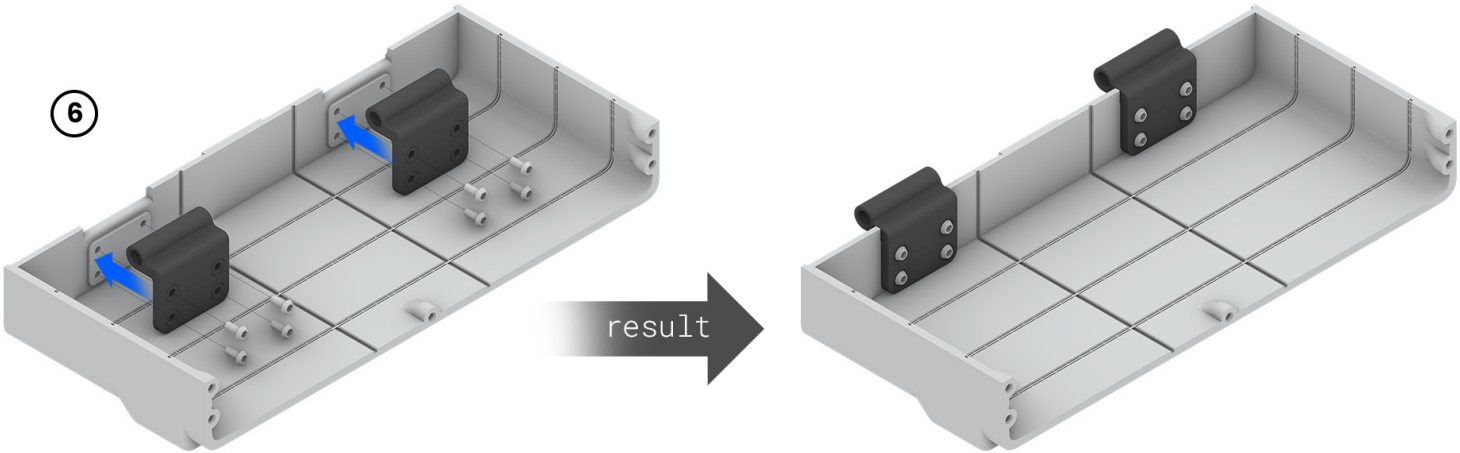

5. Use M4 14mm bolts to fix Top Hinge on roof; 6. Use M4 10mm bolts to fix Bottom Hinge on module.


Sustainers Assembly 4/7

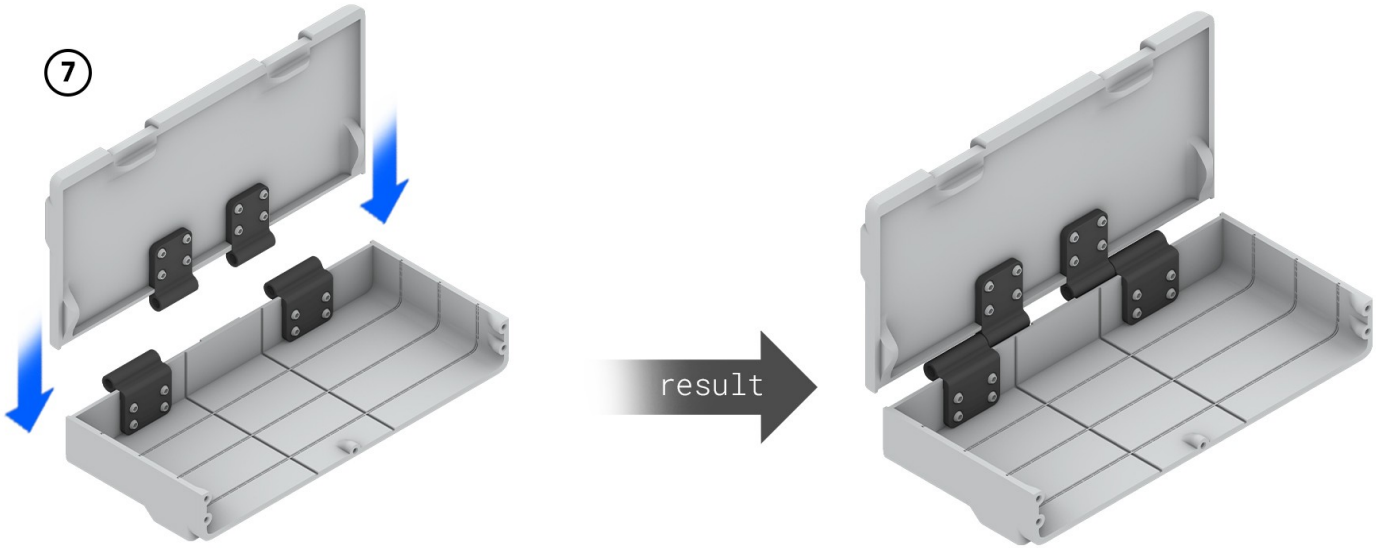


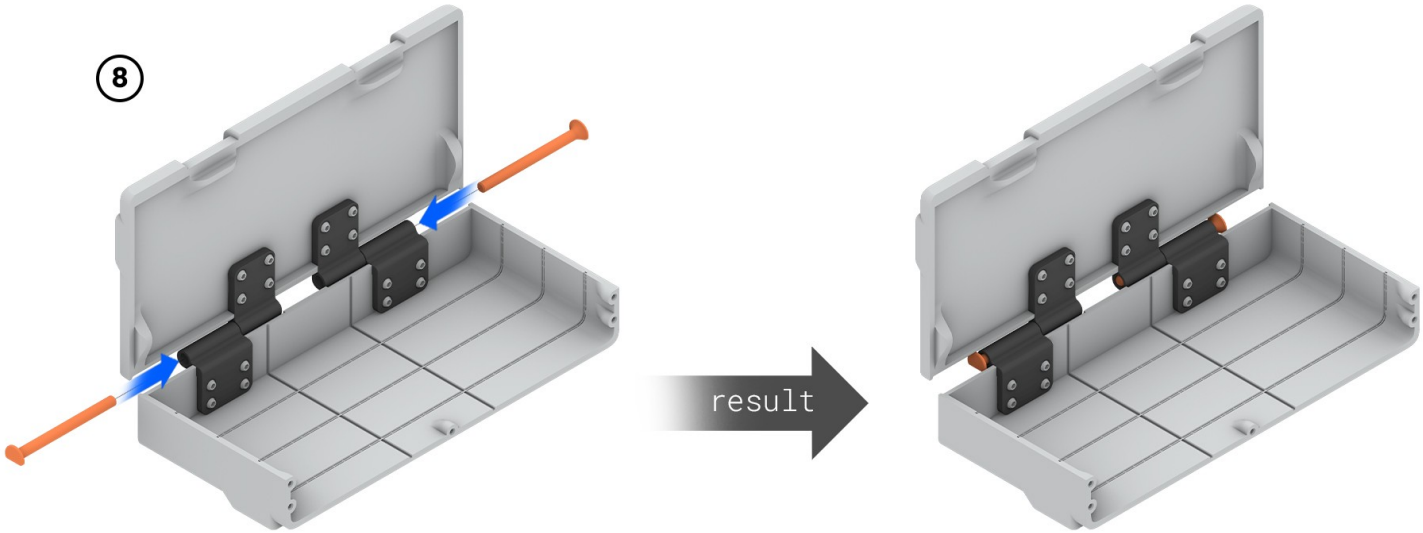


7. Connect roof and module of the sustainer; 8. Fix them together by sliding in the two hinge rods.

Sustainers Assembly 5/7

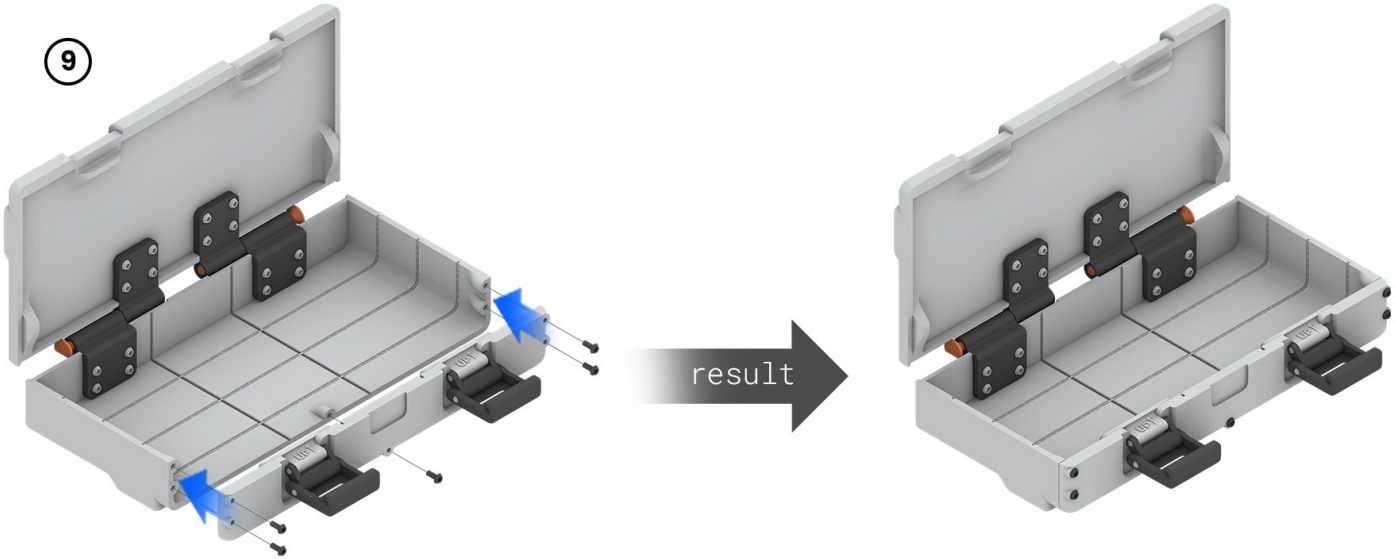


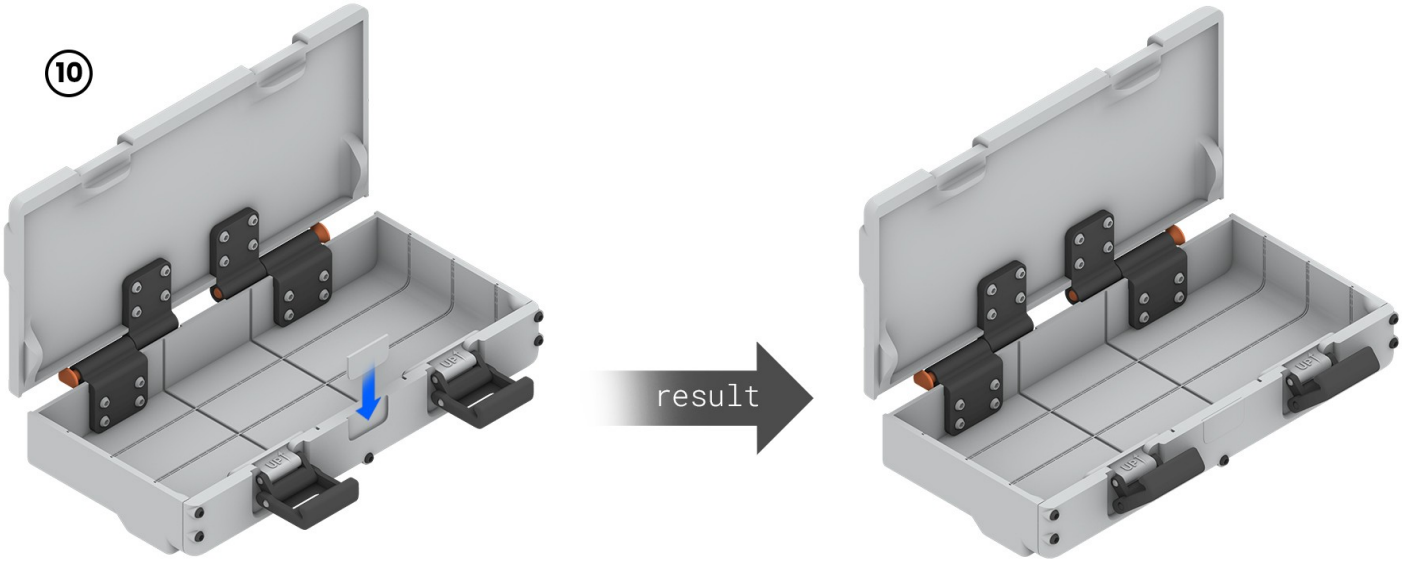

9. Fix previously assembled facade to module with M4 20mm bolts; 10. Slide in the custom label.

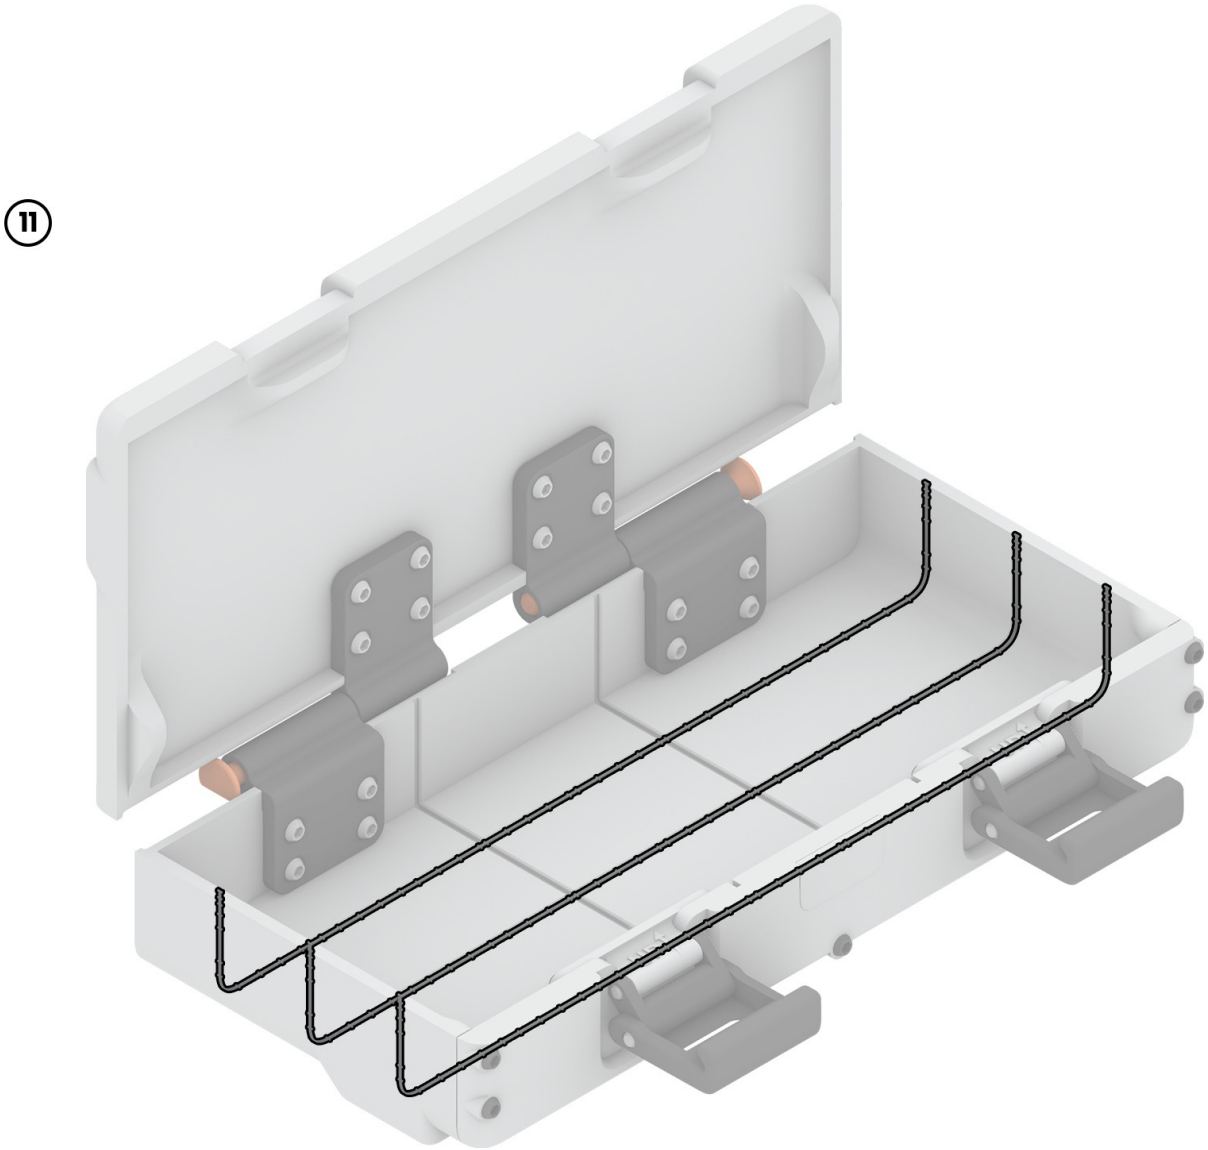

11. Remove all manual print supports completely before filling interior with dividers.

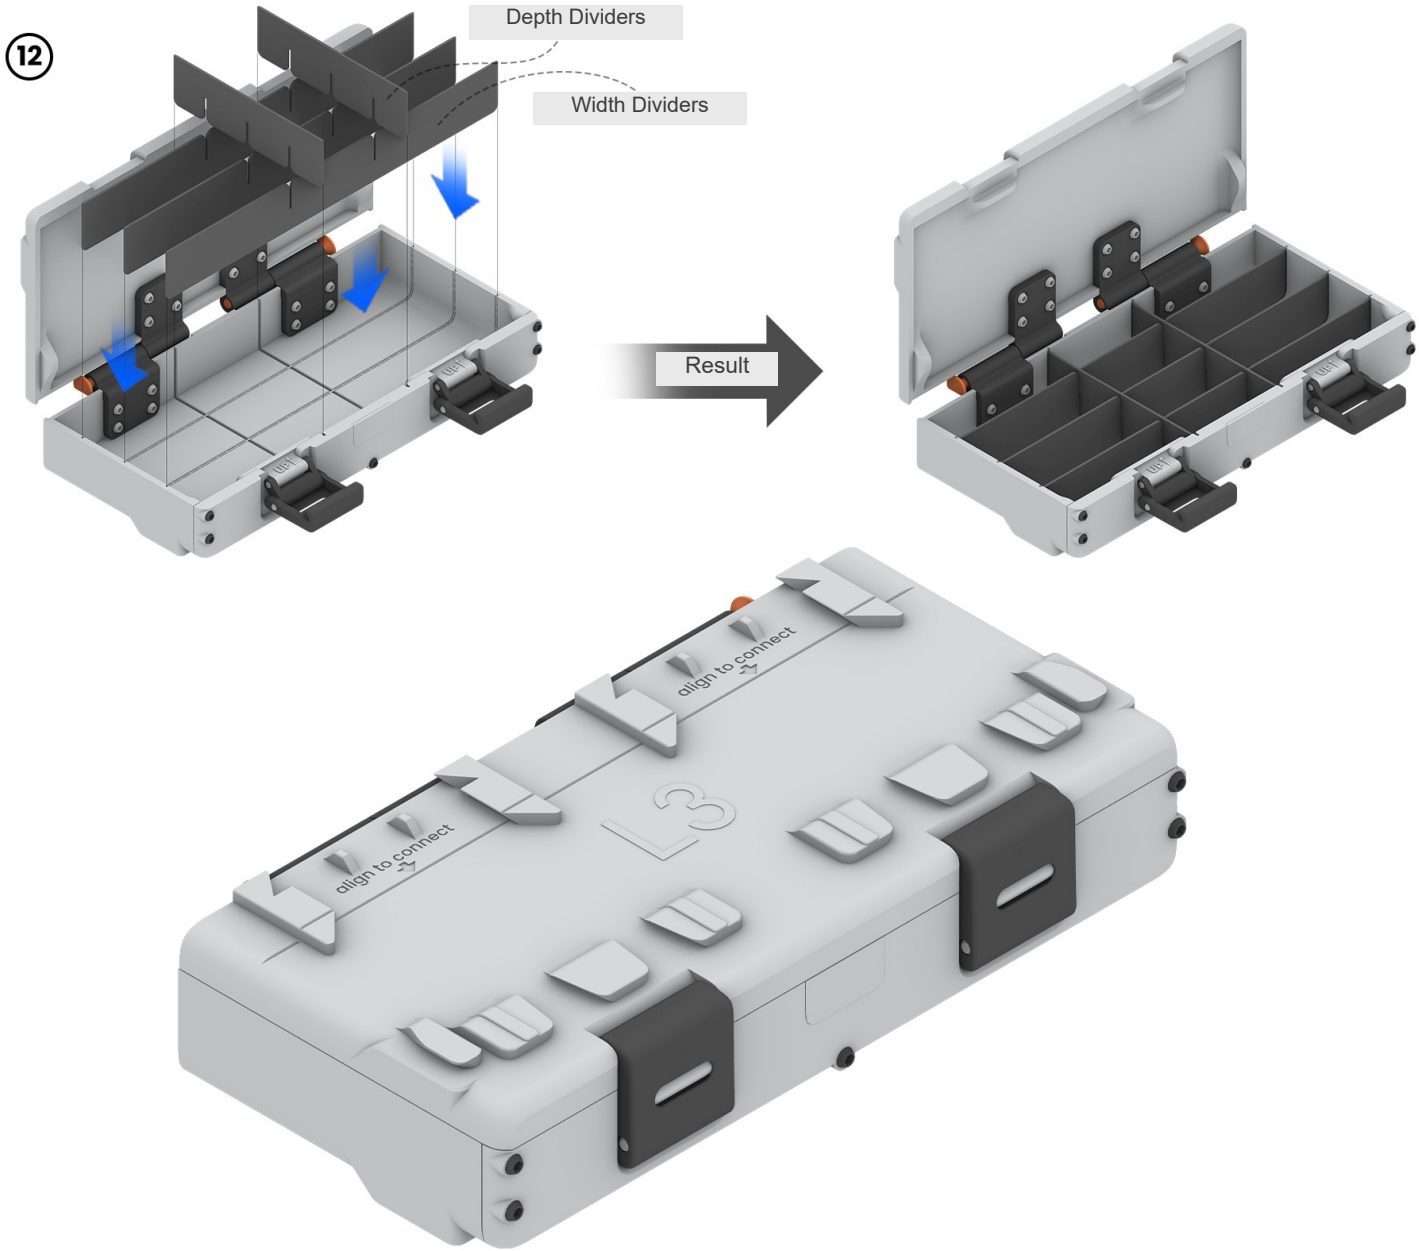

12. Insert depth dividers and width dividers in whichever configuration best fits your organization needs.