

MAKING PATTERNS

By turning the zig zag regulating dial from 0—4 as you are sewing, the pattern formed will be as in Fig. 34. When you slowly release the zig zag regulating dial back to its "O" position, you will form the pattern as in Fig. 35. By turning the zig zag regulating dial slowly from "O" to "4" and slowly back to "O" as the machine is sewing, you will form the pattern as in Fig. 36.

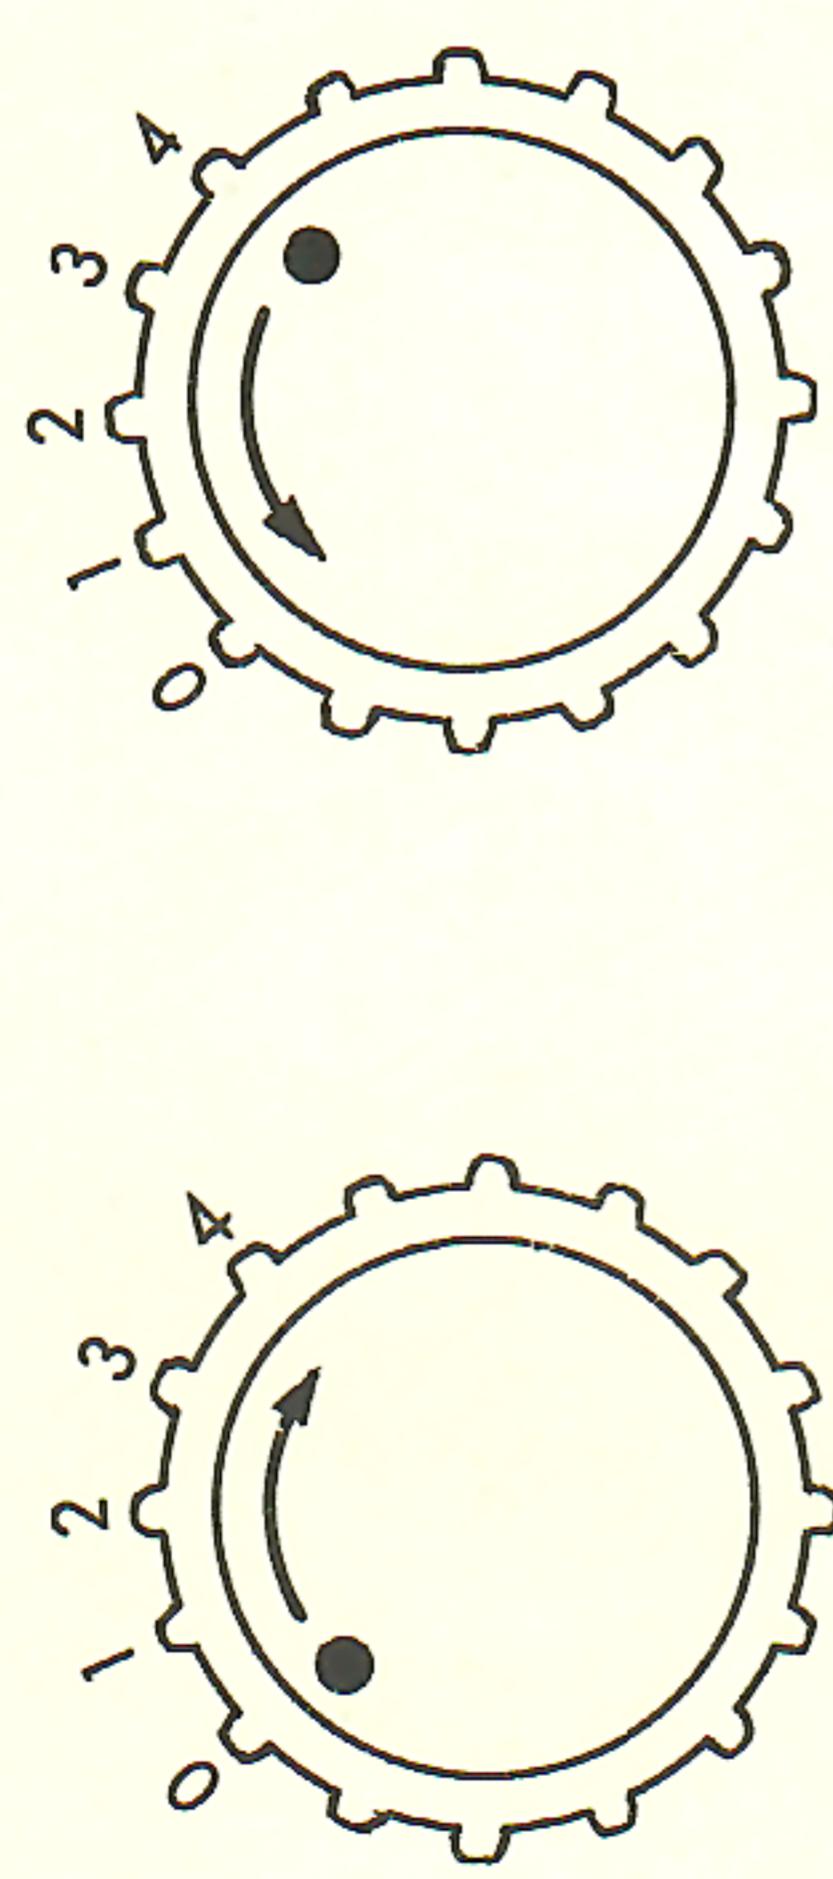


Fig. 34

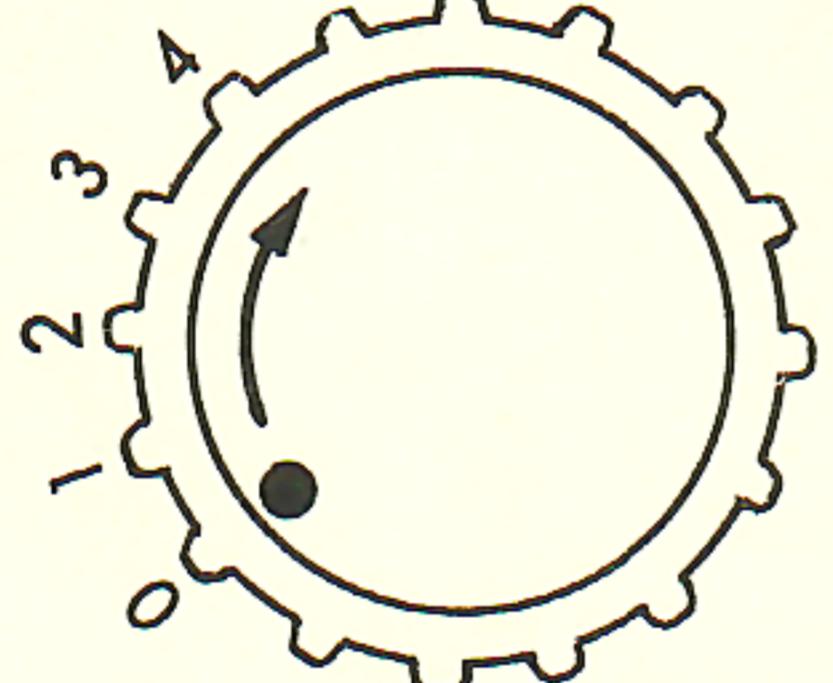


Fig. 35

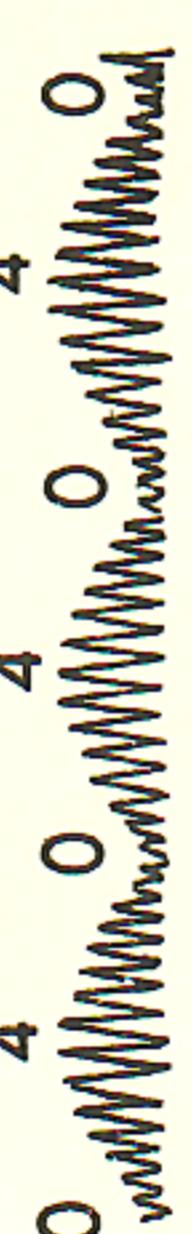


Fig. 36

You can form the pattern as in Fig. 40 by slowly turning the zig zag regulating dial as the machine is running until # 4 is set to arrow, then quickly release the zig zag regulating dial and again slowly turn the zig zag regulating dial to # 4. Repeat as often as desired.

In order to form the pattern as in Fig. 41, first turn the zig zag regulating dial to # 4, and while running the machine slowly release the zig zag regulating dial to "O". When the zig zag regulating dial reaches "O", quickly turn the zig zag regulating dial to # 4. Repeat as often as desired.

In order to make the pattern as formed in Fig. 42, with the zig zag regulating dial at "O", sew a straight stitch for the length desired; then while the machine is still running, quickly turn the zig zag regulating dial to # 4. Sew the number of stitches desired and then quickly release the zig zag regulating dial. Repeat as often as desired.

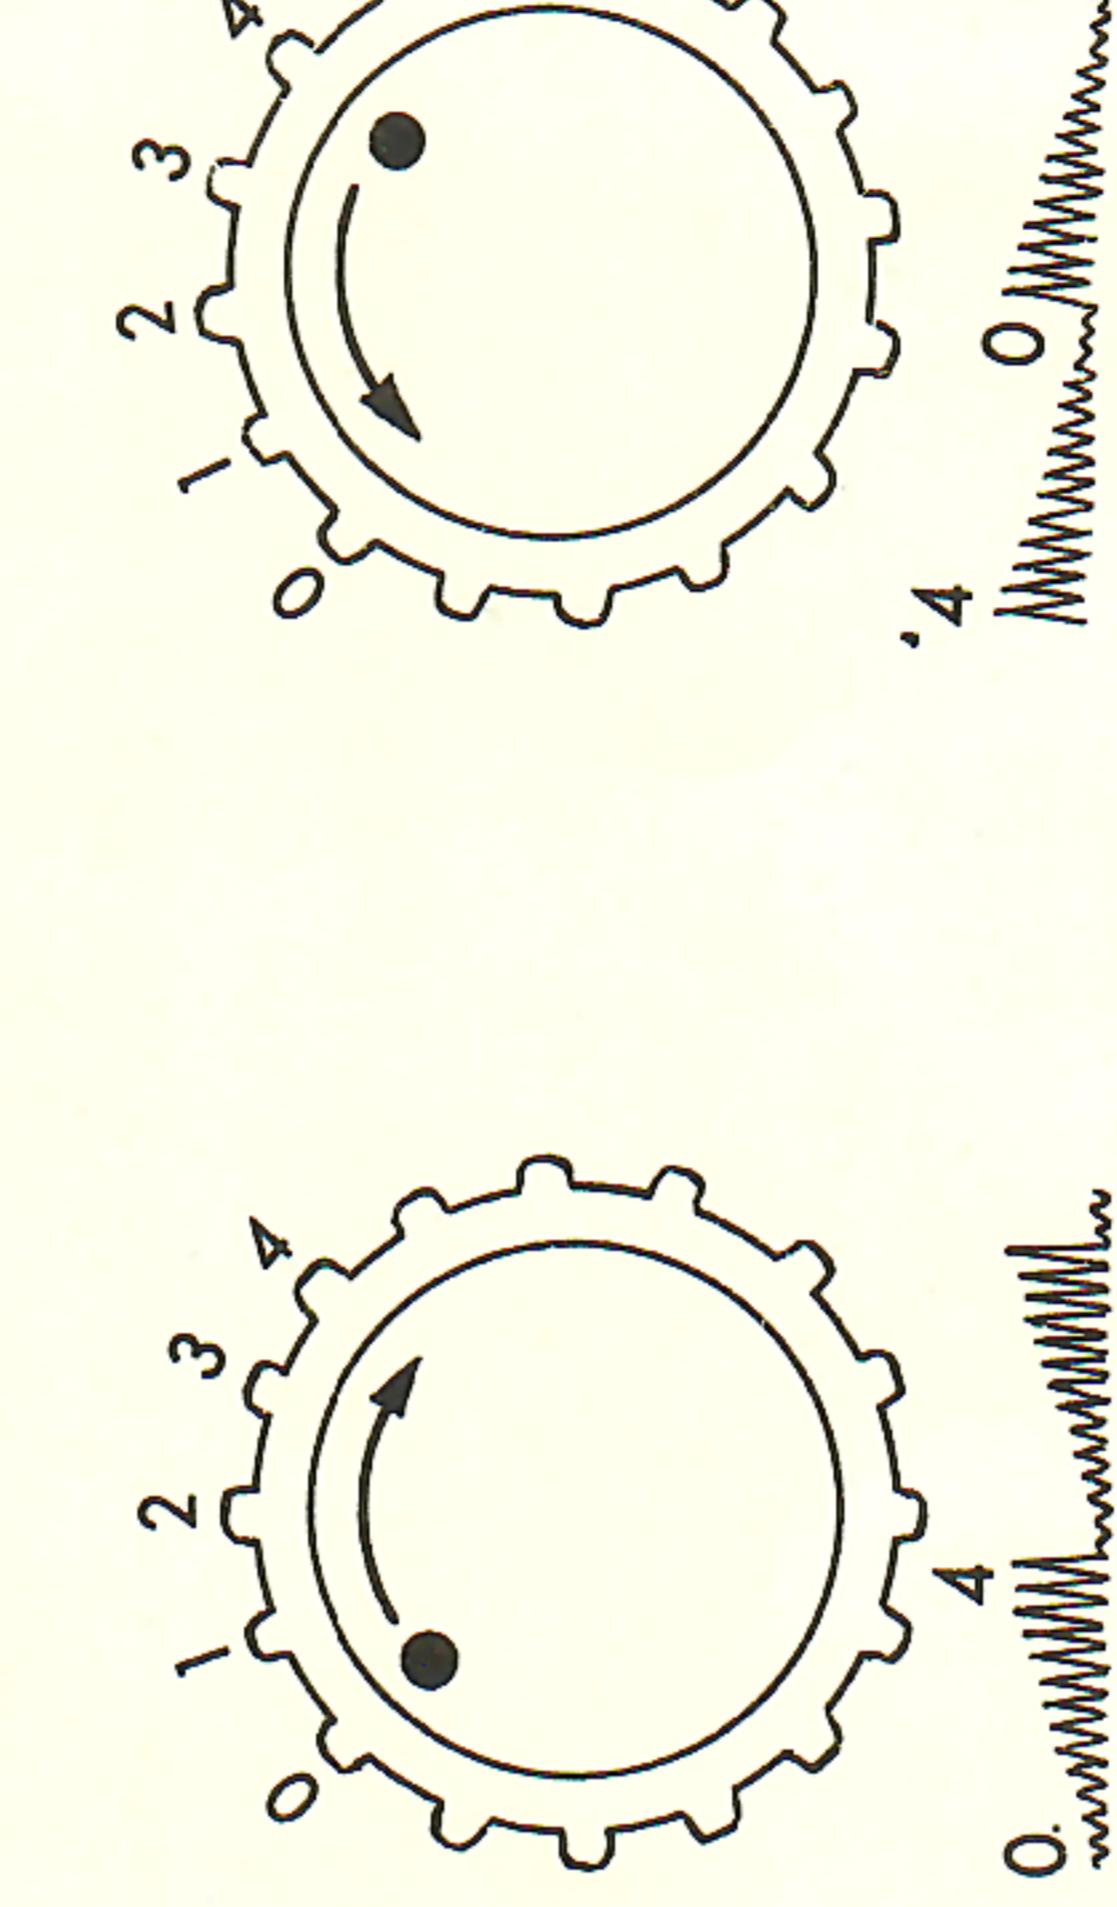
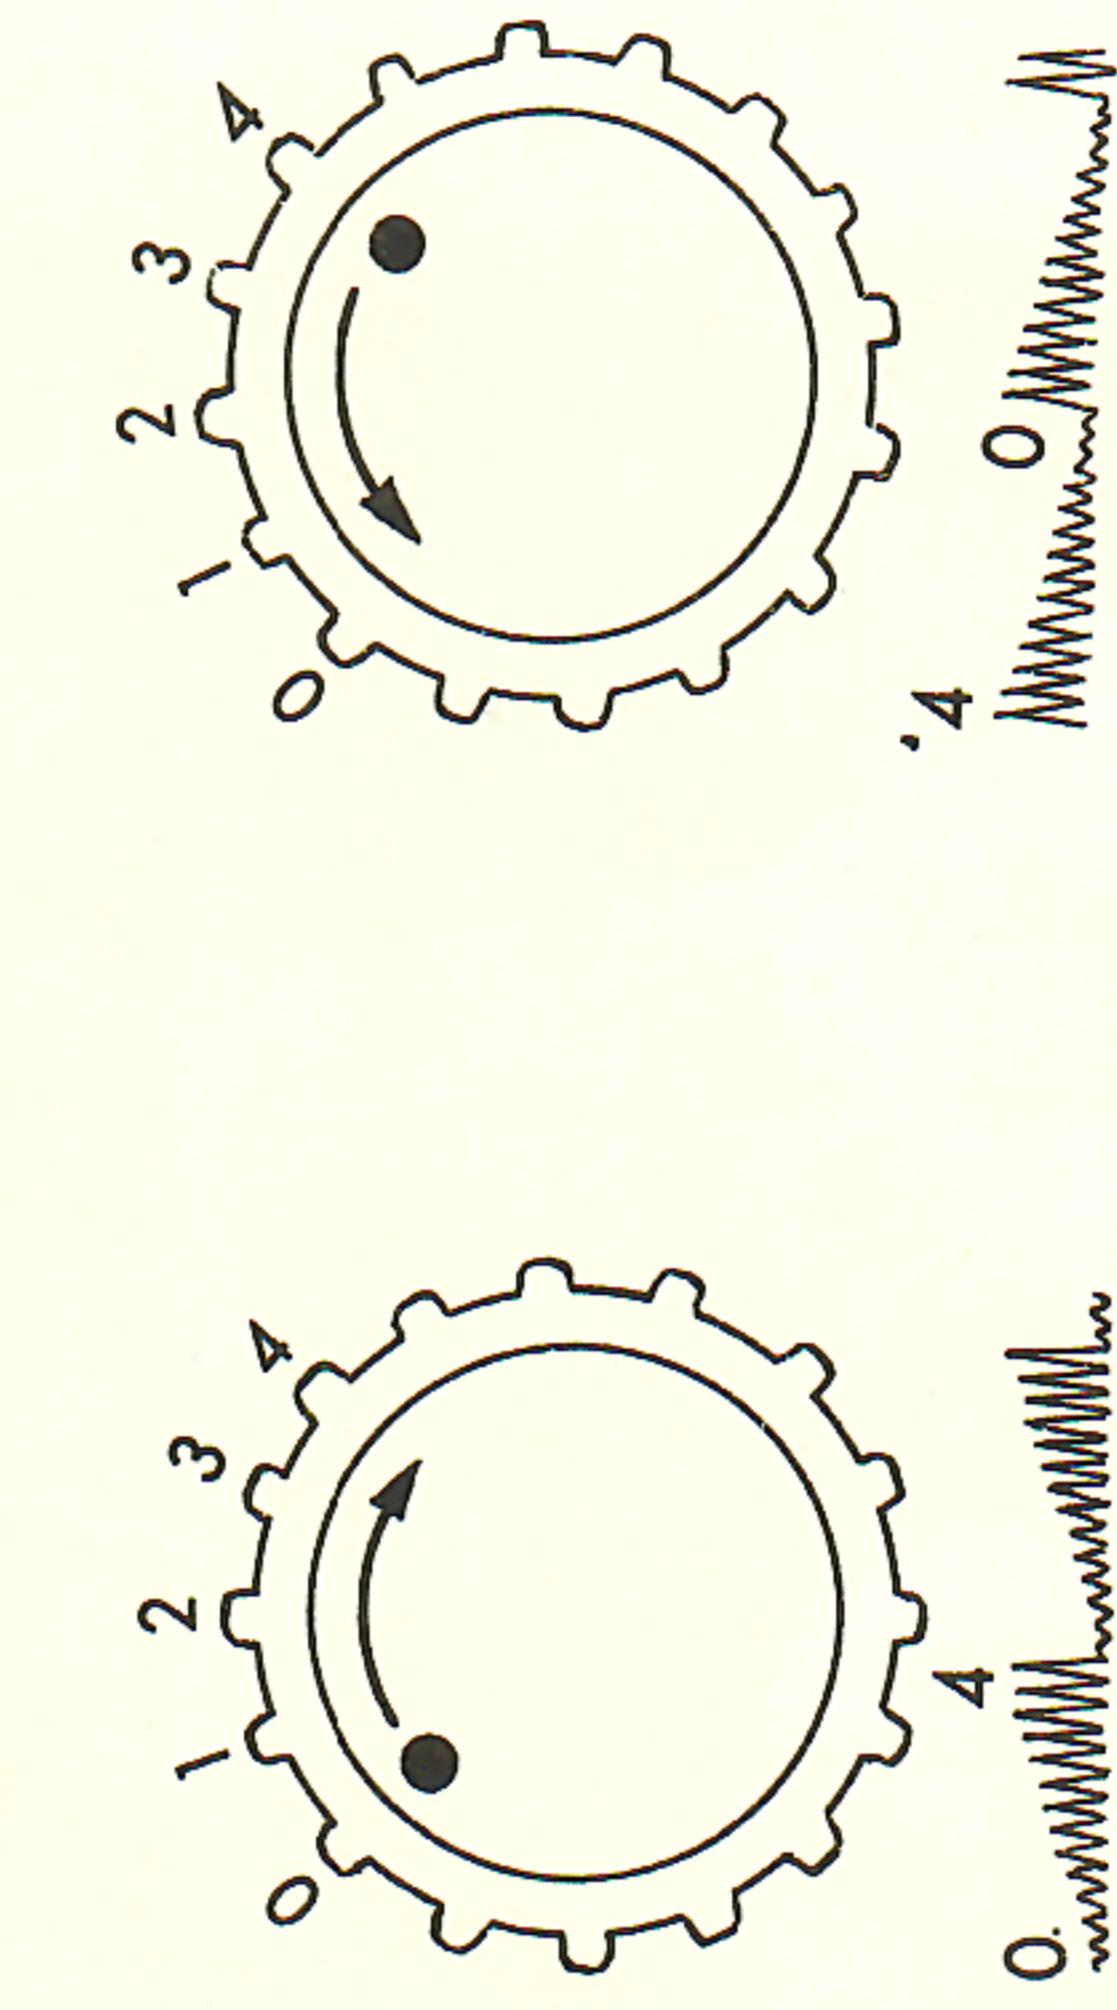


Fig. 37

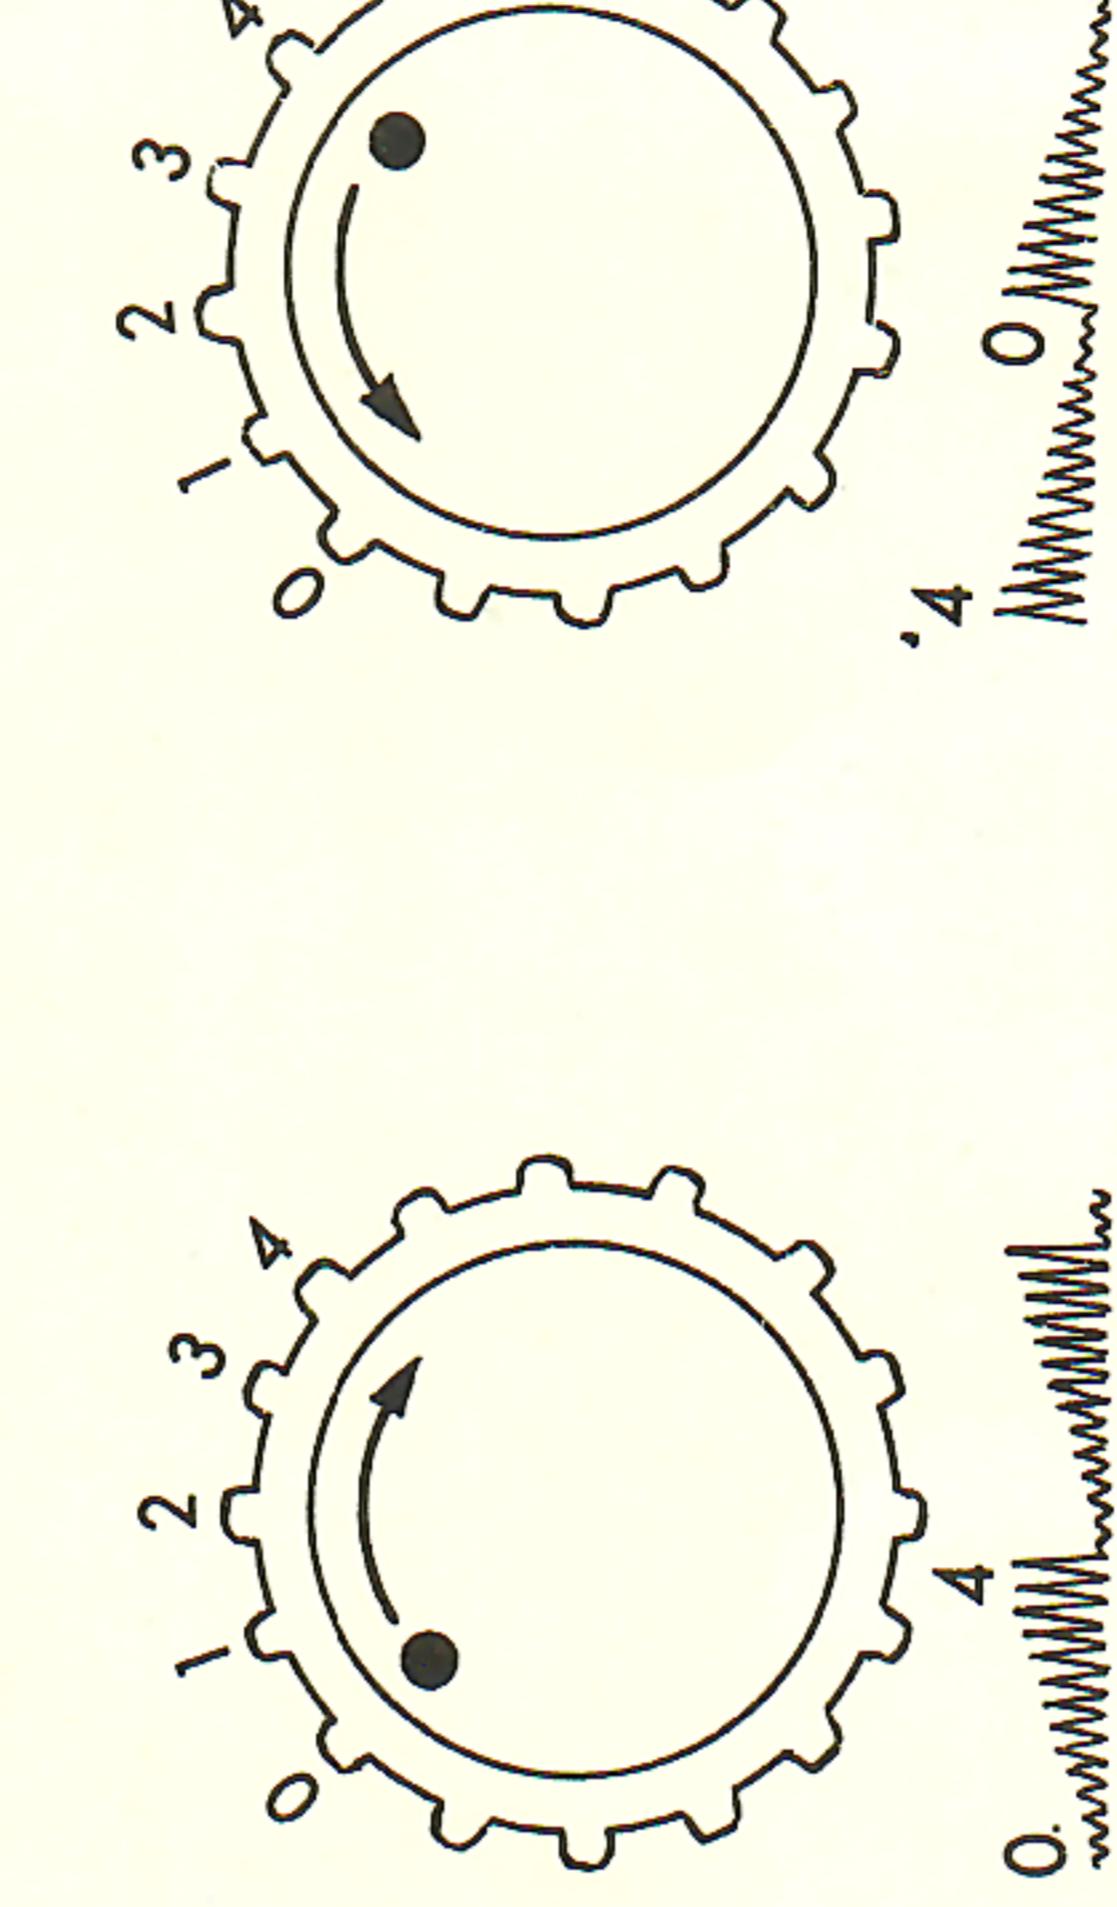


Fig. 39

You can form the pattern as in Fig. 37 by holding the zig zag regulating dial at # 4.

NOTE: The zig zag regulating dial will be on # 4. You may lock the zig zag regulating dial in this position (Page 12)

You can form the pattern as in Fig. 38 by turning the zig zag regulating dial until the zig zag regulating dial is at # 2. (You may lock the stitch on this position. See Page 12.)

In order to form the pattern as in Fig. 39, first lock the zig zag regulating dial on # 2, then turn the zig zag regulating dial up to # 4. Sew the desired number of stitches and while the machine is still running, quickly release the zig zag regulating dial. The machine will now sew a # 2 zig zag stitch. Sew the number of stitches desired and quickly turn the zig zag regulating dial to # 4. Sew the number of stitches desired and repeat.

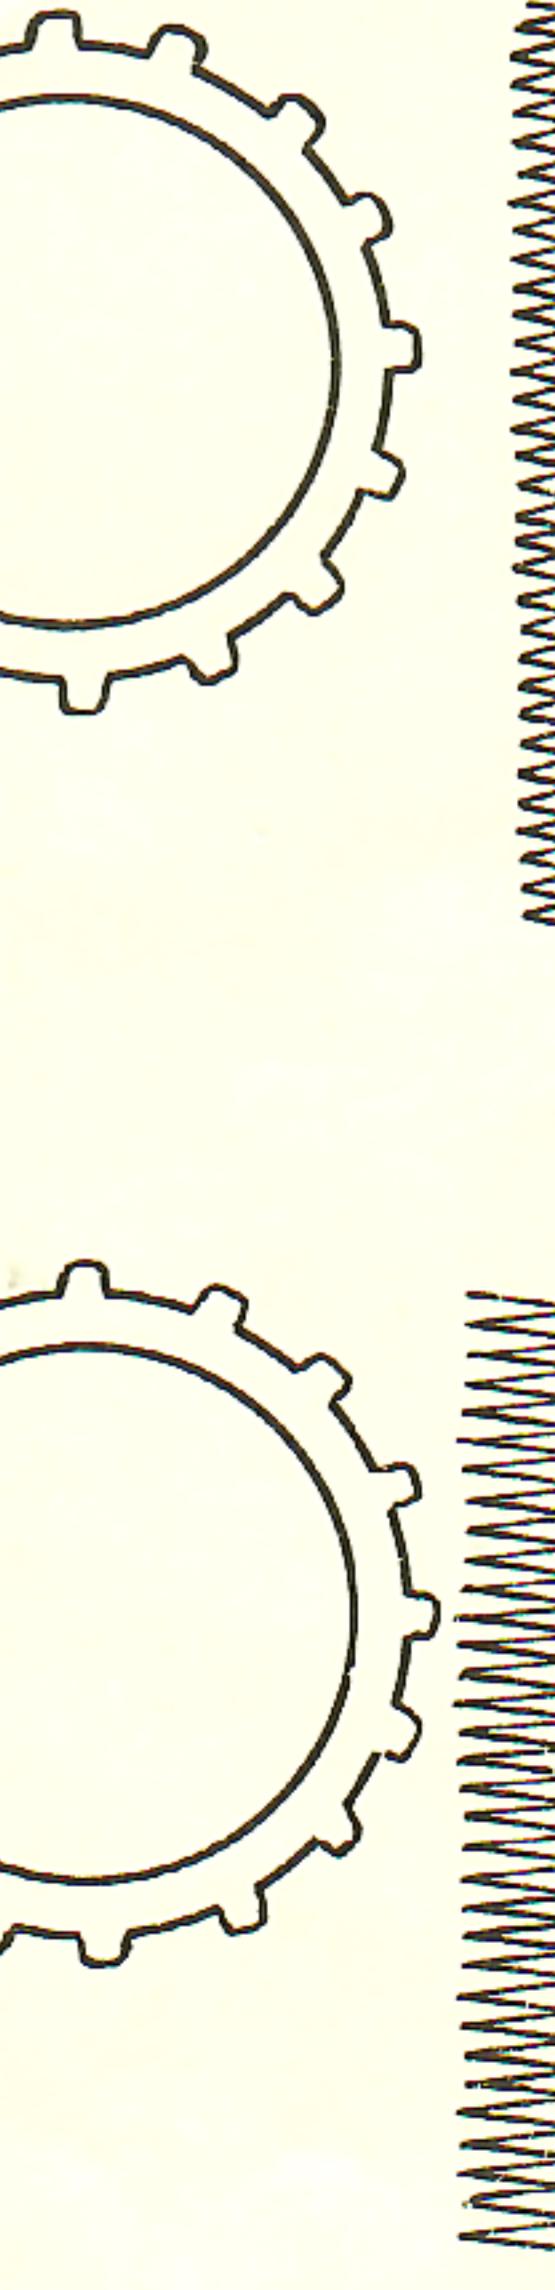
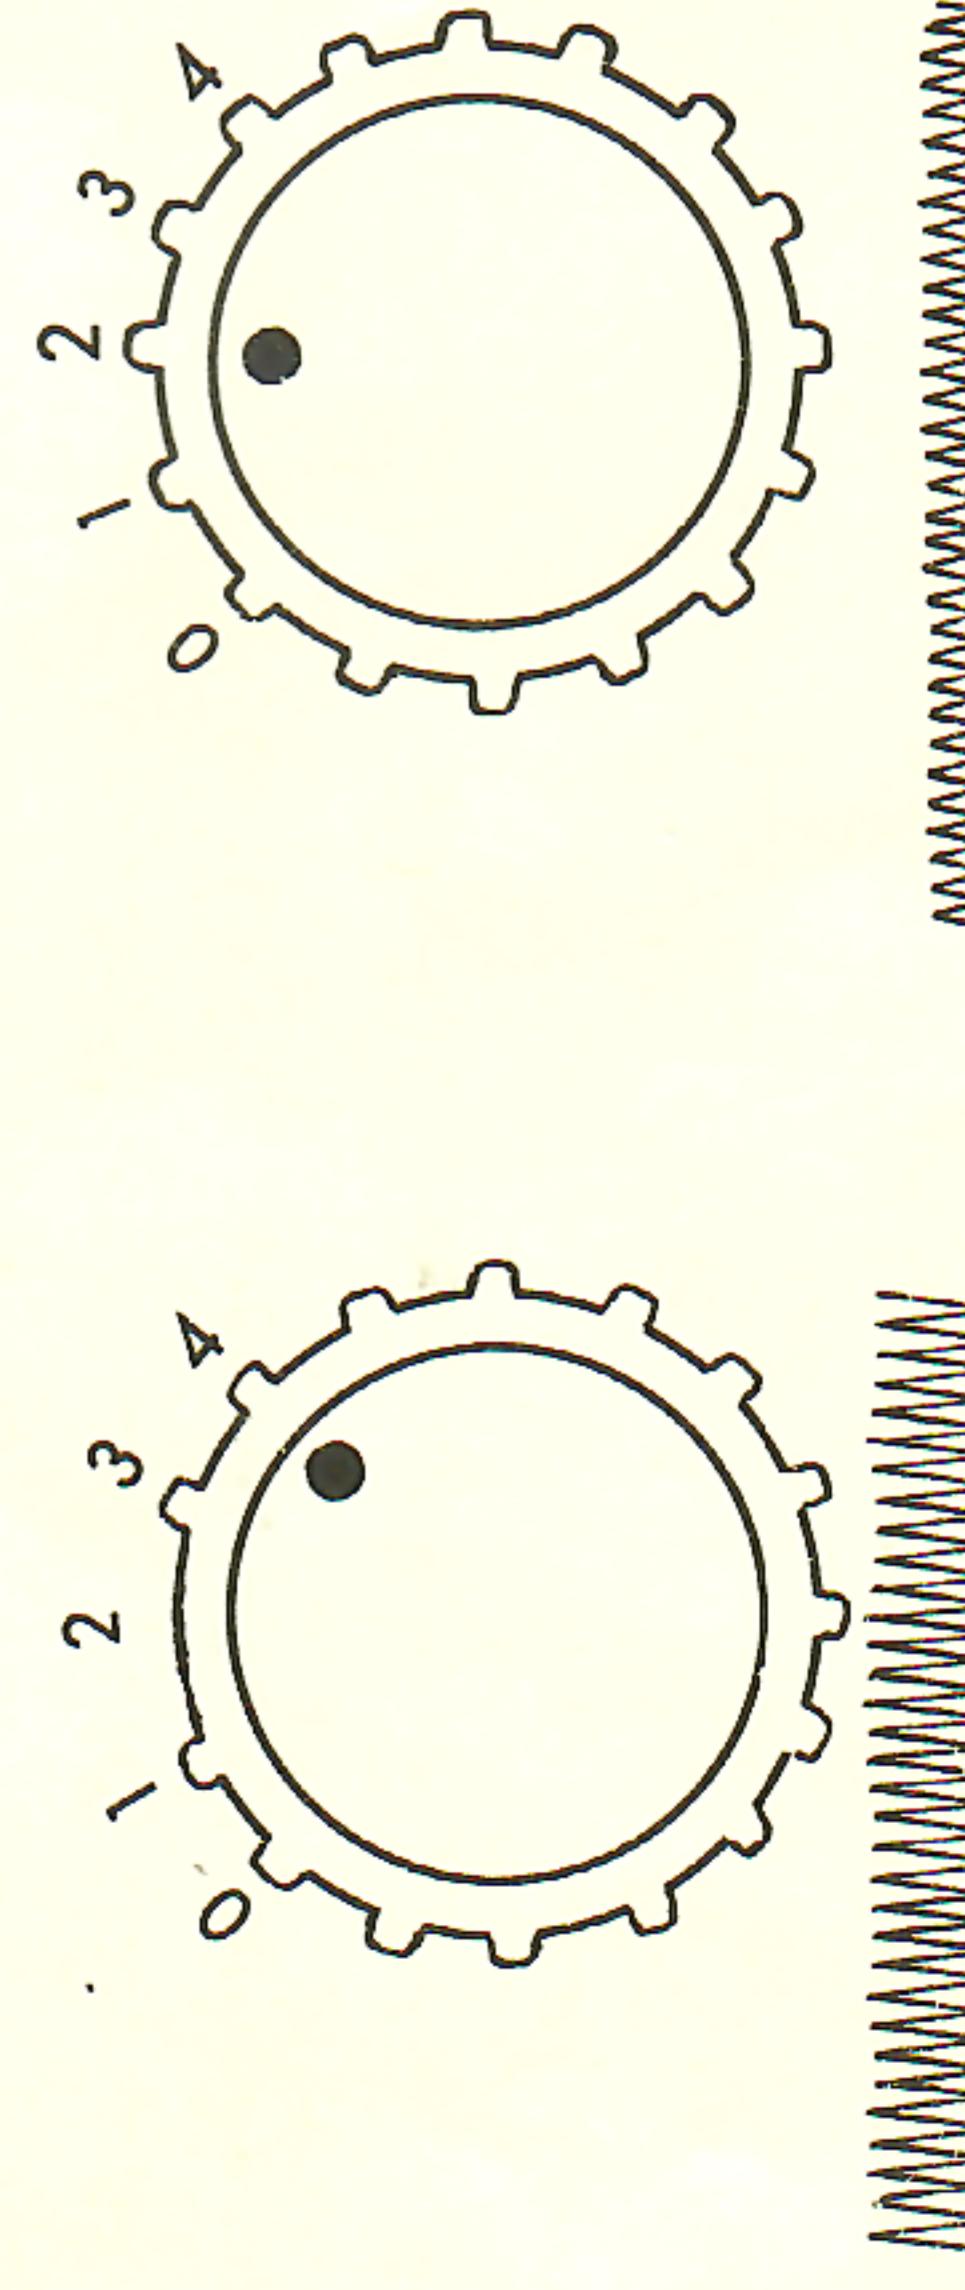


Fig. 37

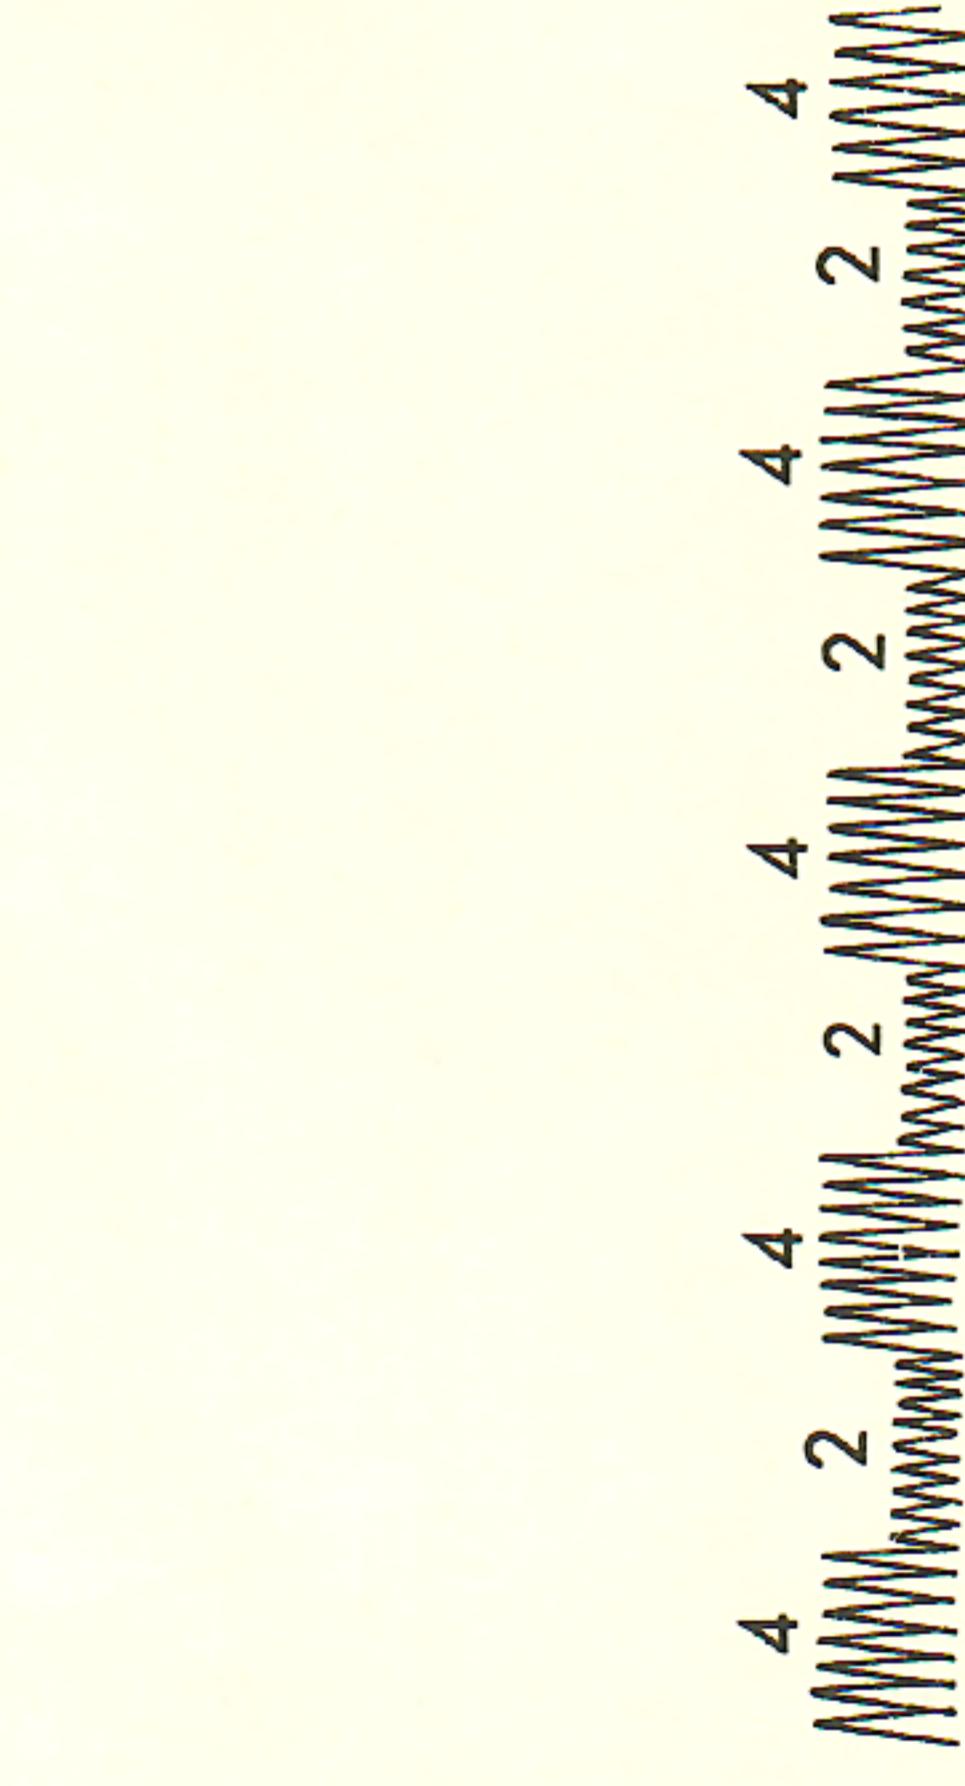


Fig. 39

NOTE: The above patterns are just a few of the numerous patterns that you will be able to make with your machine. By varying the speed with which you turn the zig zag regulating dial and releasing the zig zag regulating dial at the same time varying the stitch length and; the number of stitches made, you will be able to create hundreds of different patterns.

CAUTION: When the machine is not sewing, do not turn the zig zag regulating dial unless the needle is raised out of the material. When making patterns, for best results, the machine should be sewing at a moderate rate of speed.