

E. HEMMER FOOT

1. Straight Stitch Narrow Hem

Attach the hemmer foot. Set the zig zag indicator at "0", then adjust the stitch length to medium size. (See Page 10)

Fold the material over about 1/8 inch, then insert the fold beneath the hemmer into the scroll by moving the material back and forward gently until hem rolls into the scroll of the hemmer foot.

After the material is properly inserted into the hemmer foot, pull the material toward you until the end of the material is just below the needle.

Lower the presser bar, then sew the first few stitches slowly while holding the hem between the thumb and forefinger of the right hand.

CAUTION: Do not feed the material too fast or too slow into the hemmer.

2. Narrow Rolled Edge

Set zig zag indicator on #2, then follow same procedure as in making straight stitch narrow hem.

22. BLIND HEMMING

1. Set the lever at "B". To move this lever to left, push it down a little.

2. Set zig zag dial at 0. Set stitch length dial at #2. Prepare the garment in the same manner as for hand hemming.

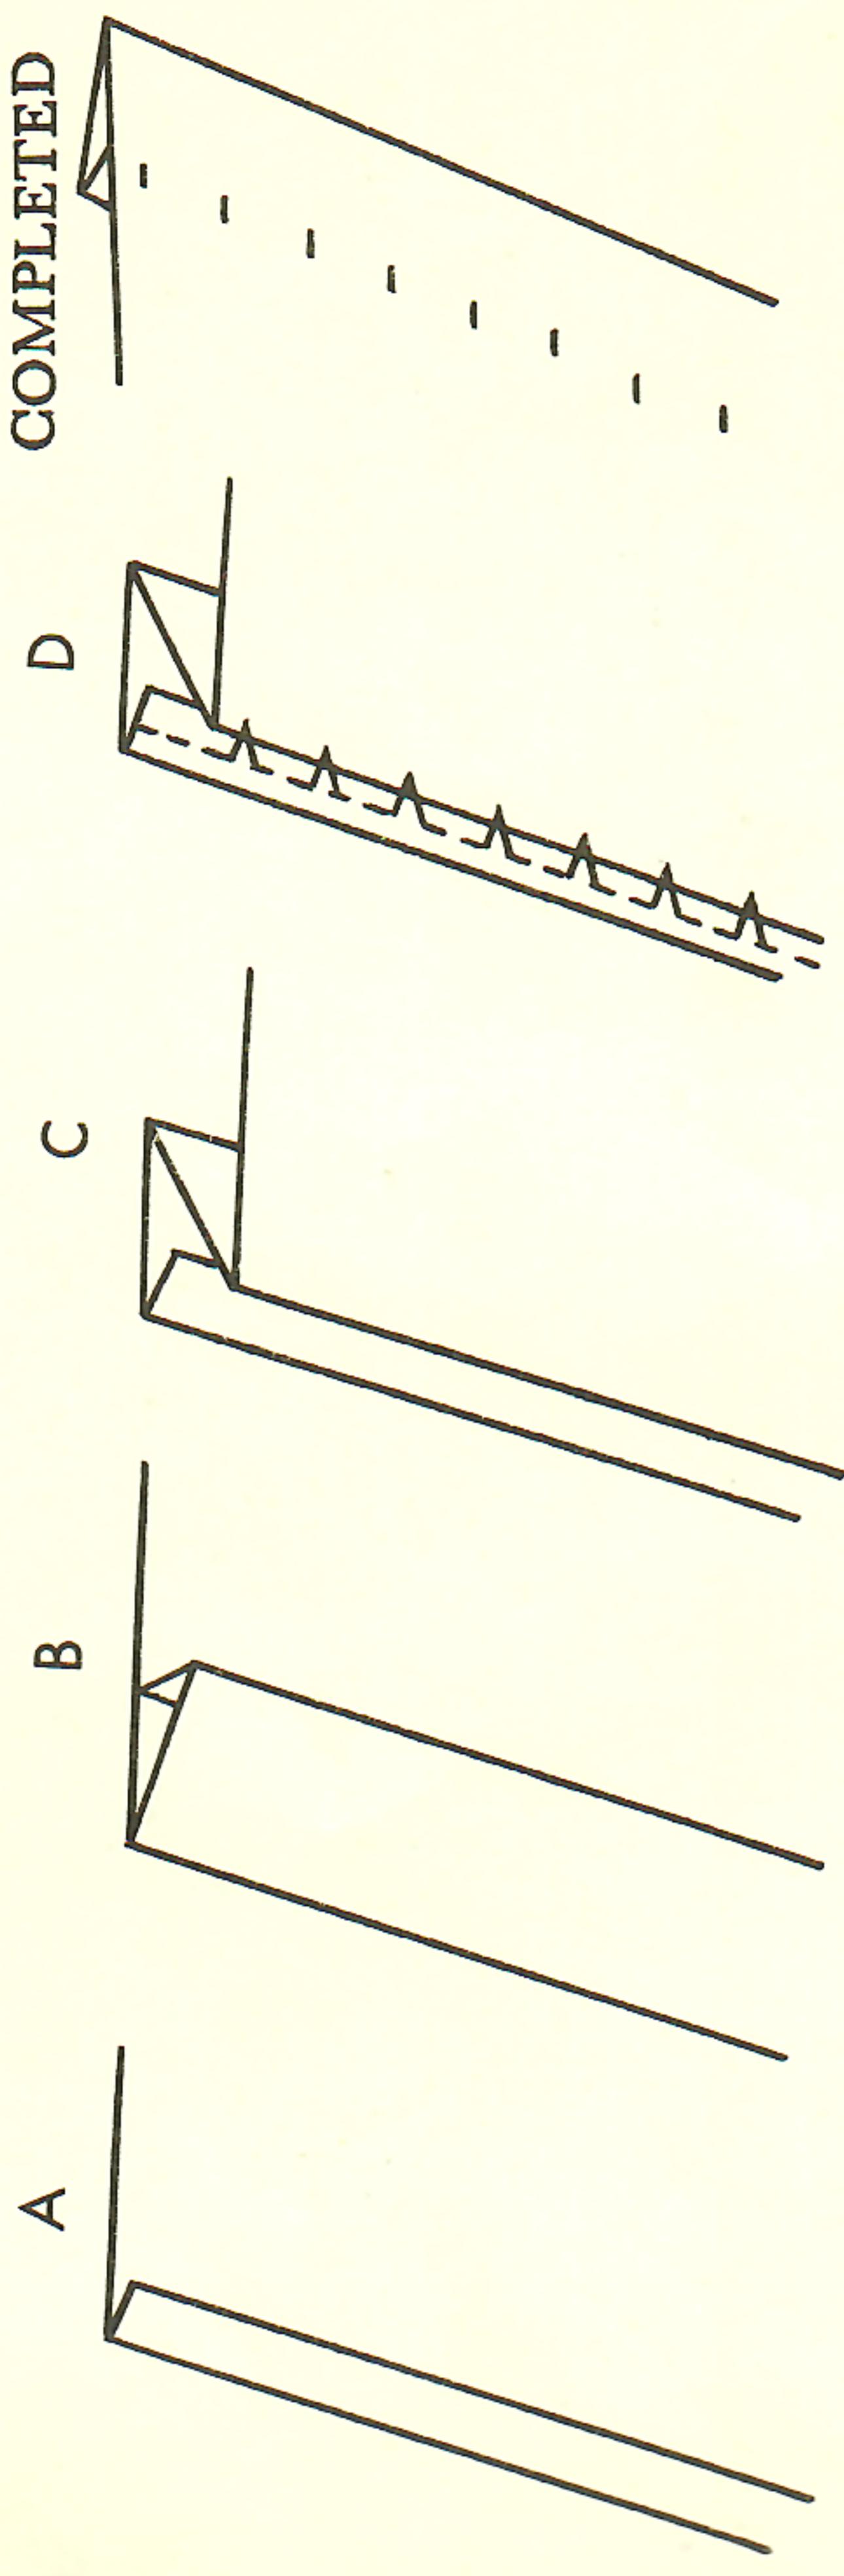


Fig. 59

A. If hem with folded edge is used, make first fold $\frac{3}{8}$ " deep.

B. Turn hem the depth desired and baste $\frac{1}{4}$ " from upper edge. Press in place.

C. Fold hem back toward right side of garment leaving $\frac{1}{4}$ " extended.

D. Place material under presser foot, with top folded edge to the left of the needle.

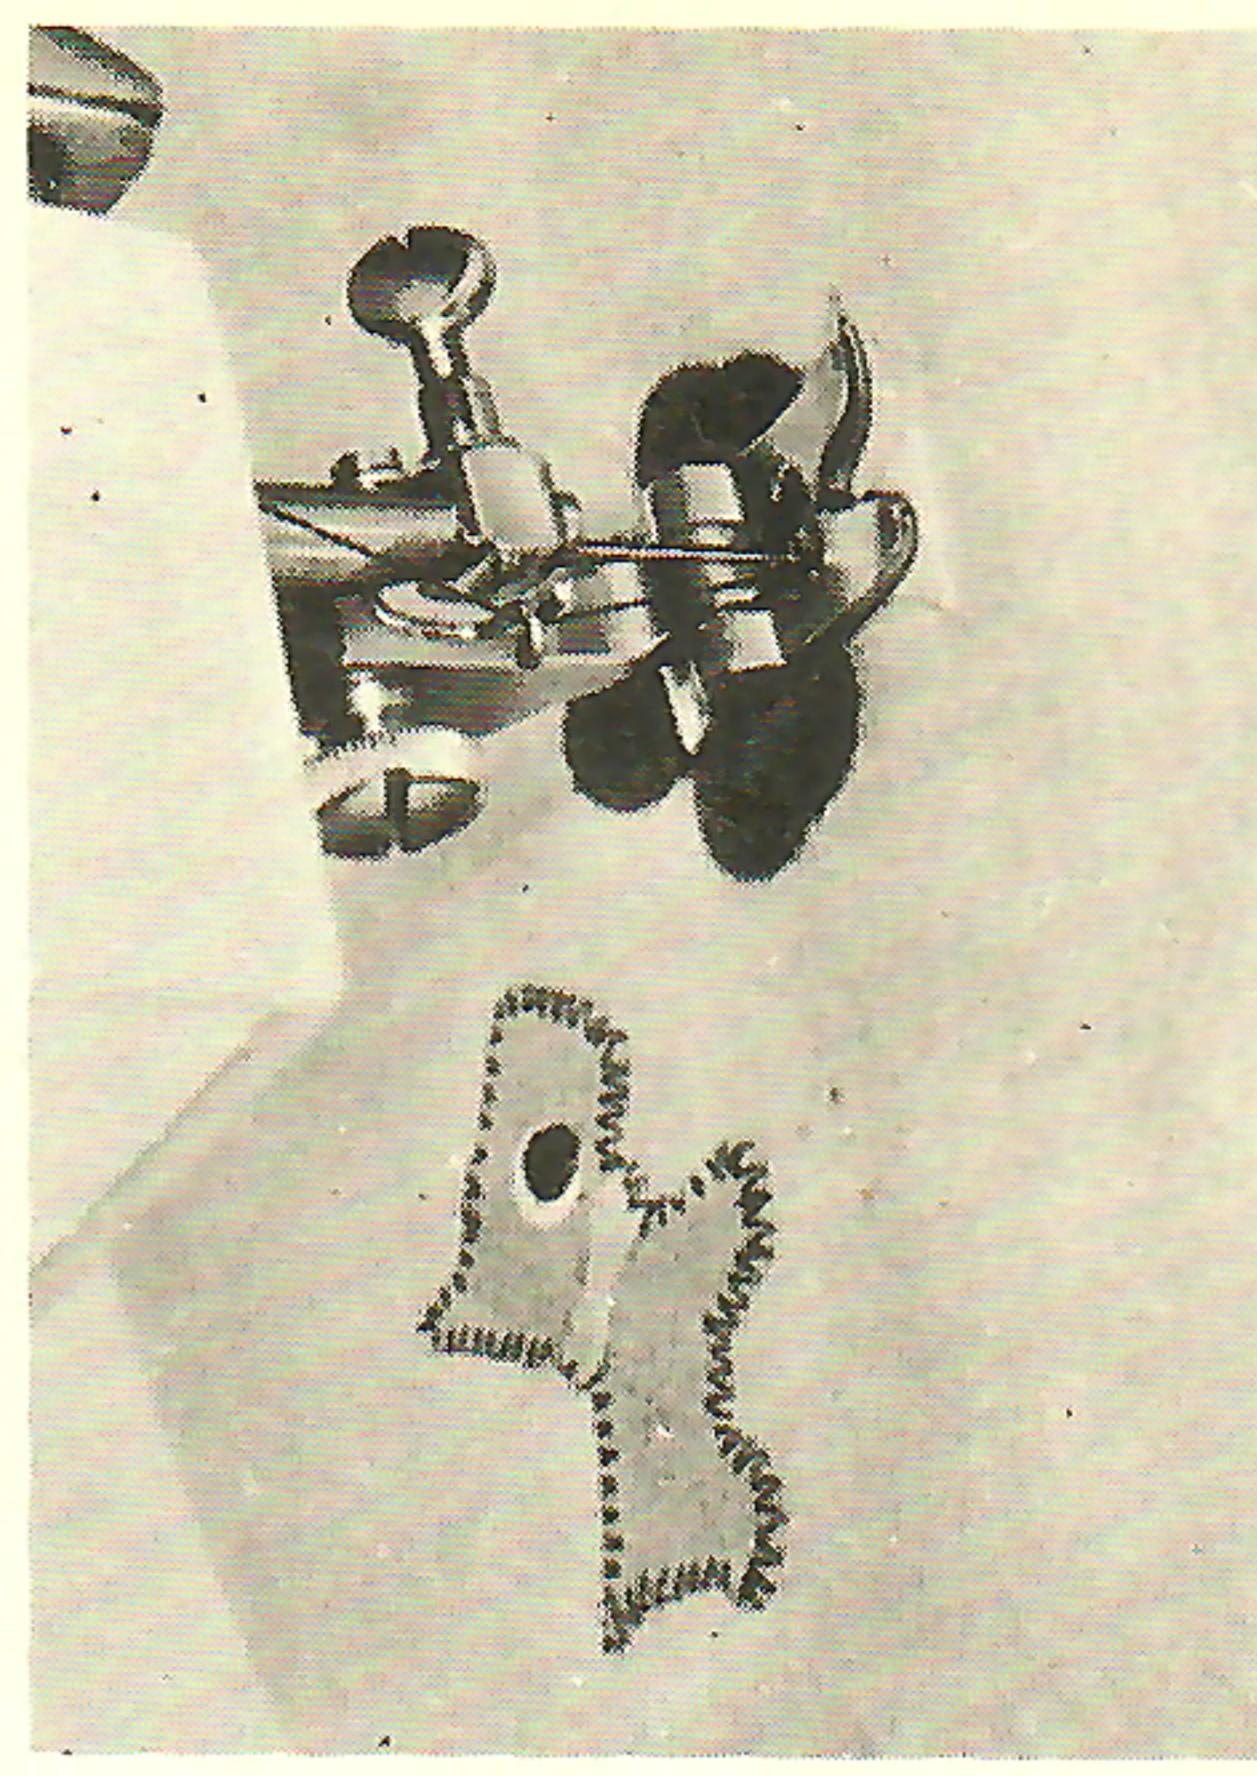


Fig. 60

23. APPLIQUEING

1. Adjust the machine to a narrow zig zag stitch.
2. Set the stitch length to smallest stitch. Baste material on to the article, then sew around the edges of the material.

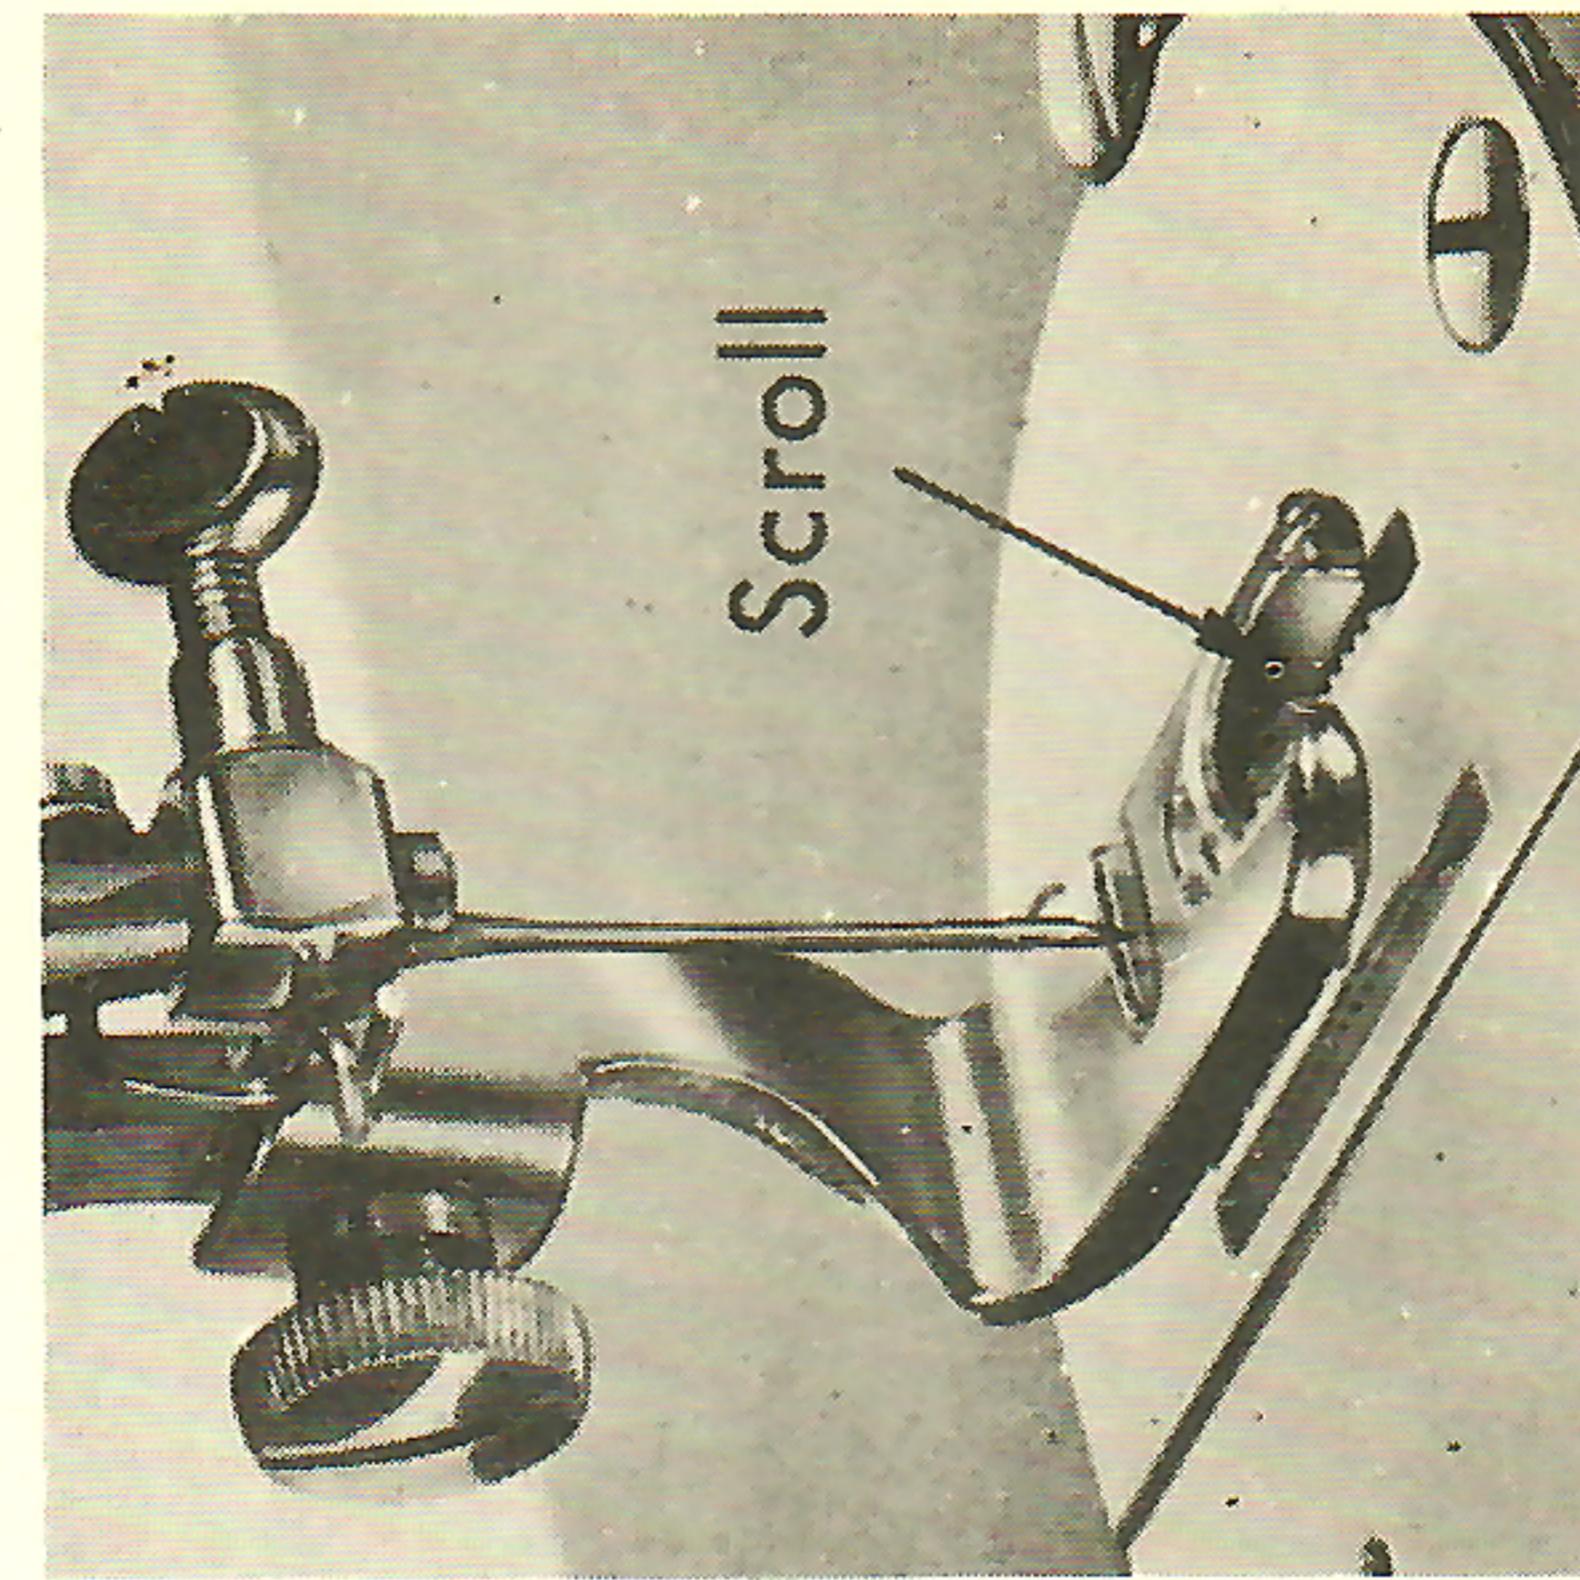


Fig. 58

