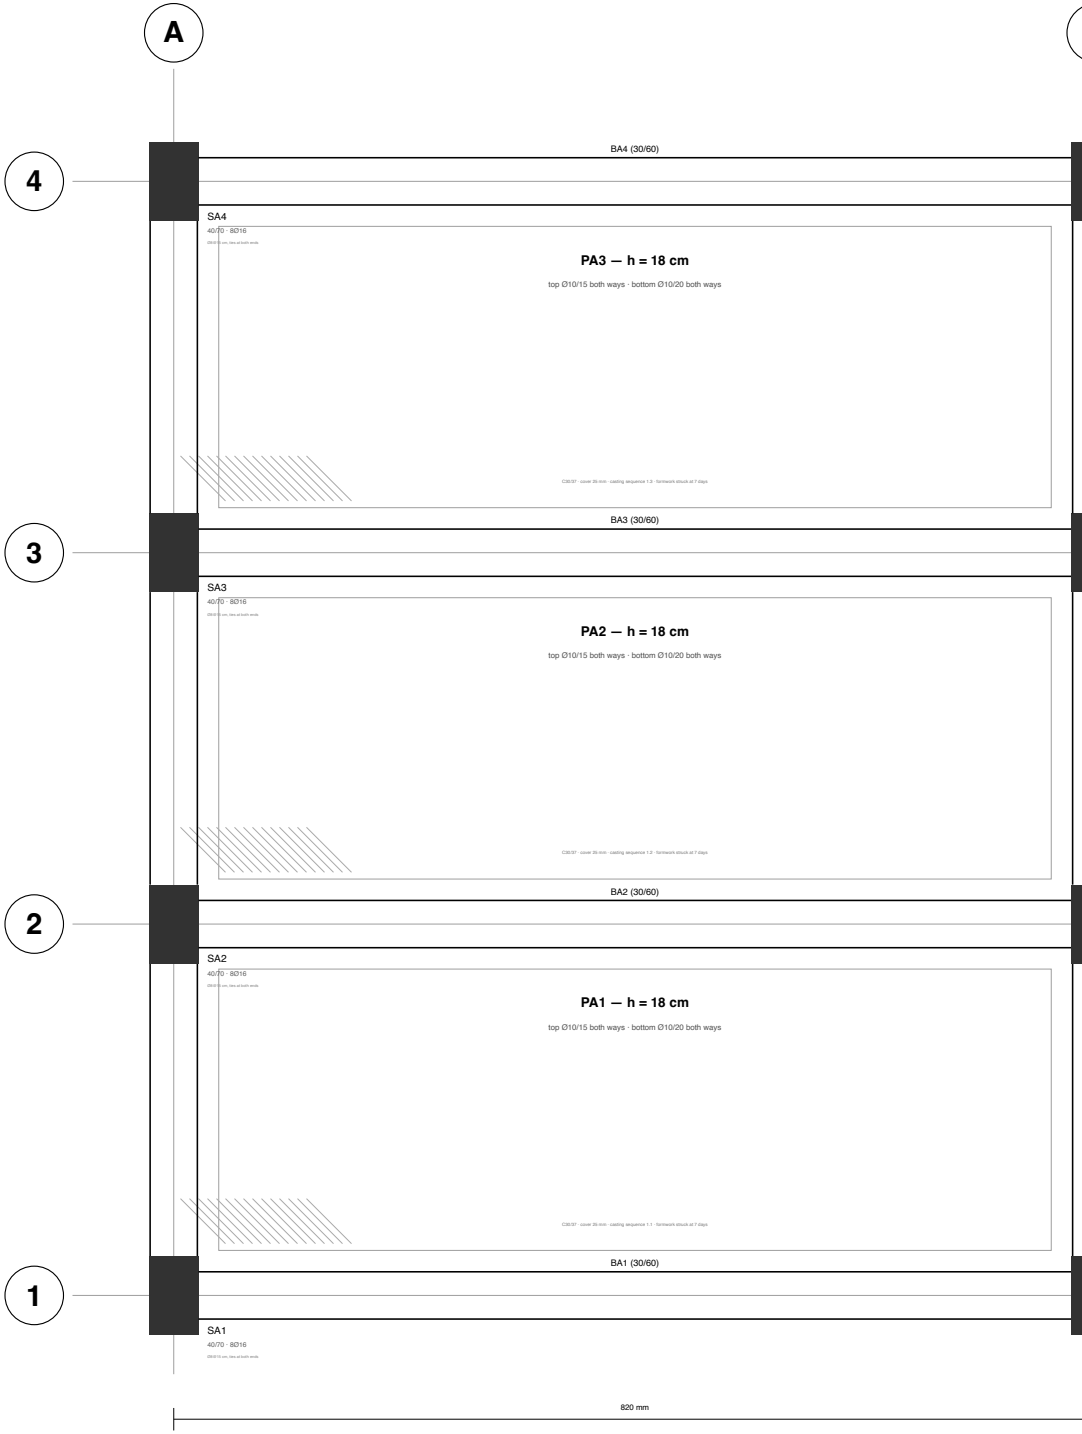
A
4
3
2
1
BA4 (30/60)
SA4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PA3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 1.3 · formwork struck at 7 days
BA3 (30/60)
SA3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PA2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 1.2 · formwork struck at 7 days
BA2 (30/60)
SA2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PA1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 1.1 · formwork struck at 7 days
BA1 (30/60)
SA1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
820 mm

PDF SDK

DEMONSTRATION SHEET

PROJECT	Tiled rendering, one sheet
DRAWING	Formwork plan, level +5.26
SCALE	1:50 at A0
SHEET	1 of 1
REVISION	C

Every line on this sheet was drawn by example/pdfs/make.swift. No part of it is anyone's work but this package's.

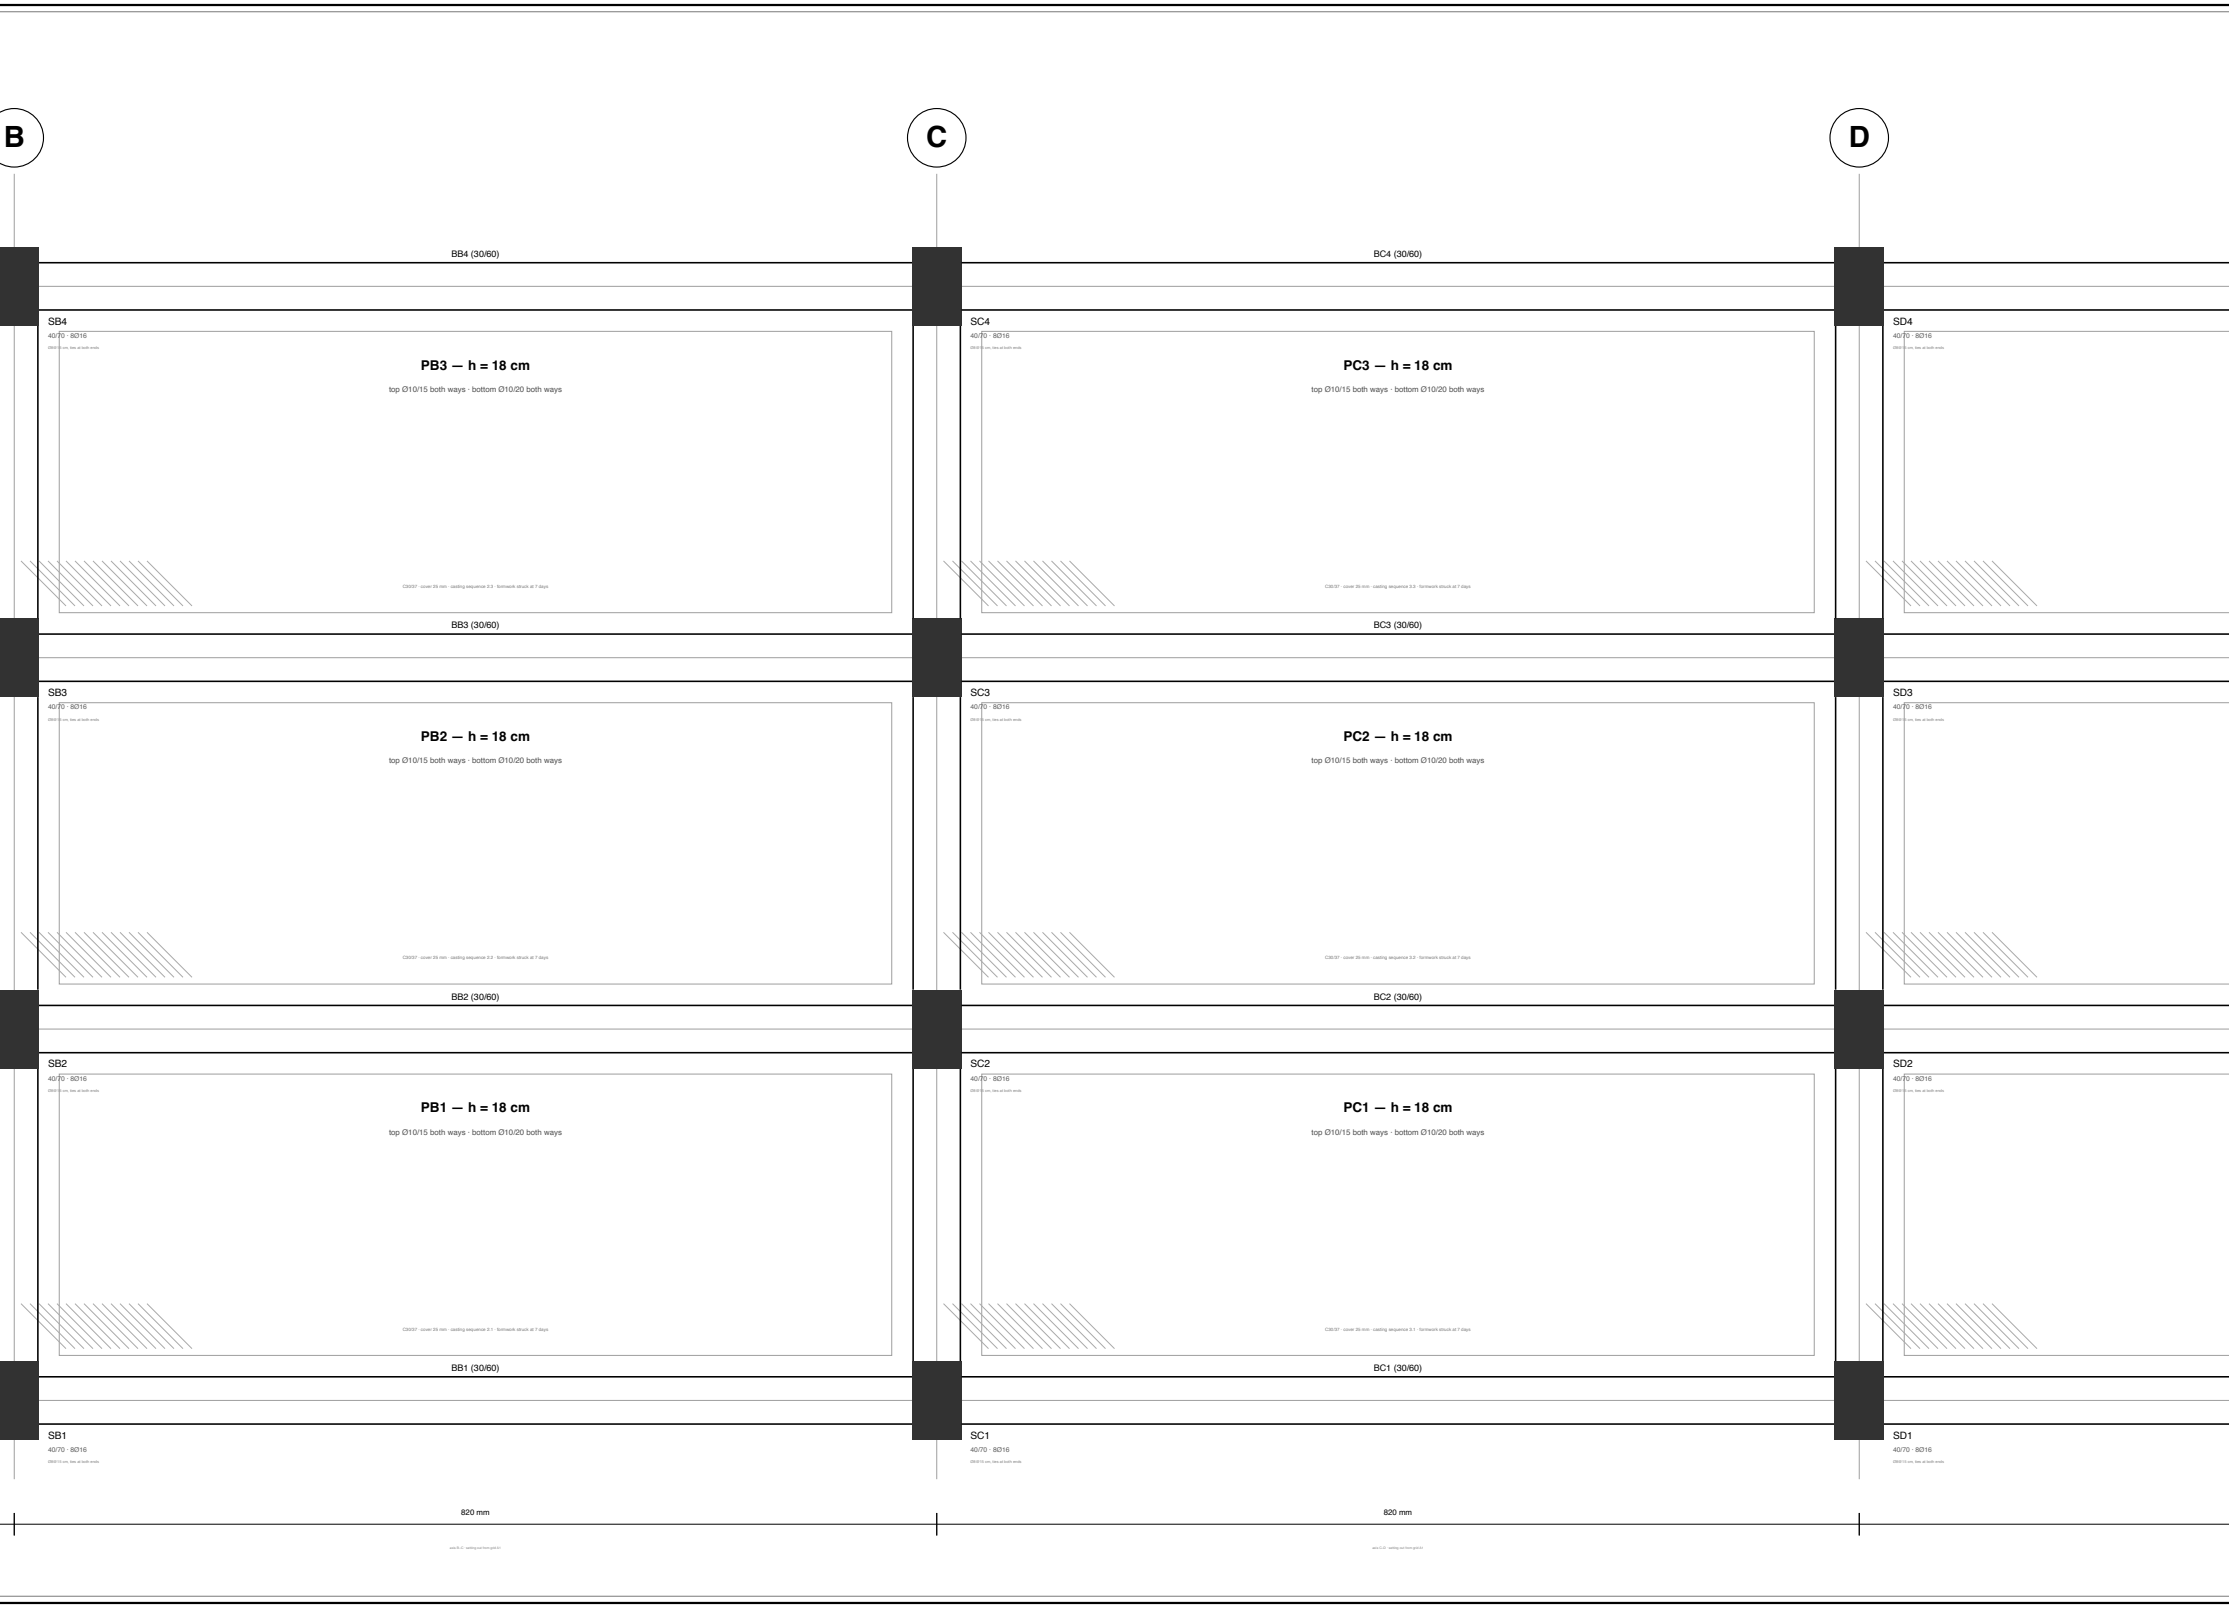
B
C
D
BB4 (30/60)
BC4 (30/60)
SB4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SC4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SD4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PB3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PC3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 3.3 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 3.3 · formwork struck at 7 days
BB3 (30/60)
BC3 (30/60)
SB3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SC3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SD3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PB2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PC2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 3.2 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 3.2 · formwork struck at 7 days
BB2 (30/60)
BC2 (30/60)
SB2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SC2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SD2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PB1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PC1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 3.1 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 3.1 · formwork struck at 7 days
BB1 (30/60)
BC1 (30/60)
SB1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SC1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SD1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
820 mm
820 mm
axis B–C · setting out from grid A1
axis C–D · setting out from grid A1

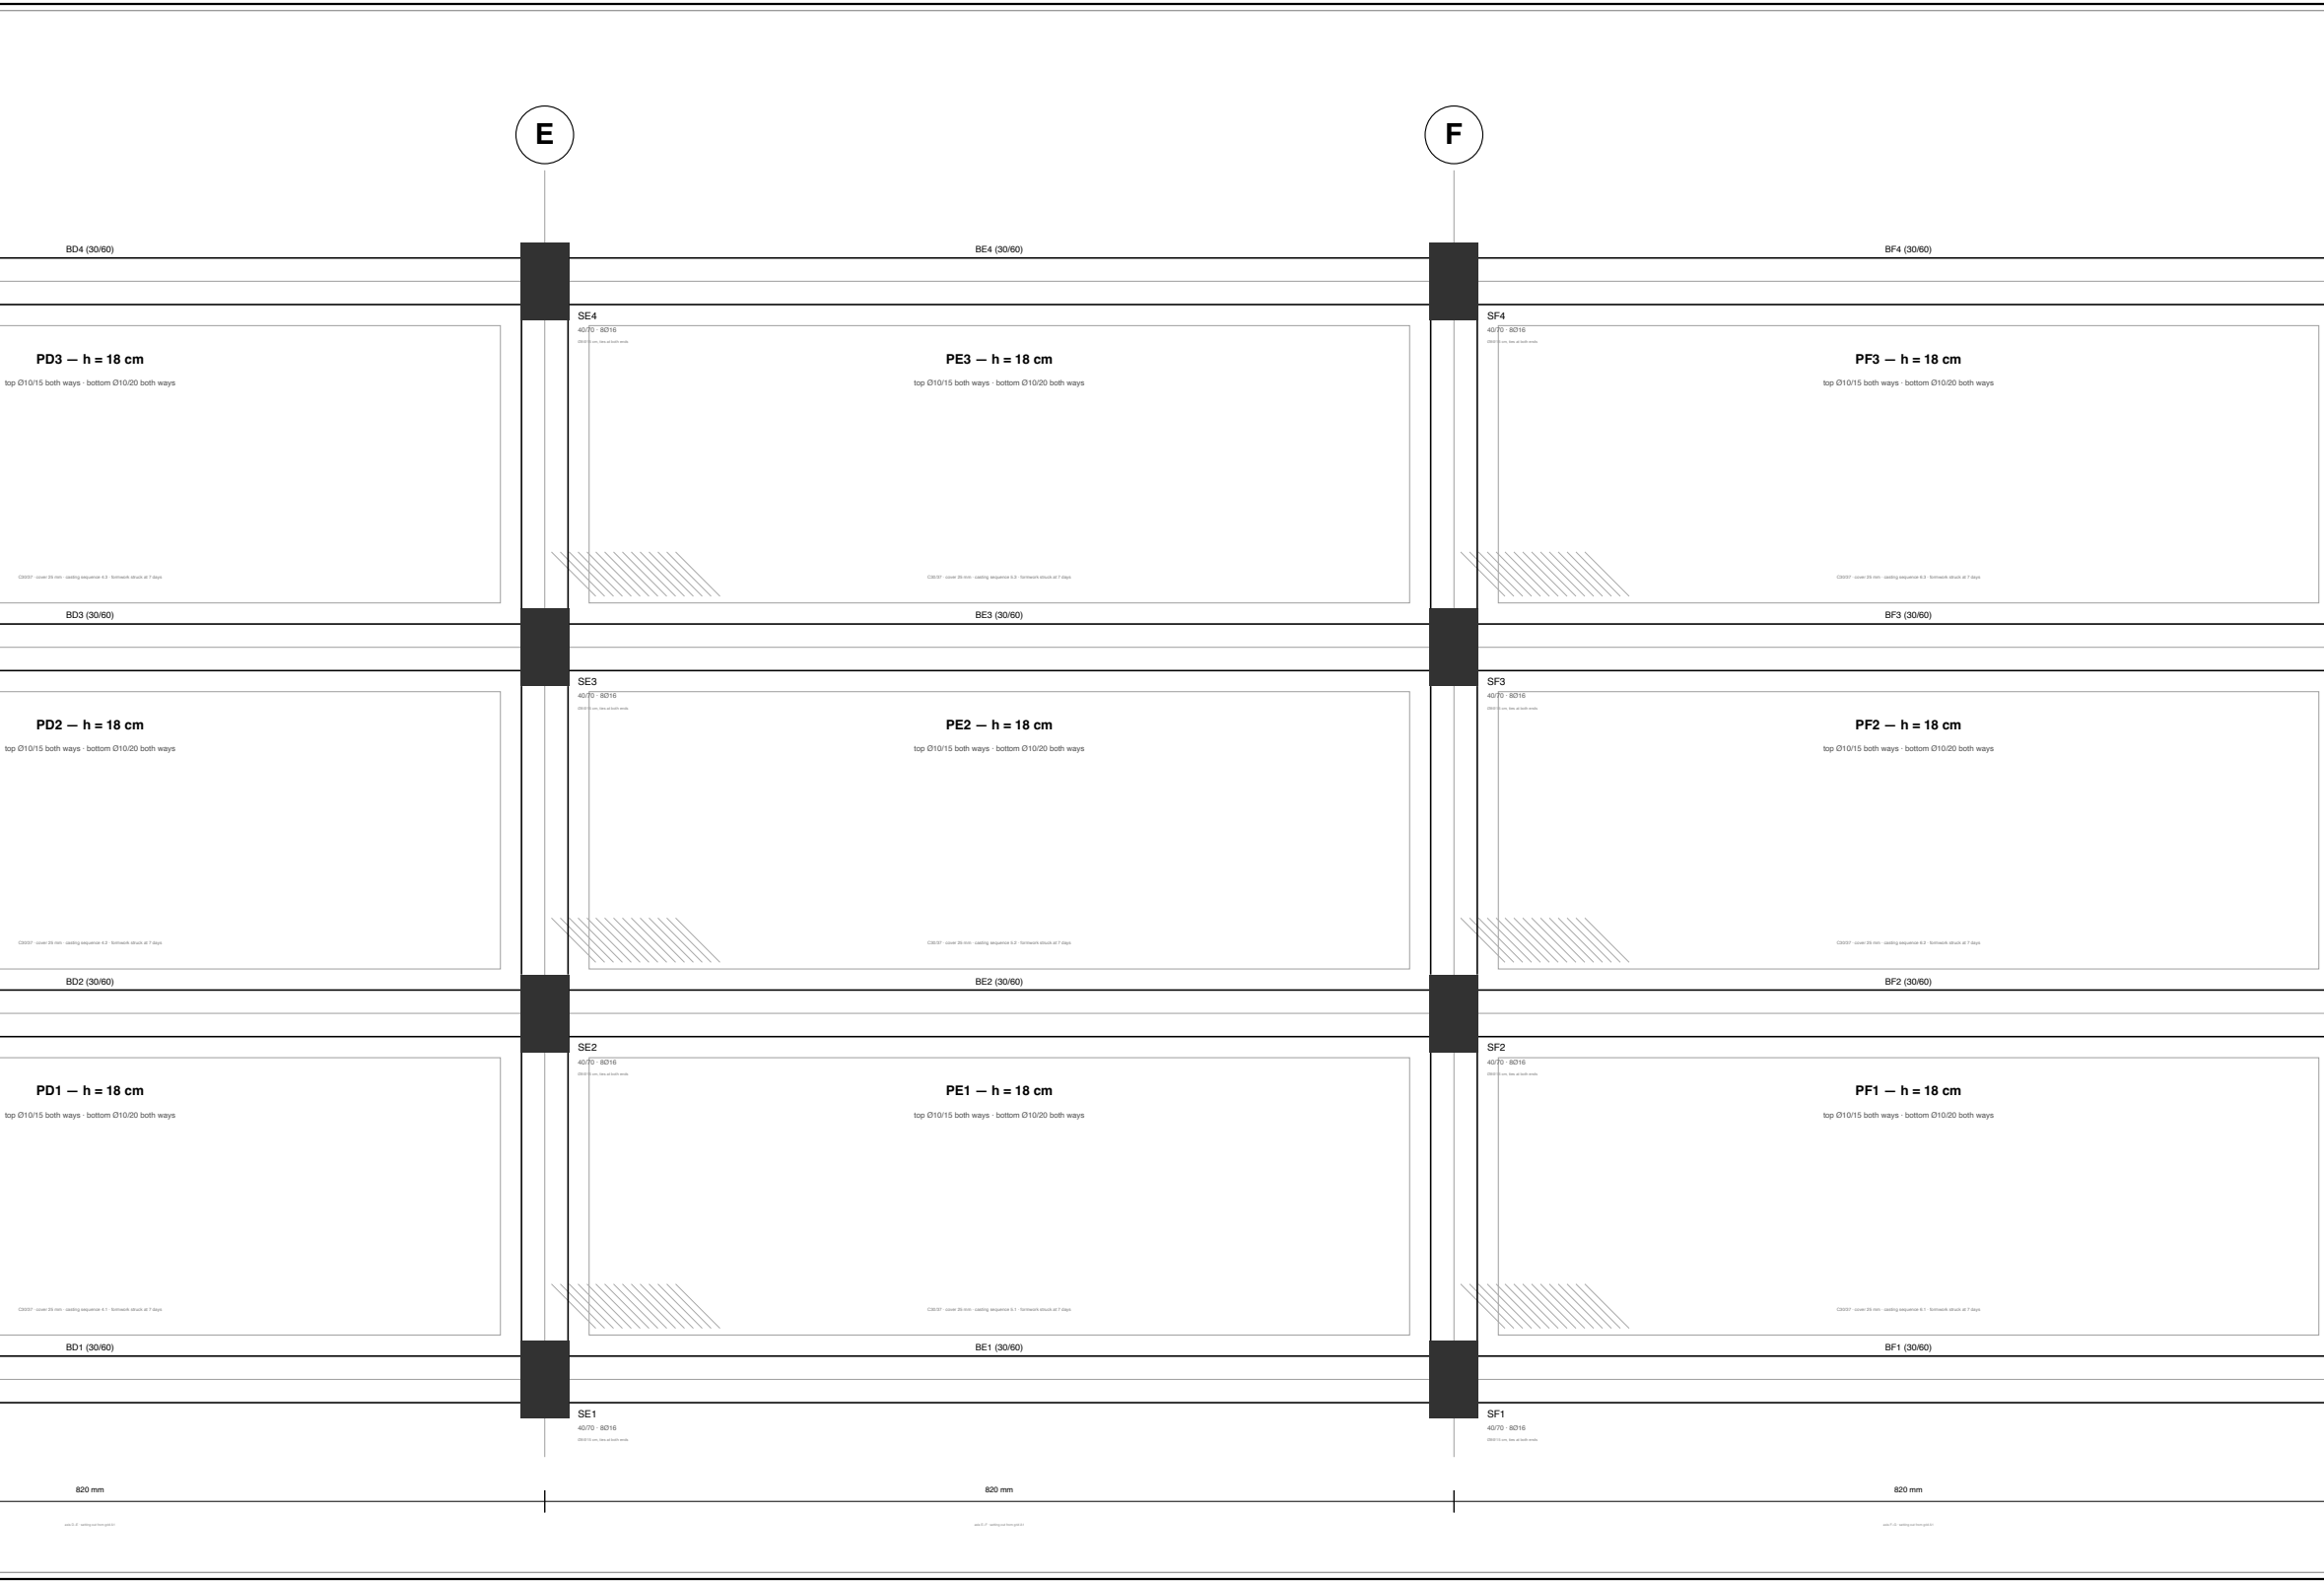

E
F
BD4 (30/60)
BE4 (30/60)
BF4 (30/60)
SE4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SF4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PD3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PE3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PF3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 4.3 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 5.3 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 6.3 · formwork struck at 7 days
BD3 (30/60)
BE3 (30/60)
BF3 (30/60)
SE3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SF3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PD2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PE2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PF2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 4.2 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 5.2 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 6.2 · formwork struck at 7 days
BD2 (30/60)
BE2 (30/60)
BF2 (30/60)
SE2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SF2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PD1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PE1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PF1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 4.1 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 5.1 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 6.1 · formwork struck at 7 days
BD1 (30/60)
BE1 (30/60)
BF1 (30/60)
SE1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SF1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
820 mm
820 mm
820 mm
axis D–E · setting out from grid A1
axis E–F · setting out from grid A1
axis F–G · setting out from grid A1

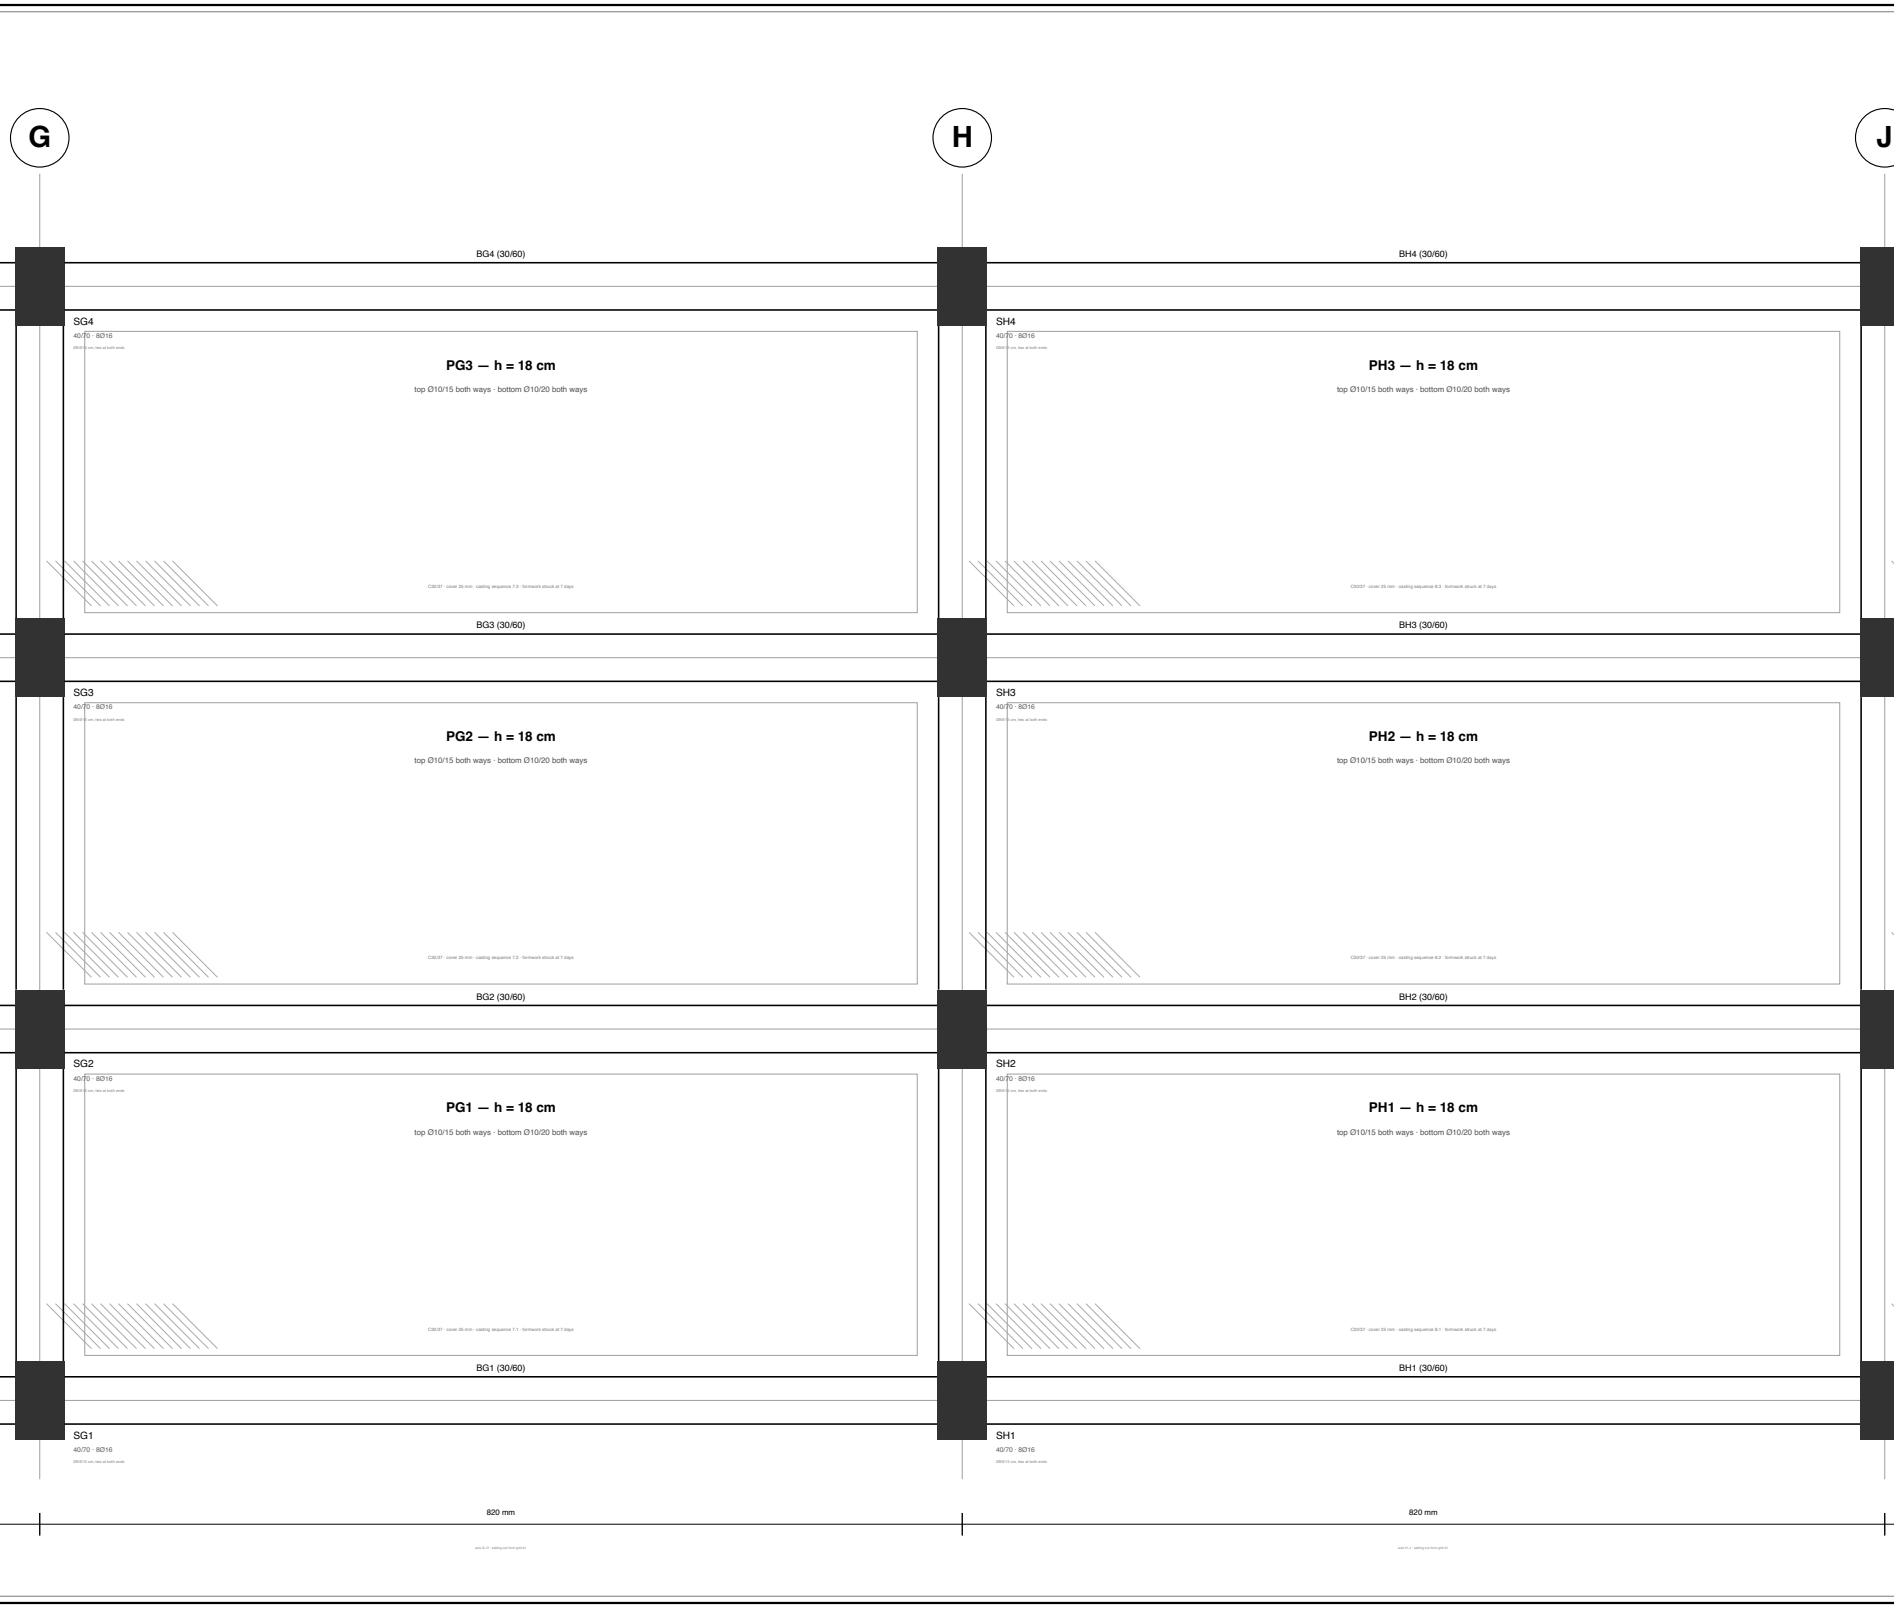
G
H
J
BG4 (30/60)
BH4 (30/60)
SG4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PG3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 7.3 · formwork struck at 7 days
SH4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PH3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 8.3 · formwork struck at 7 days
BG3 (30/60)
BH3 (30/60)
SG3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PG2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 7.2 · formwork struck at 7 days
SH3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PH2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 8.2 · formwork struck at 7 days
BG2 (30/60)
BH2 (30/60)
SG2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PG1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 7.1 · formwork struck at 7 days
SH2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PH1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 8.1 · formwork struck at 7 days
BG1 (30/60)
BH1 (30/60)
SG1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SH1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
820 mm
820 mm
axis G–H · setting out from grid A1
axis H–J · setting out from grid A1

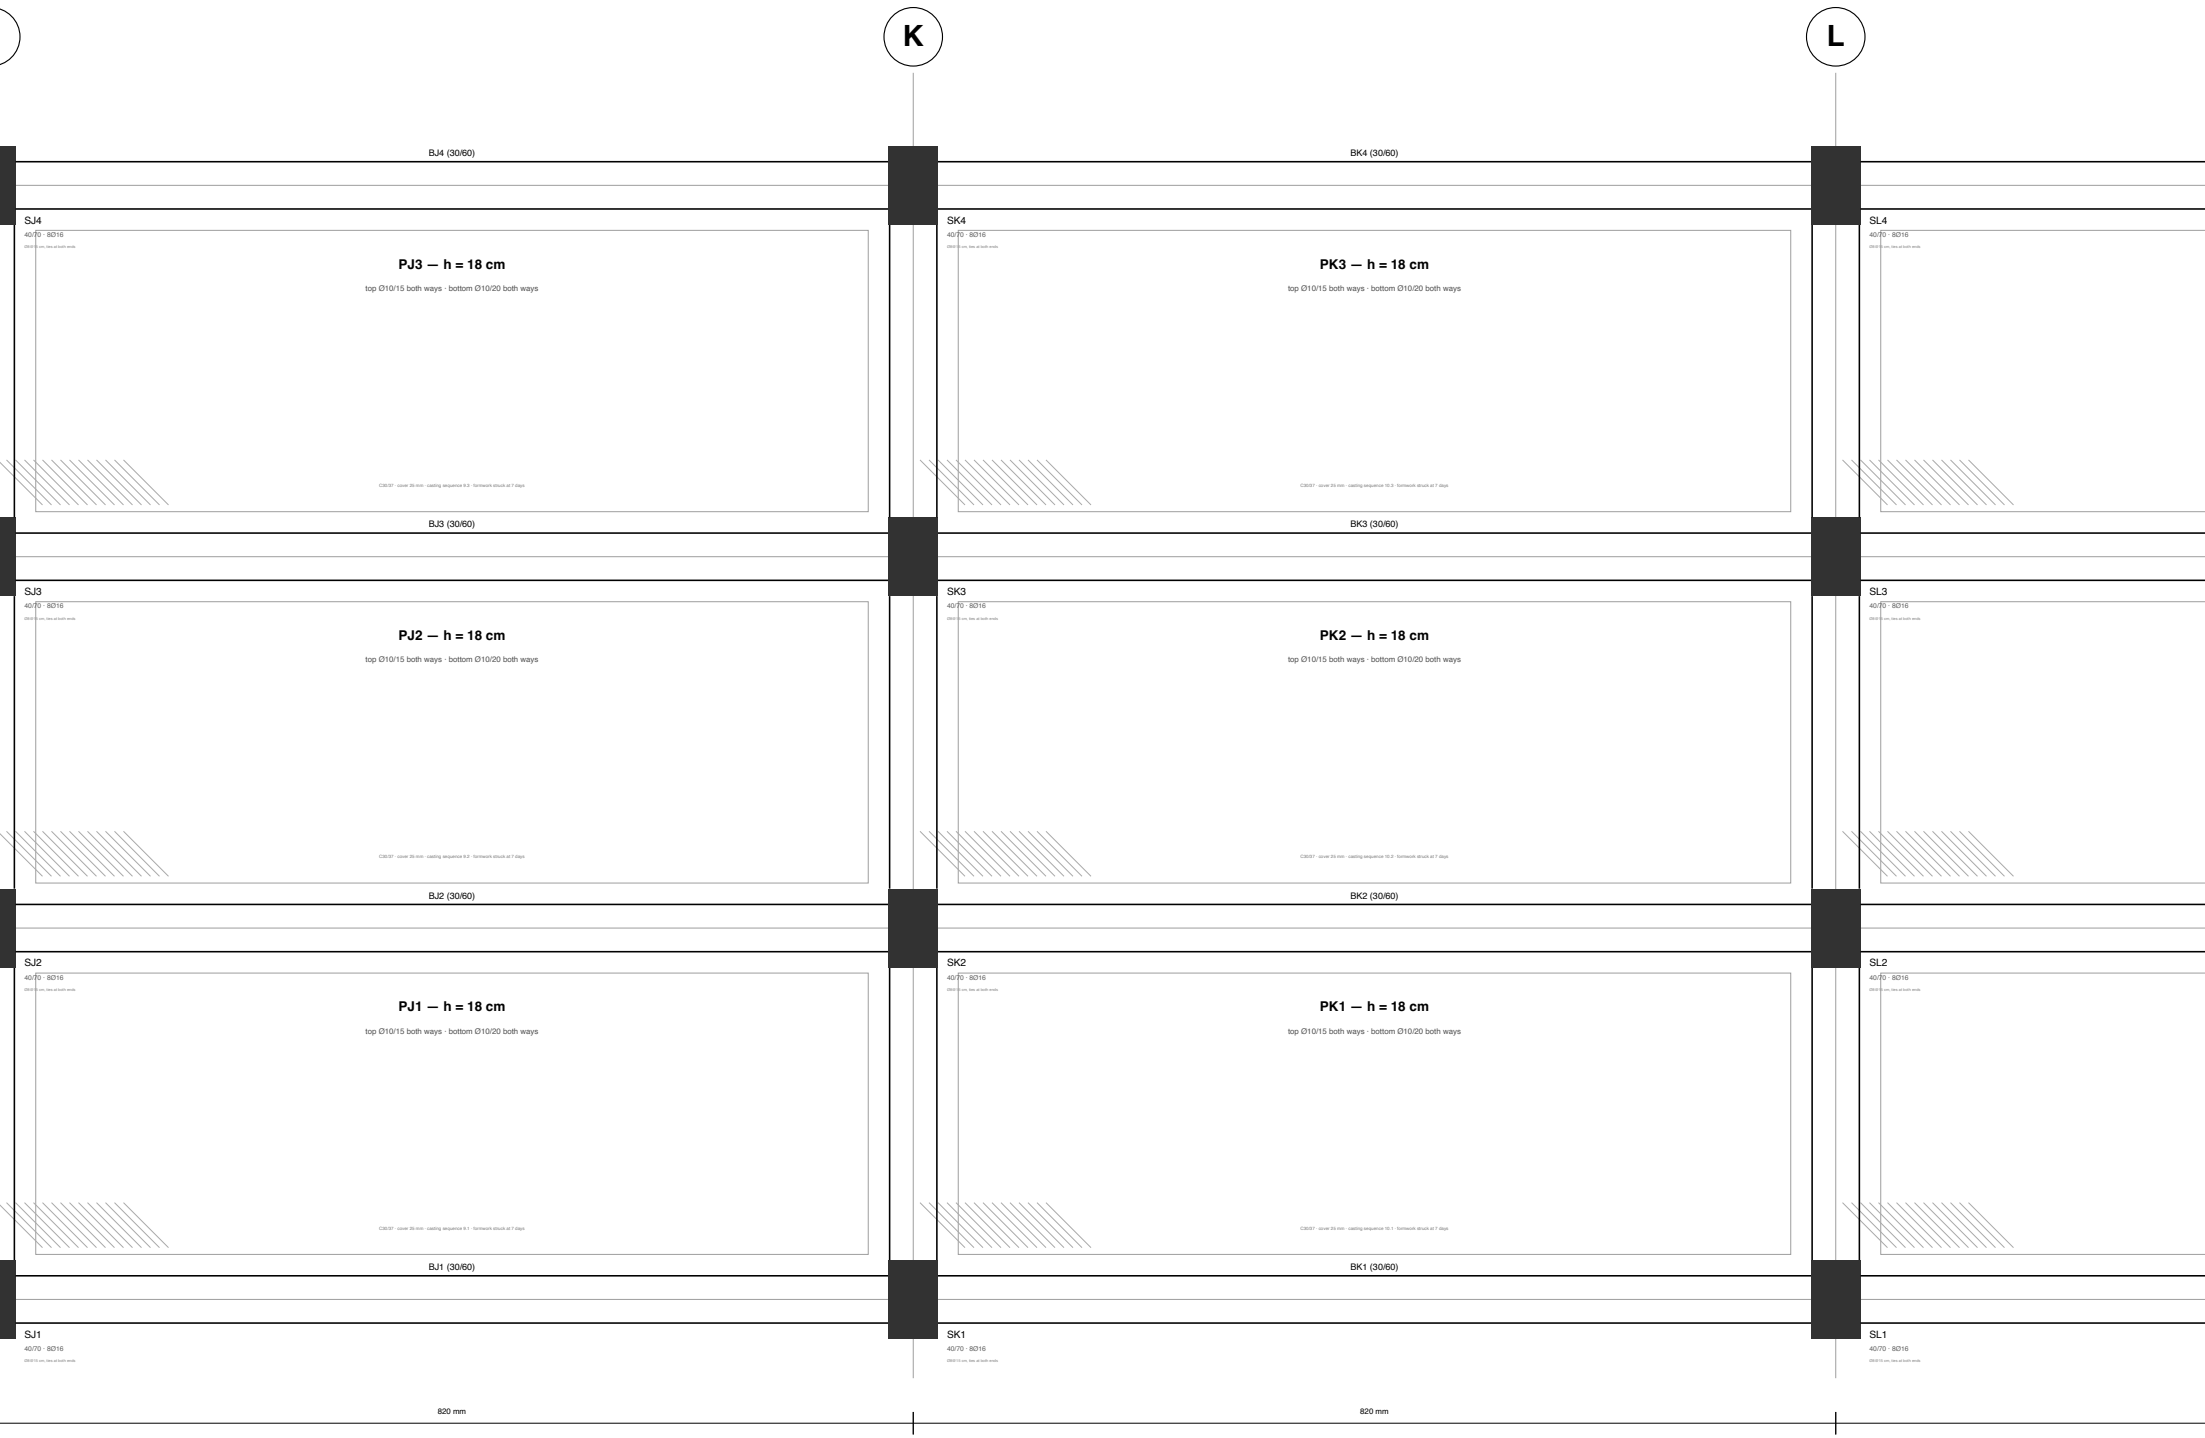
K
L
BJ4 (30/60)
BK4 (30/60)
SJ4
40/70 · 8Ø16
SK4
40/70 · 8Ø16
SL4
40/70 · 8Ø16
PJ3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 9.3 · formwork struck at 7 days
PK3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 10.3 · formwork struck at 7 days
BJ3 (30/60)
BK3 (30/60)
SJ3
40/70 · 8Ø16
SK3
40/70 · 8Ø16
SL3
40/70 · 8Ø16
PJ2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 9.2 · formwork struck at 7 days
PK2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 10.2 · formwork struck at 7 days
BJ2 (30/60)
BK2 (30/60)
SJ2
40/70 · 8Ø16
SK2
40/70 · 8Ø16
SL2
40/70 · 8Ø16
PJ1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 9.1 · formwork struck at 7 days
PK1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 10.1 · formwork struck at 7 days
BJ1 (30/60)
BK1 (30/60)
SJ1
40/70 · 8Ø16
SK1
40/70 · 8Ø16
SL1
40/70 · 8Ø16
820 mm
820 mm

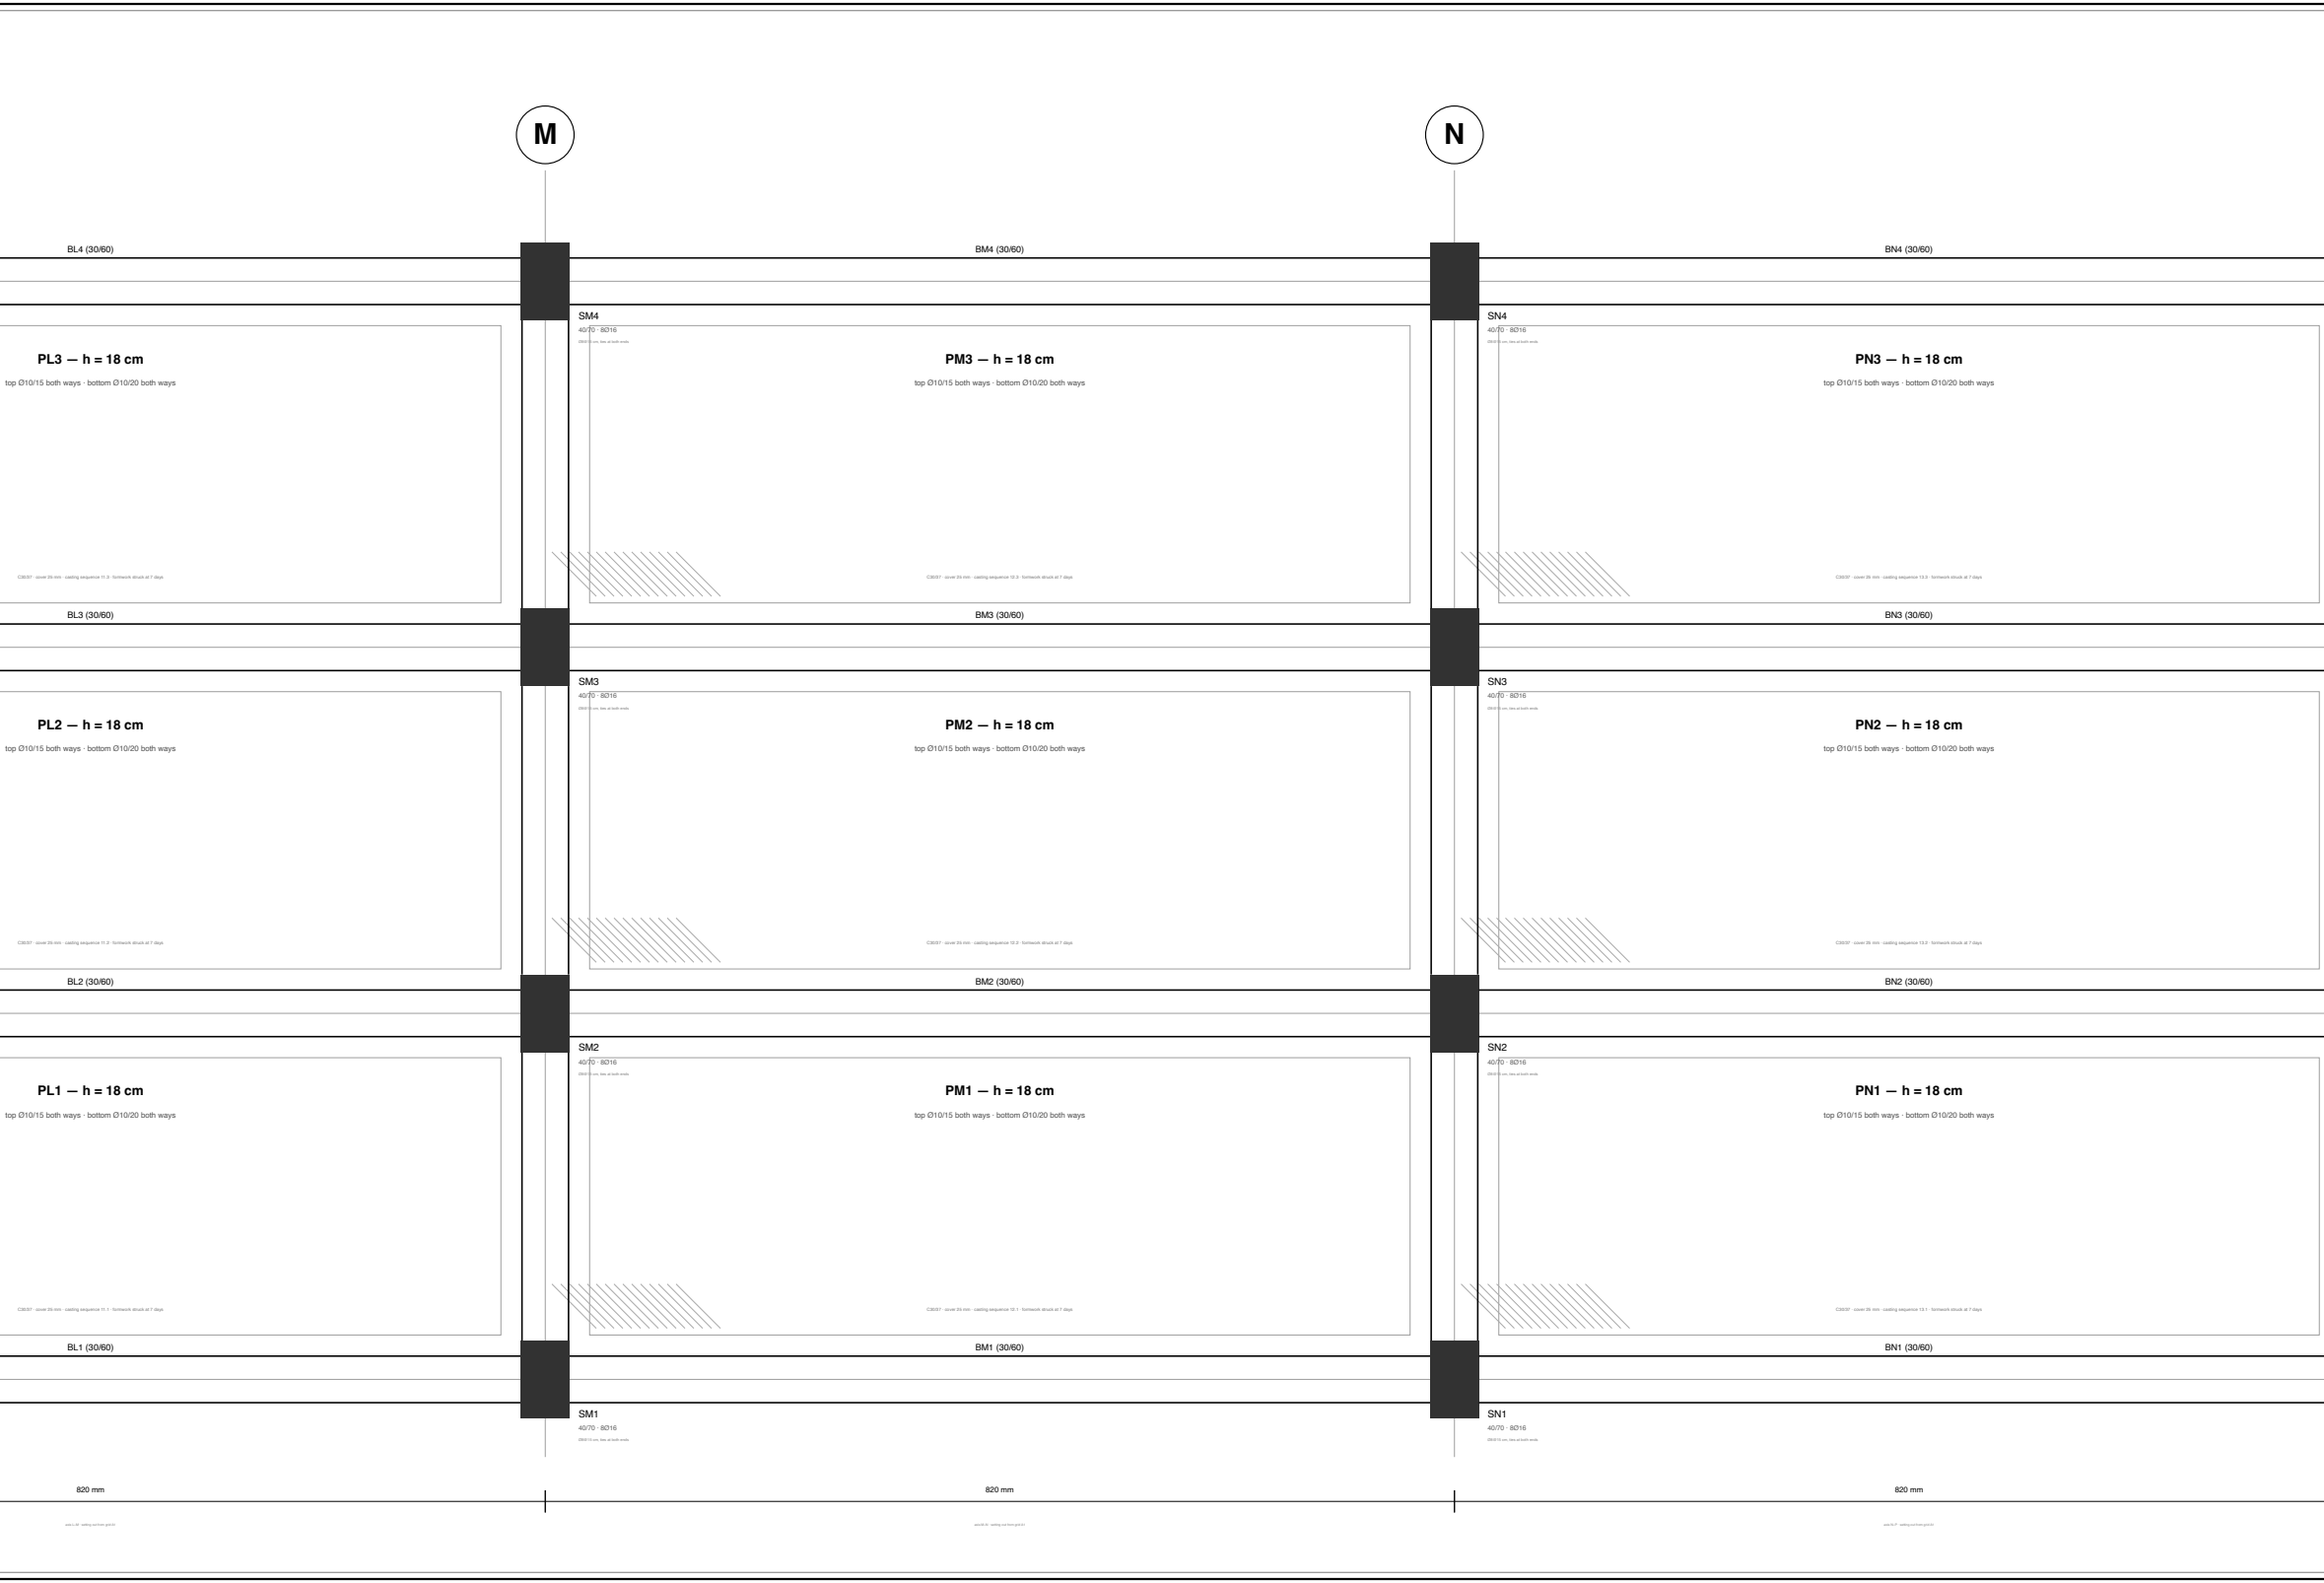
M
N
BL4 (30/60)
BM4 (30/60)
BN4 (30/60)
SM4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SN4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PL3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PM3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PN3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 11.3 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 12.3 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 13.3 · formwork struck at 7 days
BL3 (30/60)
BM3 (30/60)
BN3 (30/60)
SM3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SN3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PL2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PM2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PN2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 11.2 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 12.2 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 13.2 · formwork struck at 7 days
BL2 (30/60)
BM2 (30/60)
BN2 (30/60)
SM2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SN2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PL1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PM1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PN1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 11.1 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 12.1 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 13.1 · formwork struck at 7 days
BL1 (30/60)
BM1 (30/60)
BN1 (30/60)
SM1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SN1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
820 mm
820 mm
820 mm
axis L-M · setting out from grid A1
axis M-N · setting out from grid A1
axis N-P · setting out from grid A1

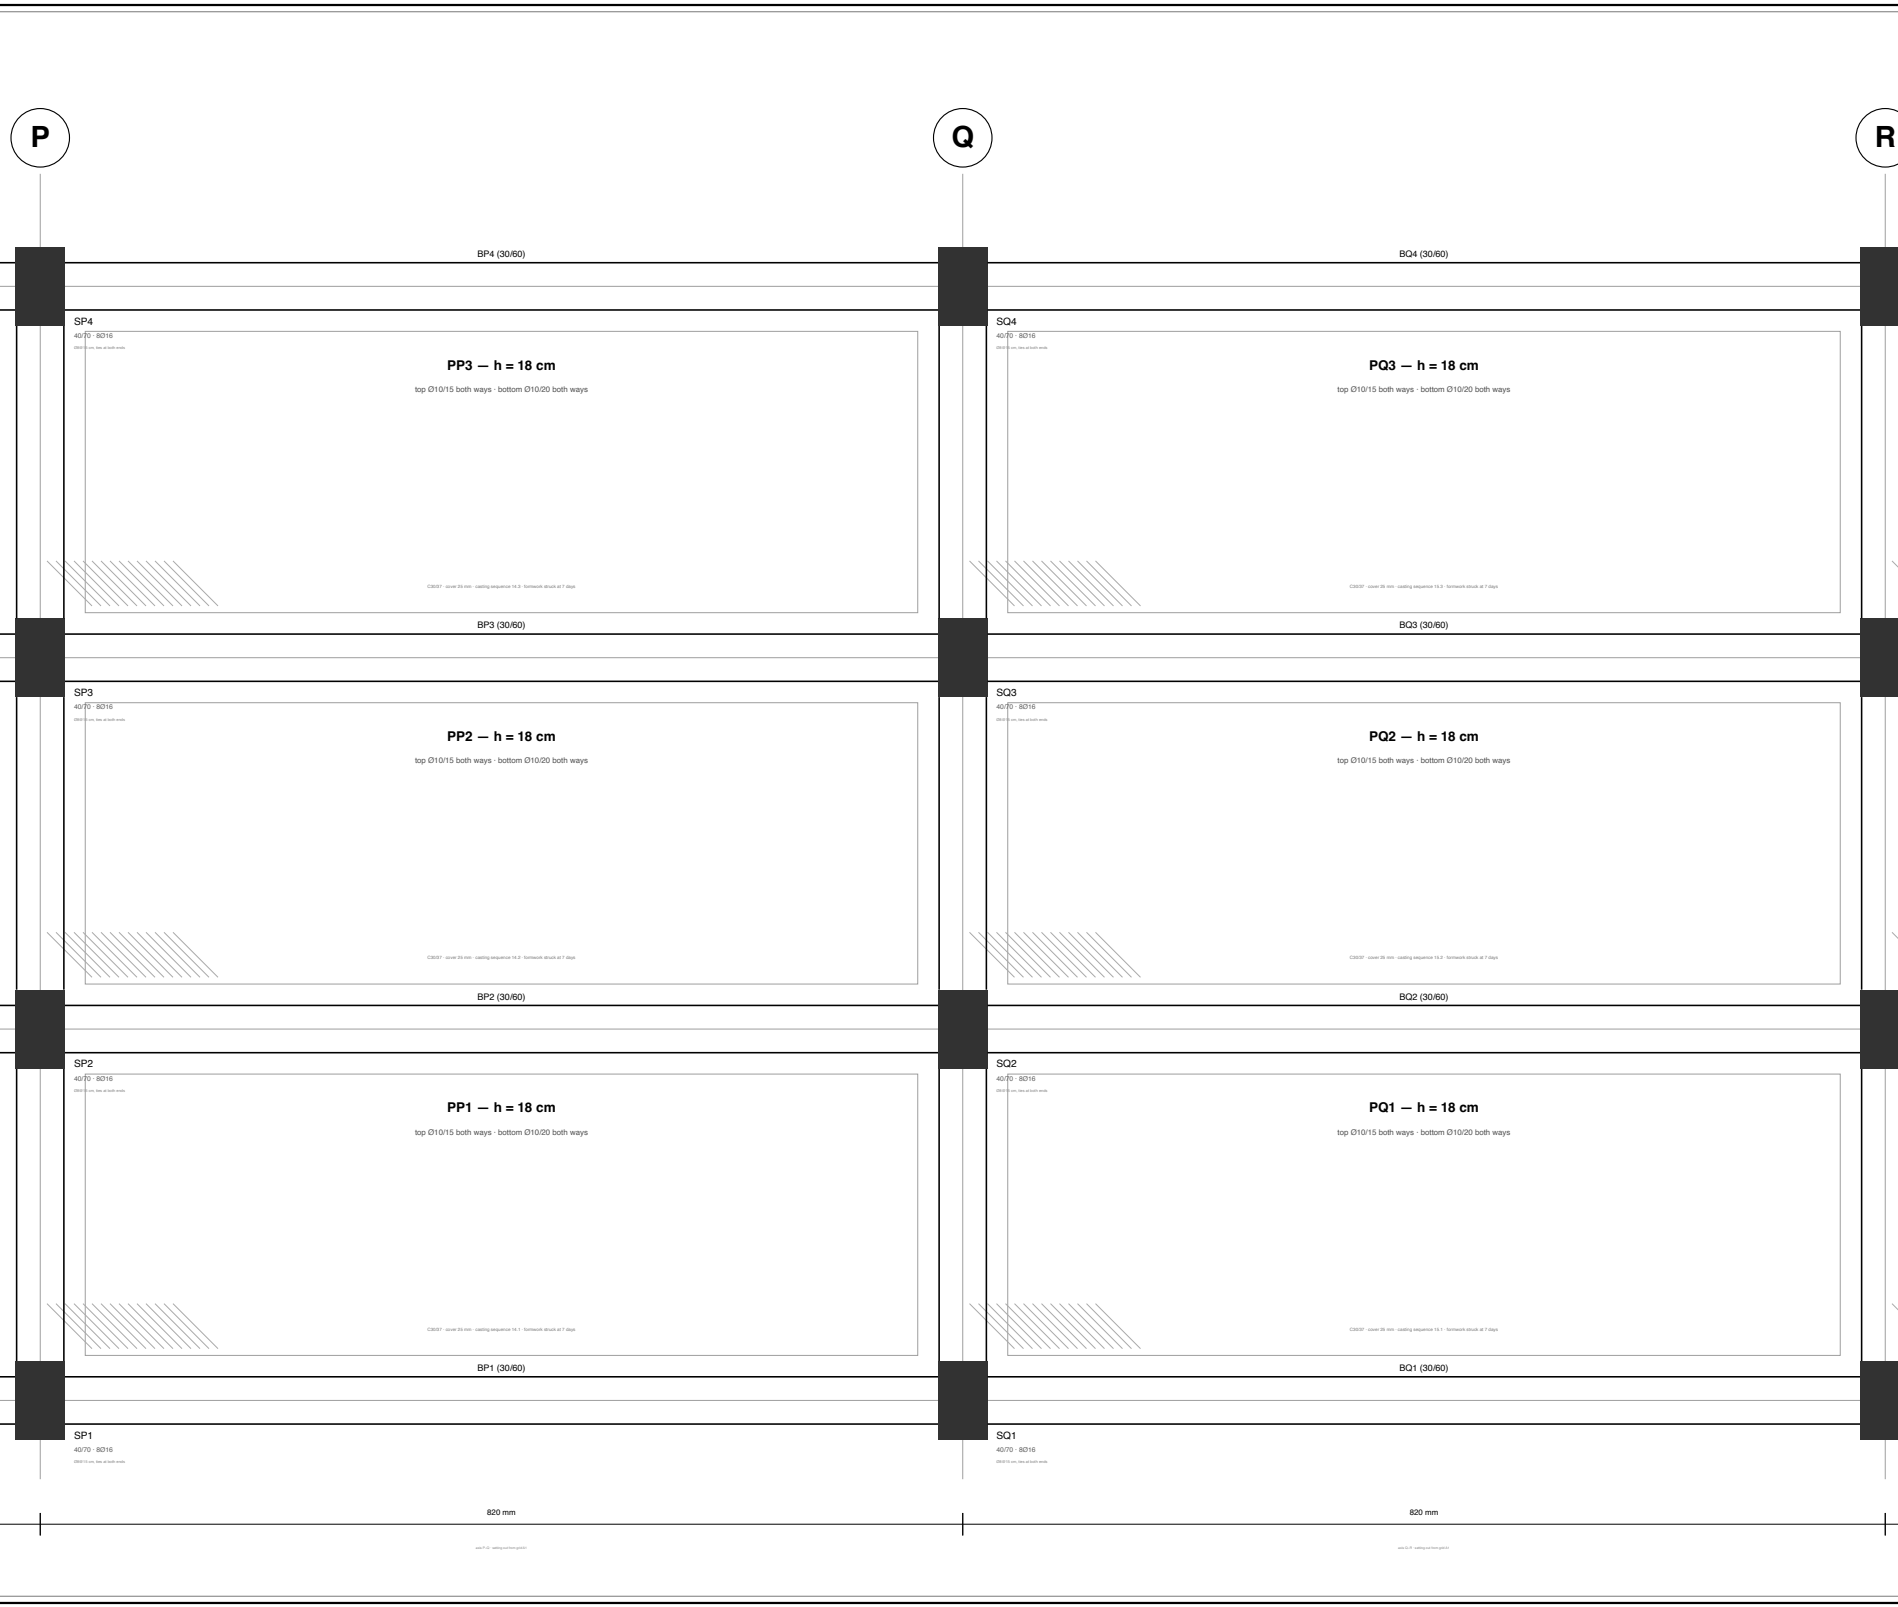
P
Q
R
BP4 (30/60)
BQ4 (30/60)
SP4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PP3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 14.3 · formwork struck at 7 days
SQ4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PQ3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 15.3 · formwork struck at 7 days
BP3 (30/60)
BQ3 (30/60)
SP3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PP2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 14.2 · formwork struck at 7 days
SQ3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PQ2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 15.2 · formwork struck at 7 days
BP2 (30/60)
BQ2 (30/60)
SP2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PP1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 14.1 · formwork struck at 7 days
SQ2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PQ1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 15.1 · formwork struck at 7 days
BP1 (30/60)
BQ1 (30/60)
SP1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SQ1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
820 mm
axis P–Q · setting out from grid A1
820 mm
axis Q–R · setting out from grid A1

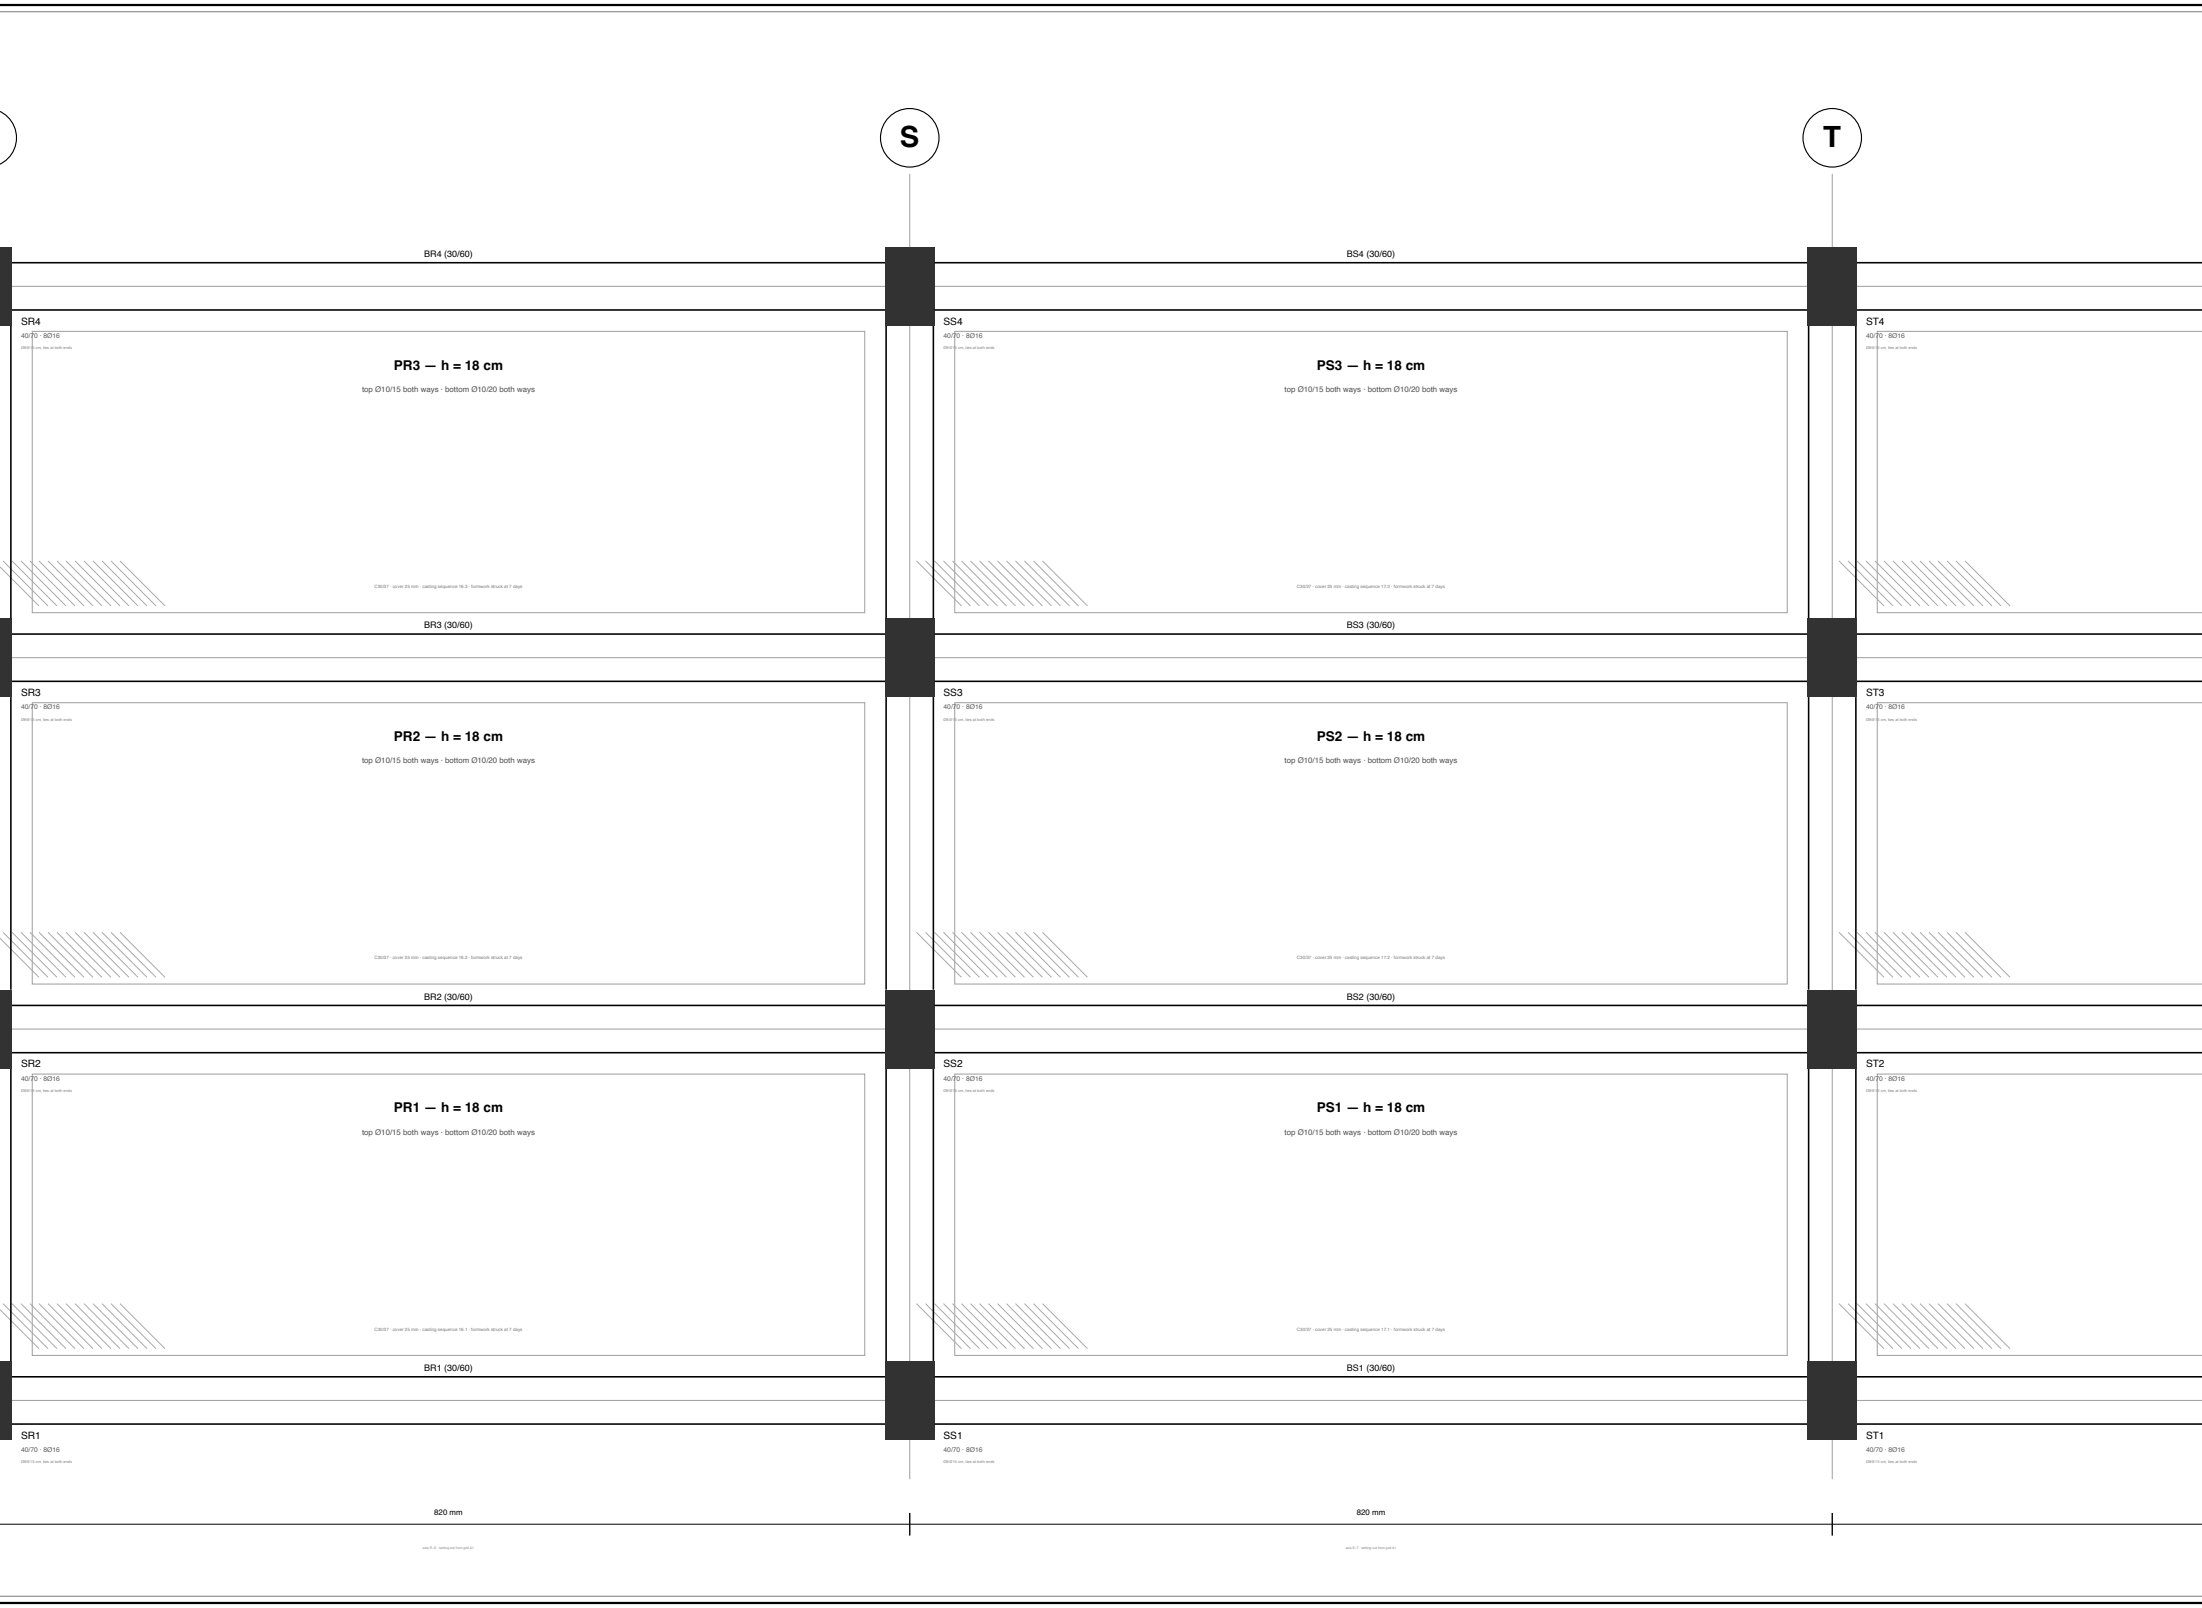
S
T
BR4 (30/60)
BS4 (30/60)
SR4
40/70 · 8Ø16
SS4
40/70 · 8Ø16
ST4
40/70 · 8Ø16
PR3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 16.3 · formwork struck at 7 days
PS3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 17.3 · formwork struck at 7 days
BR3 (30/60)
BS3 (30/60)
SR3
40/70 · 8Ø16
SS3
40/70 · 8Ø16
ST3
40/70 · 8Ø16
PR2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 16.2 · formwork struck at 7 days
PS2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 17.2 · formwork struck at 7 days
BR2 (30/60)
BS2 (30/60)
SR2
40/70 · 8Ø16
SS2
40/70 · 8Ø16
ST2
40/70 · 8Ø16
PR1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 16.1 · formwork struck at 7 days
PS1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 17.1 · formwork struck at 7 days
BR1 (30/60)
BS1 (30/60)
SR1
40/70 · 8Ø16
SS1
40/70 · 8Ø16
ST1
40/70 · 8Ø16
820 mm
820 mm

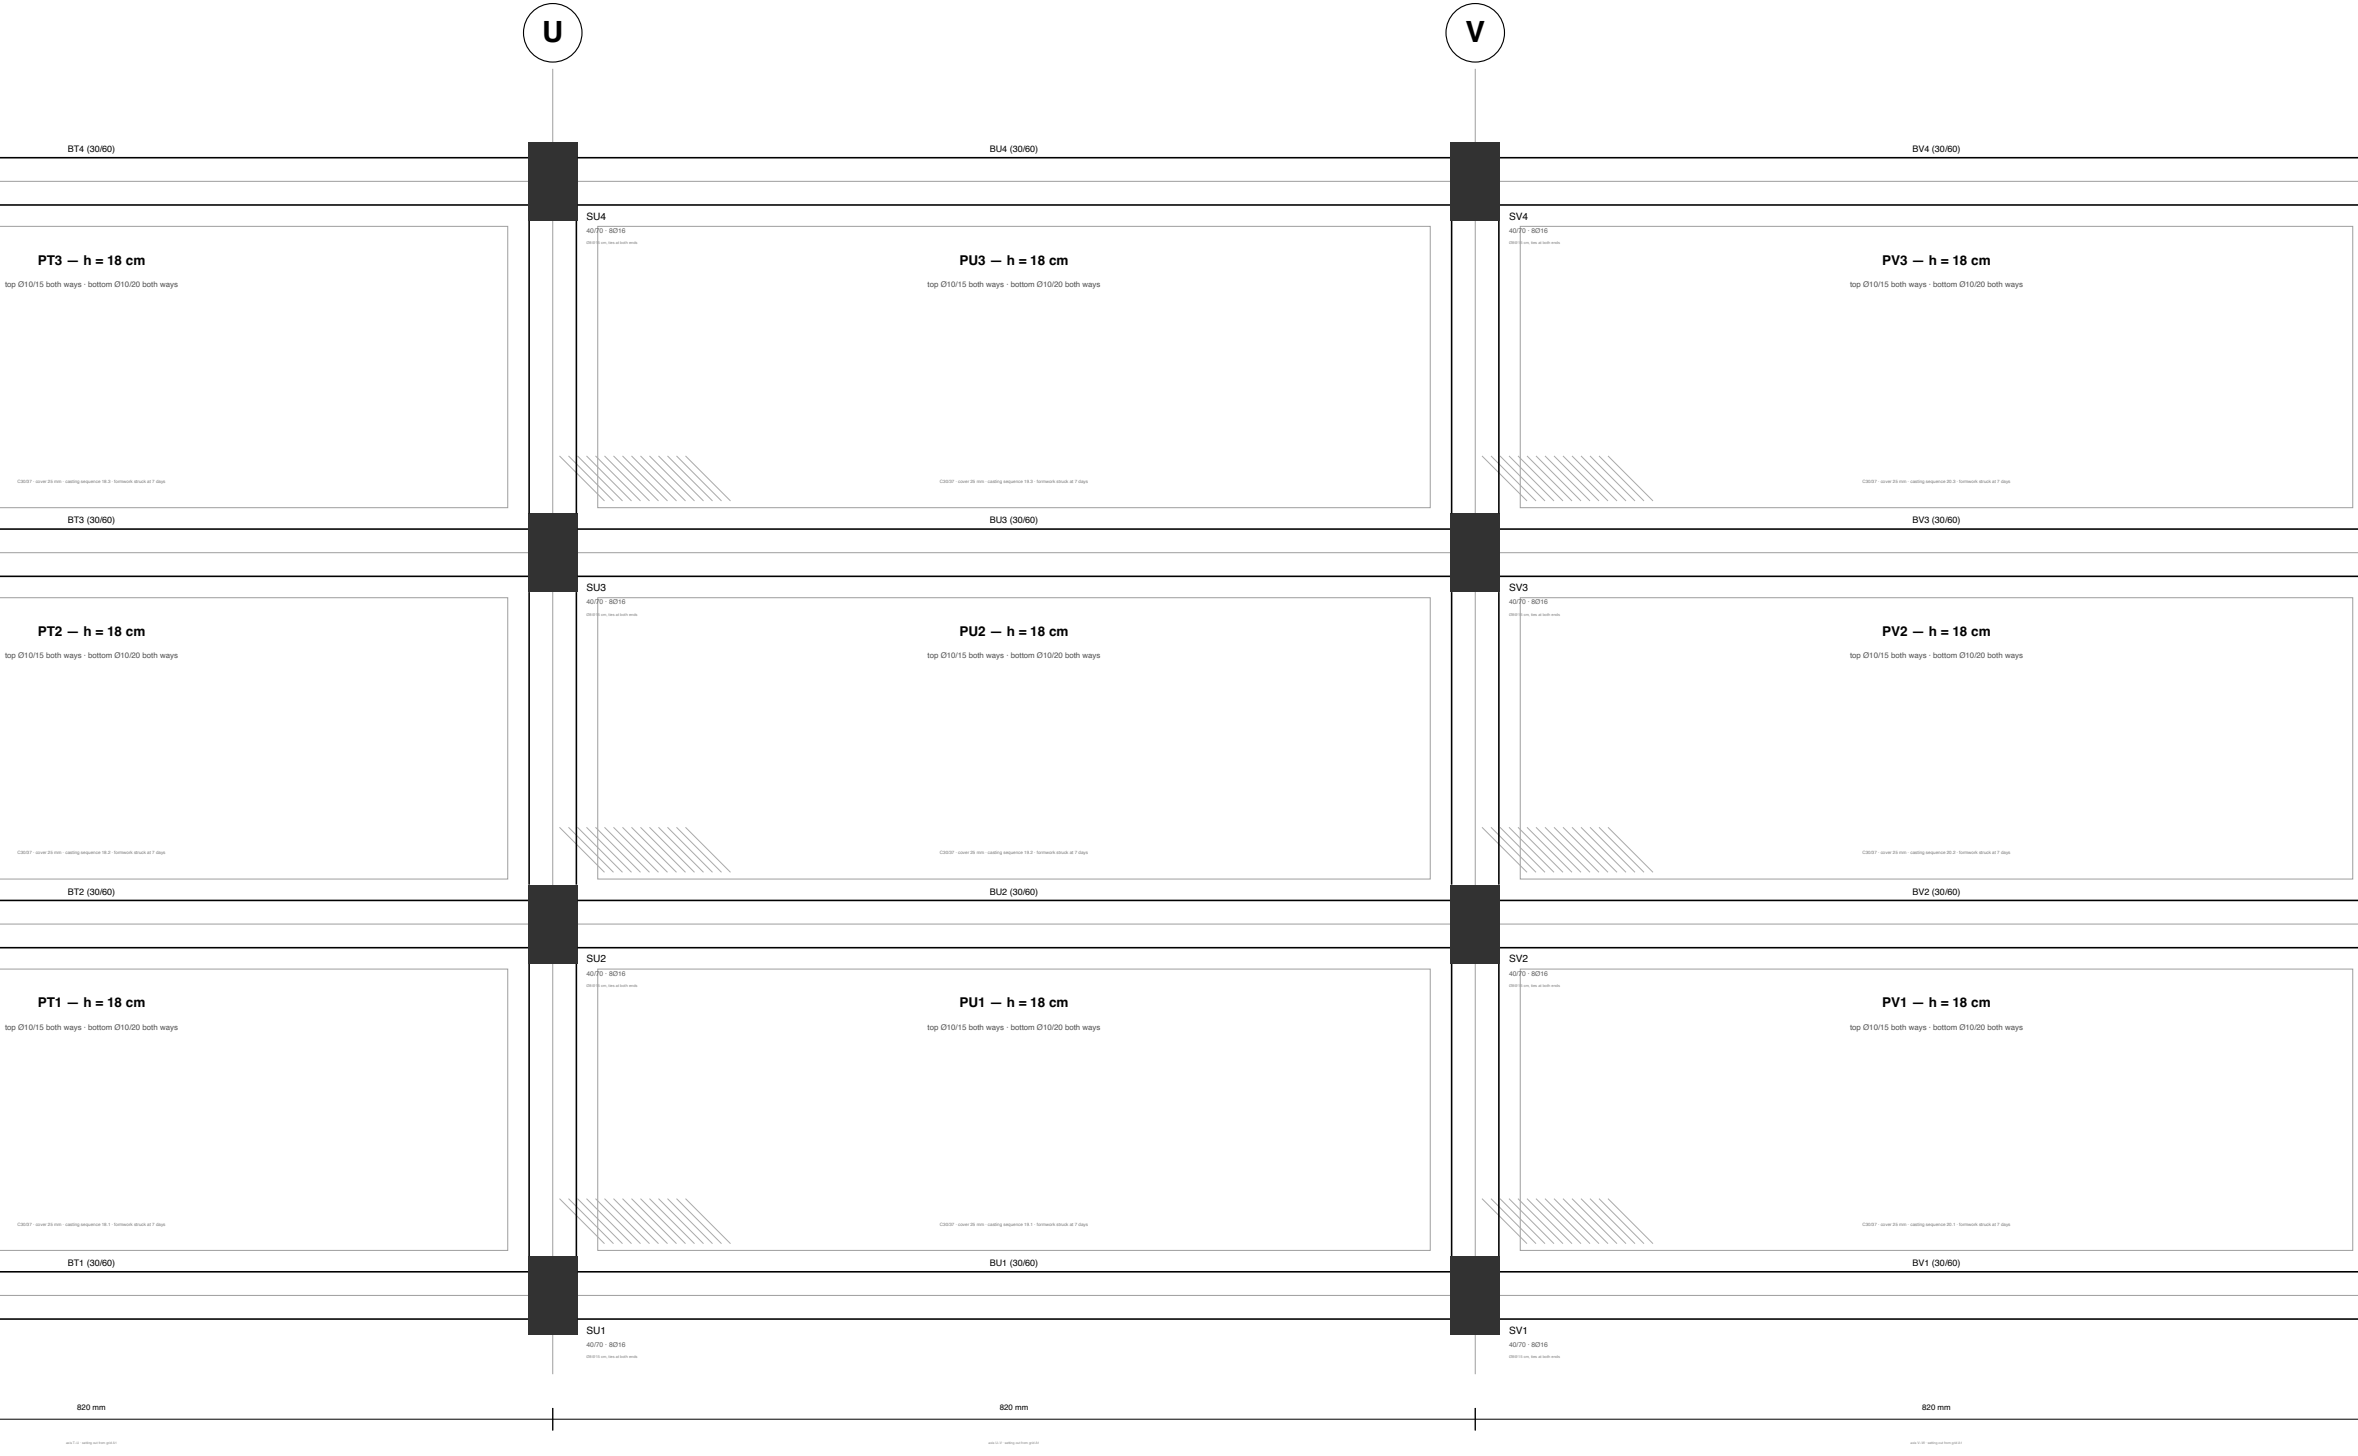
U
V
BT4 (30/60)
BU4 (30/60)
BV4 (30/60)
SU4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SV4
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PT3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PU3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PV3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 18.3 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 19.3 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 20.3 · formwork struck at 7 days
BT3 (30/60)
BU3 (30/60)
BV3 (30/60)
SU3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SV3
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PT2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PU2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PV2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 18.2 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 19.2 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 20.2 · formwork struck at 7 days
BT2 (30/60)
BU2 (30/60)
BV2 (30/60)
SU2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SV2
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
PT1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PU1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PV1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 18.1 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 19.1 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 20.1 · formwork struck at 7 days
BT1 (30/60)
BU1 (30/60)
BV1 (30/60)
SU1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
SV1
40/70 · 8Ø16
Ø8/15 cm, ties at both ends
820 mm
820 mm
820 mm
axis T–U · setting out from grid A1
axis U–V · setting out from grid A1
axis V–W · setting out from grid A1

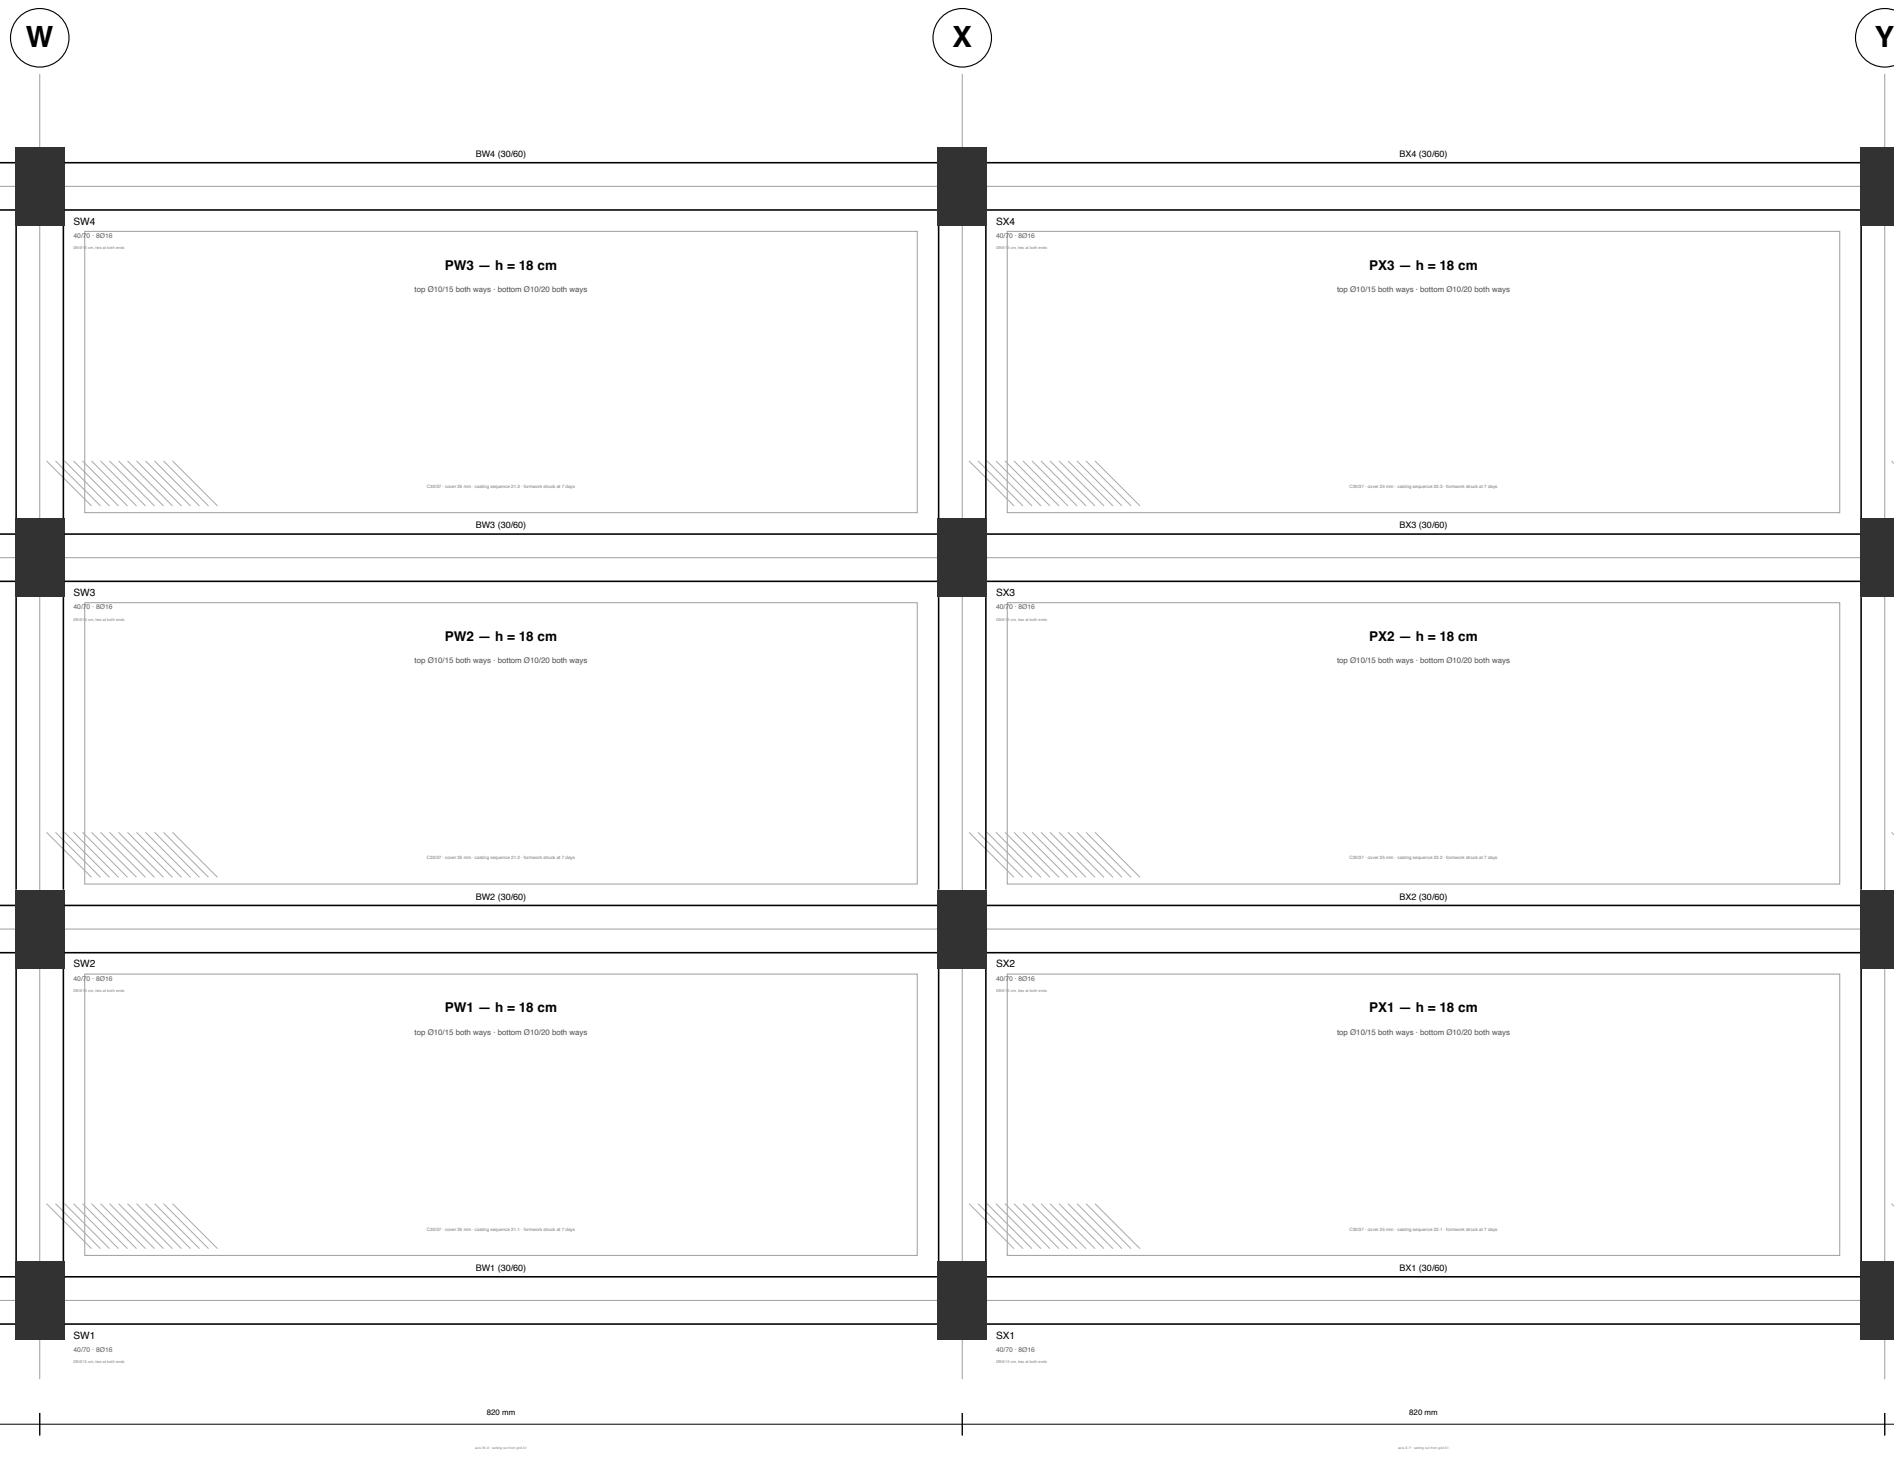
W
X
Y
BW4 (30/60)
BX4 (30/60)
SW4
40/70 · 8Ø16
SX4
40/70 · 8Ø16
PW3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PX3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 21.3 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 22.3 · formwork struck at 7 days
BW3 (30/60)
BX3 (30/60)
SW3
40/70 · 8Ø16
SX3
40/70 · 8Ø16
PW2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PX2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 21.2 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 22.2 · formwork struck at 7 days
BW2 (30/60)
BX2 (30/60)
SW2
40/70 · 8Ø16
SX2
40/70 · 8Ø16
PW1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PX1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 21.1 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 22.1 · formwork struck at 7 days
BW1 (30/60)
BX1 (30/60)
SW1
40/70 · 8Ø16
SX1
40/70 · 8Ø16
820 mm
820 mm

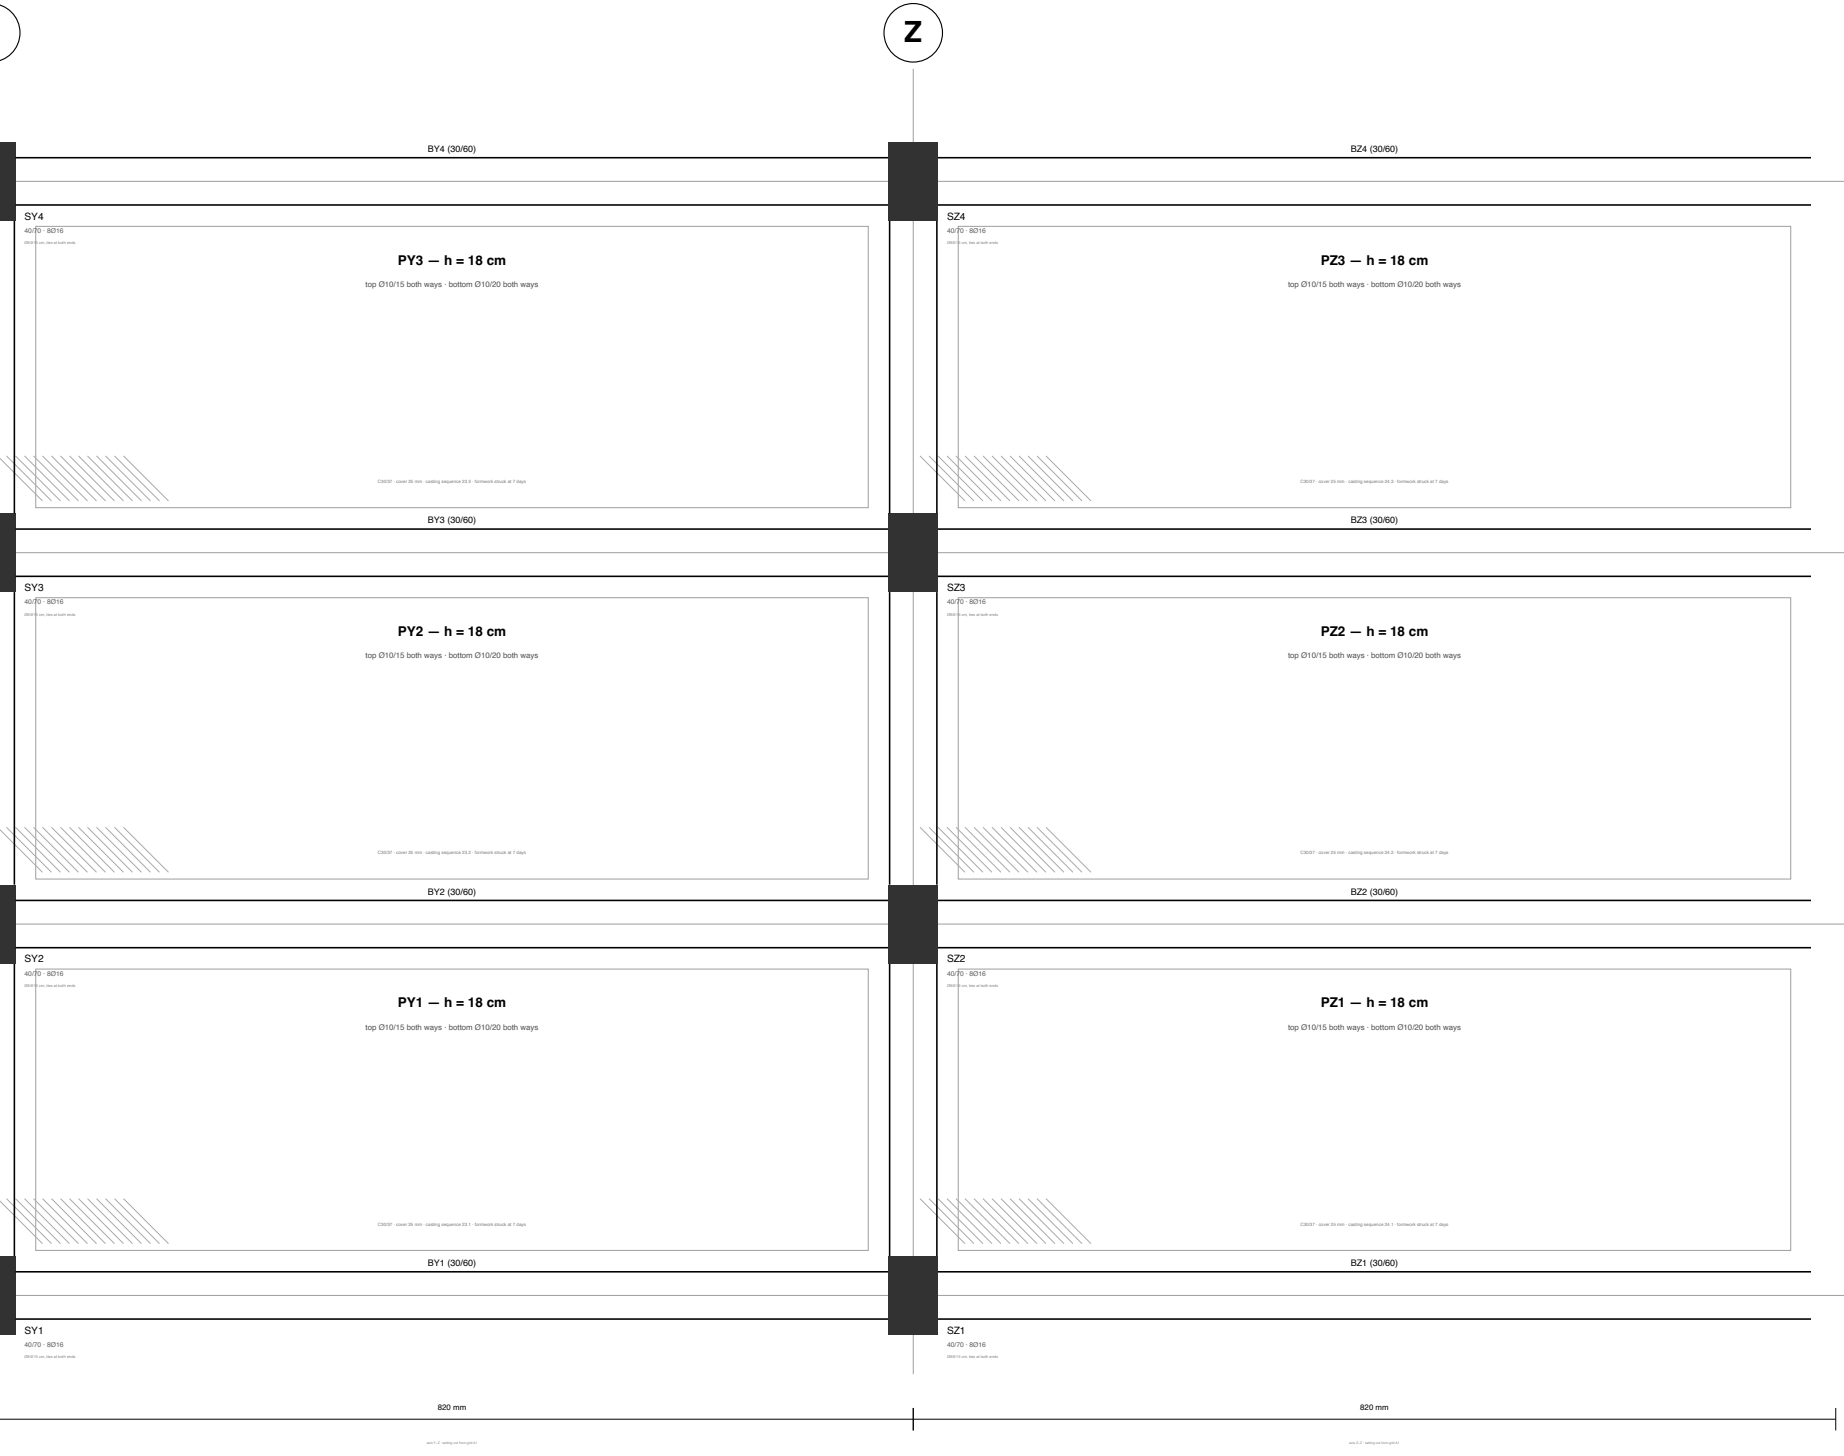
Z
BY4 (30/60)
BZ4 (30/60)
SY4
40/70 · 8Ø16
SZ4
40/70 · 8Ø16
PY3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PZ3 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 23.3 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 24.3 · formwork struck at 7 days
BY3 (30/60)
BZ3 (30/60)
SY3
40/70 · 8Ø16
SZ3
40/70 · 8Ø16
PY2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PZ2 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 23.2 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 24.2 · formwork struck at 7 days
BY2 (30/60)
BZ2 (30/60)
SY2
40/70 · 8Ø16
SZ2
40/70 · 8Ø16
PY1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
PZ1 — h = 18 cm
top Ø10/15 both ways · bottom Ø10/20 both ways
C30/37 · cover 25 mm · casting sequence 23.1 · formwork struck at 7 days
C30/37 · cover 25 mm · casting sequence 24.1 · formwork struck at 7 days
BY1 (30/60)
BZ1 (30/60)
SY1
40/70 · 8Ø16
SZ1
40/70 · 8Ø16
820 mm
820 mm

END OF SHEET

If you can read this, you have panned nine metres of paper.