

SAP-2

SAP-1 is a computer because it stores a program and data before calculations begin; then it automatically carries out the program instructions without human intervention. And yet, SAP-1 is a primitive computing machine. It compares to a modern computer the way a Neanderthal human would compare to a modern person. Something is missing, something found in every modern computer.

SAP-2 is the next step in the evolution toward modern computers because it includes *jump* instructions. These new instructions force the computer to repeat or skip part of a program. As you will discover, jump instructions open up a whole new world of computing power.

11-1 BIDIRECTIONAL REGISTERS

To reduce the wiring capacitance of SAP-2, we will run only one set of wires between each register and the bus. Figure 11-1a shows the idea. The input and output pins are shorted; only one group of wires is connected to the bus.

Does this shorting the input and output pins ever cause trouble? No. During a computer run, either *LOAD* or *ENABLE* may be active, but not both at the same time. An active *LOAD* means that a binary word flows from the bus to the register input; during a load operation, the output lines are floating. On the other hand, an active *ENABLE* means that a binary word flows from the register to the bus; in this case, the input lines float.

The iC manufacturer can internally connect the input and output pins of a three-state register. This not only reduces the wiring capacitance; it also reduces the number of I/O pins. For instance, Fig. 11-1b has four I/O pins instead of eight.

Figure 11-1c is the symbol for a three-state register with internally connected input and output pins. The double-headed arrow reminds us that the path is *bidirectional*; data can move either way.

11-2 ARCHITECTURE

Figure 11-2 shows the architecture of SAP-2. All register outputs to the W bus are three-state; those not connected to the bus are two-state. As before, the controller-sequencer sends control signals (not shown) to each register. These control signals load, enable, or otherwise prepare the register for the next positive clock edge. A brief description of each box is given now.

Input Ports

SAP-2 has two input ports, numbered 1 and 2. A hexadecimal keyboard encoder is connected to port 1. It allows us to enter hexadecimal instructions and data through port 1. Notice that the hexadecimal keyboard encoder sends a *READY* signal to bit 0 of port 2. This signal indicates when the data in port 1 is valid.

Also notice the *SERIAL IN* signal going to pin 7 of port 2. A later example will show you how to convert serial input data to parallel data.

Program Counter

This time, the program counter has 16 bits; therefore, it can count from

$$PC = 0000\ 0000\ 0000\ 0000$$

to

$$PC = 1111\ 1111\ 1111\ 1111$$

This is equivalent to 0000H to FFFFH, or decimal 0 to 65,535.

A low *CLR* signal resets the PC before each computer run; so the data processing starts with the instruction stored in memory location 0000H.

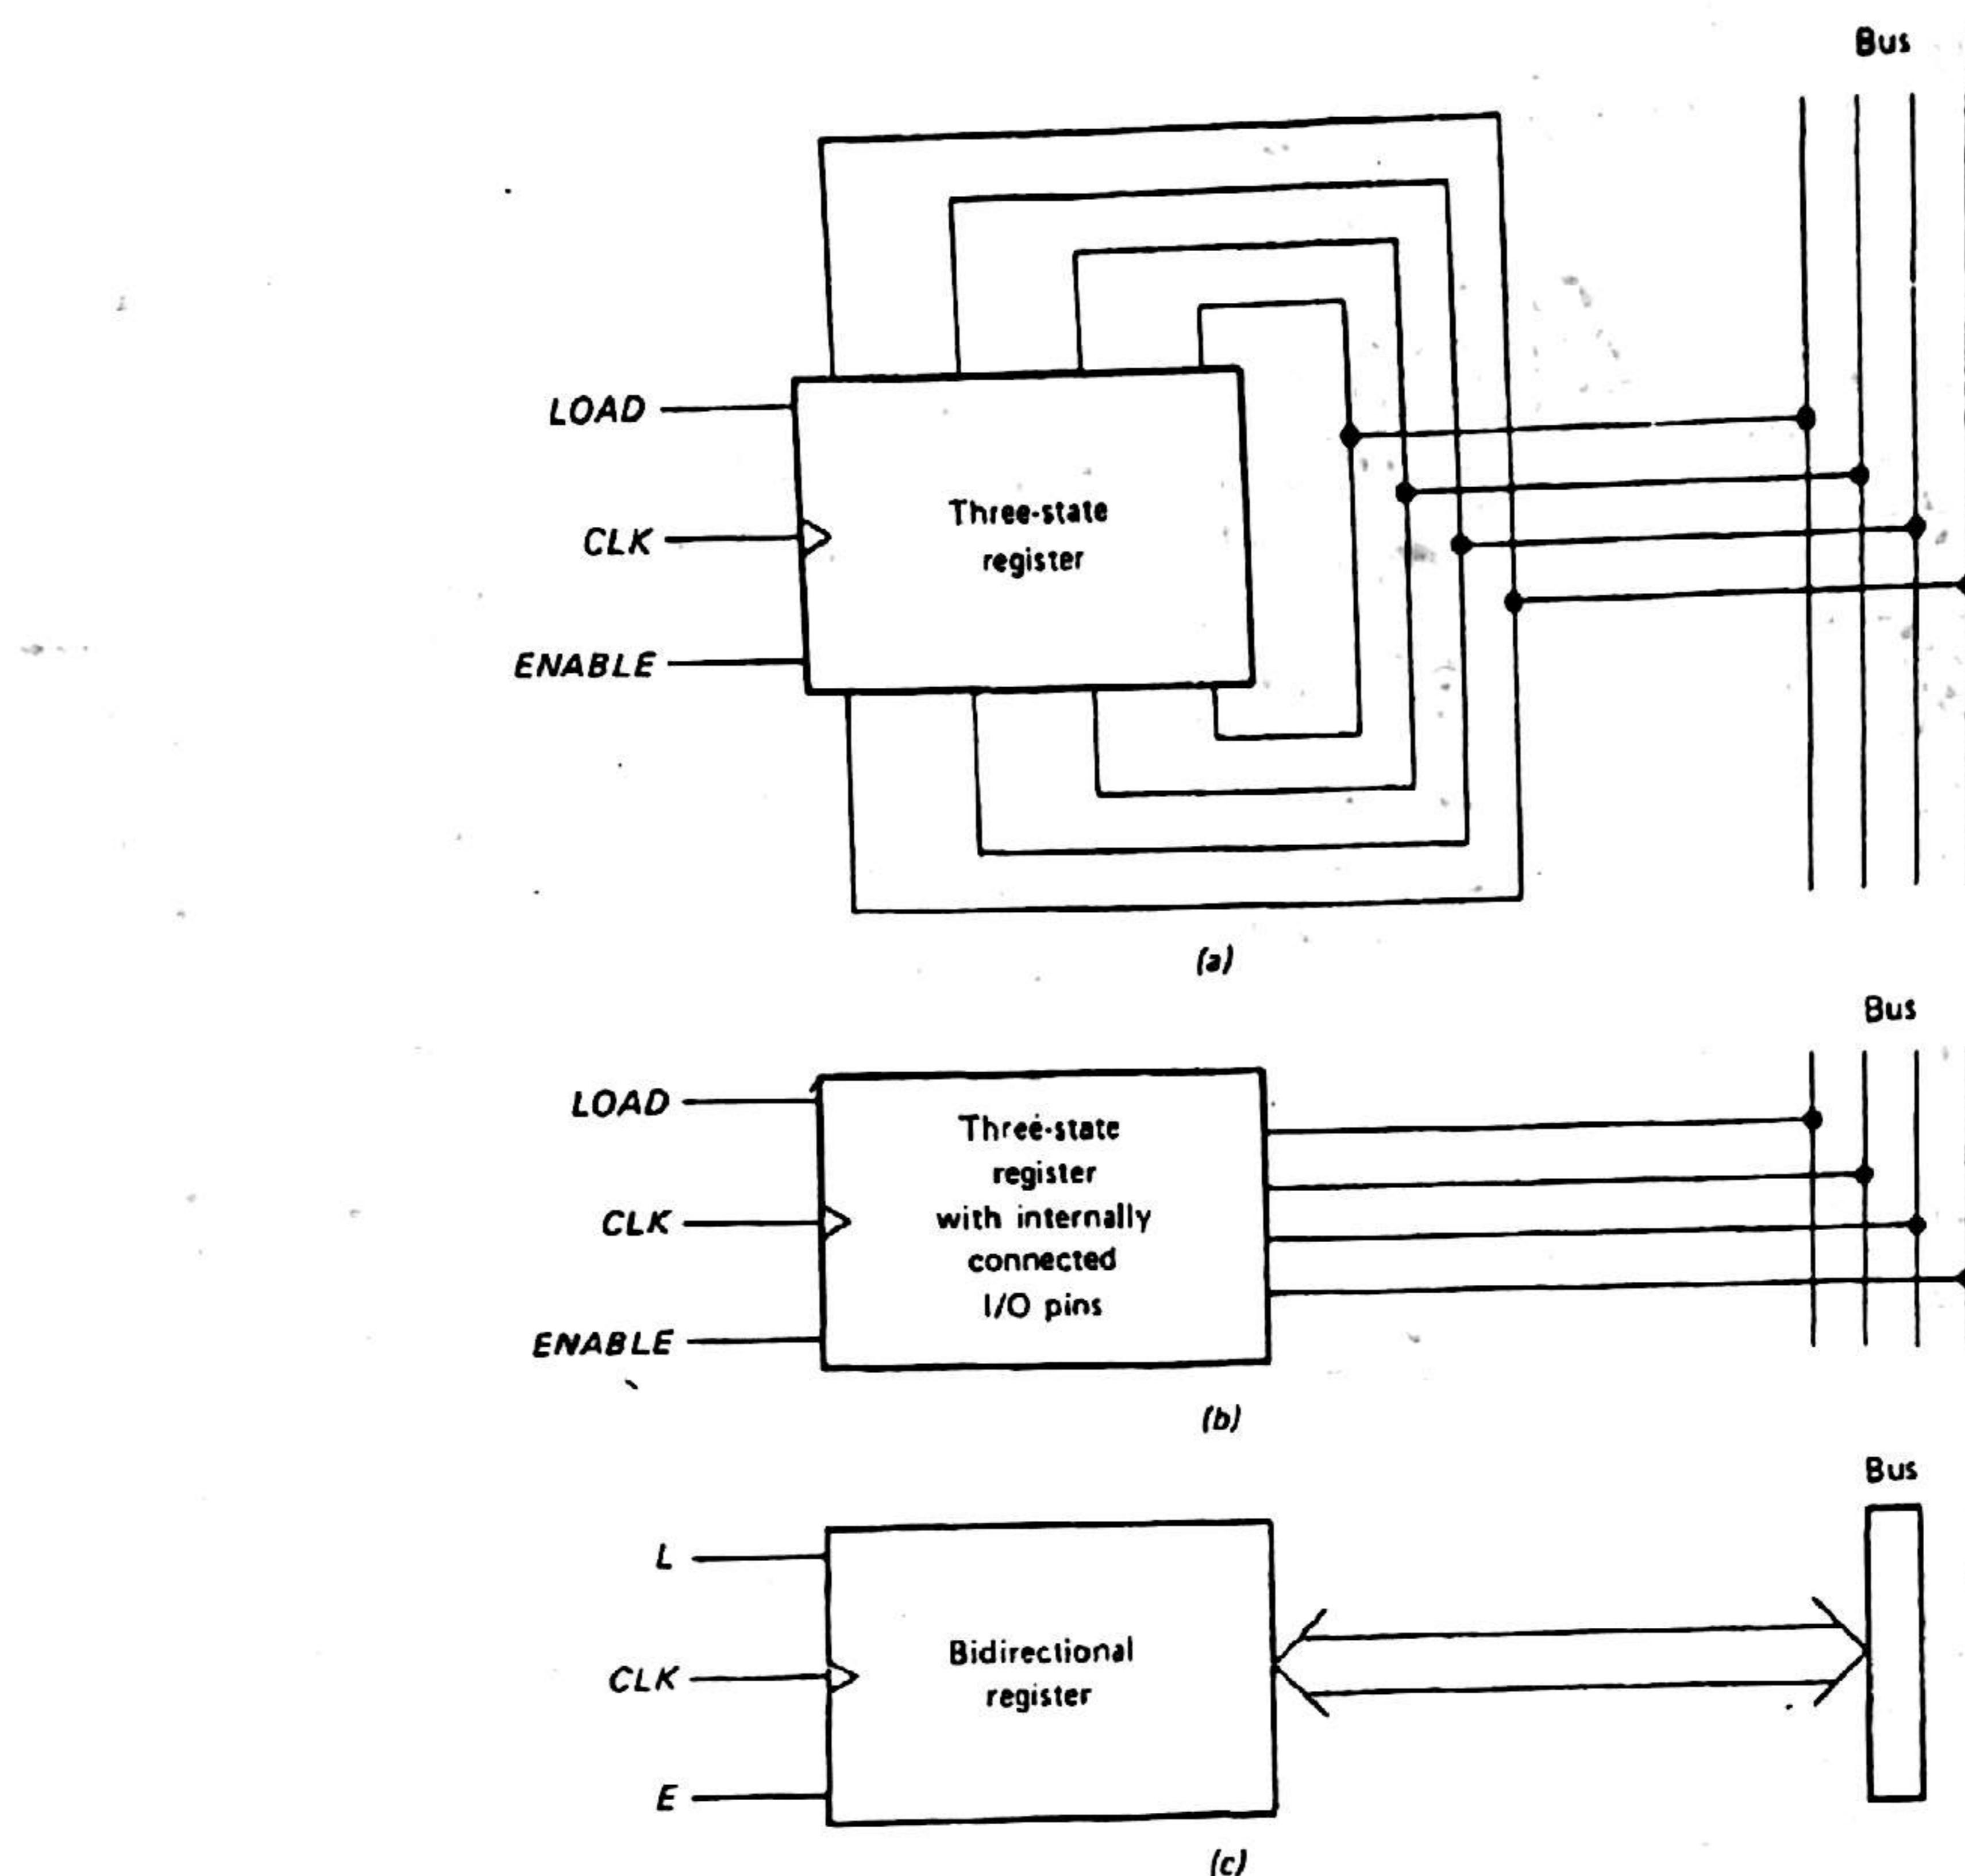


Fig. 11-1 Bidirectional register.

MAR and Memory

During the fetch cycle, the MAR receives 16-bit addresses from the program counter. The two-state MAR output then addresses the desired memory location. The memory has a 2K ROM with addresses of 0000H to 07FFH. This ROM contains a program called a *monitor* that initializes the computer on power-up, interprets the keyboard inputs, and so forth. The rest of the memory is a 62K RAM with addresses from 0800H to FFFFH.

Memory Data Register

The memory data register (MDR) is an 8-bit buffer register. Its output sets up the RAM. The memory data register receives data from the bus before a write operation, and it sends data to the bus after a read operation.

Instruction Register

Because SAP-2 has more instructions than SAP-1, we will use 8 bits for the op code rather than 4. An 8-bit op code can accommodate 256 instructions. SAP-2 has only 42

instructions, so there will be no problem coding them with 8 bits. Using an 8-bit op code also allows upward compatibility with the 8080/8085 instruction set because it is based on an 8-bit op code. As mentioned earlier, all SAP instructions are identical with 8080/8085 instructions.

Controller-Sequencer

The controller-sequencer produces the control words or microinstructions that coordinate and direct the rest of the computer. Because SAP-2 has a bigger instruction set, the controller-sequencer has more hardware. Although the CON word is bigger, the idea is the same: the control word or microinstruction determines how the registers react to the next positive clock edge.

Accumulator

The two-state output of the accumulator goes to the ALU; the three-state output to the W bus. Therefore, the 8-bit word in the accumulator continuously drives the ALU, but this same word appears on the bus only when E_A is active.

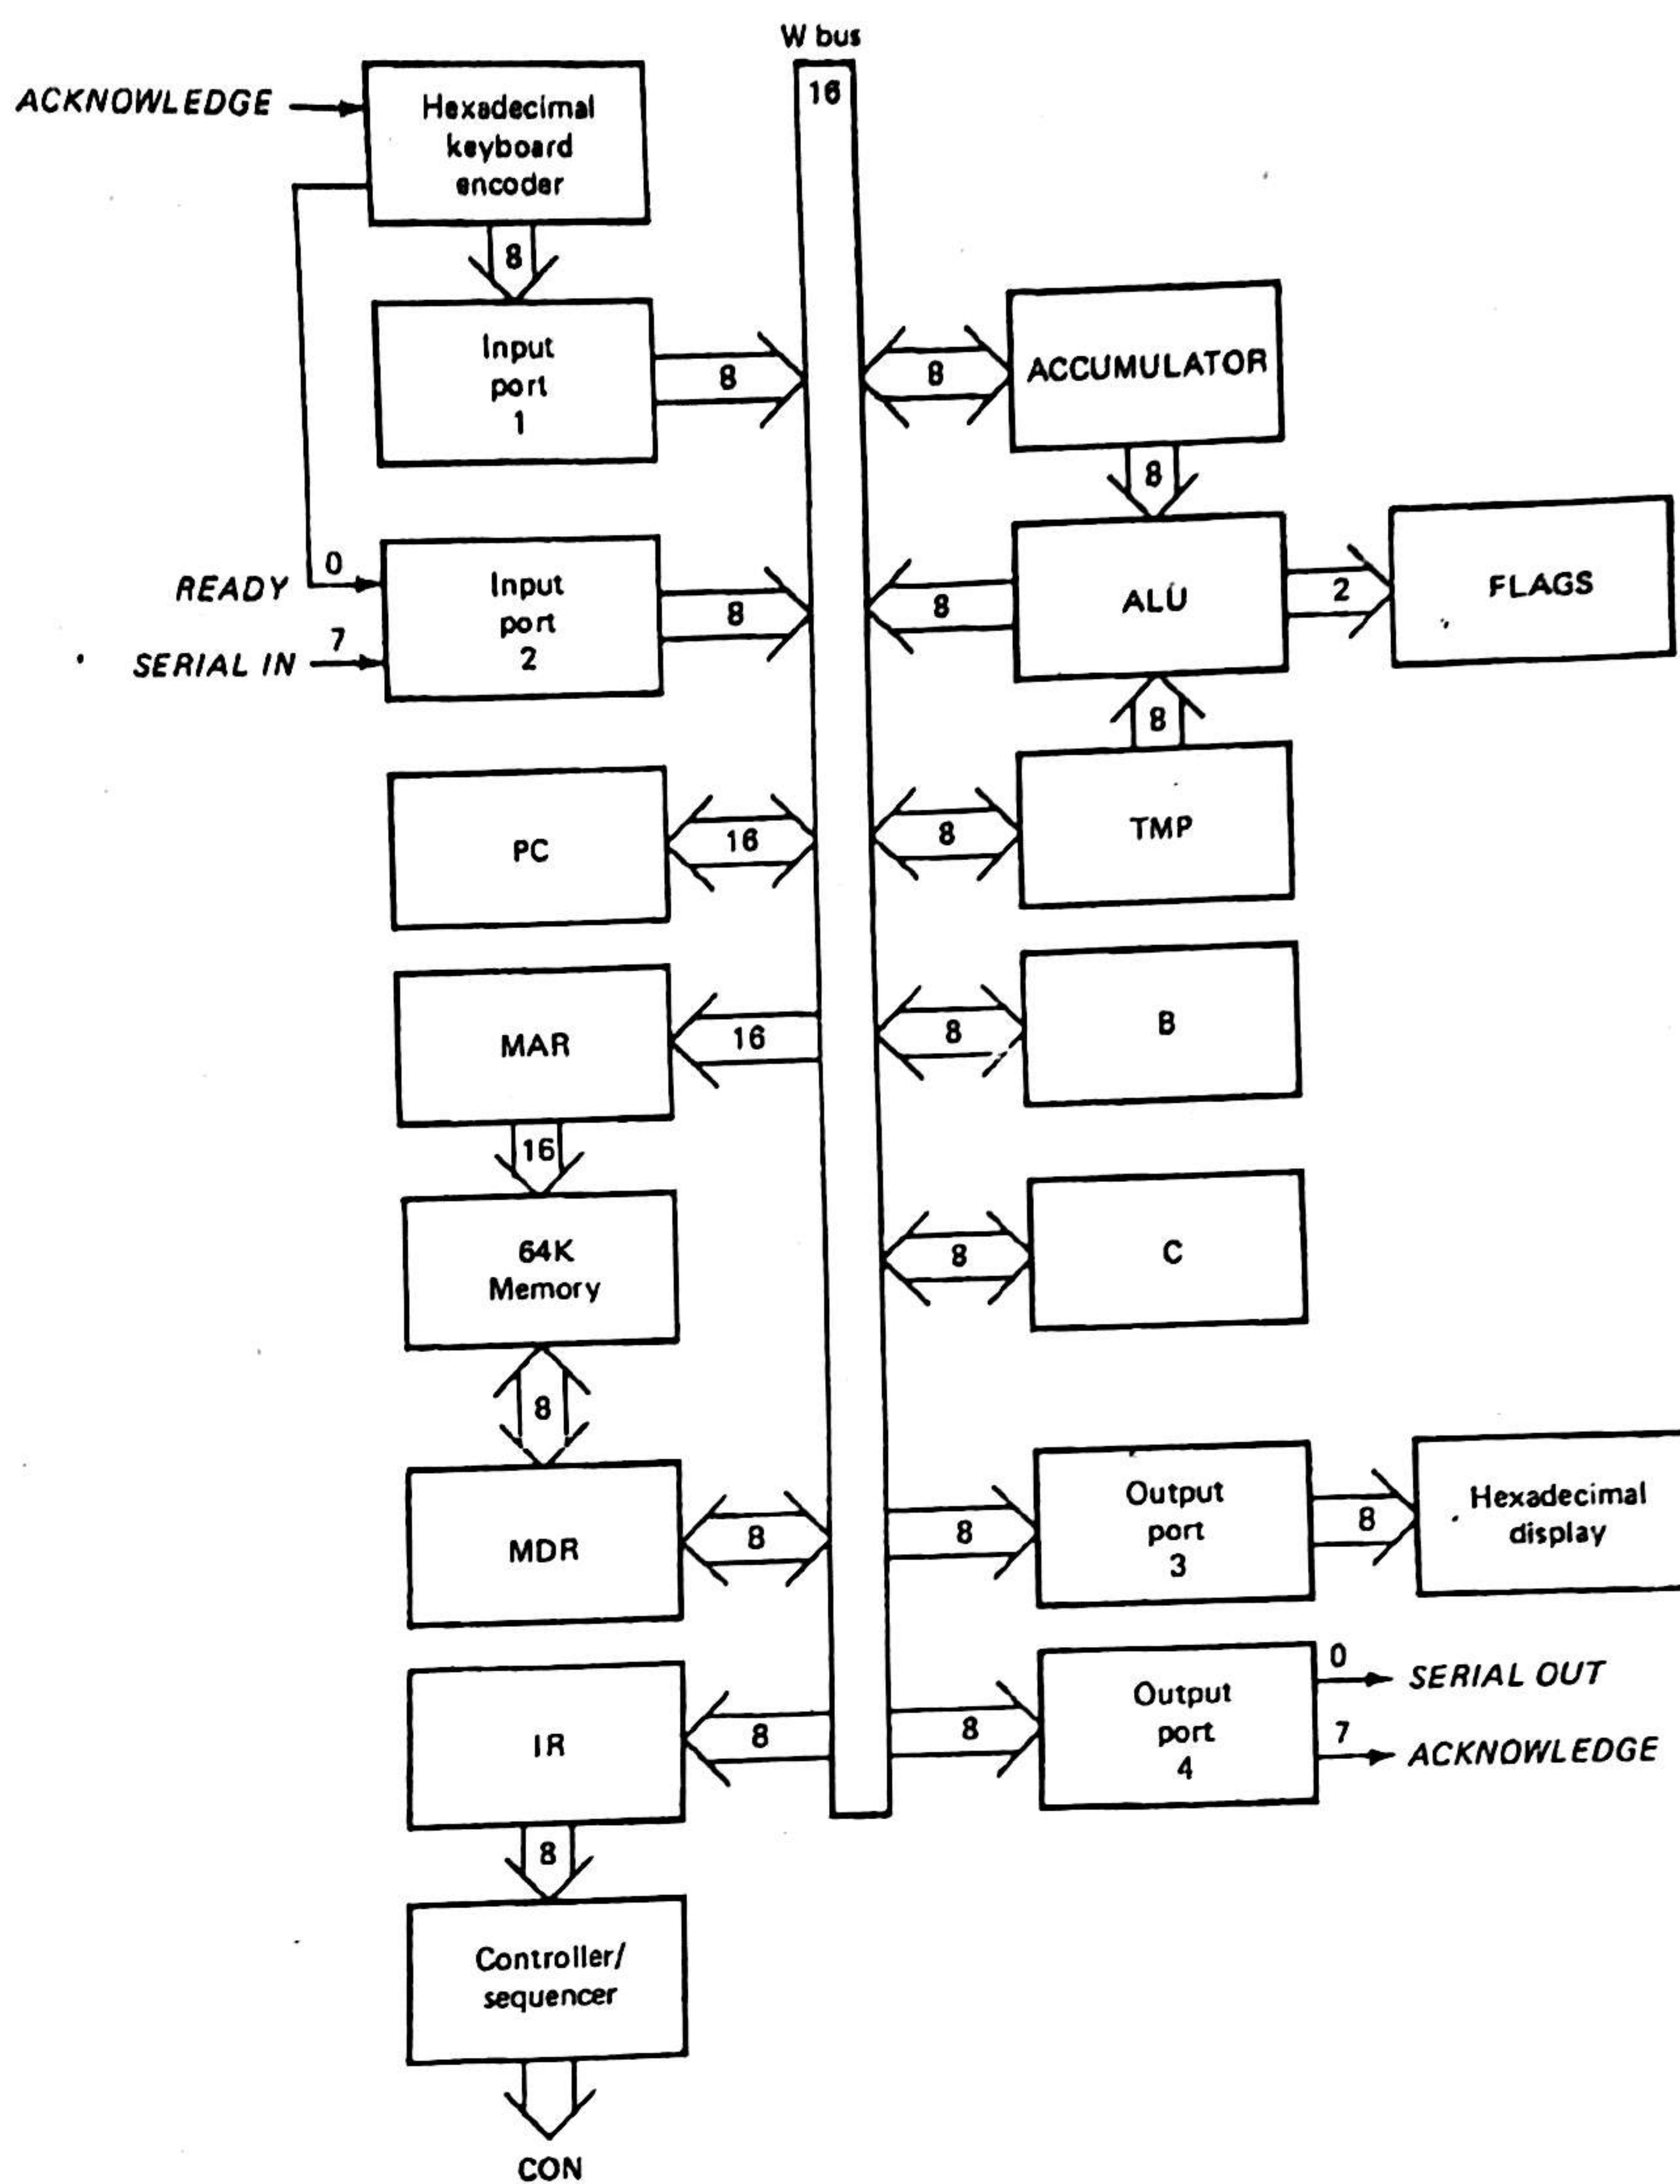


Fig. 11-2 SAP-2 block architecture.

ALU and Flags

Standard ALUs are commercially available as integrated circuits. These ALUs have 4 or more control bits that determine the arithmetic or logic operation performed on words A and B. The ALU used in SAP-2 includes arithmetic and logic operations.

In this book a *flag* is a flip-flop that keeps track of a changing condition during a computer run. The SAP-2 computer has two flags. The *sign flag* is set when the accumulator contents become negative during the execution

of some instructions. The *zero flag* is set when the accumulator contents become zero.

TMP, B, and C Registers

Instead of using the B register to hold the data being added or subtracted from the accumulator, a *temporary* (TMP) register is used. This allows us more freedom in using the B register. Besides the TMP and B registers, SAP-2 includes a C register. This gives us more flexibility in moving data during a computer run.

Output Ports

SAP-2 has two output ports, numbered 3 and 4. The contents of the accumulator can be loaded into port 3, which drives a hexadecimal display. This allows us to see the processed data.

The contents of the accumulator can also be sent to port 4. Notice that pin 7 of port 4 sends an *ACKNOWLEDGE* signal to the hexadecimal encoder. This *ACKNOWLEDGE* signal and the *READY* signal are part of a concept called *handshaking*, to be discussed later.

Also notice the *SERIAL OUT* signal from pin 0 of port 4; one of the examples will show you how to convert parallel data in the accumulator into serial output data.

11-3 MEMORY-REFERENCE INSTRUCTIONS

The SAP-2 fetch cycle is the same as before. T_1 is the address state, T_2 is the increment state, and T_3 is the memory state. All SAP-2 instructions therefore use the memory during the fetch cycle because a program instruction is transferred from the memory to the instruction register.

During the execution cycle, however, the memory may or may not be used; it depends on the type of instruction that has been fetched. A memory-reference instruction (MRI) is one that uses the memory during the execution cycle.

The SAP-2 computer has an instruction set with 42 instructions. What follows is a description of the memory-reference instructions.

LDA and STA

LDA has the same meaning as before: *load the accumulator* with the addressed memory data. The only difference is that more memory locations can be accessed in SAP-2 because the addresses are from 0000H to FFFFH. For example, LDA 2000H means to load the accumulator with the contents of memory location 2000H.

To distinguish the different parts of an instruction, the mnemonic is sometimes called the *op code* and the rest of the instruction is known as the *operand*. With LDA 2000H, LDA is the op code and 2000H is the operand. Therefore, "op code" has a double meaning in microprocessor work; it may stand for the mnemonic or for the binary code used to represent the mnemonic. The intended meaning is clear from the context.

STA is a mnemonic for *store the accumulator*. Every STA instruction needs an address. STA 7FFFH means to store the accumulator contents at memory location 7FFFH. If

$$A = 8AH$$

the execution of STA 7FFFH stores 8AH at address 7FFFH.

MVI

MVI is the mnemonic for *move immediate*. It tells the computer to load a designated register with the byte that immediately follows the op code. For instance,

$$MVI A,37H$$

tells the computer to load the accumulator with 37H. After this instruction has been executed, the binary contents of the accumulator are

$$A = 0011\ 0111$$

You can use MVI with the A, B, and C registers. The formats for these instructions are

MVI A,byte
MVI B,byte
MVI C,byte

Op Codes

Table 11-1 shows the op codes for the SAP-2 instruction set. These are the 8080/8085 op codes. As you can see, 3A is the op code for LDA, 32 is the op code for STA, etc. Refer to this table in the remainder of this chapter.

EXAMPLE 11-1

Show the mnemonics for a program that loads the accumulator with 49H, the B register with 4AH, and the C register with 4BH; then have the program store the accumulator data at memory location 6285H.

SOLUTION

Here's one program that will work:

Mnemonics
MVI A,49H
MVI B,4AH
MVI C,4BH
STA 6285H
HLT

The first three instructions load 49H, 4AH, and 4BH into the A, B, and C registers. STA 6285H stores the accumulator contents at 6285H.

Note the use of HLT in this program. It has the same meaning as before: halt the data processing.

TABLE 11-1. SAP-2 OP CODES

Instruction	Op Code	Instruction	Op Code
ADD B	80	MOV B,A	47
ADD C	81	MOV B,C	41
ANA B	A0	MOV C,A	4F
ANA C	A1	MOV C,B	48
ANI byte	E6	MVI A,byte	3E
CALL address	CD	MVI B,byte	06
CMA	2F	MVI C,byte	0E
DCR A	3D	NOP	00
DCR B	05	ORA B	B0
DCR C	0D	ORA C	B1
HLT	76	ORI byte	F6
IN byte	DB	OUT byte	D3
INR A	3C	RAL	17
INR B	04	RAR	1F
INR C	0C	RET	C9
JM address	FA	STA address	32
JMP address	C3	SUB B	90
JNZ address	C2	SUB C	91
JZ address	CA	XRA B	A8
LDA address	3A	XRA C	A9
MOV A,B	78	XRI byte	EE
MOV A,C	79		

EXAMPLE 11-2

Translate the foregoing program into 8080/8085 machine language using the op codes of Table 11-1. Start with address 2000H.

SOLUTION

Address	Contents	Symbolic
2000H	3EH	MVI A,9H
2001H	49H	
2002H	06H	MVI B,4AH
2003H	4AH	
2004H	0EH	MVI C,4EH
2005H	4BH	
2006H	32H	STA 6285H
2007H	85H	
2008H	62H	
2009H	76H	HLT

There are a couple of new ideas in this machine-language program. With the

MVI A,49H

instruction, notice that the op code goes into the first address and the byte into the second address. This is true of all 2-byte instructions: op code into the first available memory location and byte into the next.

The instruction

STA 6285H

is a 3-byte instruction (1 byte for the op code and 2 for the address). The op code for STA is 32H. This byte goes into the first available memory location, which is 2006H. The address 6285H has 2 bytes. The lower byte 85H goes into the next memory location, and the upper byte 62H into the next location.

Why does the address get programmed with the lower byte first and the upper byte second? This is a peculiarity of the original 8080 design. To keep upward compatibility, the 8085 and some other microprocessors use the same scheme: lower byte into lower memory, upper byte into upper memory.

The last instruction HLT has an op code of 76H, stored in memory location 2009H.

In summary, the MVI instructions are 2-byte instructions, the STA is a 3-byte instruction, and the HLT is a 1-byte instruction.

11.4. REGISTER INSTRUCTIONS

Memory-reference instructions are relatively slow because they require more than one memory access during the instruction cycle. Furthermore, we often want to move data directly from one register to another without having to go through the memory. What follows are some of the SAP-2 register instructions, designed to move data from one register to another in the shortest possible time.

MOV

MOV is the mnemonic for *move*. It tells the computer to move data from one register to another. For instance,

MOV A,B

tells the computer to move the data in the B register to the accumulator. The operation is nondestructive, meaning that the data in B is copied but not erased. For example, if

A = 34H and B = 9DH

then the execution of MOV A,B results in

A = 9DH
B = 9DH

You can move data between the A, B, and C registers. The formats for all MOV instructions are

MOV A,B
MOV A,C
MOV B,A
MOV B,C
MOV C,A
MOV C,B

These instructions are the fastest in the SAP-2 instruction set, requiring only one machine cycle.

ADD and SUB

ADD stands for add the data in the designated register to the accumulator. For instance,

ADD B

means to add the contents of the B register to the accumulator. If

A = 04H and B = 02H

then the execution of ADD B results in

A = 06H

Similarly, SUB means subtract the data in the designated register from the accumulator. SUB C will subtract the contents of the C register from the accumulator.

The formats for the ADD and SUB instructions are

ADD B
ADD C
SUB B
SUB C

INR and DCR

Many times we want to increment or decrement the contents of one of the registers. INR is the mnemonic for *increment*; it tells the computer to increment the designated register. DCR is the mnemonic for *decrement*, and it instructs the computer to decrement the designated register. The formats for these instructions are

INR A
INR B
INR C
DCR A
DCR B
DCR C

As an example, if

B = 56H and C = 8AH

then the execution of INR B results in

B = 57H

and the execution of a DCR C produces

C = 89H

EXAMPLE 11-3

Show the mnemonics for adding decimal 23 and 45. The answer is to be stored at memory location 5600H. Also, the answer incremented by 1 is to be stored in the C register.

SOLUTION

As shown in Appendix 2, decimal 23 and 45 are equivalent to 17H and 2DH. Here is a program that will do the job:

Mnemonics

MVI A,17H
MVI B,2DH
ADD B
STA 5600H
INR A
MOV C,A
HLT

EXAMPLE 11-4

To *hand-assemble* a program means to translate a source program into a machine-language program by hand rather than machine. Hand-assemble the program of the preceding example starting at address 2000H.

SOLUTION

Address	Contents	Symbolic
2000H	3EH	MVI A,17H
2001H	17H	
2002H	06H	MVI B,2DH
2003H	2DH	
2004H	80H	ADD B
2005H	32H	STA 5600H
2006H	00H	
2007H	56H	
2008H	3CH	INR A
2009H	4FH	MOV C,A
200AH	76H	HLT

Notice that the ADD, INR, MOV, and HLT instructions are 1-byte instructions; the MVI instructions are 2-byte instructions, and the STA is a 3-byte instruction.

11-5 JUMP AND CALL INSTRUCTIONS

SAP-2 has four *jump* instructions; these can change the program sequence. In other words, instead of fetching the next instruction in the usual way, the computer may jump or *branch* to another part of the program.

JMP

To begin with, JMP is the mnemonic for jump; it tells the computer to get the next instruction from the designated memory location. Every JMP instruction includes an address that is loaded into the program counter. For instance,

JMP 3000H

tells the computer to get the next instruction from memory location 3000H.

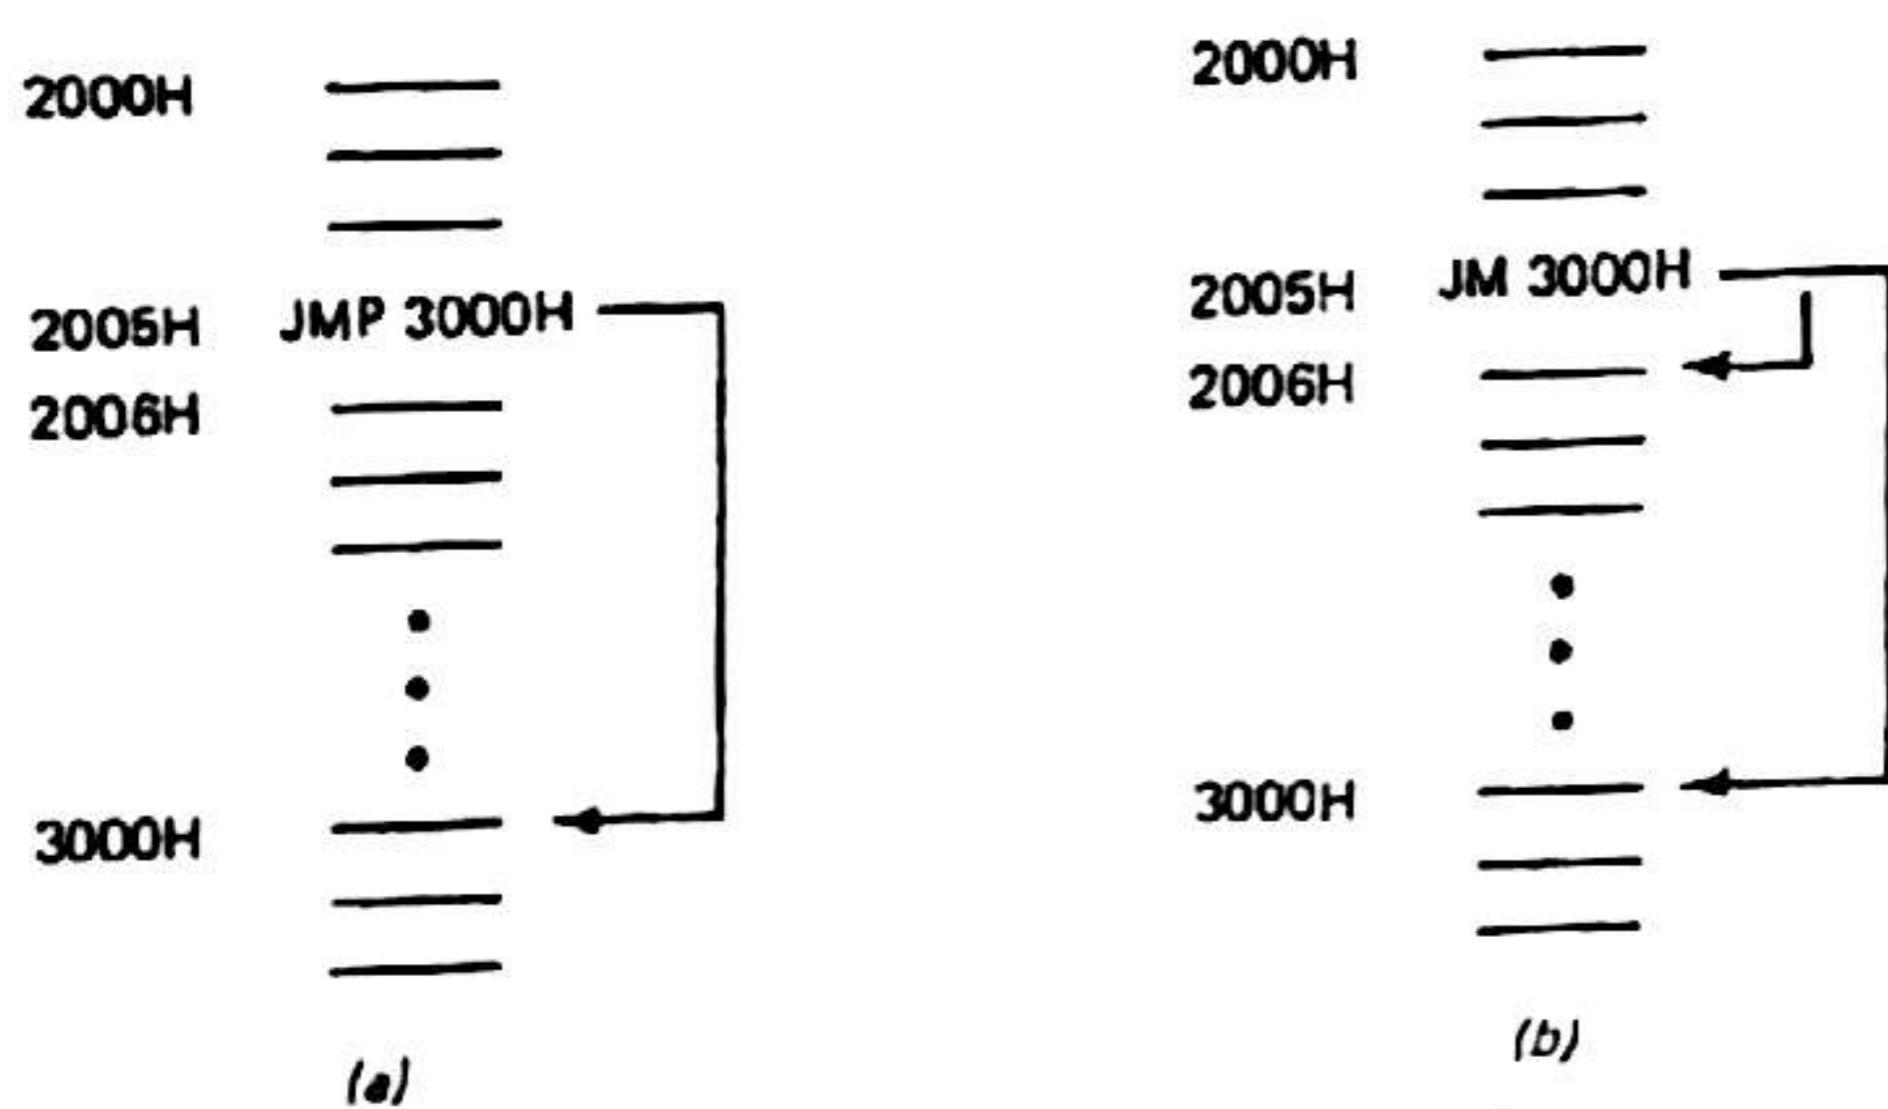


Fig. 11-3 (a) Unconditional jump; (b) conditional jump.

Here is what happens. Suppose JMP 3000H is stored at 2005H, as shown in Fig. 11-3a. At the end of the fetch cycle, the program counter contains

PC = 2006H

During the execution cycle, the JMP 3000H loads the program counter with the designated address:

PC = 3000H

When the next fetch cycle begins, the next instruction comes from 3000H rather than 2006H (see Fig. 11-3a).

JM

SAP-2 has two flags called the *sign flag* and the *zero flag*. During the execution of some instructions, these flags will be set or reset, depending on what happens to the accumulator contents. If the accumulator contents become

negative, the sign flag will be set; otherwise, the sign flag is cleared. Symbolically,

$$S = \begin{cases} 0 & \text{if } A \geq 0 \\ 1 & \text{if } A < 0 \end{cases}$$

where S stands for sign flag. The sign flag will remain set or clear until another operation that affects the flag.

JM is a mnemonic for *jump if minus*; the computer will jump to a designated address if and only if the sign flag is set. As an example, suppose a JM 3000H is stored at 2005H. After this instruction has been fetched,

PC = 2006H

If S = 1, the execution of JM 3000H loads the program counter with

PC = 3000H

Since the program counter now points to 3000H, the next instruction will come from 3000H.

If the jump condition is not met (S = 0), the program counter is unchanged during the execution cycle. Therefore, when the next fetch cycle begins, the instruction is fetched from 2006H.

Figure 11-3b symbolizes the two possibilities for a JM instruction. If the minus condition is satisfied, the computer jumps to 3000H for the next instruction. If the minus condition is not satisfied, the program *falls through* to the next instruction.

JZ

The other flag affected by accumulator operations is the zero flag. During the execution of some instructions, the accumulator will become zero. To record this event, the zero flag is set; if the accumulator contents do not go to zero, the zero flag is reset. Symbolically,

$$Z = \begin{cases} 0 & \text{when } A \neq 0 \\ 1 & \text{when } A = 0 \end{cases}$$

JZ is the mnemonic for *jump if zero*; it tells the computer to jump to the designated address only if the zero flag is set. Suppose a JZ 3000H is stored at 2005H. If Z = 1 during the execution of JZ 3000H, the next instruction is fetched from 3000H. On the other hand, if Z = 0, the next instruction will come from 2006H.

JNZ

JNZ stands for *jump if not zero*. In this case, we get a jump when the zero flag is clear and no jump when it is set. Suppose a JNZ 7800H is stored at 2100H. If Z = 0, the next instruction will come from 7800H; however, if Z = 1, the program falls through to the instruction at 2101H.

JM, JZ, and JNZ are called *conditional jumps* because the program jump occurs only if certain conditions are satisfied. On the other hand, JMP is *unconditional*; once this instruction is fetched, the execution cycle always jumps the program to the specified address.

CALL and RET

A *subroutine* is a program stored in the memory for possible use in another program. Many microcomputers have subroutines for finding sines, cosines, tangents, logarithms, square roots, etc. These subroutines are part of the software supplied with the computer.

CALL is the mnemonic for *call the subroutine*. Every CALL instruction must include the starting address of the desired subroutine. For instance, if a square-root subroutine starts at address 5000H and a logarithm subroutine at 6000H, the execution of

CALL 5000H

will jump to the square-root subroutine. On the other hand, a

CALL 6000H

produces a jump to the logarithm subroutine.

RET stands for *return*. It is used at the end of every subroutine to tell the computer to go back to the original program. A RET instruction is to a subroutine as a HLT is to a program. Both tell the computer that something is finished. If you forget to use a RET at the end of a subroutine, the computer cannot get back to the original program and you will get computer trash.

When a CALL is executed in the SAP-2 computer, the contents of the program counter are automatically saved in memory locations FFFEH and FFFFH (the last two memory locations). The CALL address is then loaded into the

program counter, so that execution begins with the first instruction in the subroutine. After the subroutine is finished, the RET instruction causes the address in memory locations FFFEH and FFFFH to be loaded back into the program counter. This returns control to the original program.

Figure 11-4 shows the program flow during a subroutine. The CALL 5000H sends the computer to the subroutine located at 5000H. After this subroutine has been completed, the RET sends the computer back to the instruction following the CALL.

CALL is unconditional, like JMP. Once a CALL has been fetched into the instruction register, the computer will jump to the starting address of the subroutine.

More on Flags

The sign or zero flag may be set or reset during certain instructions. Table 11-2 lists the SAP-2 instructions that can affect the flags. All these instructions use the accumulator during the execution cycle. If the accumulator goes negative or zero while one of these instructions is being executed, the sign or zero flag will be set.

For instance, suppose the instruction is ADD C. The contents of the C register are added to the accumulator contents. If the accumulator contents become negative or zero in the process, the sign or zero flag will be set.

A word about the INR and DCR instructions. Since these instructions use the accumulator to add or subtract 1 from the designated register, they also affect the flags. For instance, to execute a DCR C, the contents of the C register are decremented by sending these contents to the accumulator, subtracting 1, and sending the result back to the C register. If the accumulator goes negative while the DCR C is executed, the sign flag is set; if the accumulator goes to zero, the zero flag is set.

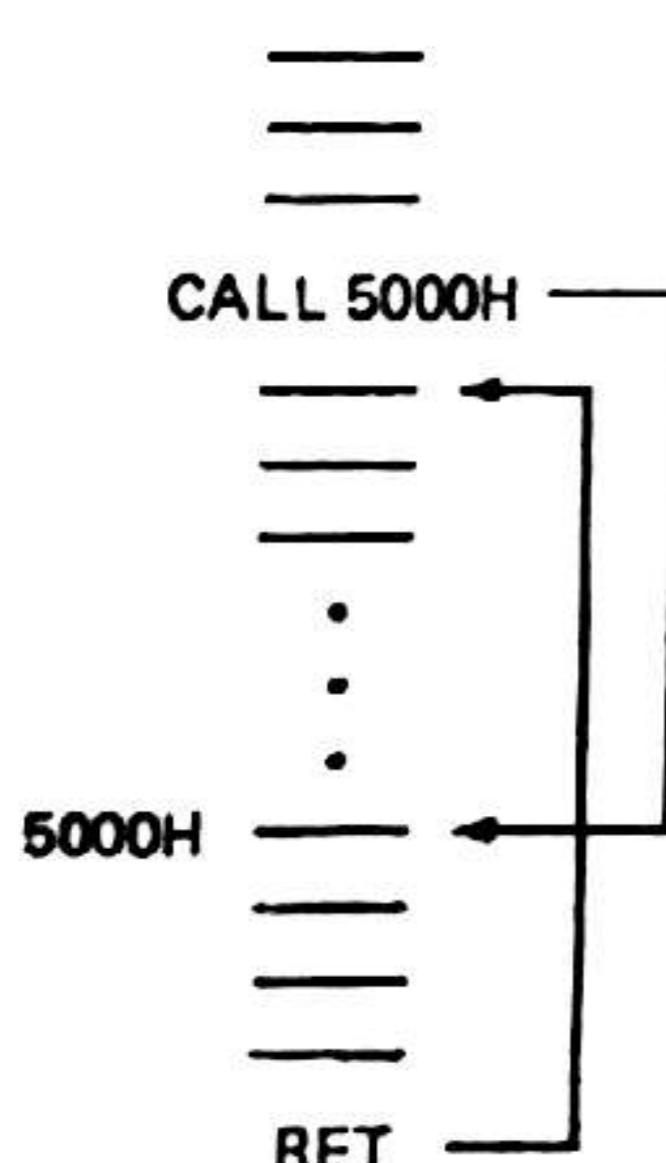


Fig. 11-4 CALL instruction.

TABLE 11-2. INSTRUCTIONS AFFECTING FLAGS

Instruction	Flags Affected
ADD	S, Z
SUB	S, Z
INR	S, Z
DCR	S, Z
ANA	S, Z
ORA	S, Z
XRA	S, Z
ANI	S, Z
ORI	S, Z
XRI	S, Z

EXAMPLE 11-5

Hand-assemble the following program starting at address 2000H:

```
MVI C,03H  
DCR C  
JZ 0009H  
JMP 0002H  
HLT
```

SOLUTION

Address	Contents	Symbolic
2000H	0EH	MVI C,03H
2001H	03H	
2002H	0DH	DCR C
2003H	CAH	JZ 2009H
2004H	09H	
2005H	20H	
2006H	C3H	JMP 2002H
2007H	02H	
2008H	20H	
2009H	76H	HLT

EXAMPLE 11-6

In the foregoing program, how many times is the DCR instruction executed?

SOLUTION

Figure 11-5 illustrates the program flow. Here is what happens. The MVI C,03H instruction loads the C register with 03H. DCR C reduces the contents to 02H. The contents are greater than zero; therefore, the zero flag is reset, and the JZ 2009H is ignored. The JMP 2002H returns the computer to the DCR C instruction.

The second time the DCR C is executed, the contents drop to 01H; the zero flag is still reset. JZ 2009H is again ignored, and the JMP 2002H returns the computer to DCR C.

The third DCR C reduces the contents to zero. This time the zero flag is set, and the JZ 2009H jumps the program to HLT instruction.

A *loop* is part of a program that is repeated. In this example, we have passed through the loop (DCR C and JZ 2009H) 3 times, as shown in Fig. 11-5. Note that the number of passes through the loop equals the number initially loaded into the C register. If we change the first instruction to

```
MVI C,07H
```

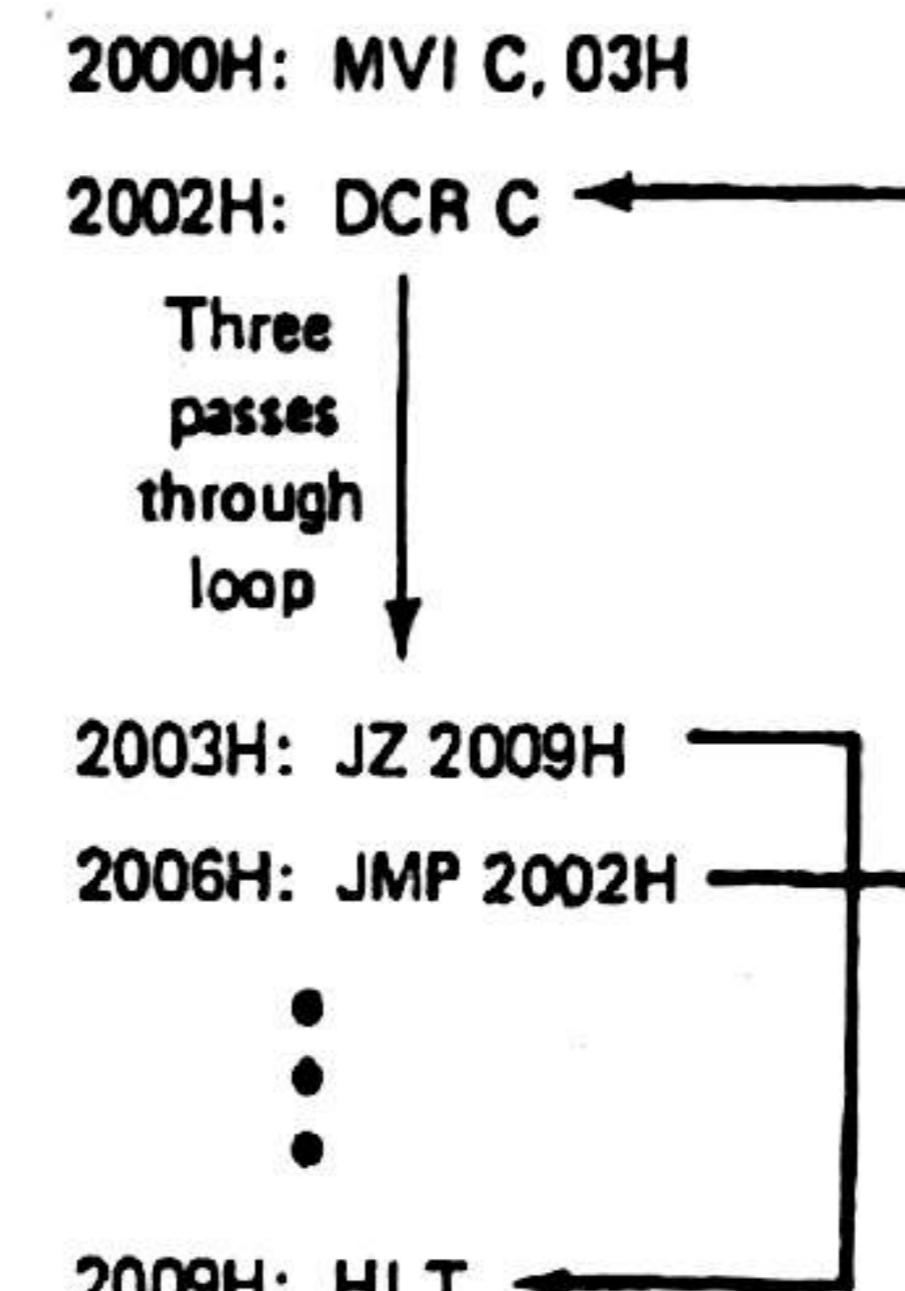


Fig. 11-5 Looping.

the computer will loop 7 times. Similarly, if we wanted to pass through the loop 200 times (equivalent to C8H), the first instruction would be

```
MVI C,C8H
```

The C register acts like a presettable down counter. This is why it is sometimes referred to as a *counter*.

The point to remember is this. We can set up a loop by using an MVI, DCR, JZ, and JMP in a program. The number loaded into the designated register (the counter) determines the number of passes through the loop. If we put new instructions inside the loop, these added instructions will be executed X times, the number preset into the counter.

EXAMPLE 11-7

When you buy a microcomputer, you often purchase software to do different jobs. One of the programs you can buy is an *assembler*. The assembler allows you to write programs in mnemonic form. Then the assembler converts these mnemonics into machine language. In other words, if you have an assembler, you no longer have to hand-assemble your programs; the computer does the work for you.

Show the assembly-language version of the program in Example 11-5. Include *labels* and *comments*.

SOLUTION

Label	Instruction	Comment
	MVI C,03H	;Load counter with decimal.3
REPEAT:	DCR C	;Decrement counter
	JZ END	;Test for zero
	JMP REPEAT	;Do it again
END:	HLT	

When you write a program, it helps to include your own comments about what the instruction is supposed to do. These comments jog your memory if you have to read the program months later. The first comment reminds us that we are presetting the down counter with decimal 3, the second comment reminds us that we are decrementing the counter, the third comment tells us that we are testing for zero before jumping, and the fourth comment tells us that the program will loop back.

When the assembler converts your source program into an object program, it ignores everything after the semicolon. Why? Because that's the way the assembler program is written. The semicolon is a coded way to tell the computer that your personal comments follow. (Remember the ASCII code. 3BH is the ASCII for a semicolon. When the assembler encounters 3BH in your source programs, it knows comments follow.)

Labels are another programming aid used with jumps and calls. When we write an assembly-language program, we often have no idea what address to use in a jump or call instruction. By using a label instead of a numerical address we can write programs that make sense to us. The assembler will keep track of our labels and automatically assign the correct addresses to them. This is a great laborsaving feature of an assembler.

For instance, when the assembler converts the foregoing program to machine language, it will replace JZ by CA (op code of Table 11-1) and END by the address of the HLT instruction. Likewise, it will replace JMP by C3 (op code) and REPEAT by the address of the DCR C instruction. The assembler determines the addresses of the HLT and JMP by counting the number of bytes needed by all instructions and figuring out where the HLT and DCR C instructions will be in the final assembled program.

All you have to remember is that you can make up any label you want for jump and call instructions. The same label followed by a colon is placed in front of the instruction you are trying to jump to. When the assembler converts your program into machine language, the colon tells it a label is involved.

One more point about labels. With SAP-2, the labels can be from one to six characters, the first of which must be a letter. Labels are usually words or abbreviations, but numbers can be included. The following are examples of acceptable labels:

REPEAT
DELAY
RDKBD
A34
B12C3

The first two are words; the third is an abbreviation for read the keyboard. The last two are labels that include numbers. The restrictions on length (no more than six

characters) and starting character (must be letter) are typical of commercially available assemblers.

EXAMPLE 11-8

Show a program that multiplies decimal 12 and 8.

SOLUTION

The hexadecimal equivalents of 12 and 8 are 0CH and 08H. Let us set up a loop that adds 12 to the accumulator during each pass. If the computer loops 8 times, the accumulator contents will equal 96 (decimal) at the end of the looping.

Here's one assembly-language program that will do the job:

Label	Mnemonic	Comment
	MVI A,00H	;Clear accumulator
	MVI B,0CH	;Load decimal 12 into B
	MVI C,08H	;Preset counter with 8
REPEAT:	ADD B	;Add decimal 12
	DCR C	;Decrement the counter
	JZ DONE	;Test for zero
	JMP REPEAT	;Do it again
DONE:	HLT	;Stop it

The comments tell most of the story. First, we clear the accumulator. Next, we load decimal 12 into the B register. Then the counter is preset to decimal 8. These first three instructions are part of the initialization before entering a loop.

The ADD B begins the loop by adding decimal 12 to accumulator. The DCR C reduces the count to 7. Since the zero flag is clear, JZ DONE is ignored the first time through and the program flow returns to the ADD B instruction.

You should be able to see what will happen. ADD B is inside the loop and will be executed 8 times. After eight passes through the loop, the zero flag is set; then the JZ DONE will take the program out of the loop to the HLT instruction.

Since 12 is added 8 times,

$$12 + 12 + 12 + 12 + 12 + 12 + 12 + 12 = 96$$

(Because decimal 96 is equivalent to hexadecimal 60, the accumulator contains 0110 0000.) Repeated addition like this is equivalent to multiplication. In other words, adding 12 eight times is identical to 12×8 . Most microprocessors do not have multiplication hardware; they only have an adder-subtractor like the SAP computer. Therefore, with the typical microprocessor, you have to use some form of programmed multiplication such as repeated addition.

EXAMPLE 11-9

Modify the foregoing multiply program by using a JNZ instead of a JZ.

SOLUTION

Look at this:

Label	Mnemonic	Comment
REPEAT:	MVI A,00H	;Clear accumulator
	MVI B,0CH	;Load decimal 12 into B
	MVI C,08H	;Preset counter with 8
	ADD B	;Add decimal 12
	DCR C	;Decrement the counter
	JNZ REPEAT	;Test for zero
	HLT	;Stop it

This is simpler. It eliminates one JMP instruction and one label. As long as the counter is greater than zero, the JNZ will force the computer to loop back to REPEAT. When the counter drops to zero, the program will fall through the JNZ to the HLT.

EXAMPLE 11-10

Hand-assemble the foregoing program starting at address 2000H.

SOLUTION

Address	Contents	Symbolic
2000H	3EH	MVI A,00H
2001H	00H	
2002H	06H	MVI B,0CH
2003H	0CH	
2004H	0EH	MVI C,08H
2005H	08H	
2006H	80H	ADD B
2007H	0DH	DCR C
2008H	C2H	JNZ 2006H
2009H	06H	
200AH	20H	
200BH	76H	HLT

The first three instructions initialize the registers before the multiplication begins. If we change the initial values, we can multiply other numbers.

EXAMPLE 11-11

Change the multiplication part of the foregoing program into a subroutine located at starting address F006H.

SOLUTION

Address	Contents	Symbolic
F006H	80H	ADD B
F007H	0DH	DCR C
F008H	C2H	JNZ F006H
F009H	06H	
F00AH	F0H	
F00BH	C9H	RET

Here's what happened. The initializing instructions depend on the numbers we are multiplying, so they don't belong in the subroutine. The subroutine should contain only the multiplication part of the program.

In relocating the program we mapped (converted) addresses 2006H-200BH to F006H-F00BH. Also, the HLT was changed to a RET to get us back to the original program.

EXAMPLE 11-12

The multiply subroutine of the preceding example is used in the following program. What does the program do?

MVI A,00H
MVI B,10H
MVI C,0EH
CALL F006H
HLT

SOLUTION

Hexadecimal 10H is equivalent to decimal 16, and hexadecimal 0EH is equivalent to decimal 14. The first three instructions clear the accumulator, load the B register with decimal 16, and preset the counter to decimal 14. The CALL sends the computer to the multiply subroutine of the preceding example. When the RET is executed, the accumulator contents are E0H, which is equivalent to 224.

Incidentally, a *parameter* is a piece of data that the subroutine needs to work properly. The multiply subroutine located at F006H needs three parameters to work properly (A, B, and C). We pass these parameters to the multiply subroutine by clearing the accumulator, loading the B register with the multiplicand, and presetting the C register with the multiplier. In other words, we set A = 00H, B = 10H, and C = 0EH. Passing data to a subroutine in this way is called *register parameter passing*.

11-6 LOGIC INSTRUCTIONS

A microprocessor can do logic as well as arithmetic. What follows are the SAP-2 logic instructions. Again, they are a subset of the 8080/8085 instructions.

CMA

CMA stands for "complement the accumulator." The execution of a CMA inverts each bit in the accumulator, producing the 1's complement.

ANA

ANA means to AND *the accumulator* contents with the designated register. The result is stored in the accumulator. For instance,

ANA B

means to AND the contents of the accumulator with the contents of the B register. The ANDing is done on a bit-by-bit basis. For example, suppose the two registers contain

$$A = 1100\ 1100 \quad (11-1)$$

and

$$B = 1111\ 0001 \quad (11-2)$$

The execution of an ANA B results in

$$A = 1100\ 0000$$

Notice that the ANDing is bitwise, as illustrated in Fig. 11-6. The ANDing is done on pairs of bits; A_7 is ANDed with B_7 , A_6 with B_6 , A_5 with B_5 , and so on, with the result stored in the accumulator.

Two ANA instructions are available in SAP-2: ANA B and ANA C. Table 11-1 shows the op codes.

ORA

ORA is the mnemonic for OR *the accumulator* with the designated register. The two ORA instructions in SAP-2 are ORA B and ORA C. As an example, if the accumulator and B register contents are given by Eqs. 11-1 and 11-2, then executing ORA B gives

$$A = 1111\ 1101$$

XRA

XRA means XOR *the accumulator* with the designated register. The SAP-2 instruction set contains XRA B and

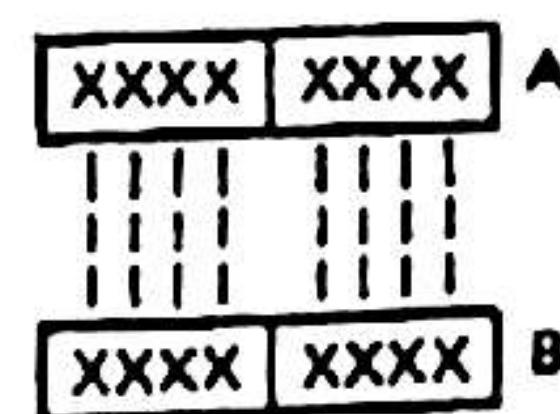


Fig. 11-6 Logic instructions are bitwise.

XRA C. If the accumulator and B contents are given by Eqs. 11-1 and 11-2, the execution of XRA B produces

$$A = 0011\ 1101$$

ANI

SAP-2 also has immediate logic instructions. ANI means AND *immediate*. It tells the computer to AND the accumulator contents with the byte that immediately follows the op code. For instance, if

$$A = 0101\ 1110$$

the execution of ANI C7H will AND

$$0101\ 1110 \quad \text{with} \quad 1100\ 0111$$

to produce new accumulator contents of

$$A = 0100\ 0110$$

ORI

ORI is the mnemonic for OR *immediate*. The accumulator contents are ORed with the byte that follows the op code. If

$$A = 0011\ 1000$$

the execution of ORI 5AH will OR

$$0011\ 1000 \quad \text{with} \quad 0101\ 1010$$

to produce new accumulator contents of

$$0111\ 1010$$

XRI

XRI means XOR *immediate*. If

$$A = 0001\ 1100$$

the execution of XRI D4H will XOR

$$0001\ 1100 \quad \text{with} \quad 1101\ 0100$$

to produce

$$A = 1100\ 1000$$

11-7 OTHER INSTRUCTIONS

This section looks at the last of the SAP-2 instructions. Since these instructions don't fit any particular category, they are being collected here in a miscellaneous group.

NOP

NOP stands for no operation. During the execution of a NOP, all T states are do nothings. Therefore, no register changes occur during a NOP.

The NOP instruction is used to waste time. It takes four T states to fetch and execute the NOP instruction. By repeating a NOP a number of times, we can delay the data processing, which is useful in timing operations. For instance, if we put a NOP inside a loop and execute it 100 times, we create a time delay of 400 T states.

HLT

We have already used this. HLT stands for halt. It ends the data processing.

IN

IN is the mnemonic for input. It tells the computer to transfer data from the designated port to the accumulator. Since there are two input ports, you have to designate which one is being used. The format for an input operation is

IN byte

For instance,

IN 02H

means to transfer the data in port 2 to the accumulator.

OUT

OUT stands for output. When this instruction is executed, the accumulator word is loaded into the designated output port. The format for this instruction is

OUT byte

Since the output ports are numbered 3 and 4 (Fig. 11-2), you have to specify which port is to be used. For instance,

OUT 03H

will transfer the contents of the accumulator to port 3.

RAL

RAL is the mnemonic for rotate the accumulator left. This instruction will shift all bits to the left and move the MSB

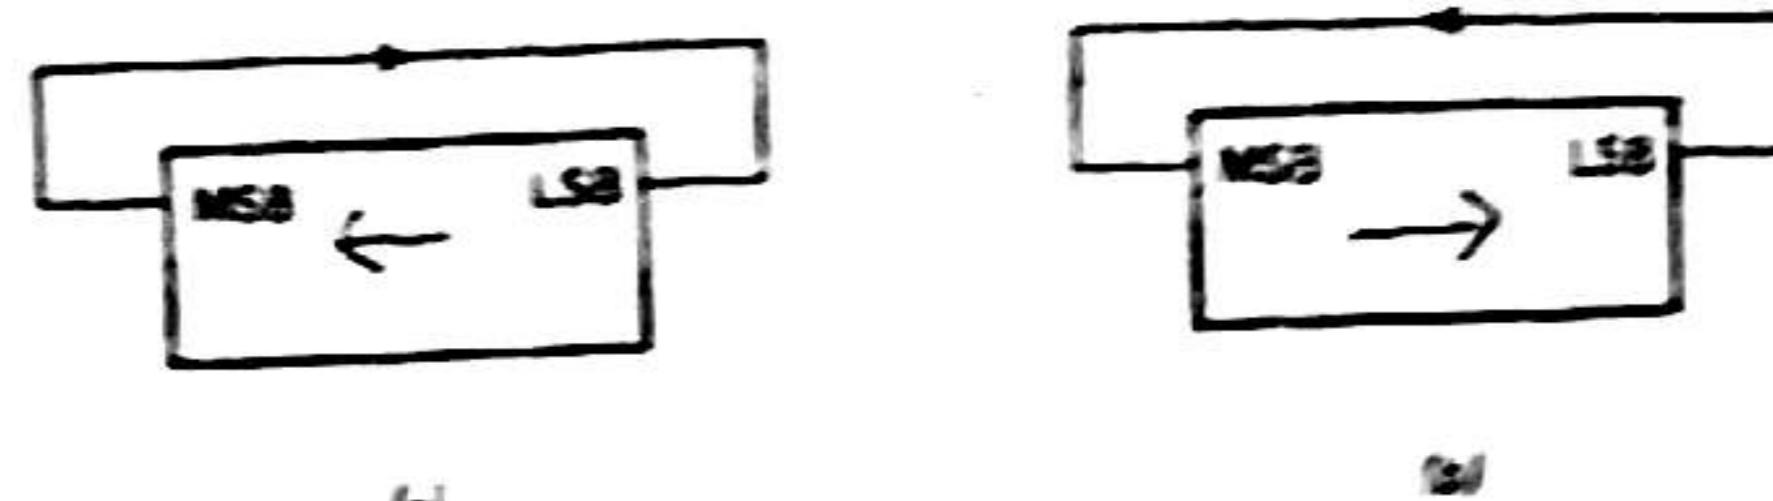


Fig. 11-7 Rotate instructions: (a) RAL; (b) RAR.

into the LSB position, as illustrated in Fig. 11-7a. As an example, suppose the contents of the accumulator are

$$A = 1011\ 0100$$

Executing the RAL will produce

$$A = 0110\ 1001$$

As you see, all bits moved left, and the MSB went to the LSB position.

RAR

RAR stands for rotate the accumulator right. This time, the bits shift to the right, the LSB going to the MSB position, as shown in Fig. 11-7b. If

$$A = 1011\ 0100$$

the execution of a RAR will result in

$$A = 0101\ 1010$$

EXAMPLE 11-13

The bits in a byte are numbered 7 to 0 (MSB to LSB). Show a program that can input a byte from port 2 and determine if bit 0 is a 1 or a 0. If the bit is a 1, the program is to load the accumulator with an ASCII Y (yes). If the bit is a 0, the program should load the accumulator with an ASCII N (no). The yes or no answer is to be sent to output port 3.

SOLUTION

Label	Mnemonic	Comment
	IN 02H	Get byte from port 2
	ANI 01H	Isolate bit 0
	JNZ YES	Jump if bit 0 is a 1
	MVI A,4EH	Load N into accumulator
	JMP DONE	Skip next instruction
YES:	MVI A,59H	Load Y into accumulator
DONE:	OUT 03H	Send answer to port 3
	HLT	

The IN 02H transfers the contents of input port 2 to the accumulator to get

$$A = A_7 A_6 A_5 A_4 A_3 A_2 A_1 A_0$$

The immediate byte in ANI 01H is

$$0000\ 0001$$

This byte is called a *mask* because its 0s will mask or blank out the corresponding high bits in the accumulator. In other words, after the execution of ANI 01H the accumulator contents are

$$A = 0000\ 000A_0$$

If A_0 is 1, the JNZ YES will produce a jump to the MVI A,59H; this loads a 59H (the ASCII for Y) into the accumulator. If A_0 is 0, the program falls through to the MVI A,4EH. This loads the accumulator with the ASCII for N.

The OUT 03H loads the answer, either ASCII Y or N, into port 3. The hexadecimal display therefore shows either 59H or 4EH.

EXAMPLE 11-14

Instead of a parallel output at port 3, we want a serial output at port 4. Modify the foregoing program so that it converts the answer (59H or 4EH) into a serial output at bit 0, port 4.

SOLUTION

Label	Mnemonic	Comment
	IN 02H	
	ANI 01H	
YES:	JNZ YES	
	MVI A,4EH	
	JMP DONE	
DONE:	MVI A,59H	
AGAIN:	MVI C,08H	;Load counter with 8
	OUT 04H	;Send LSB to port 4
	RAR	;Position next bit
	DCR C	;Decrement count
	JNZ AGAIN	;Test count
	HLT	

In converting from parallel to serial data, the A_0 bit is sent first, then the A_1 bit, then the A_2 bit, and so on.

EXAMPLE 11-15

Handshaking is an interaction between a CPU and a peripheral device that takes place during an I/O data transfer.

In SAP-2 the handshaking takes place as follows. After you enter two digits (1 byte) into the hexadecimal encoder of Fig. 11-2, the data is loaded into port 1; at the same time, a high *READY* bit is sent to port 2.

Before accepting input data, the CPU checks the *READY* bit in port 2. If the *READY* bit is low, the CPU waits. If the *READY* bit is high, the CPU loads the data in port 1. After the data transfer is finished, the CPU sends a high *ACKNOWLEDGE* signal to the hexadecimal keyboard encoder; this resets the *READY* bit to 0. The *ACKNOWLEDGE* bit then is reset to low.

After you key in a new byte, the cycle starts over with new data going to the port 1 and a high *READY* bit to port 2.

The sequence of SAP-2 handshaking is

1. *READY* bit (bit 0, port 2) goes high.
2. Input the data in port 1 to the CPU.
3. *ACKNOWLEDGE* bit (bit 7, port 4) goes high to reset *READY* bit.
4. Reset the *ACKNOWLEDGE* bit.

Write a program that inputs a byte of data from port 1 using handshaking. Store the byte in the B register.

SOLUTION

Label	Mnemonic	Comment
STATUS:	IN 02H	;Input byte from port 2
	ANI 01H	;Isolate <i>READY</i> bit
	JZ STATUS	;Jump back if not ready
	IN 01H	;Transfer data in port 1
	MOV B,A	;Transfer from A to B
	MVI A,80H	;Set <i>ACKNOWLEDGE</i> bit
	OUT 04H	;Output high <i>ACKNOWLEDGE</i>
	MVI A,00H	;Reset <i>ACKNOWLEDGE</i> bit
	OUT 04H	;Output low <i>ACKNOWLEDGE</i>
	HLT	

If the *READY* bit is low, the ANI 01H will force the accumulator contents to go to zero. The JZ STATUS therefore will loop back to IN 02H. This looping will continue until the *READY* bit is high, indicating valid data in port 1.

When the *READY* bit is high, the program falls through the JZ STATUS to the IN 01H. This transfers a byte from port 1 to the accumulator. The MOV sends the byte to the B register. The MVI A,80H sets the *ACKNOWLEDGE* bit

(bit 7). The OUT 04H sends this high ACKNOWLEDGE to the hexadecimal encoder where the internal hardware resets the READY bit. Then the ACKNOWLEDGE bit is reset in preparation for the next input cycle.

11-8 SAP-2 SUMMARY

This section summarizes the SAP-2 T states, flags, and addressing modes.

T States

The SAP-2 controller-sequencer is microprogrammed with a variable machine cycle. This means that some instructions take longer than others to execute. As you recall, the idea behind microprogramming is to store the control routines in a ROM and access them as needed.

Table 11-3 shows each instruction and the number of T states needed to execute it. For instance, it takes four T states to execute the ADD B instruction, seven to execute the ANI byte, eighteen to execute the CALL, and so on. Knowing the number of T states is important in timing applications.

Notice that the JM instruction has T states of 10/7. This means it takes 10 T states when a jump occurs but only 7 without the jump. The same idea applies to the other conditional jumps; 10 T states for a jump, 7 with no jump.

Flags

As you know, the accumulator goes negative or zero during the execution of some instructions. This affects the sign and zero flags. Figure 11-8 shows the circuits used in SAP-2 to set the flags.

When the accumulator contents are negative, the leading bit A_7 is a 1. This sign bit drives the lower AND gate. When the accumulator contents are zero, all bits are zero and the output of the NOR gate is a 1. This NOR output drives the upper AND gate. If gating signal L_F is high, the flags will be updated to reflect the sign and zero condition of the accumulator. This means the Z_{FLAG} will be high when the accumulator contents are zero; the S_{FLAG} will be high when the accumulator contents are negative.

Not all instructions affect the flags. As shown in Table 11-3, the instructions that update the flags are ADD, ANA, ANI, DCR, INR, ORA, ORI, SUB, XRA, and XRI. Why only these instructions? Because the L_F signal of Fig. 11-8 is high only when these instructions are executed. This is accomplished by microprogramming an L_F bit for each instruction. In other words, in the control ROM we store a high L_F bit for the foregoing instructions, and a low L_F bit for all others.

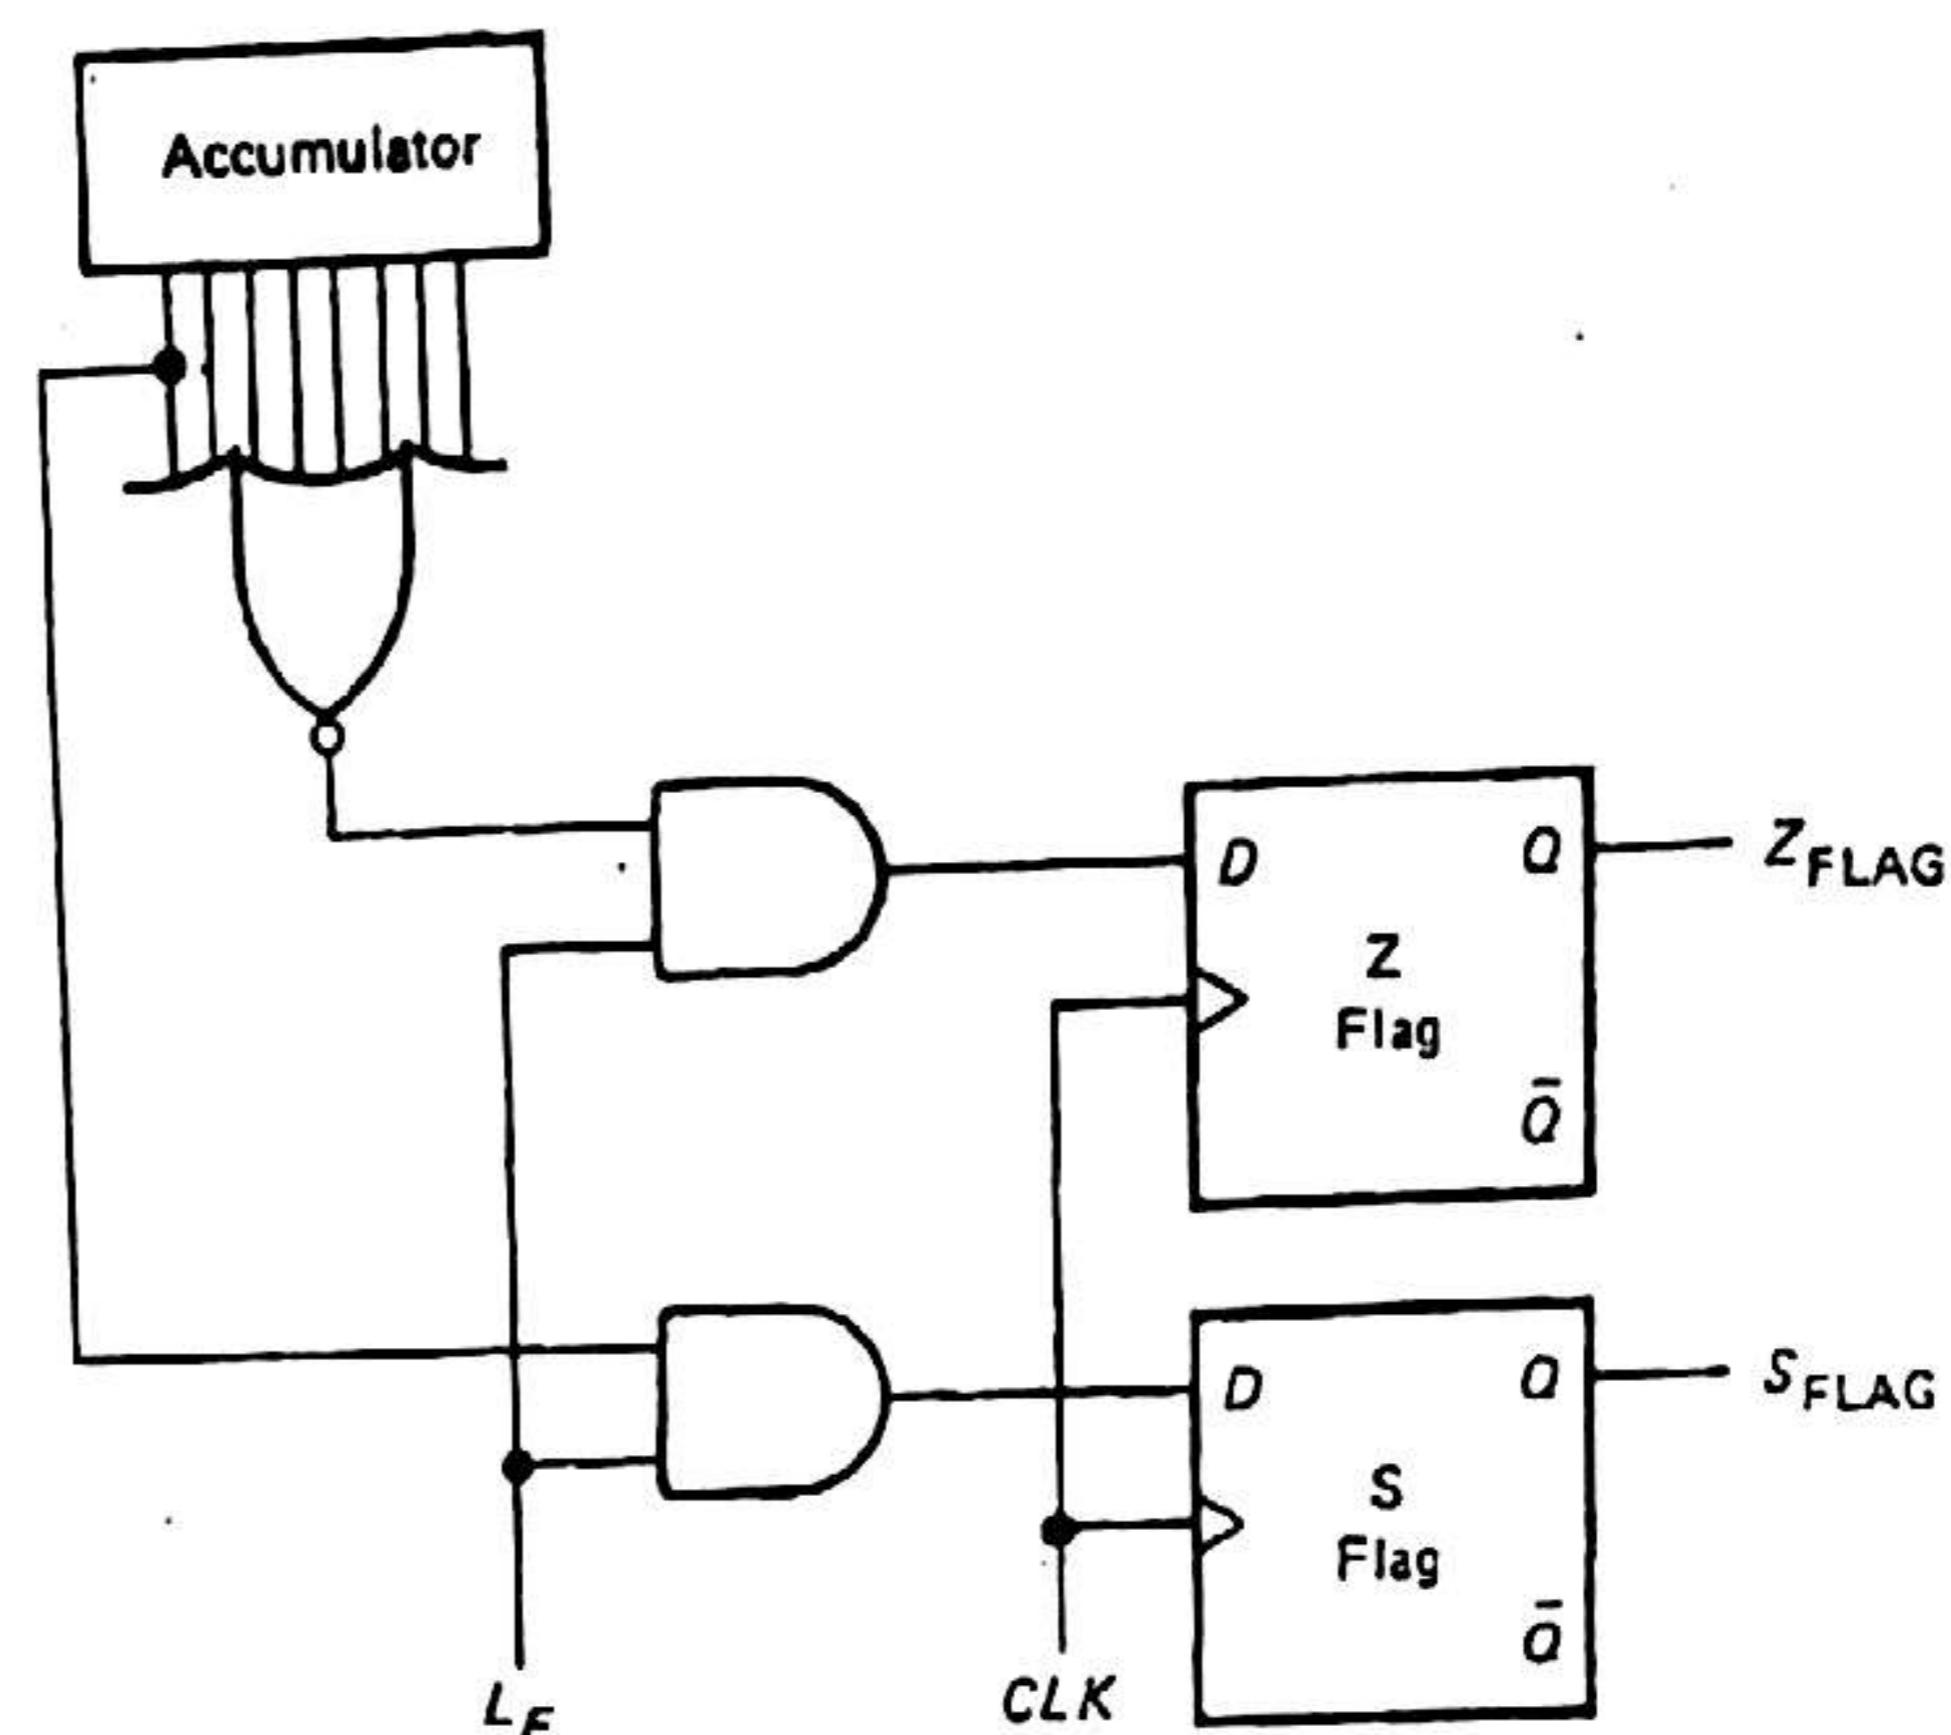


Fig. 11-8 Setting the flags.

Conditional Jumps

As mentioned earlier, the conditional jumps take ten T states when the jump occurs but only seven T states when no jump takes place. Briefly, this is accomplished as follows. During the execution cycle the address ROM sends the computer to the starting address of a conditional-jump microroutine. The initial microinstruction looks at the flags and judges whether or not to jump. If a jump is indicated, the microroutine continues; otherwise, it is aborted and the computer begins a new fetch cycle.

Addressing Modes

The SAP-2 instructions access data in different ways. It is the operand that tells us how the data is to be accessed. For instance, the first instructions discussed were

LDA address
STA.address

These are examples of *direct* addressing because we specify the address where the data is to be found.

Immediate addressing is different. Instead of giving an address for the data, we give the data itself. For instance,

MVI A,byte

accesses the data to be loaded into the accumulator by using the byte in memory that immediately follows the op code. Table 11-3 shows the other immediate instructions.

An instruction like

MOV A,B

TABLE 11-3. SAP-2 INSTRUCTION SET

Instruction	Op Code	T States	Flags	Addressing	Bytes
ADD B	80	4	S, Z	Register	1
ADD C	81	4	S, Z	Register	1
ANA B	A0	4	S, Z	Register	1
ANA C	A1	4	S, Z	Register	1
ANI byte	E6	7	S, Z	Immediate	2
CALL address	CD	18	None	Immediate	3
CMA	2F	4	None	Implied	1
DCR A	3D	4	S, Z	Register	1
DCR B	05	4	S, Z	Register	1
DCR C	0D	4	S, Z	Register	1
HLT	76	5	None	—	1
IN byte	DB	10	None	Direct	2
INR A	3C	4	S, Z	Register	1
INR B	04	4	S, Z	Register	1
INR C	0C	4	S, Z	Register	1
JM address	FA	10/7	None	Immediate	3
JMP address	C3	10	None	Immediate	3
JNZ address	C2	10/7	None	Immediate	3
JZ address	CA	10/7	None	Immediate	3
LDA address	3A	13	None	Direct	3
MOV A,B	78	4	None	Register	1
MOV A,C	79	4	None	Register	1
MOV B,A	47	4	None	Register	1
MOV B,C	41	4	None	Register	1
MOV C,A	4F	4	None	Register	1
MOV C,B	48	4	None	Register	1
MVI A,byte	3E	7	None	Immediate	2
MVI B,byte	06	7	None	Immediate	2
MVI C,byte	0E	7	None	Immediate	2
NOP	00	4	None	—	1
ORA B	B0	4	S, Z	Register	1
ORA C	B1	4	S, Z	Register	1
ORI byte	F6	7	S, Z	Immediate	2
OUT byte	D3	10	None	Direct	2
RAL	17	4	None	Implied	1
RAR	1F	4	None	Implied	1
RET	C9	10	None	Implied	1
STA address	32	13	None	Direct	3
SUB B	90	4	S, Z	Register	1
SUB C	91	4	S, Z	Register	1
XRA B	A8	4	S, Z	Register	1
XRA C	A9	4	S, Z	Register	1
XRI byte	EE	7	S, Z	Immediate	2

is an example of *register addressing*. The data to be loaded is stored in a CPU register rather than in the memory. Register addressing has the advantage of speed because fewer T states are needed for this type of instruction.

Implied addressing means that the location of the data is contained within the op code itself. For instance,

RAL

tells us to rotate the accumulator bits left. The data is in the accumulator; this is why no operand is needed with implied addressing.

Bytes

Each instruction occupies a number of bytes in the memory. SAP-2 instructions are either 1, 2, or 3 bytes long. Table 11-3 shows the length of each instruction. As you see, ADD instructions are 1-byte instructions, ANI instructions are 2-byte instructions, CALLs are 3-byte instructions, and so forth.

EXAMPLE 11-16

SAP-2 has a clock frequency of 1 MHz. This means that each T state has a duration of 1 μ s. How long does it take to execute the following SAP-2 subroutine?

Label	Mnemonic	Comment
AGAIN:	MVI C,46H	;Preset count to decimal 70
	DCR C	;Count down
	JNZ AGAIN	;Test count
	NOP	;Delay
	RET	

SOLUTION

The MVI is executed once to initialize the count. The DCR is executed 70 times. The JNZ jumps back 69 times and falls through once. With the number of T states given in Table 11-3, we can calculate the total execution time of the subroutine as follows:

$$\begin{aligned}
 \text{MVI: } & 1 \times 7 \times 1 \mu\text{s} = 7 \mu\text{s} \\
 \text{DCR: } & 70 \times 4 \times 1 \mu\text{s} = 280 \\
 \text{JNZ: } & 69 \times 10 \times 1 \mu\text{s} = 690 \quad (\text{jump}) \\
 \text{JNZ: } & 1 \times 7 \times 1 \mu\text{s} = 7 \quad (\text{no jump}) \\
 \text{NOP: } & 1 \times 4 \times 1 \mu\text{s} = 4 \\
 \text{RET: } & 1 \times 10 \times 1 \mu\text{s} = 10 \\
 & 998 \mu\text{s} \approx 1 \text{ ms}
 \end{aligned}$$

As you see, the total time needed to execute the subroutine is approximately 1 ms.

A subroutine like this can produce a time delay of 1 ms whenever it is called. There are many applications where you need a delay.

According to Table 11-3, the instructions in the foregoing subroutine have the following byte lengths:

Instruction	MVI	DCR	JNZ	NOP	RET
Bytes	2	1	3	1	1

The total byte length of the subroutine is 8. As part of the SAP-2 software, the foregoing subroutine can be assembled and relocated at addresses F010H to F017H. Hereafter, the execution of a CALL F010H will produce a time delay of 1 ms.

EXAMPLE 11-17

How much time delay does this SAP-2 subroutine produce?

Label	Mnemonic	Comment
	MVI B,0AH	;Preset B counter with decimal 10
LOOP1:	MVI C,47H	;Preset C counter with decimal 71
LOOP2:	DCR C	;Count down on C
	JNZ LOOP2	;Test for C count of zero
	DCR B	;Count down on B
	JNZ LOOP1	;Test for B count of zero
	RET	

SOLUTION

This subroutine has two loops, one inside the other. The inner loop consists of DCR C and JNZ LOOP2. This inner loop produces a time delay of

$$\begin{aligned}
 \text{DCR C: } & 71 \times 4 \times 1 \mu\text{s} = 284 \mu\text{s} \\
 \text{JNZ LOOP2: } & 70 \times 10 \times 1 \mu\text{s} = 700 \quad (\text{jump}) \\
 \text{JNZ LOOP2: } & 1 \times 7 \times 1 \mu\text{s} = 7 \quad (\text{no jump}) \\
 & 991 \mu\text{s}
 \end{aligned}$$

When the C count drops to zero, the program falls through the JNZ LOOP2. The B counter is decremented, and the JNZ LOOP1 sends the program back to the MVI C,47H. Then we enter LOOP2 for a second time. Because LOOP2 is inside LOOP1, LOOP2 will be executed 10 times and the overall time delay will be approximately 10 ms.

Here are the calculations for the overall subroutine:

$$\begin{aligned}
 \text{MVI B,0AH: } & 1 \times 7 \times 1 \mu\text{s} = 7 \mu\text{s} \\
 \text{MVI C,47H: } & 10 \times 7 \times 1 \mu\text{s} = 70 \\
 \text{LOOP2: } & 10 \times 991 \mu\text{s} = 9,910 \\
 \text{DCR B: } & 10 \times 4 \times 1 \mu\text{s} = 40 \\
 \text{JNZ LOOP1: } & 9 \times 10 \times 1 \mu\text{s} = 90 \quad (\text{jump}) \\
 \text{JNZ LOOP1: } & 1 \times 7 \times 1 \mu\text{s} = 7 \quad (\text{no jump}) \\
 \text{RET: } & 1 \times 10 \times 1 \mu\text{s} = 10 \\
 & 10,134 \mu\text{s} \approx 10 \text{ ms}
 \end{aligned}$$

This SAP-2 subroutine has a byte length of

$$2 + 2 + 1 + 3 + 1 + 3 + 1 = 13$$

It can be assembled and located at addresses F020H to F02CH. From now on, a CALL F020H will produce a time delay of approximately 10 ms.

By changing the first instruction to

MVI B,64H

the B counter is preset with decimal 100. In this case, the inner loop is executed 100 times and the overall time delay is approximately 100 ms. This 100-ms subroutine can be located at addresses F030H to F03CH.

EXAMPLE 11-18

Here is a subroutine with three loops *nested* one inside the other. How much time delay does it produce?

Label	Mnemonic	Comment
	MVI A,0AH	;Preset A counter with decimal 10
LOOP1:	MVI B,64H	;Preset B counter with decimal 100
LOOP2:	MVI C,47H	;Preset C counter with decimal 71
LOOP3:	DCR C JNZ LOOP3 DCR B JNZ LOOP2 DCR A JNZ LOOP1 RET	;Count down C ;Test C for zero ;Count down B ;Test B for zero ;Count down A ;Test A for zero

SOLUTION

LOOP3 still takes approximately 1 ms to get through. LOOP2 makes 100 passes through LOOP3, so it takes about 100 ms to complete LOOP2. LOOP1 makes 10 passes through LOOP2; therefore, it takes around 1 s to complete the overall subroutine.

What do we have? A 1-s subroutine. It will be located in F040H to F052H. To produce a 1-s time delay, we would use a CALL F040H.

By changing the initial instruction to

MVI A,64H

LOOP1 will make 100 passes through LOOP2, which makes 100 passes through LOOP3. The resulting subroutine can be located at F060H to F072H and will produce a time delay of 10 s.

Table 11-4 summarizes the SAP-2 time delays. With these subroutines, we can produce delays from 1 ms to 10 s.

TABLE 11-4. SAP-2 SUBROUTINES

Label	Starting Address	Delay	Registers Used
DIMS	F010H	1 ms	C
D10MS	F020H	10 ms	B, C
D100MS	F030H	100 ms	B, C
D1SEC	F040H	1 s	A, B, C
D10SEC	F060H	10 s	A, B, C

EXAMPLE 11-19

The traffic lights on a main road show green for 50 s, yellow for 6 s, and red for 30 s. Bits 1, 2, and 3 of port 4 are the control inputs to peripheral equipment that runs these traffic lights. Write a program that produces time delays of 50, 6, and 30 s for the traffic lights.

SOLUTION

Label	Mnemonic	Comment
AGAIN:	MVI A,32H	;Preset counter with decimal 50
	STA SAVE	;Save accumulator contents
	MVI A,02H	;Set bit 1
	OUT 04H	;Turn on green light
LOOPGR:	CALL D1SEC	;Call 1-s subroutine
	LDA SAVE	;Load current A count
	DCR A	;Decrement A count
	STA SAVE	;Save reduced A count
	JNZ LOOPGR	;Test for zero
	MVI A,06H	;Preset counter with decimal 6
	STA SAVE	
	MVI A,04H	;Set bit 2
	OUT 04H	;Turn on yellow light
LOOPYE:	CALL D1SEC	
	LDA SAVE	
	DCR A	
	STA SAVE	
	JNZ LOOPYE	
	MVI A,1EH	;Preset counter with decimal 30
	STA SAVE	
	MVI A,08H	;Set bit 3
	OUT 04H	;Turn on red light
LOOPRE:	CALL D1SEC	
	LDA SAVE	
	DCR A	
	STA SAVE	
	JNZ LOOPRE	
	JMP AGAIN	
SAVE:	Data	

Let's go through the green part of the program; the yellow and red are similar. The green starts with MVI A,32H, which loads decimal 50 into the accumulator. The STA SAVE will store this initial value in a memory location called SAVE. The MVI A,02H sets bit 1 in the accumulator; then the OUT 04H transfers this high bit to port 4. Since this port controls the traffic lights, the green light comes on.

The CALL D1SEC produces a time delay of 1 s. The LDA SAVE loads the accumulator with decimal 50. The DCR A decrements the count to decimal 49. The STA SAVE stores this decimal 49. Then the JNZ LOOPGR takes the program back to the CALL D1SEC for another 1-s delay.

The CALL D1SEC is executed 50 times; therefore, the green light is on for 50 s. Then the program falls through the JNZ LOOPGR to the MVI A,06H. The yellow part of the program then begins and results in the yellow light being on for 6 s. Finally, the red part of the program is executed and the red light is on for 30 s. The JMP AGAIN repeats the whole process. In this way, the program is controlling the timing of the green, yellow, and red lights.

EXAMPLE 11-20

Middle C on a piano has a frequency of 261.63 Hz. Bit 5 of port 4 is connected to an amplifier which drives a loudspeaker. Write a program that sends middle C to the loudspeaker.

SOLUTION

To begin with, the period of middle C is

$$T = \frac{1}{f} = \frac{1}{261.63 \text{ Hz}} = 3.822 \mu\text{s}$$

What we are going to do is send to port 4 a signal like Fig. 11-9. This square wave is high for 1,911 μs and low for 1,911 μs . The overall period is 3,822 μs , and the frequency is 261.63 Hz. Because the signal is square rather than sinusoidal, it will sound distorted but it will be recognizable as middle C.

Here is a program that sends middle C to the loudspeaker.

Label	Mnemonic	Comment
LOOP1:	OUT 04H	;Send bit to speaker
	MVI C,86H	;Preset counter with decimal 134
LOOP2:	DCR C	;Count down
	JNZ LOOP2	;Test count
	CMA	;Reset bit 5
	NOP	;Fine tuning
	NOP	;Fine tuning
	JMP LOOP1	;Go back for next half cycle

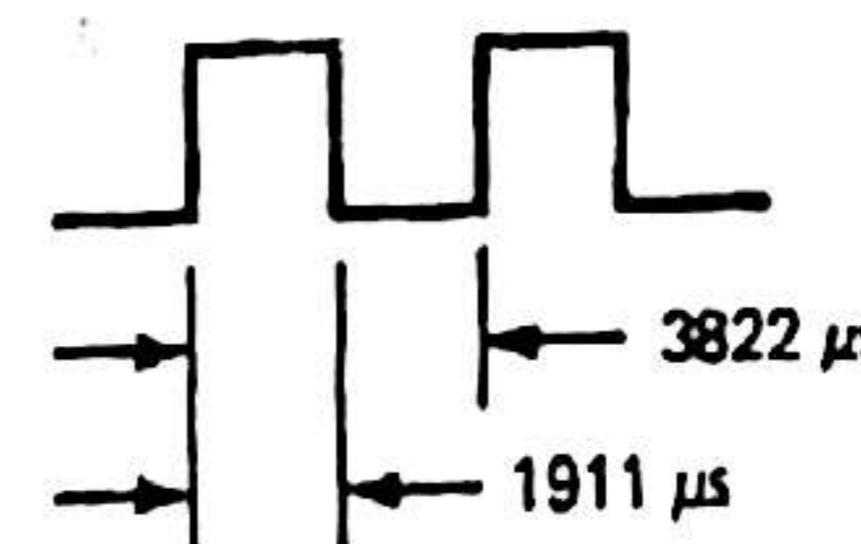


Fig. 11-9 Generating middle C note.

The OUT 04H sends a bit (either low or high) to the loudspeaker. The MVI presets the counter to decimal 134. Then comes LOOP2, the DCR and JNZ, which produces a time delay of 1,866 μs . The program then falls through to the CMA, which complements all bits in the accumulator. The two NOPs add a time delay of 8 μs . The JMP LOOP1 then takes the program back. When the OUT 04H is executed, bit 5 (complemented) goes to the loudspeaker. In this way the loudspeaker is driven into the opposite state. The execution time for both half cycles is 3,824 μs , close enough to middle C.

Here are the calculations for the time delay:

OUT 04H:	$1 \times 10 \times 1 \mu\text{s} =$	10 μs
MVI C,86H:	$1 \times 7 \times 1 \mu\text{s} =$	7
DCR C:	$134 \times 4 \times 1 \mu\text{s} =$	536
JNZ LOOP2:	$133 \times 10 \times 1 \mu\text{s} =$	1,330
JNZ LOOP2:	$1 \times 7 \times 1 \mu\text{s} =$	7
CMA:	$1 \times 4 \times 1 \mu\text{s} =$	4
2 NOPs:	$2 \times 4 \times 1 \mu\text{s} =$	8
JMP LOOP1:	$1 \times 10 \times 1 \mu\text{s} =$	10
		1,912 μs

This is the half-cycle time. The period is 3,824 μs .

EXAMPLE 11-21

Serial data is sometimes called a serial data stream because bits flow one after another. In Fig. 11-10 a serial data stream drives bit 7 of port 2 at a rate of approximately 600 bits per second. Write a program that inputs an 8-bit character in a serial data stream and stores it in memory location 2100H.

SOLUTION

Since approximately 600 bits are received each second, the period of each bit is

$$\frac{1}{600 \text{ Hz}} = 1.667 \mu\text{s}$$

The idea will be to input a bit from port 2, rotate the accumulator right, wait approximately 1,600 μs , then input another bit, rotate the accumulator right, and so on, until all bits have been received.

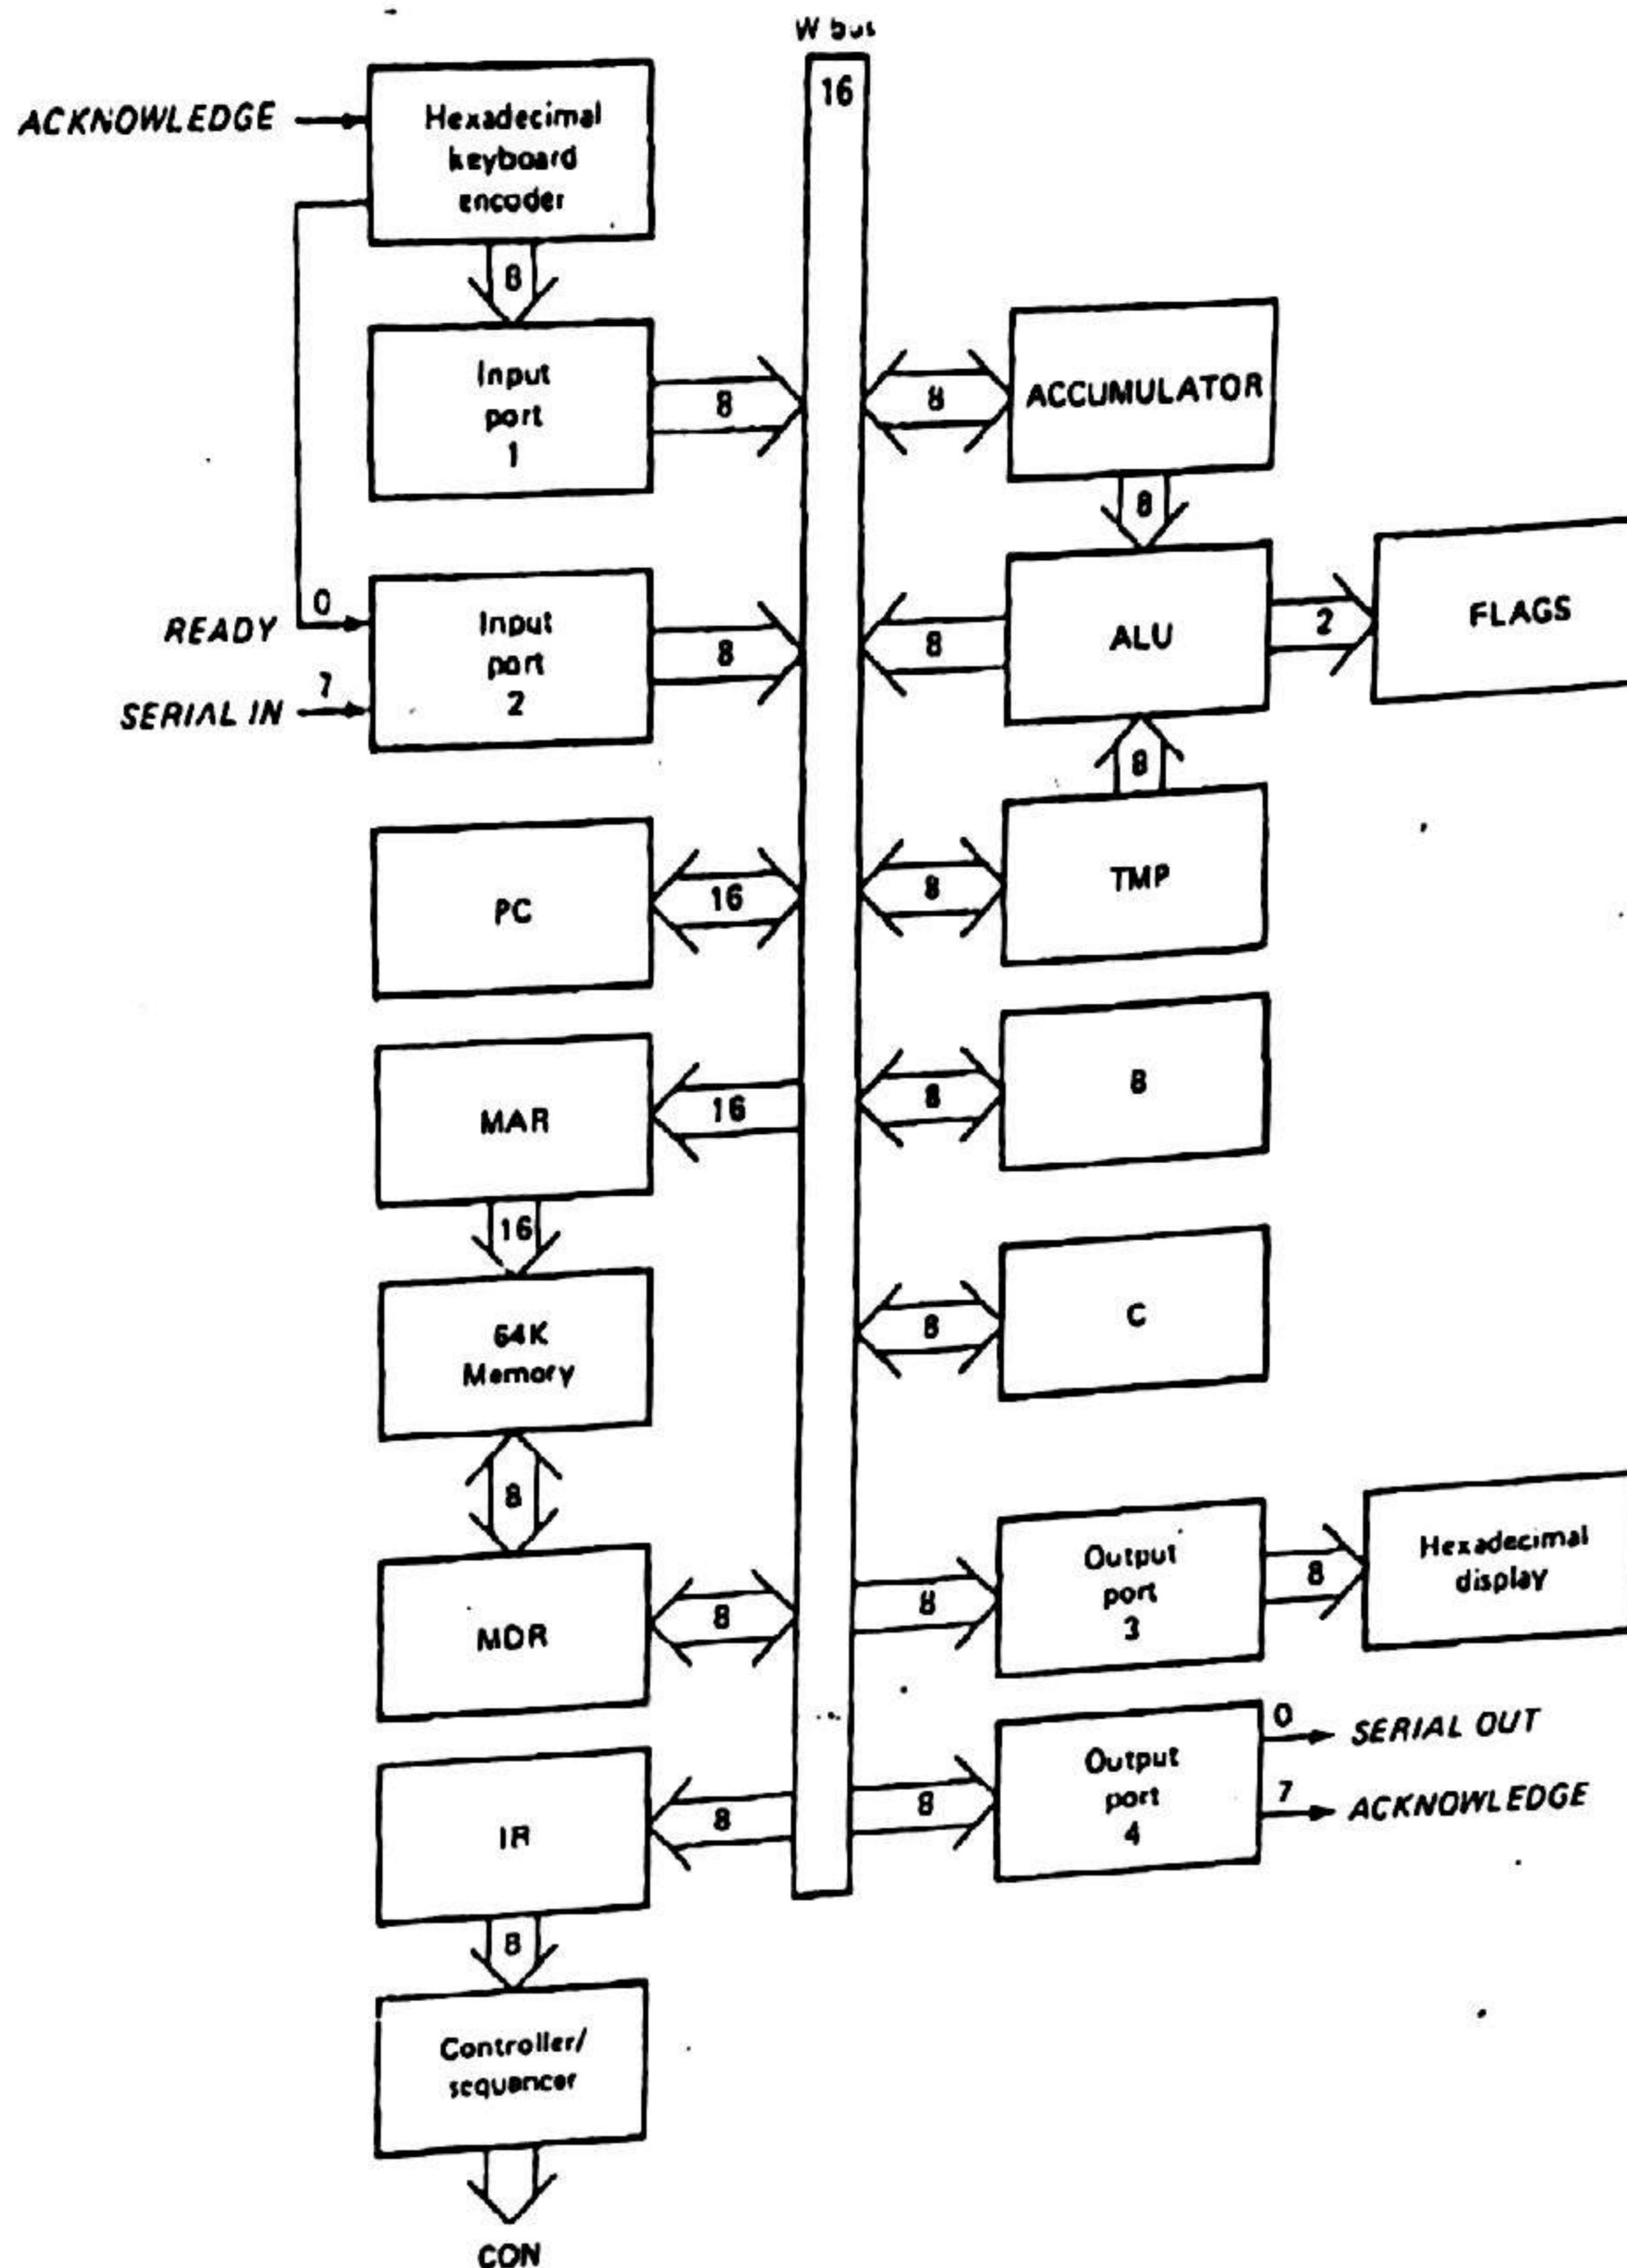


Fig. 11-10

Here is a program that will work:

Label	Mnemonic	Comment
BIT:	MVI B,00H	;Load zero into B register
	MVI C,07H	;Preset counter with decimal 7
	IN 02H	;Input data
	ANI 80H	;Isolate bit 7
	ORA B	;Update character
	RAR	;Move bits right
DELAY:	MOV B,A	;Save bits in B
	MVI A,73H	;Begin a delay of 1,600 μ s
	DCR A	;Count down A
	JNZ DELAY	;Test A count for zero
	DCR C	;Count down C
	JNZ BIT	;Test C count for zero

The first instruction clears the B register. The second instruction loads decimal 7 into the C counter. The IN 02H brings in the data from port 2. The ANI mask isolates bit 7 because this is the SERIAL IN bit from port 2. The ORA B does nothing the first time through because B is full of 0s. The RAR moves the accumulator bits to the right. The MOV B,A stores the accumulator contents in the B register.

MVI A,73H presets the accumulator with decimal 115. Then comes a delay loop, DCR A and JNZ DELAY, that takes approximately 1,600 μ s to complete.

The DCR C reduces the C count by 1, and the JNZ BIT tests the C count for zero. The program jumps back to the IN 02H to get the next bit from the serial data stream. The ANI mask isolates bit 7, which is then ORED with the contents of the B register; this combines the previous bit with the newly received bit. After another RAR, the two received bits are stored in the B register. Then comes another delay of approximately 1,600 μ s.

The program continues to loop and each time a new bit is input from the serial data stream. After 7 bits have been

received, the program will fall through the JNZ BIT instruction.

The last four instructions do the following. The IN 02H brings in the eighth bit. The ANI isolates bit 7. The ORA B combines this new bit with the other seven bits in the B register. At this point, all received bits are in the accumulator. The STA 2100H then stores the byte in the accumulator at 2100H.

A concrete example will help. Suppose the 8 bits being received are 57H, the ASCII code for W. The LSB is received first, the MSB last. Here is how the contents of the B register appear after the execution of the ORA B:

A = 1000 0000	(First pass through loop)
A = 1100 0000	(Second pass)
A = 1110 0000	(Third pass)
A = 0111 0000	(Fourth pass)
A = 1011 1000	(Fifth pass)
A = 0101 1100	(Sixth pass)
A = 1010 1110	(Seventh pass)
A = 0101 0111	(Final contents)

Incidentally, the ASCII code only requires 7 bits; for this reason, the eighth bit (A_7) may be set to zero or used as a parity bit.

GLOSSARY

assembler A program that converts a source program into a machine-language program.

comment Personal notes in an assembly-language program that are not assembled. They refresh the programmer's memory at a later date.

conditional jump A jump that occurs only if certain conditions are satisfied.

direct addressing Addressing in which the instruction contains the address of the data to be operated on.

flag A flip-flop that keeps track of a changing condition during a computer run.

hand assembling Translating a source program into a machine-language program by hand rather than computer.

handshaking Interaction between a CPU and a peripheral device that takes place during an I/O operation. In SAP-2 it involves READY and ACKNOWLEDGE signals.

immediate addressing Addressing in which the data to be operated on is the byte immediately following the op code of the instruction.

implied addressing Addressing in which the location of the data is contained within the mnemonic.

label A name given to an instruction in an assembly-language program. To jump to this instruction, you can use the label rather than the address. The assembler will work out the correct address of the label and will use this address in the machine-language program.

mask A byte used with an ANI instruction to blank out certain bits.

register addressing Addressing in which the data is stored in a CPU register.

relocate To move a program or subroutine to another part of the memory. In doing this, the addresses of jump instructions must be converted to new addresses.

subroutine A program stored in higher memory that can be used repeatedly as part of a main program.

SELF-TESTING REVIEW

Read each of the following and provide the missing words. Answers appear at the beginning of the next question.

1. The controller-sequencer produces _____ words or microinstructions.
2. (control) A flag is a _____ that keeps track of a changing condition during a computer run. The sign flag is set when the accumulator contents go negative. The _____ flag is set when the accumulator contents go to zero.
3. (flip-flop, zero) In coding the LDA address and STA address instructions, the _____ byte of the address is stored in lower memory, the _____ byte in upper memory.

4. (lower, upper) The JMP instruction changes the program sequence by jumping to another part of the program. With the JM instruction, the jump is executed only if the sign flag is _____. With the JNZ instruction, the jump is executed only if the zero flag is _____.
5. (set, clear) Every subroutine must terminate with a _____ instruction. This returns the program to the instruction following the CALL. The CALL instruction is unconditional; it sends the computer to the starting address of a _____.
6. (RET, subroutine) An assembler allows you to write programs in mnemonic form. Then the assembler

- converts these mnemonics into _____ language. The assembler ignores the _____ following a semicolon and assigns addresses to the labels. Labels can be up to six characters, the first of which must be a _____.
7. (machine, comments, letter) Repeated addition is one way to do _____. Programmed multiplication is used in most microprocessors because their ALUs can only add and subtract.
 8. (multiplication) A parameter is a piece of data passed to a _____. When you call a subroutine, you often need to pass _____ for the subroutine to work properly.
 9. (subroutine, parameters) A _____ is used to

10. isolate a bit; it does this because the ANI sets all other bits to zero.
- (mask) Handshaking is an interaction between a _____ and a peripheral device. In SAP-2 the _____ bit tells the CPU whether the input data is valid or not. After the data has been transferred into the computer, the CPU sends an _____ bit to the peripheral device.
- (CPU, READY, ACKNOWLEDGE) The SAP-2 computer is microprogrammed with a _____ machine cycle. This means that some instructions take longer than others to execute.
- (variable) The types of addressing covered up to now are direct, immediate, register, and implied.

PROBLEMS

- 11-1. Write a source program that loads the accumulator with decimal 100, the B register with decimal 150, and the C register with decimal 200.
- 11-2. Hand-assemble the source program of the preceding problem starting at address 2000H.
- 11-3. Write a source program that stores decimal 50 at memory location 4000H, decimal 51 at 4001H, and decimal 52 at 4002H.
- 11-4. Hand-assemble the source program in the preceding problem starting at address 2000H.
- 11-5. Write a source program that adds decimal 68 and 34, with the answer stored at memory location 5000H.
- 11-6. Hand-assemble the preceding program starting at address 2000H.
- 11-7. Here is a program:

Label	Mnemonic
LOOP:	MVI C,78H
	DCR C
	JNZ LOOP
	HLT

- a. How many times (decimal) is the DCR C executed?
- b. How many times does the program jump to LOOP?
- c. How can you change the program to loop 210 times?
- 11-8. Which of the following are valid labels?
 - a. G100
 - b. UPDATE
 - c. STIMES
 - d. 678RED
- c. T
- f. REPEAT
- 11-9. Write a program that multiplies decimal 25 and 7 and stores the answer at 2000H. (Use the multiply subroutine located at F006H.)
- 11-10. Write a program that inputs a byte from port 1 and determines if the decimal equivalent is even or odd. If the byte is even, the program is to send an ASCII E to port 3; if odd, an ASCII O. Modify the foregoing program so that it sends the answer in serial form to bit 0 of port 4.
- 11-11. Write a program that inputs a byte from port 1 using handshaking. Store the byte at address 4000H.
- 11-12. Hand assemble the foregoing program starting at address 2000H.
- 11-13. Write a subroutine that produces a time delay of approximately 500 μ s.
- 11-14. Hand-assemble the preceding program starting at address 2000H.
- 11-15. Write a subroutine that produces a time delay of approximately 35 ms using a SAP-2 subroutine. Hand-assemble this subroutine and locate it at starting address E000H.
- 11-16. Write a subroutine that produces a time delay of 50 ms. (Use a SAP-2 subroutine.) Hand-assemble the program at starting address E100H.
- 11-17. Write a subroutine that produces a delay of 1 min. (Use CALL F060H.)
- 11-18. Hand-assemble the preceding subroutine at starting address F080H.
- 11-19. The C note one octave above middle C has a frequency of 523.25 Hz. Write a program that sends this note to bit 4 of port 4.
- 11-20. Hand-assemble the foregoing program starting at address 2000H.