



Customer : International Textile Limited/巴基斯坦
Model : SYN1200 G2
Drawing number : UXLA00379
Order number : 37029530-31
Controller : DYNET

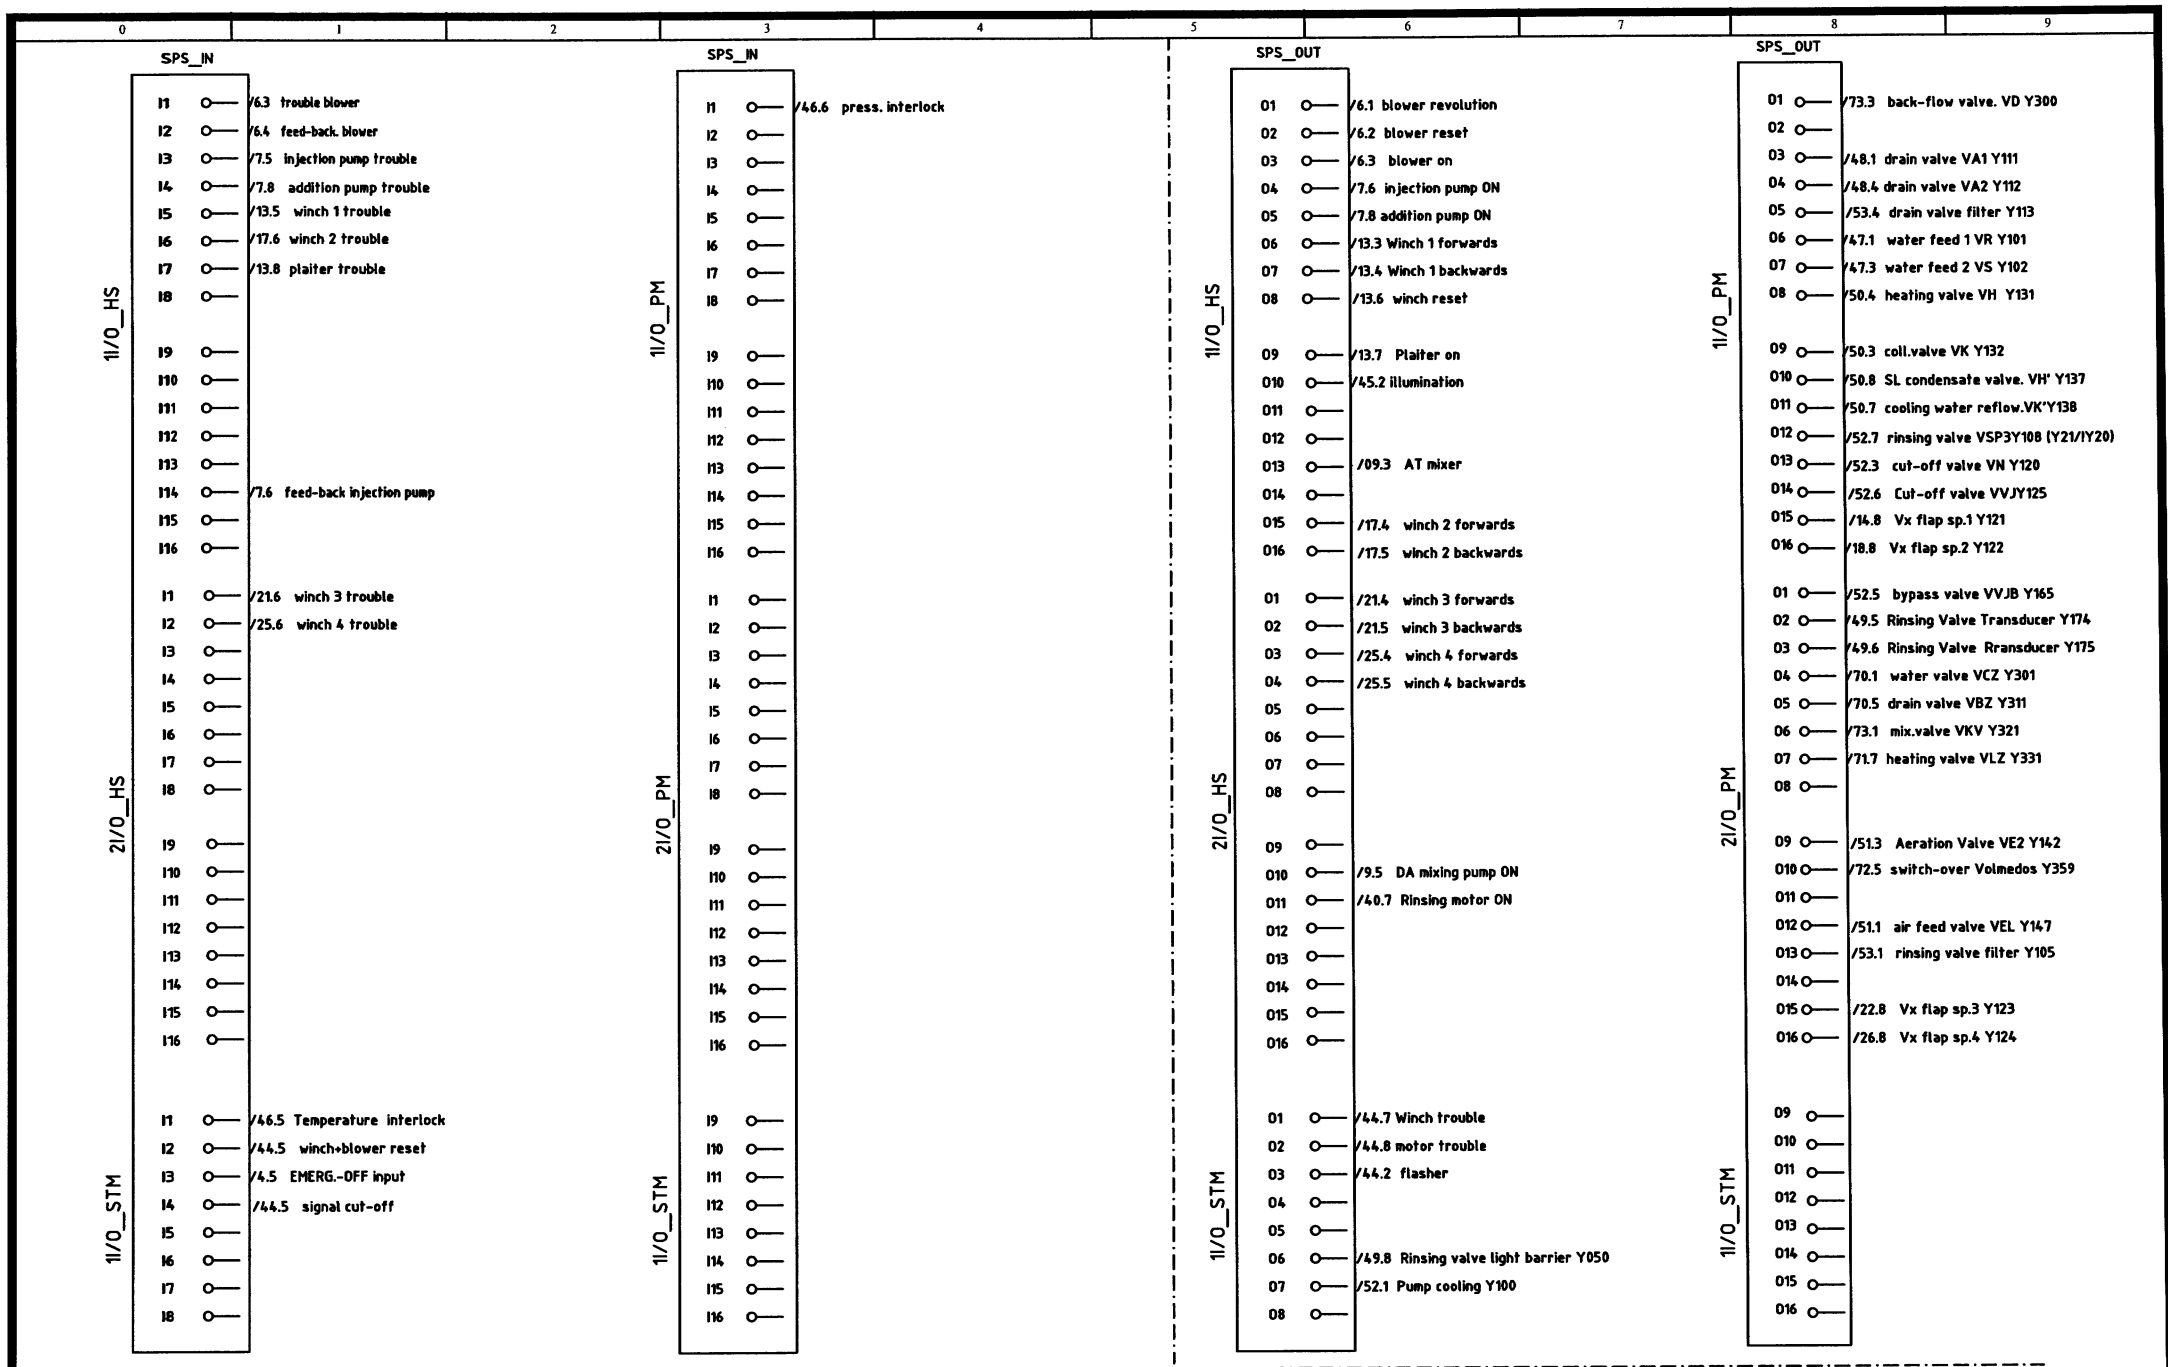
Voltage : 400V/50Hz
Feed line : 95mm²+PE+GND
Control voltage : 220V AC/24V DC
Current main isolator : 250A

No.	DRAWINGS No.	DESCRIPTION	SHEET NO.	DATE
1	UXLA00379	Cover Page	=REF/01	05-06-2012
2	UXLA00379	Drawing Index 1	=REF/02	05-06-2012
3	UXLA00379	Drawing Index 2	=REF/03	05-06-2012
4	UXLA00379	PLC Overview 1	=REF/04	05-06-2012
5	UXLA00379	PLC Overview 2	=REF/05	05-06-2012
6	UXLA00379	Analog On/outputs Overview	=REF/06	05-06-2012
7	UXLA00379	Pneumatic-Module Mounting Plate 1	=REF/07	05-06-2012
8	UXLA00379	Pneumatic-Module Mounting Plate 2	=REF/08	05-06-2012
9	UTFA02003	Components Mounting 1	=REF/09	18-11-2011
10	UTFC02004	Connect Cabinet	=REF/11	05-06-2012
11	UTFE02002	Control.-Module 1	=REF/13	18-11-2011
12	UTFF02003	Control.-Module Operator Panel	=REF/14	18-11-2011
13	UTFG02002	Control.-Module Mounting Plate	=REF/15	18-11-2011
14	UTFH02002	Control.-Module 2	=REF/16	18-11-2011
15	UTFJ02002	Elements Operator's Panel 2 Sp	=REF/17	05-04-2012
16	UTFK02001	Elements Operator's Panel 4 Sp	=REF/18	05-04-2012
17	UTFN02002	Symbols And Indicators	=REF/21	18-11-2011
18	UTFP02002	Installation Denomination	=REF/22	18-11-2011
19	UTFQ02002	Terminals-And Denom. of Plugs 1	=REF/23	18-11-2011
20	UTFR02002	Terminals-And Denom. of Plugs 2	=REF/24	18-11-2011
21	UTAA02004	Feed Lines	=A/01	18-11-2011
22	UTAB02003	Main Cabinet Power Unit/Emergency-off	=A/02	18-11-2011
23	UTAC02008	Oper.-module Power Unit/Emergency-off	=A/03	05-06-2012
24	UTAD02002	Power Feed	=A/04	18-11-2011
25	UTAE02004	PLC-Power Feed	=A/05	05-06-2012
26	UTAJ02004	Blower Frequency Control	=A/06	18-11-2011
27	UTAK02007	Injection pump FQ. Addition Pump AT1	=A/07	18-11-2011
28	UTAM02007	Pump Salt Metering, Mixing Motor AT1	=A/09	05-06-2012
29	UTAN02002	Warm Water Pump And Clean Motor	=A/10	18-11-2011
30	UTBA02003	Winch Store 1 Power Unit ,Plaiter	=A/13	18-11-2011

No.	DRAWINGS No.	DESCRIPTION	SHEET NO.	DATE
31	UTBB02002	Winch Store 1 Control	=A/14	18-11-2011
32	UTBC02002	Run of Fabrics Monitoring store 1	=A/15	18-11-2011
33	UTBD02003	Part 1. Man. Store 1	=A/16	18-11-2011
34	UTBE02004	Winch Store 2 Power Unit, Take-off Roller	=A/17	18-11-2011
35	UTBF02002	Winch Store 2 Control	=A/18	18-11-2011
36	UTBG02002	Run of Fabrics Monitoring Store 2	=A/19	18-11-2011
37	UTBH02002	Part1. Man. Store 2	=A/20	18-11-2011
38	UTBJ02002	Winch Store 3 Power Unit ,Take-off Roller	=A/21	18-11-2011
39	UTBK02001	Winch Store 3Control	=A/22	18-11-2011
40	UTBL02001	Run of Fabrics Monitoring store 3	=A/23	18-11-2011
41	UTBM02001	Part 1. Man. Store 3	=A/24	18-11-2011
42	UTBN02002	Winch Store 4 Power Unit	=A/25	18-11-2011
43	UTBP02001	Winch Store 4 Control	=A/26	18-11-2011
44	UTBQ02001	Run of Fabrics Monitoring Store 4	=A/27	18-11-2011
45	UTBR02001	Part1. Man. Store 4	=A/28	18-11-2011
46	UTCL02002	Injection Spray Rinse Control	=A/40	18-11-2011
47	UTCM02005	Take-off Roller 1/2/3	=A/41	05-06-2012
48	UTCP02002	Flasher	=A/44	05-04-2012
49	UTCQ02002	Illumination	=A/45	18-11-2011
50	UTCRO2002	Interlocks	=A/46	05-06-2012
51	UTDA02002	Fill FK	=A/47	18-11-2011
52	UTDB02002	Drain Valves FK	=A/48	18-11-2011
53	UTDC02003	Level FK	=A/49	18-11-2011
54	UTDD02002	Temperature Control	=A/50	05-06-2012
55	UTDE02002	Aeration	=A/51	18-11-2011
56	UTDF02004	VVJ,VVJB,VSP3,VN,VST	=A/52	18-11-2011
57	UTDG02002	Filter Fill, Drain	=A/53	18-11-2011
58	UTDJ02002	Injection And Power\Rinse Valve VPR	=A/55	18-11-2011
59	UTDL02002	Booster	=A/57	05-06-2012
60	UTDM02002	Water Counter	=A/58	18-11-2011

No.	DRAWINGS No.	DESCRIPTION	SHEET NO.	DATE
61	UTEA02002	AT Fill Level, Drain 2 Water Types	=A/70	18-11-2011
62	UTEB02002	AT Temperature Control	=A/71	05-06-2012
63	UTEC02002	AT Metering	=A/72	18-11-2011
64	UTED02002	AT Mixing	=A/73	18-11-2011
65	UXLA00379	Terminal Diagram 1	=LIB/01	05-06-2012
66	UXLA00379	Terminal Diagram 2	=LIB/02	05-06-2012
67	UXLA00379	Terminal Diagram 3	=LIB/03	05-06-2012
68	UXLA00379	Terminal Diagram 4	=LIB/04	05-06-2012
69	UXLA00379	Terminal Diagram 5	=LIB/05	05-06-2012
70	UXLA00379	Terminal Diagram 6	=LIB/06	05-06-2012
71	UXLA00379	Legend	=LIB/09	05-06-2012
72	UXLA00379	Inverter Parameter	=LIB/10	05-06-2012
73	UXLA00379	Flow Meter Parameter Setting (KROHNE)	=LIB/12	05-06-2012
74	UXLA00379	Network Connection	=LIB/13	05-06-2012
75	UXLA00379	Electric Kilowaterhour Meter	=LIB/14	05-06-2012
76				
77				
78				
79				
80				
81				
82				
83				
84				
85				
86				
87				
88				
89				
90				

No.	DRAWINGS No.	DESCRIPTION	SHEET NO.	DATE
91				
92				
93				
94				
95				
96				
97				
98				
99				
100				
101				
102				
103				
104				
105				
106				
107				
108				
109				
110				
111				
112				
113				
114				
115				
116				
117				
118				
119				
120				



TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.

嚴禁轉移給同業或第三者和复制此圖紙。立信歐洲保留全部權利



FONG'S EUROPE GMBH

DWG. NO

UXLA00379R01

DESIGNED

Yang WeiGuo

DATE

05-06-2012

PLC Overview 1

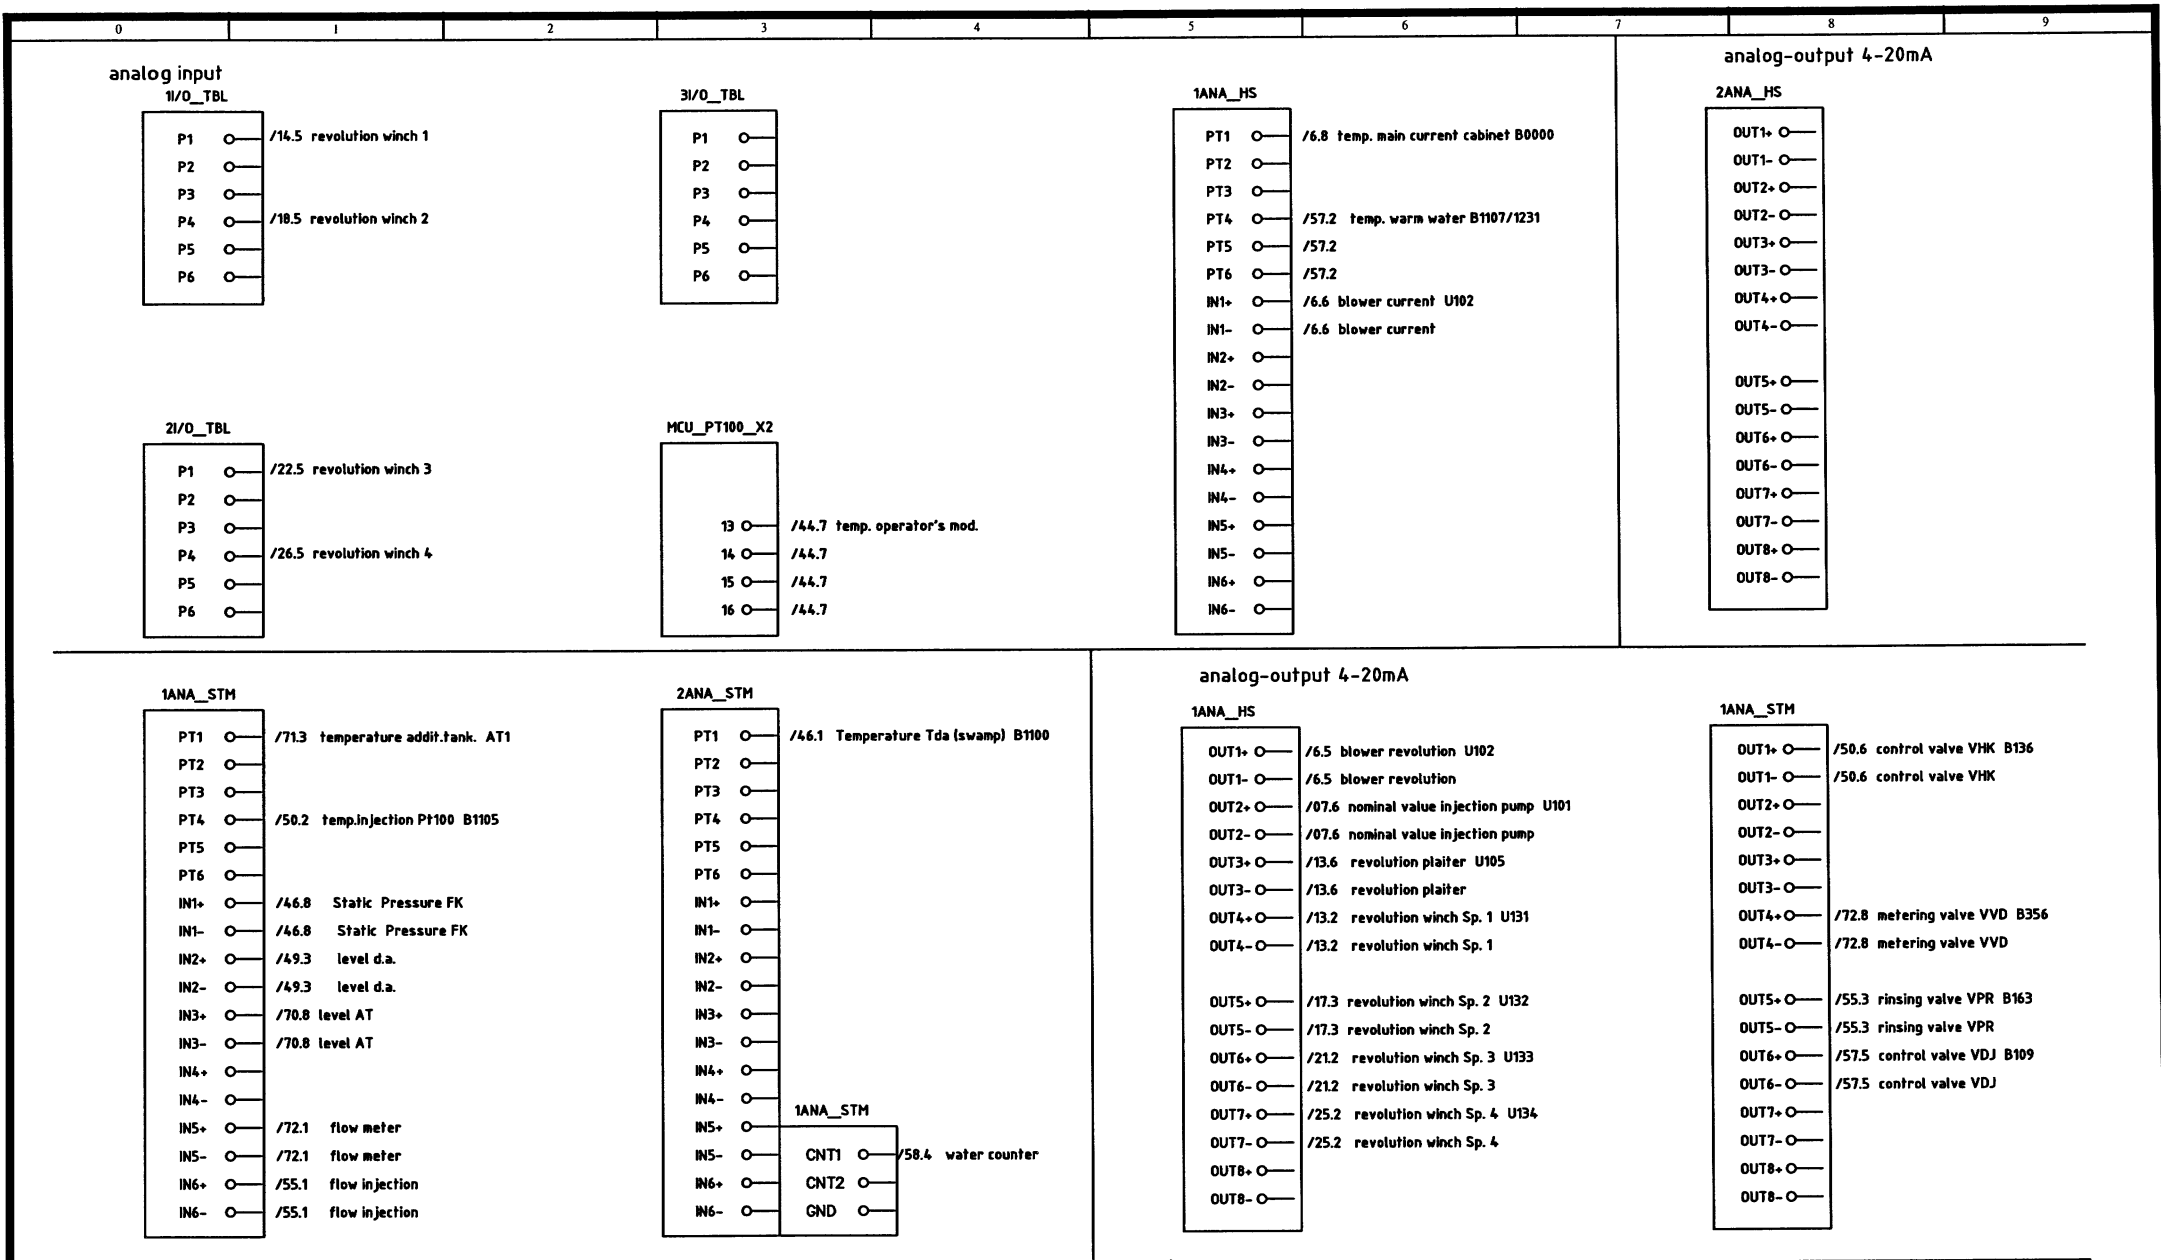
APPROVED

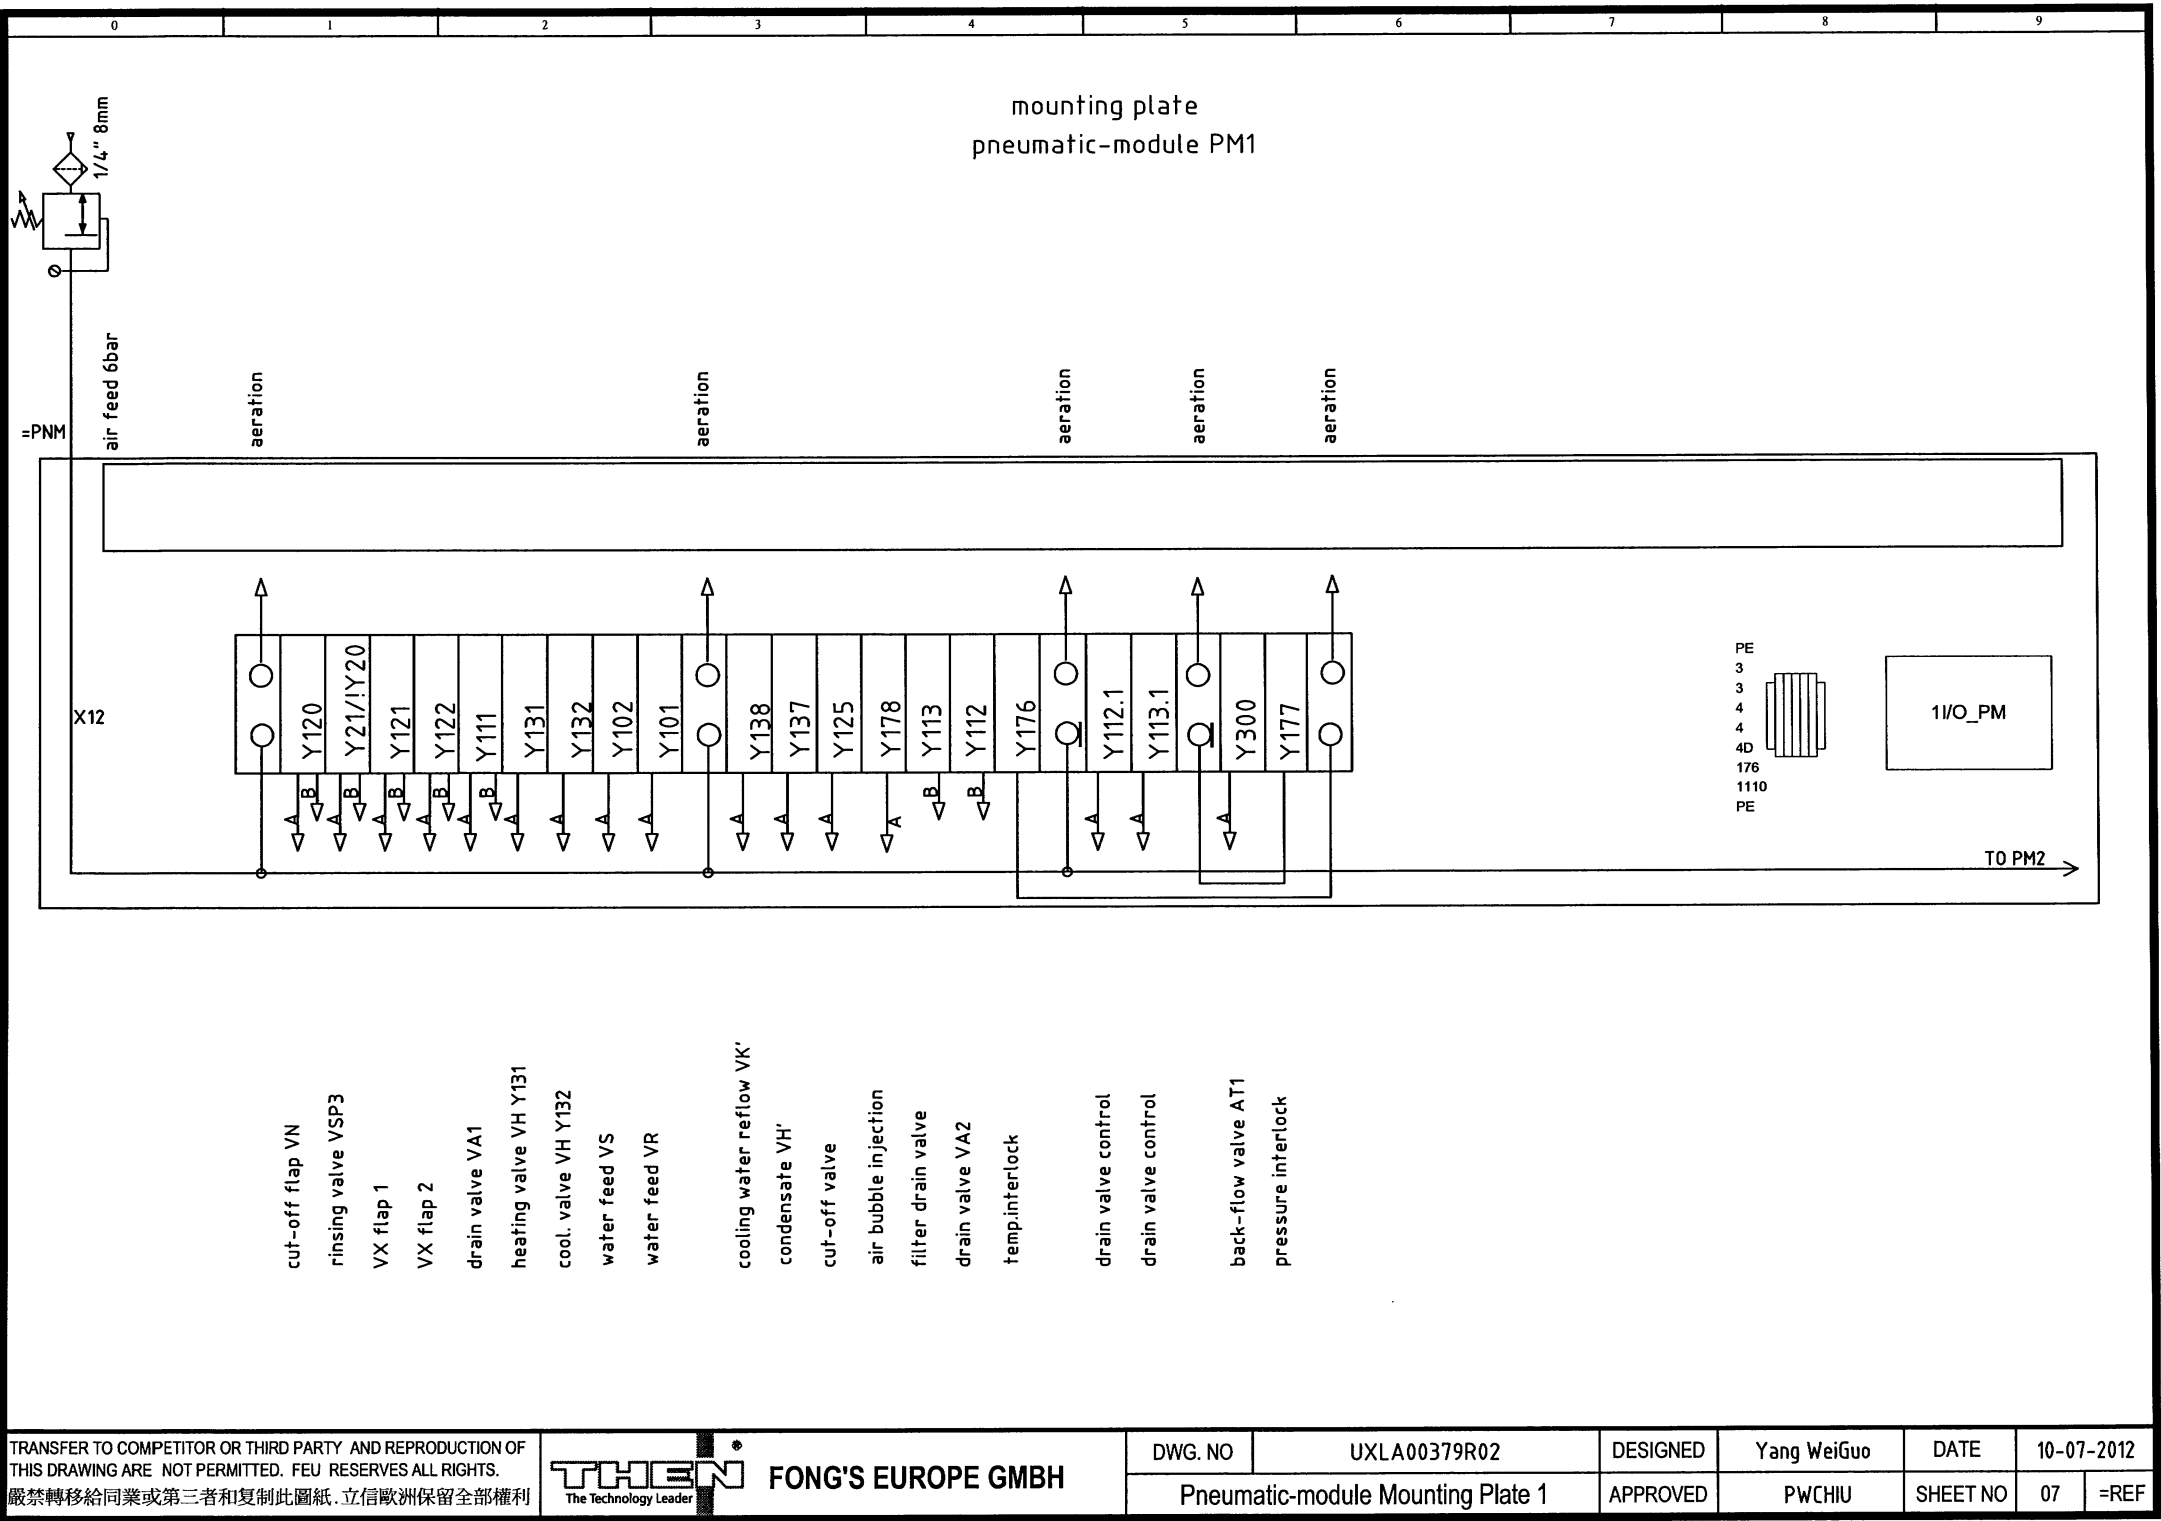
PWCHIU

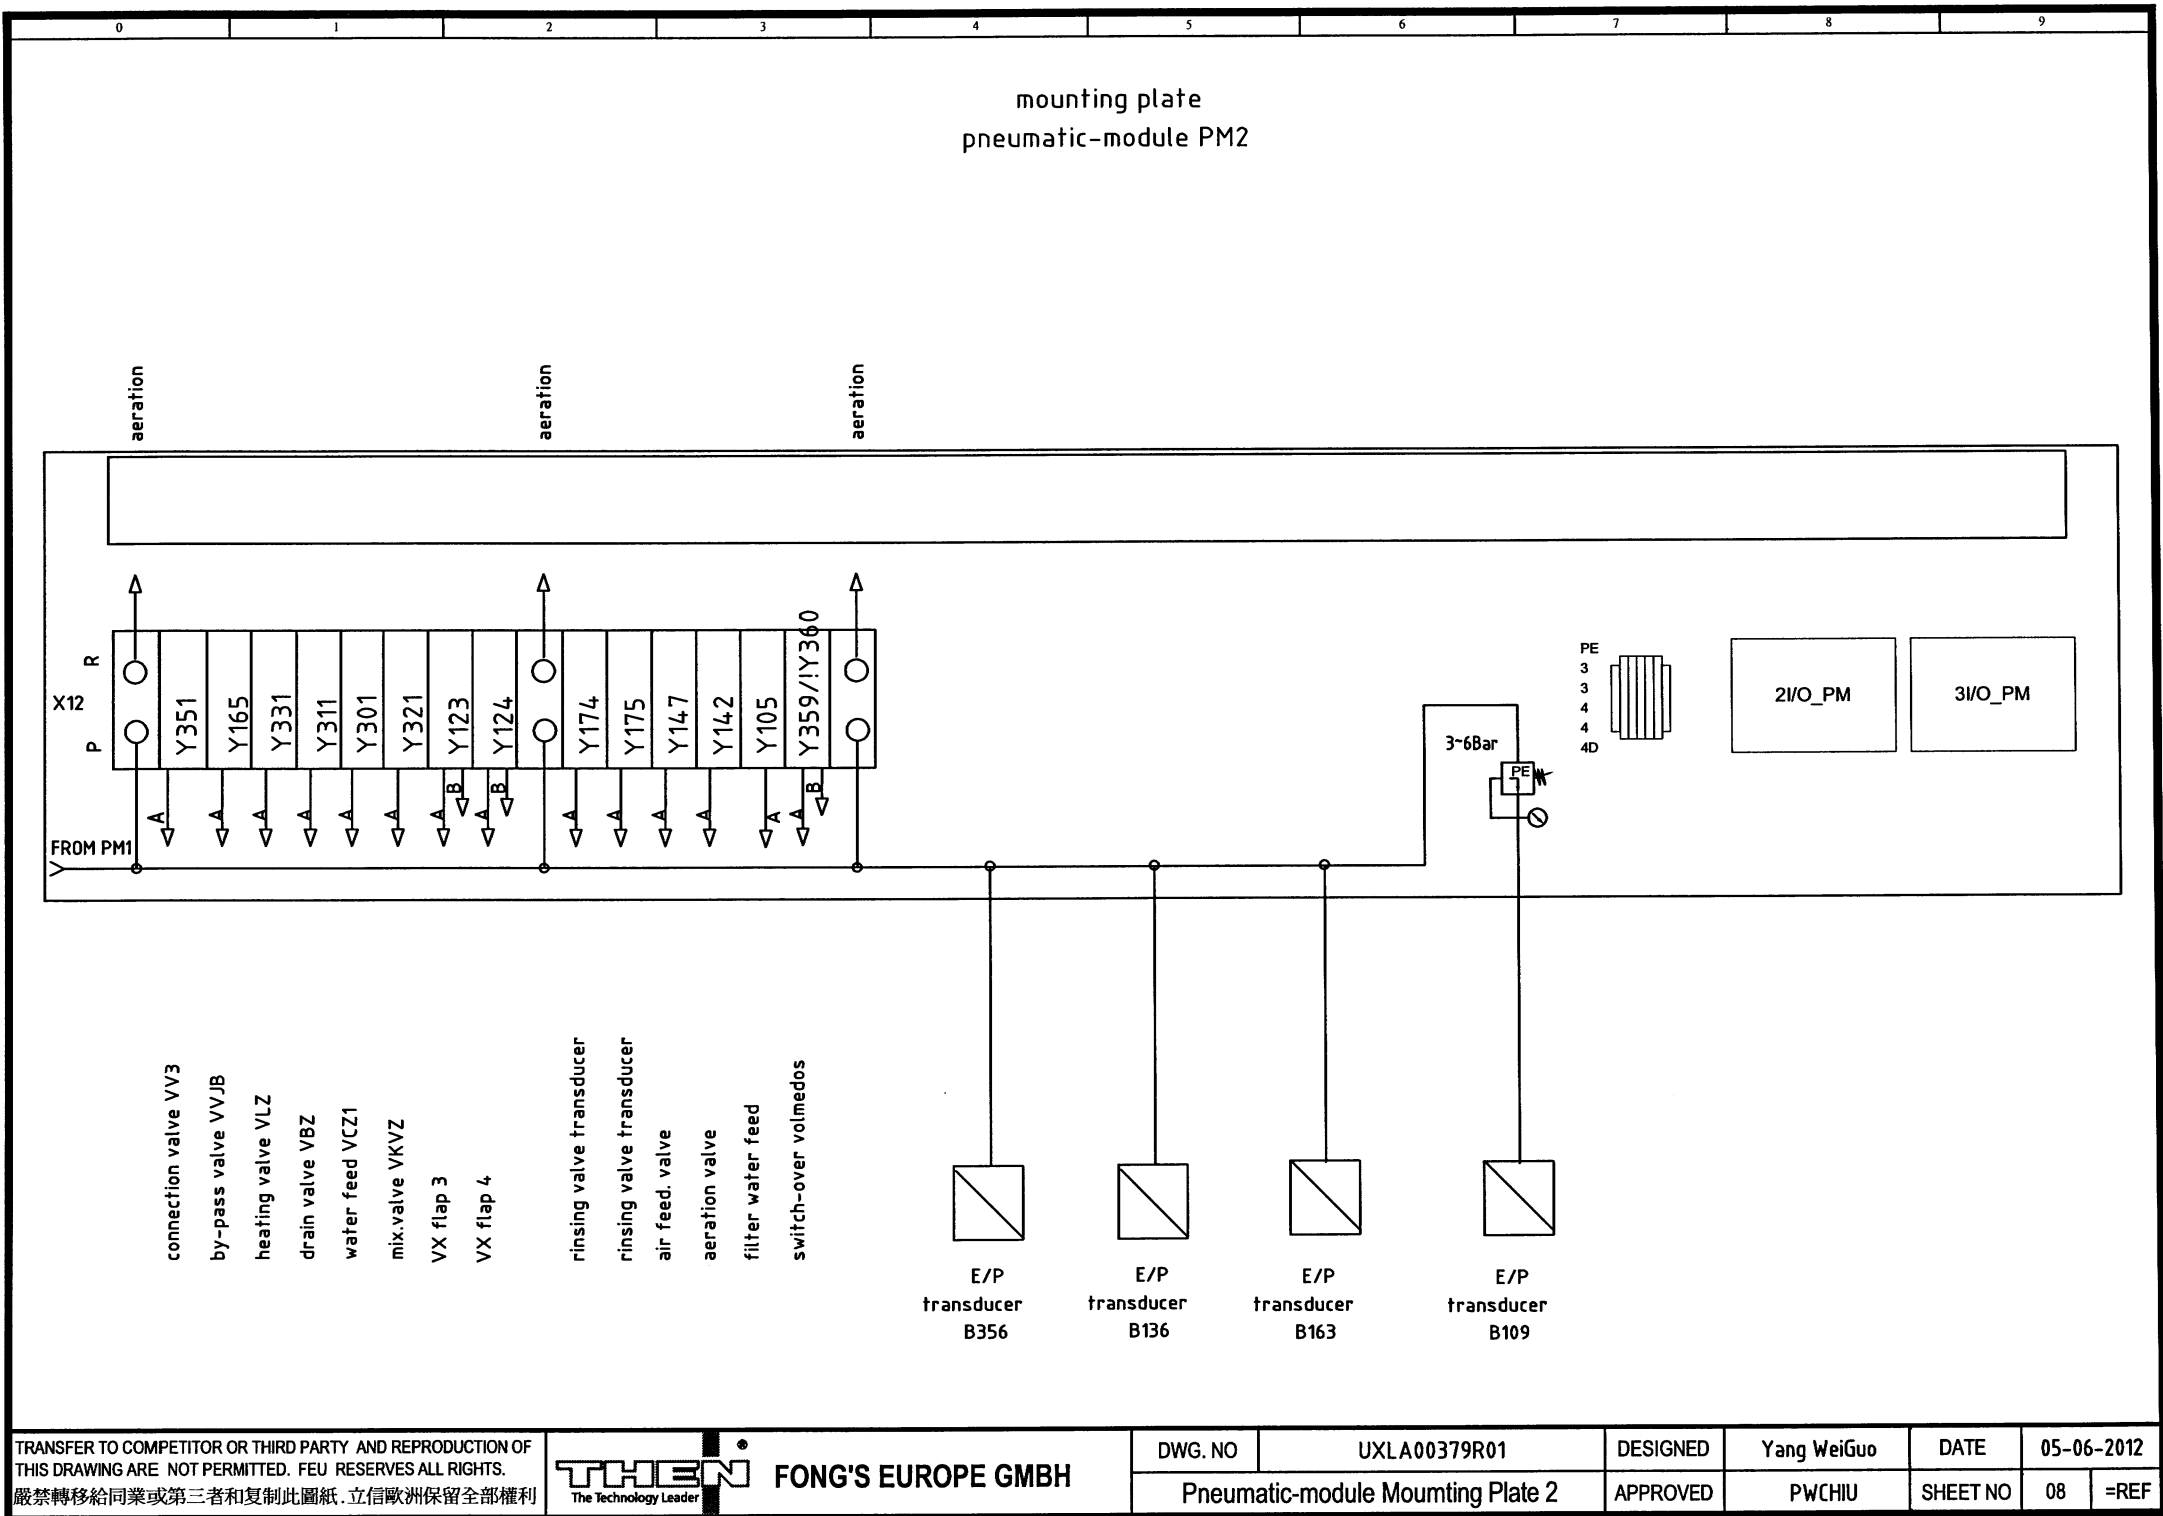
SHEET NO

04

=REF









control.-module for
Dynet-control H1000 X B600 X T350


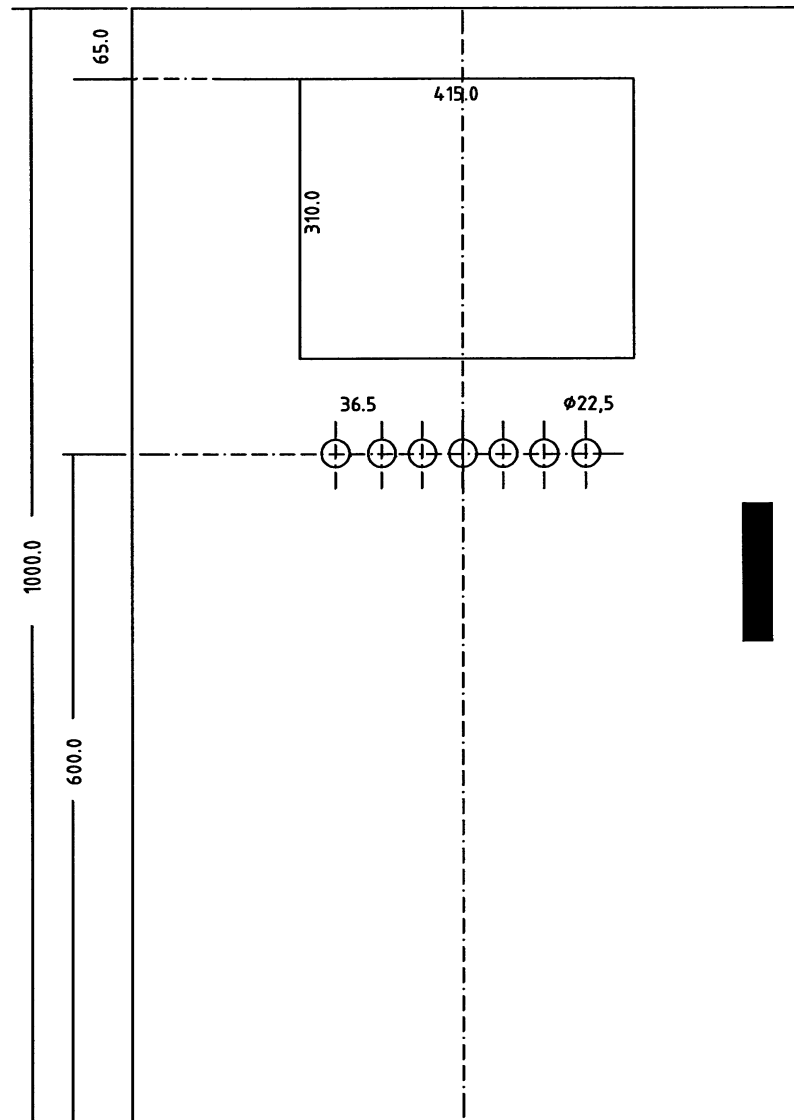
view from front




side view from left

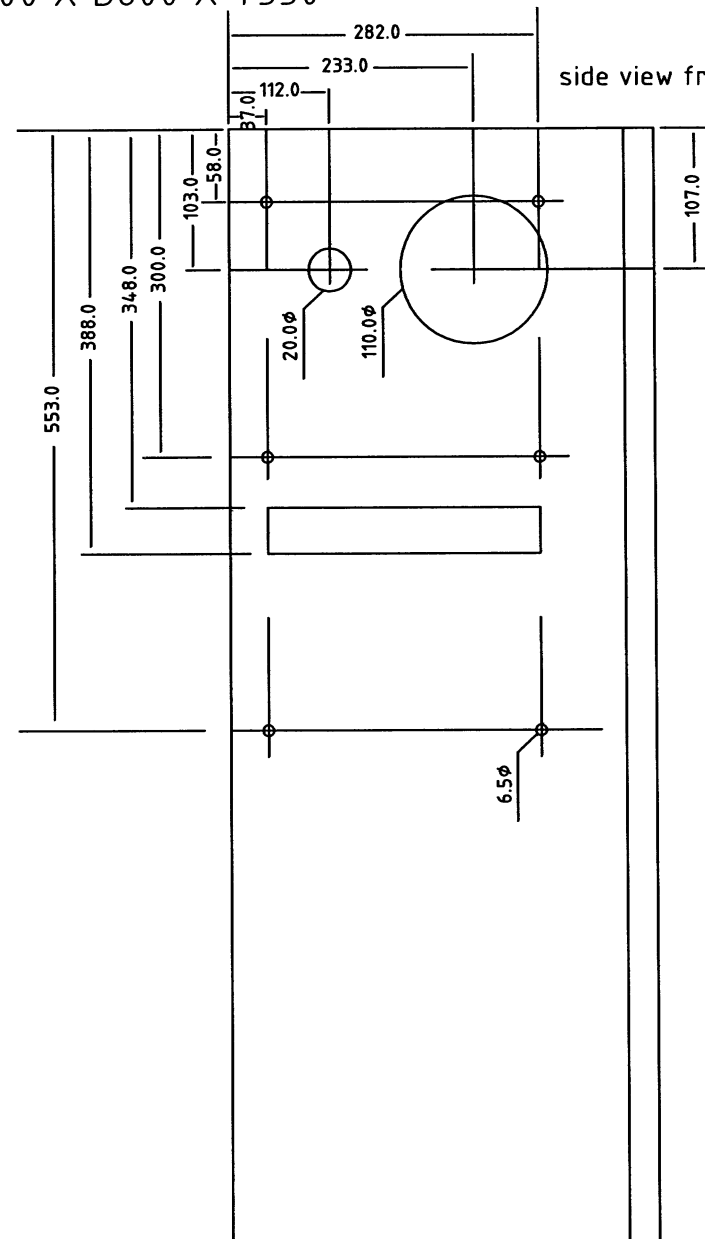

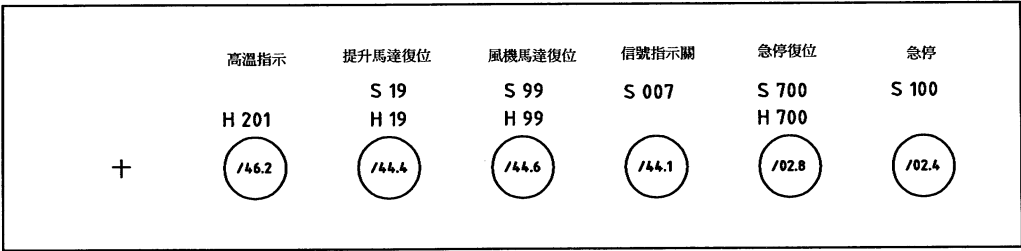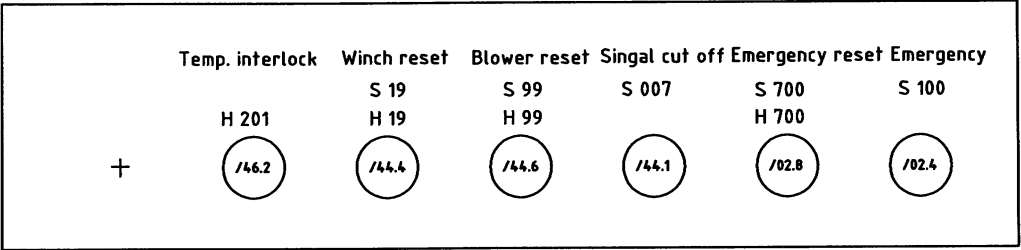control.-module for
Dynet control oprator's panel



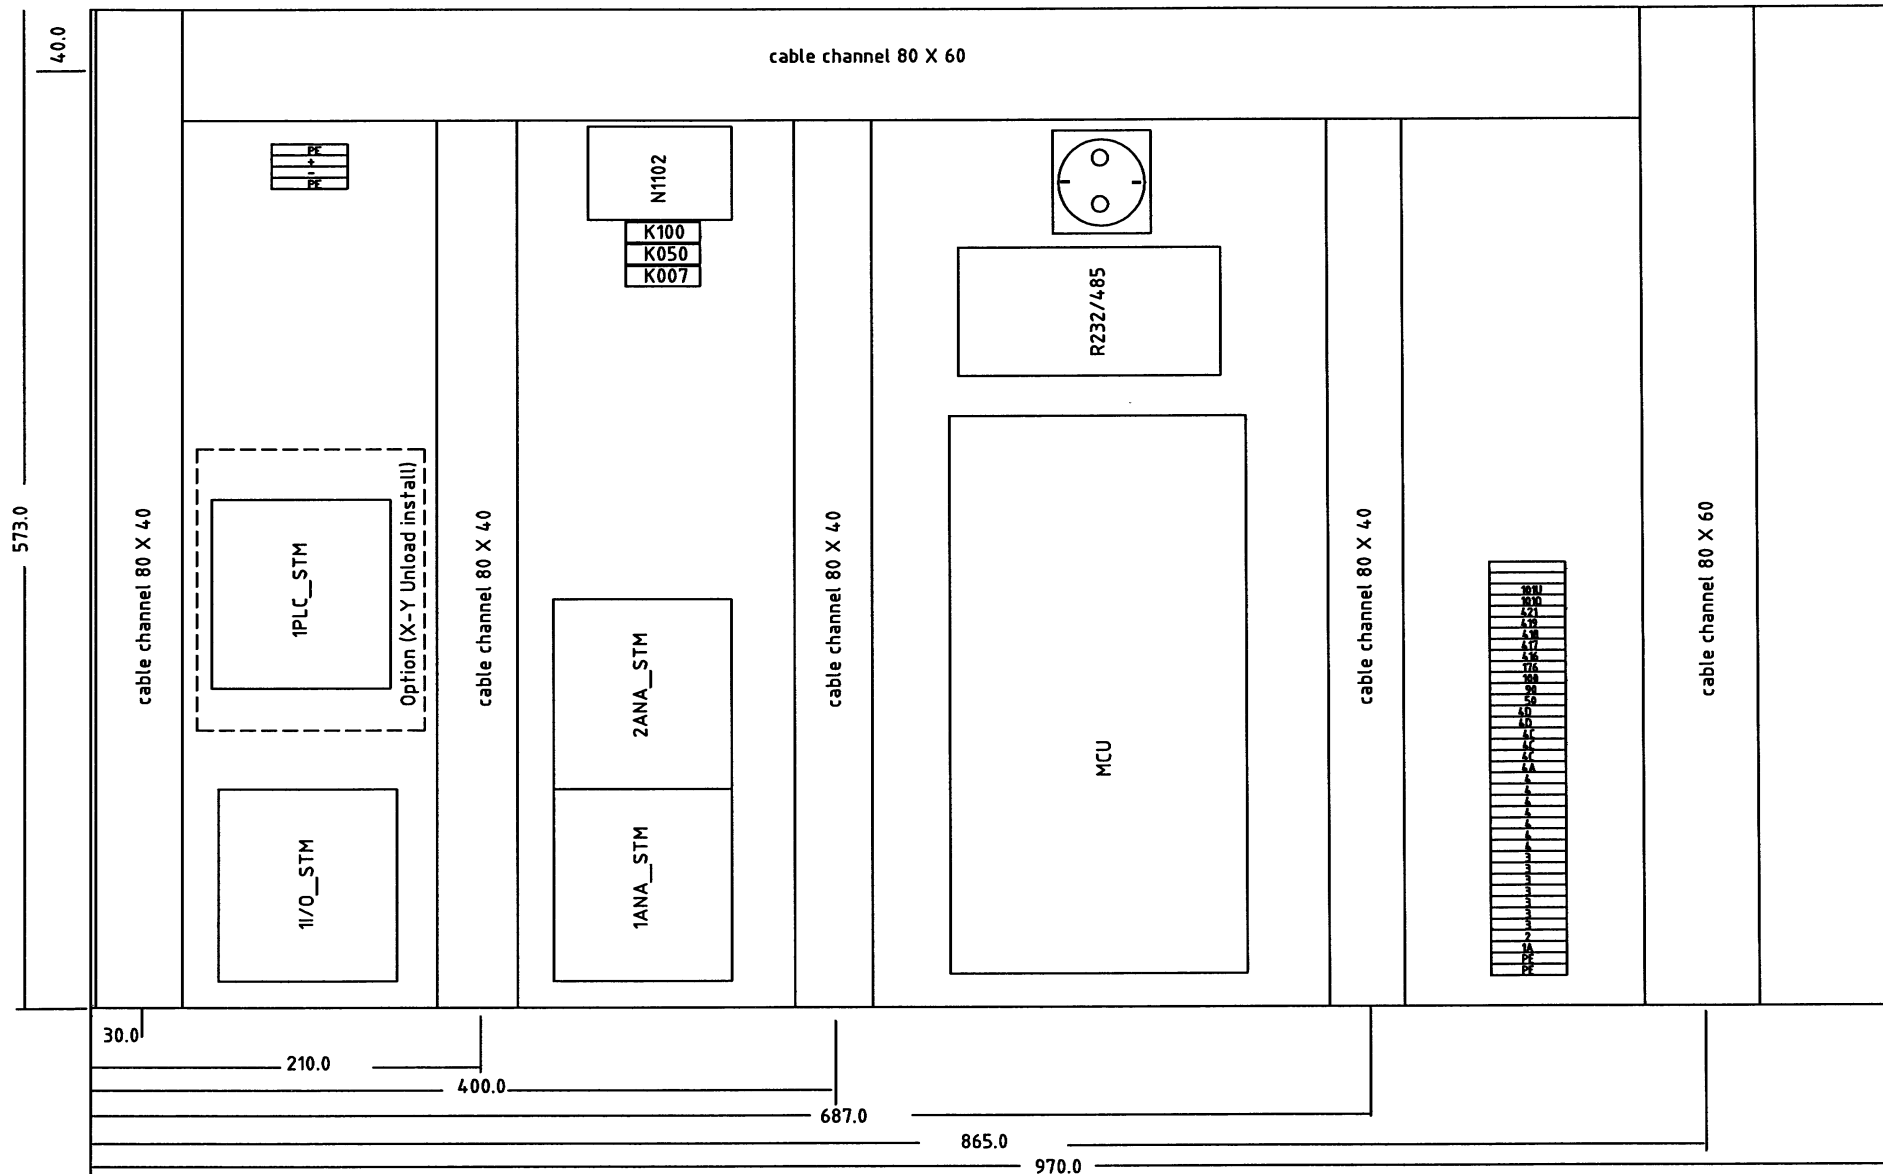control.-module for Dynet-control for 1T~6T mounting plate



Operator's module 1000 X 600 X 350
Screw caps bottom


bus	bus line to salt metering
XB1107	temp. booster/blend water
XB109	control valve booster
XB1400	temp. addition tank 2
XB1430	level addition tank 2
XB1182	water counter
XB1480	flow injection
XB163	rining control
XB1201	high level warm water moudle
XB1221	low level warm water moudle
XB1231	temp. warm water tank
	option

XB1105	temp. injection
XB1100	temp. dye autoclave
XB1102	temp. interlock
XB0000	temp. main curr.module
XB1300	temp. addition tank 1
XB356	control valve metering
XB1380	flow meter
XB131	control valve heat
XB132	control valve cool
XB1131	level dye autoclave
XB1330	level addition tank 1
Y100	pump cooling
XB1110	press. interlock
XB1112	press. sensor

Front view

View from bottom

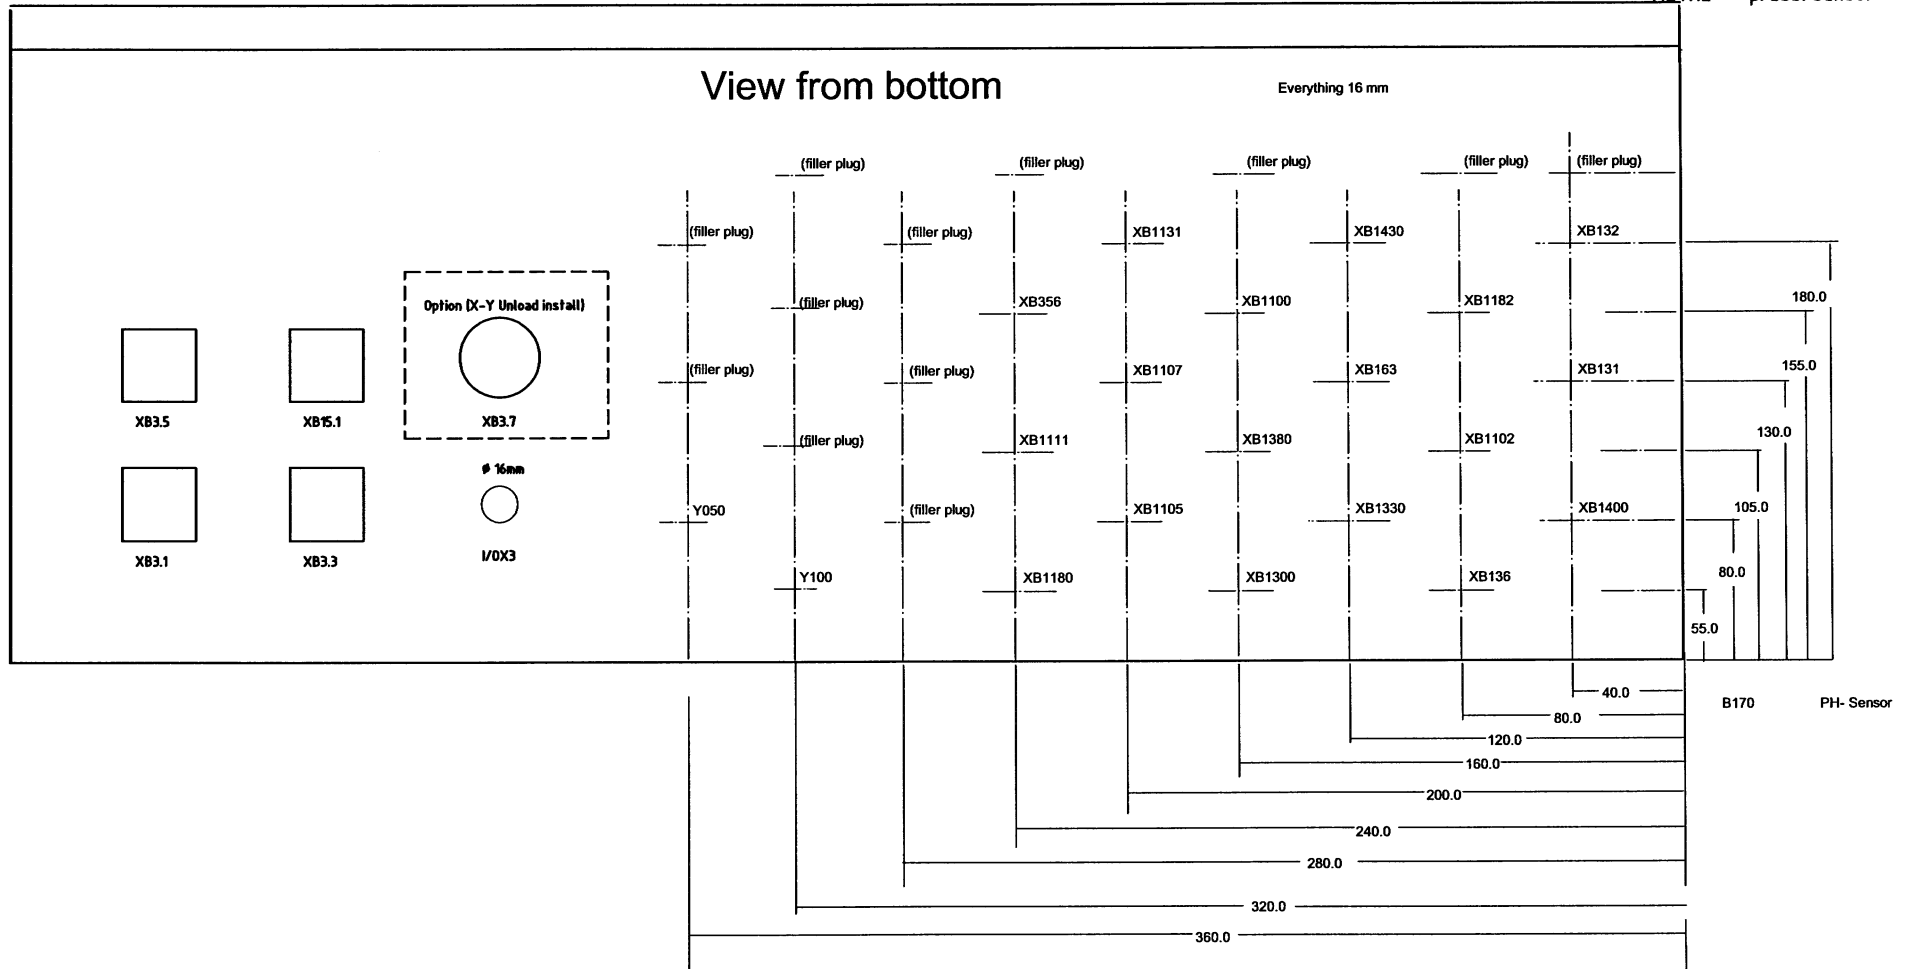Everything 16 mm





operator`s panel AFE for 2 store

front view(right machine)

front view(left machine)

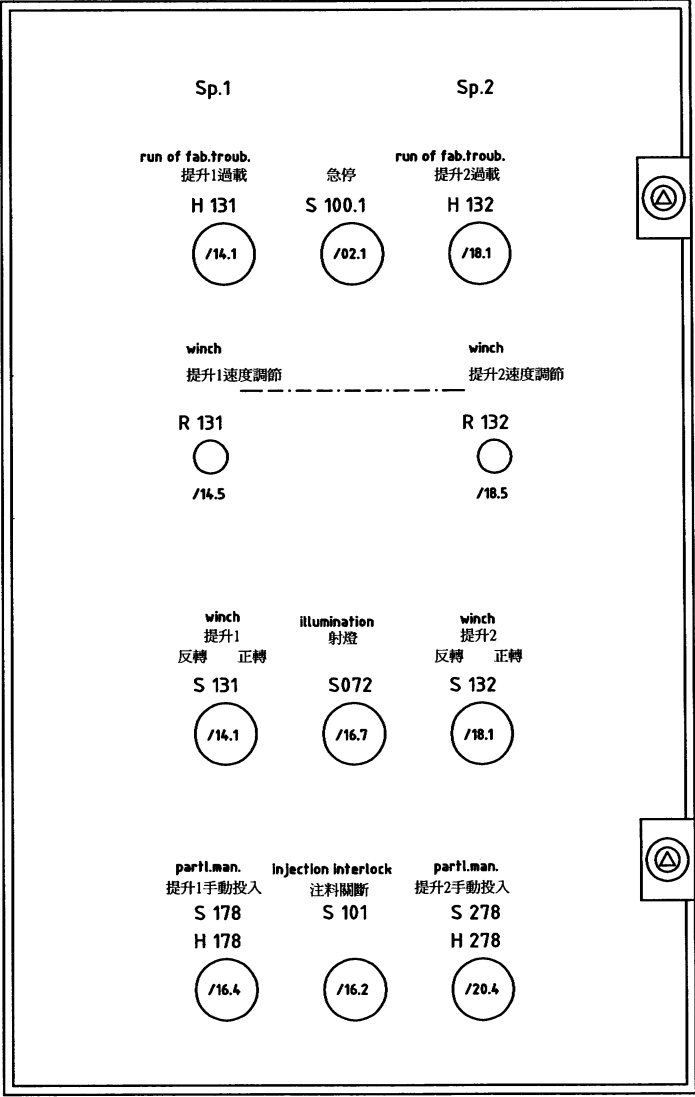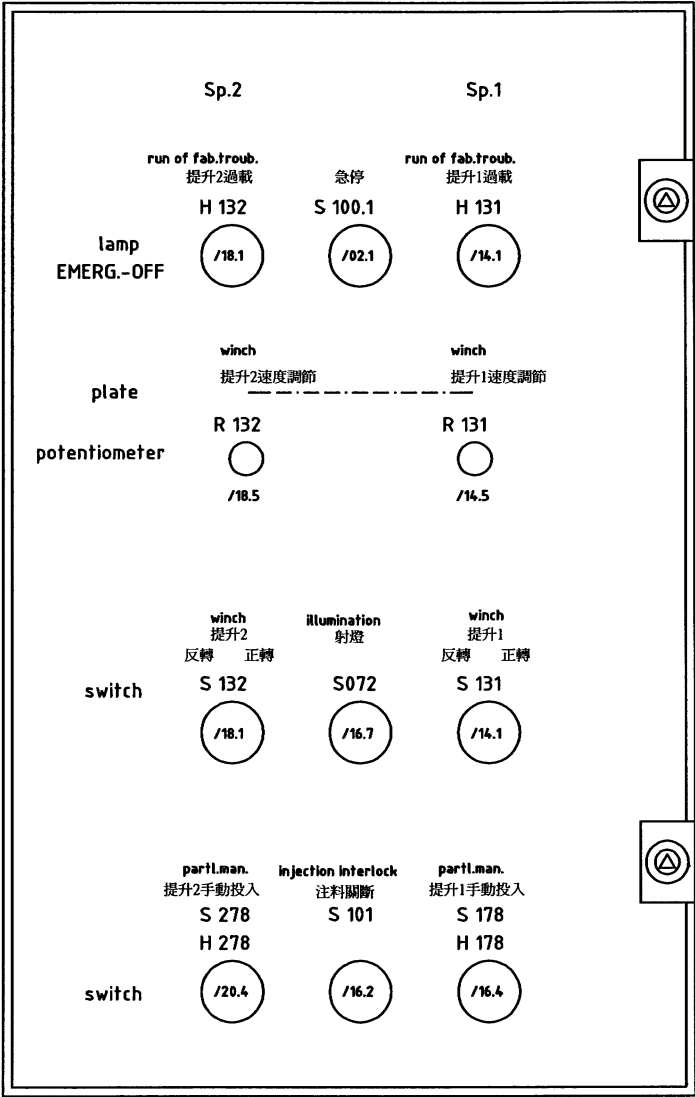BT1



























































operator`s panel AFE for 4 store

front view(right machine)

front view(left machine)

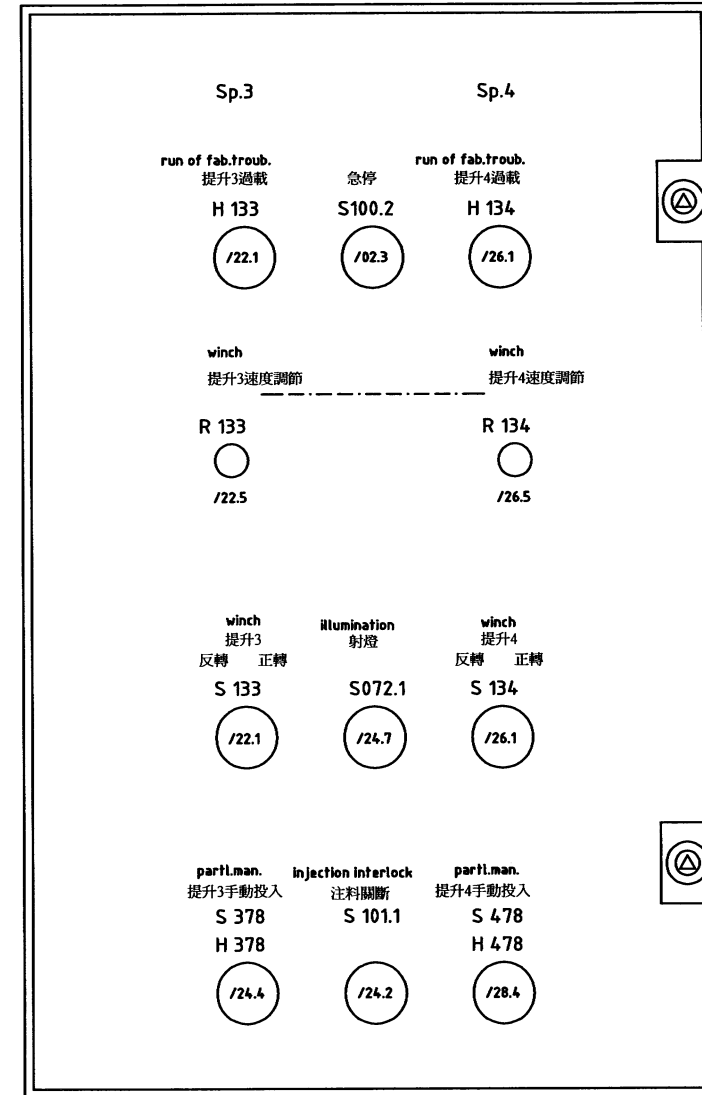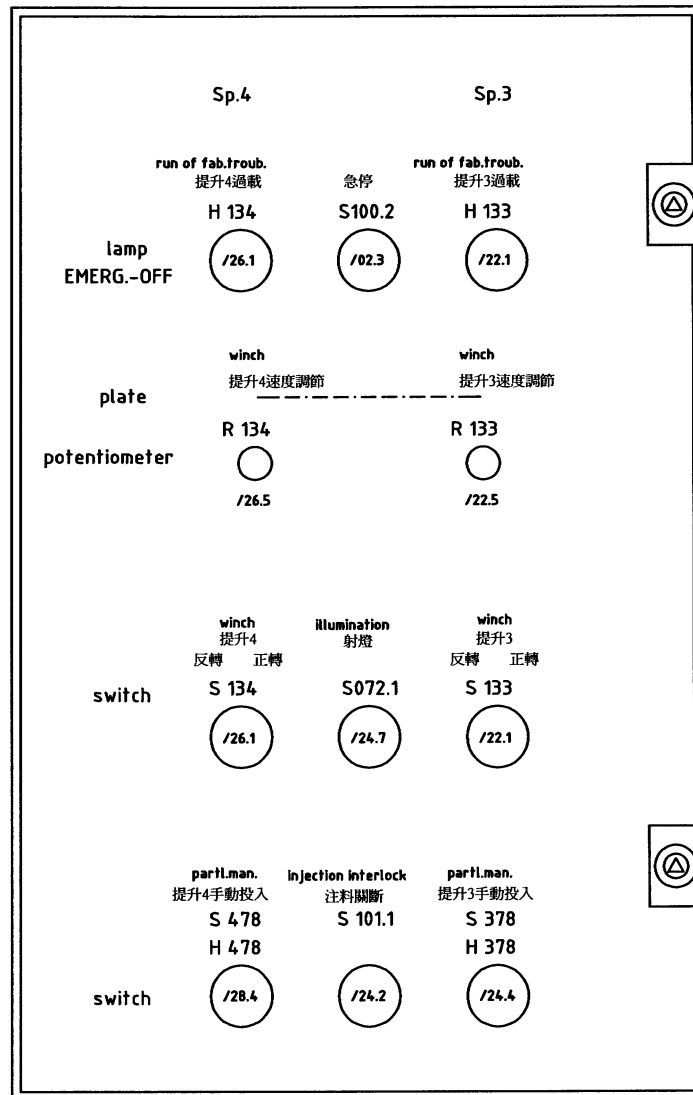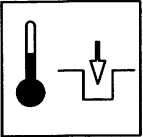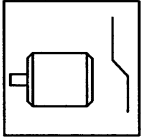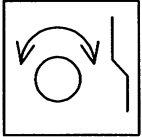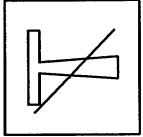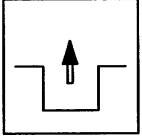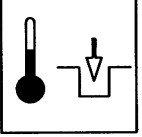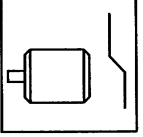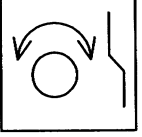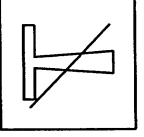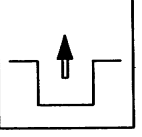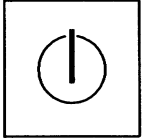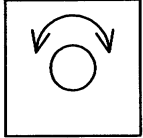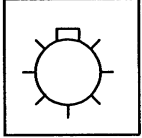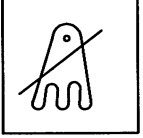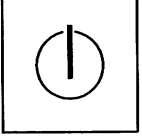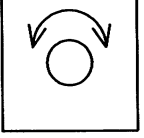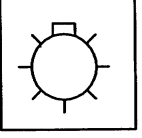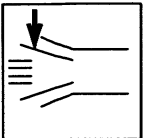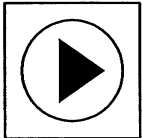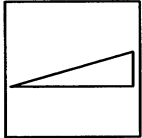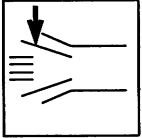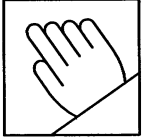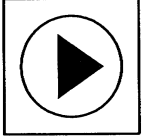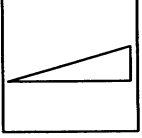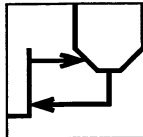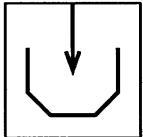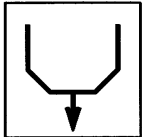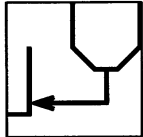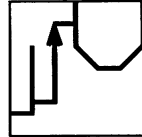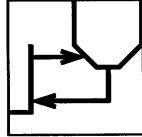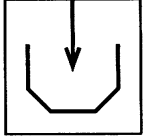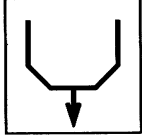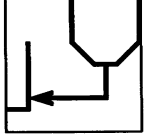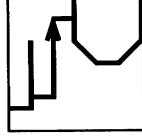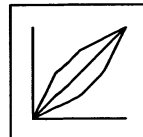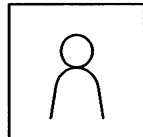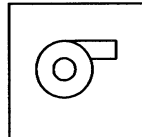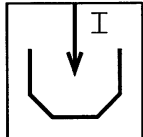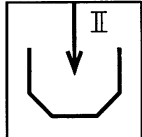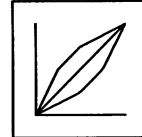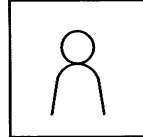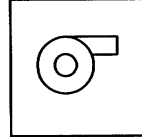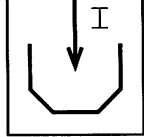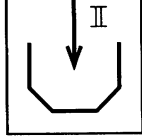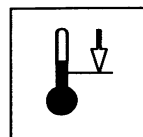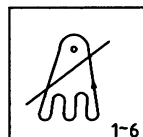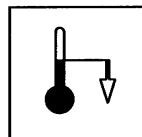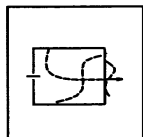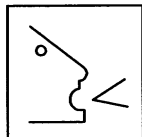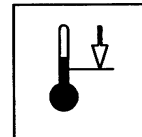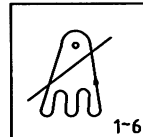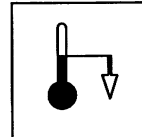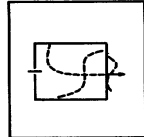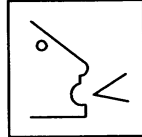BT2



0	1	2	3	4	5	6	7	8	9
 TEMP. INTERLOCK	 BLOWER RESET	 WINCH RESET	 SINGAL CUT OFF	 EMERGENCY RESET	 高温指示	 風機馬達復位	 提升馬達復位	 信號指示關	 急停復位
 EMERGENCY	 WINCH TROUBLE	 CONTINUE/START	 WINCH ENABLE & ADJ.	 ILLUMINATION	 急停	 提升過載	 聯機/跳步	 提升運行和調節	 射燈
 INJECTION INTERLOCK	 MANUAL MODE	 STIRRER MOTOR START	 HOT	 DOSING ADJ.	 注料關斷	 手動投入	 攪拌馬達啓動	 加熱	 定量調節
 SPOUT	 D.T. FILL	 D.T. DRAIN	 INJECTION	 FLOW RETURN	 混料	 定量桶入水	 定量桶放水	 注入	 回流
 DOSING	 ACK.	 BLOWER START	 P.T. FILL1	 P.T. FILL2	 定量注料	 應答	 風機啓動	 預備桶入水1	 預備桶入水2
 RESET TEMP. TO HIGH	 STOP OF FABRICS	 COOLING	 RINSING	 CALL - OFF	 復位高溫	 織物停止	 冷卻	 洗水	 呼叫

description the used installation denomination

The in the Electric scheme used
installation denomination have following meaning :

installation denomination	meaning
=STM	parts in control-module or oper-module
=PM	parts in pneumatic-module
=SVM	parts in power-feed-module
=HS	parts in main current-module
=BT1	parts in oper-panel # 1
=BT2	parts in oper-panel # 2
=BT3	parts in oper-panel # 3
=SAE	parts the sensors-actuators-layer
=MCH	parts direct on the machine
=MM	parts in blend-water lines-module
=PNMM	parts in blend-water lines-module. pneumatic parts
=BOOST	parts in warm water-module (booster)

terminals/strip terminals

plug

X1=terminal
in main current-module (HS)

X3=terminal
in operation-module (BM)

X4=terminal
free terminal

X5=terminal
in BT1-module (BT1)

X6=terminal
in BT2-module (BT2)

X7=terminal
in BT3-module (BT3)

option

XM122=plug
for DA mixing pump
XM221=plug
for the warm water pump
XM40=plug
for the spectra dyeing pump

XM101=plug
for the injektion.-pump
XM105=plug
for the plaiter
XM106=plug
for the take-off roller
XM131=plug
for the winch Sp.1
XM132=plug
for the winch Sp.2
XM133=plug
for the winch Sp.3
XM134=plug
for the winch Sp.4
XM135=plug
for the winch Sp.5
XM136=plug
for the winch Sp.6
XM302=plug
for the addition pump AT

XM802=plug
for the salt pump
XM301=plug
for the addition tank mixer AT
XM402=plug
for the addition pump AT2
XM120=plug
for the clean pump
XM401=plug
for the addition tank mixer AT2

plug XB15.1/15
from operation-module to pneum..-module 1

plug XB16/16.1
from pneum..-module 1 to pneum..-module 2

plug XB5/5.1, XB6/6.1, XB7/7.1
from main current-module to BT1/2/3-module

plug XB3/3.1, XB3.2/3.3, XB3.4/3.5
from main current-module to operation-module

plug XB20/20.1
from main current-module to salt-module

plug

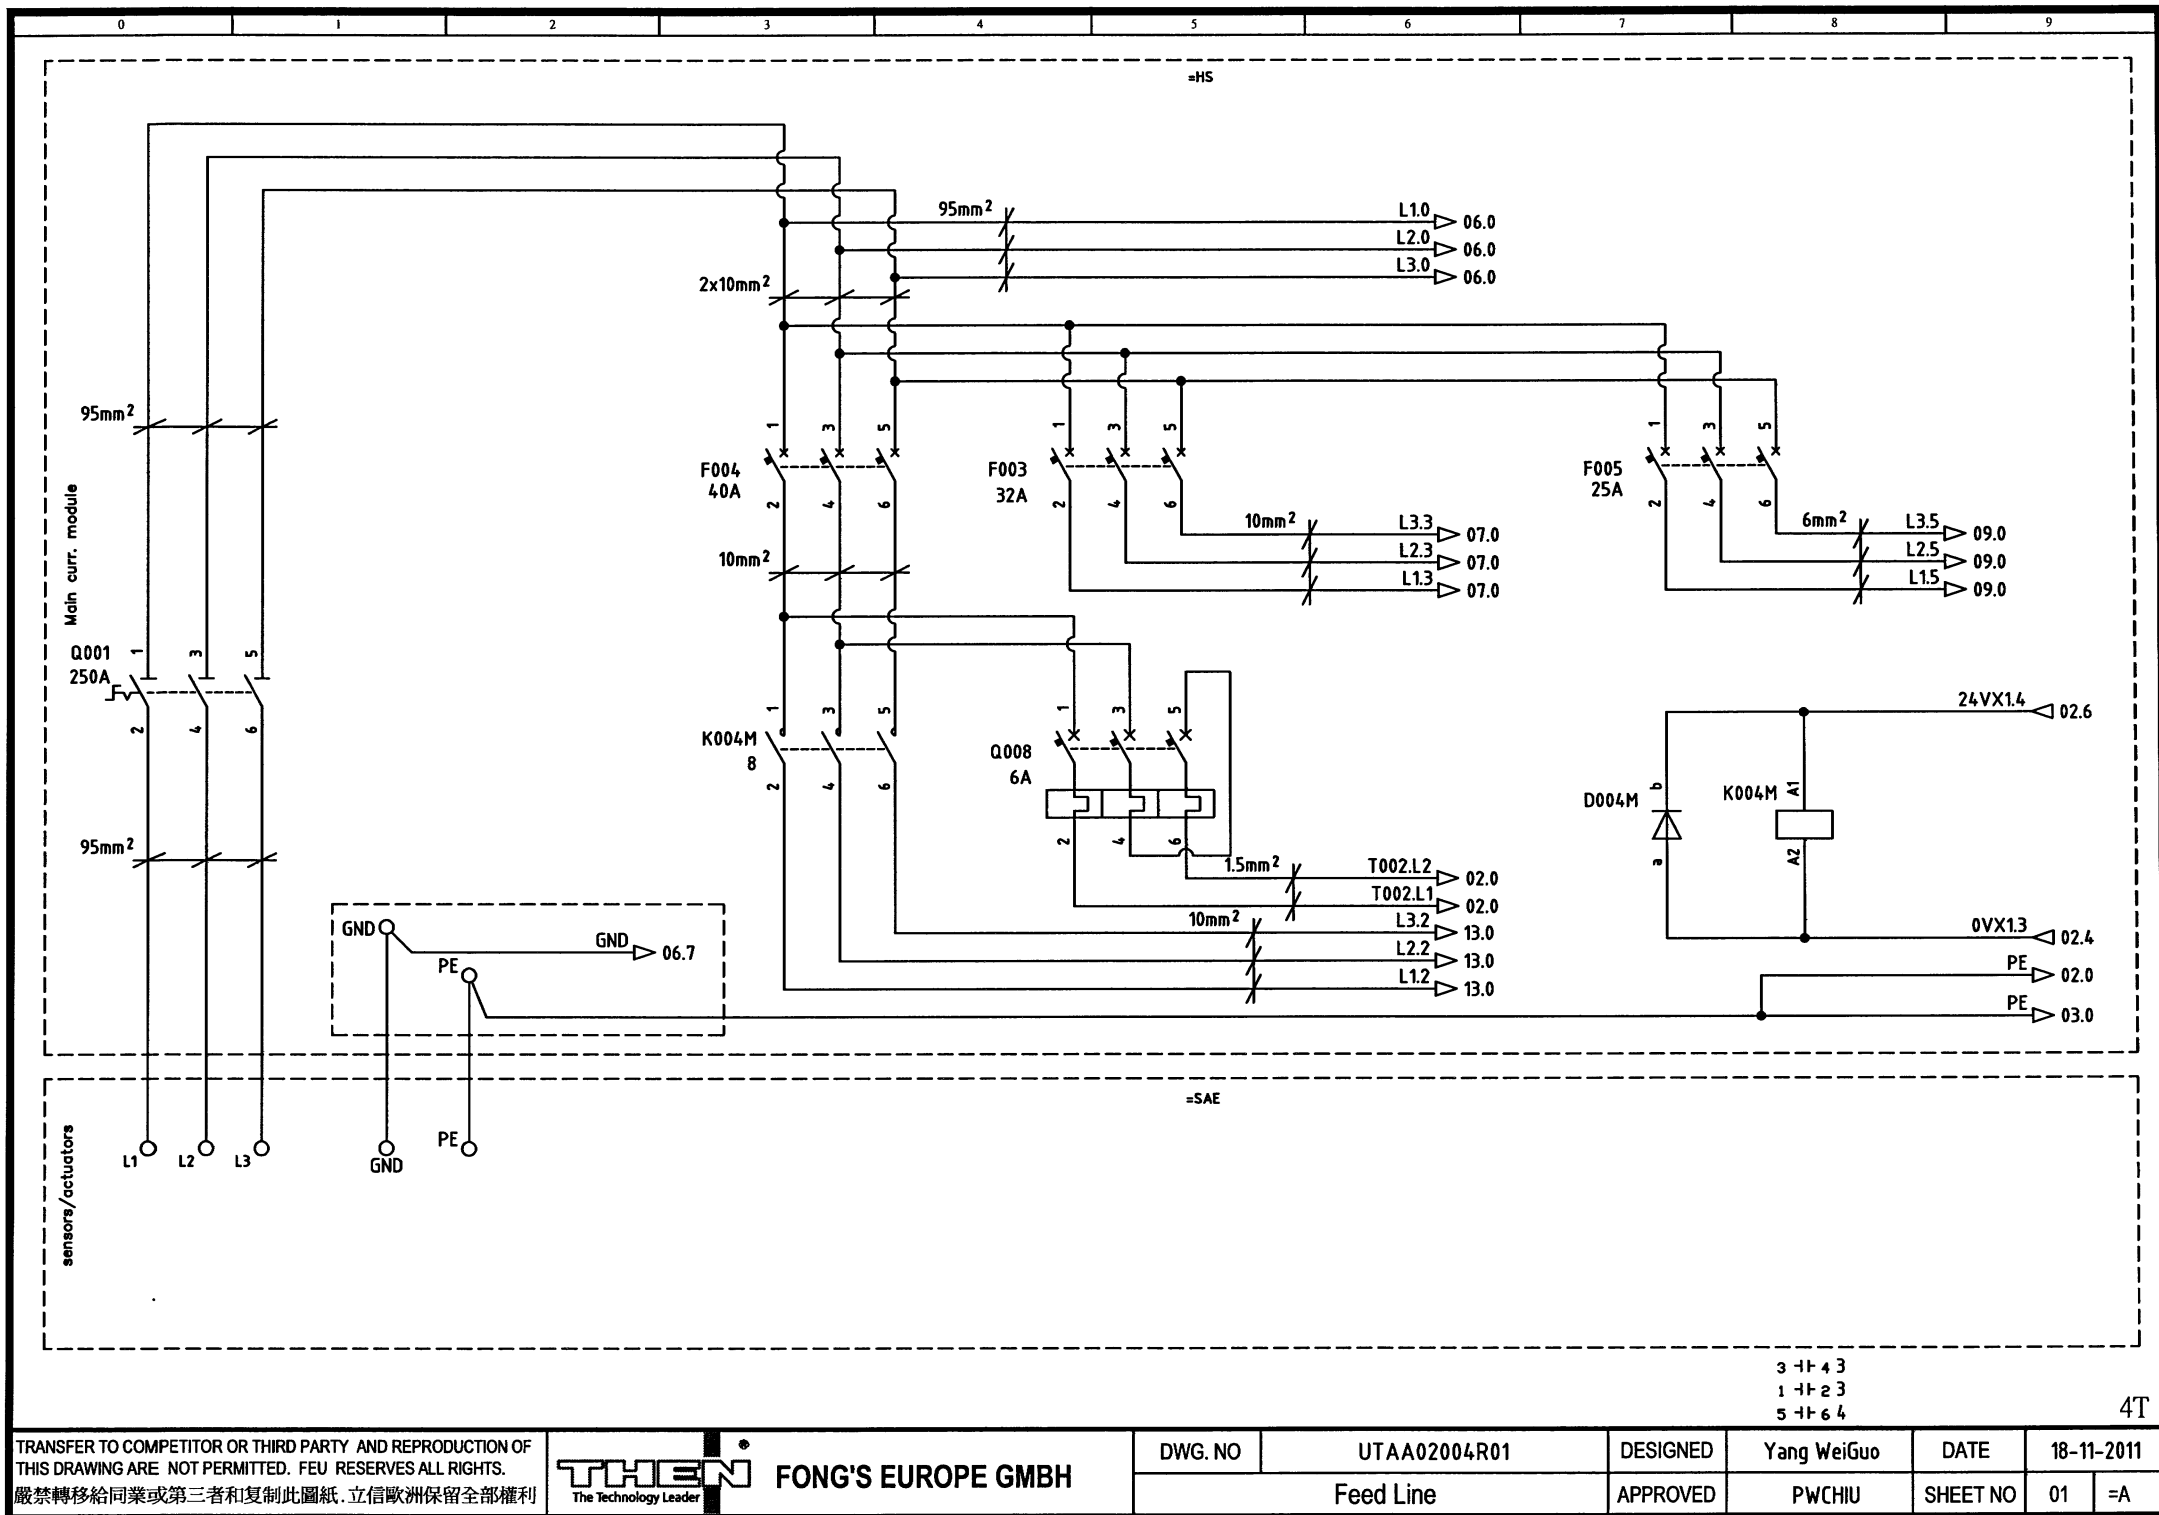
XB0000=plug
for temp. main current module
XB131=plug
for control valve
XB132=plug
for control valve
XB356=Stecker
for metering valve
XB1100=plug
for temp.sensor B1100
XB1102=plug
for temp.sensor B1102
XB1105=plug
for temp.sensor B1105
XB1131=plug
for level transd.. BK. B1131
XB1300=plug
for temp.sensor B1300
XB1330=plug
for level transd.. AT. B1330
XB1380=plug
fur Durchflussmengenm.B1380

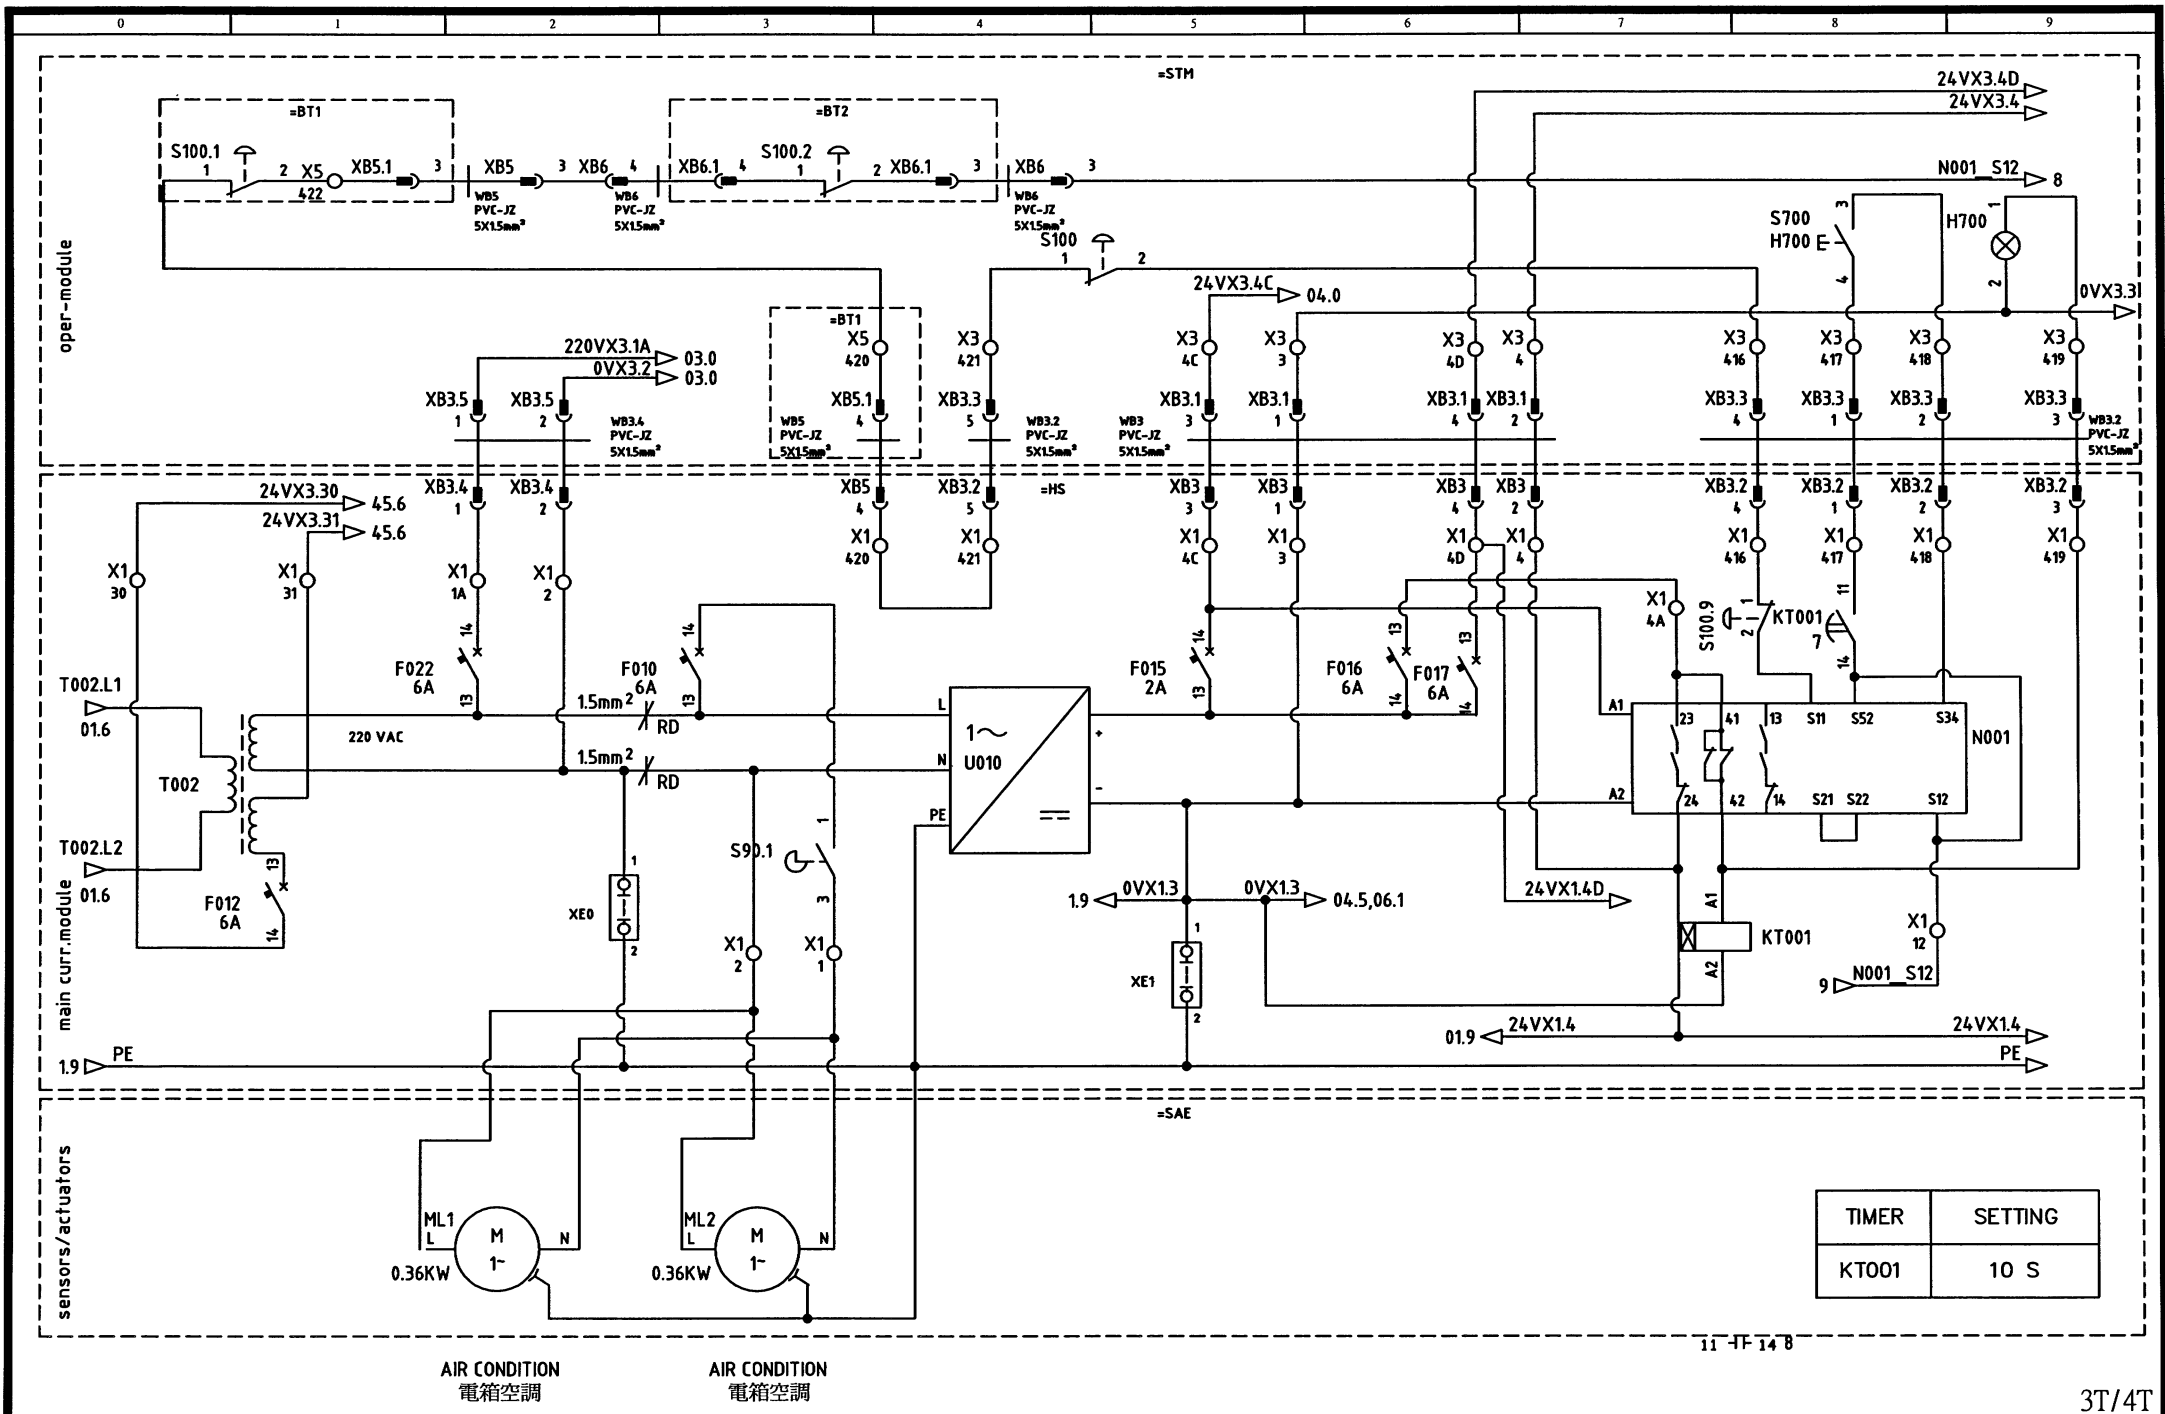
option

```

XB1107=plug
for temp.sensor B1107
XB109=plug
for control valve booster B109
XB1400=plug
for temp.sensor B1400
XB1430=plug
for level transd.. AT2 B1430
XB1182=plug
for water counter B1182
XB1480=plug
for flow injection B1480
XB163=plug
for rining control B163
XB1201=plug
fur high level warm water moudle B1201
XB1221=plug
fur low level warm water moudle B1221
XB1231=plug
fur temp. water tank B1231

```






3T/4T

TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.
嚴禁轉移給同業或第三者和复制此圖紙. 立信歐洲保留全部權利



FONG'S EUROPE GMBH

DWG. NO	UTAB02003R02	DESIGNED	Yang WeiGuo	DATE	27-02-2012
Main Cabinet Power Unit / Emergency-off		APPROVED	PWCHIU	SHEET NO	02
		=A			

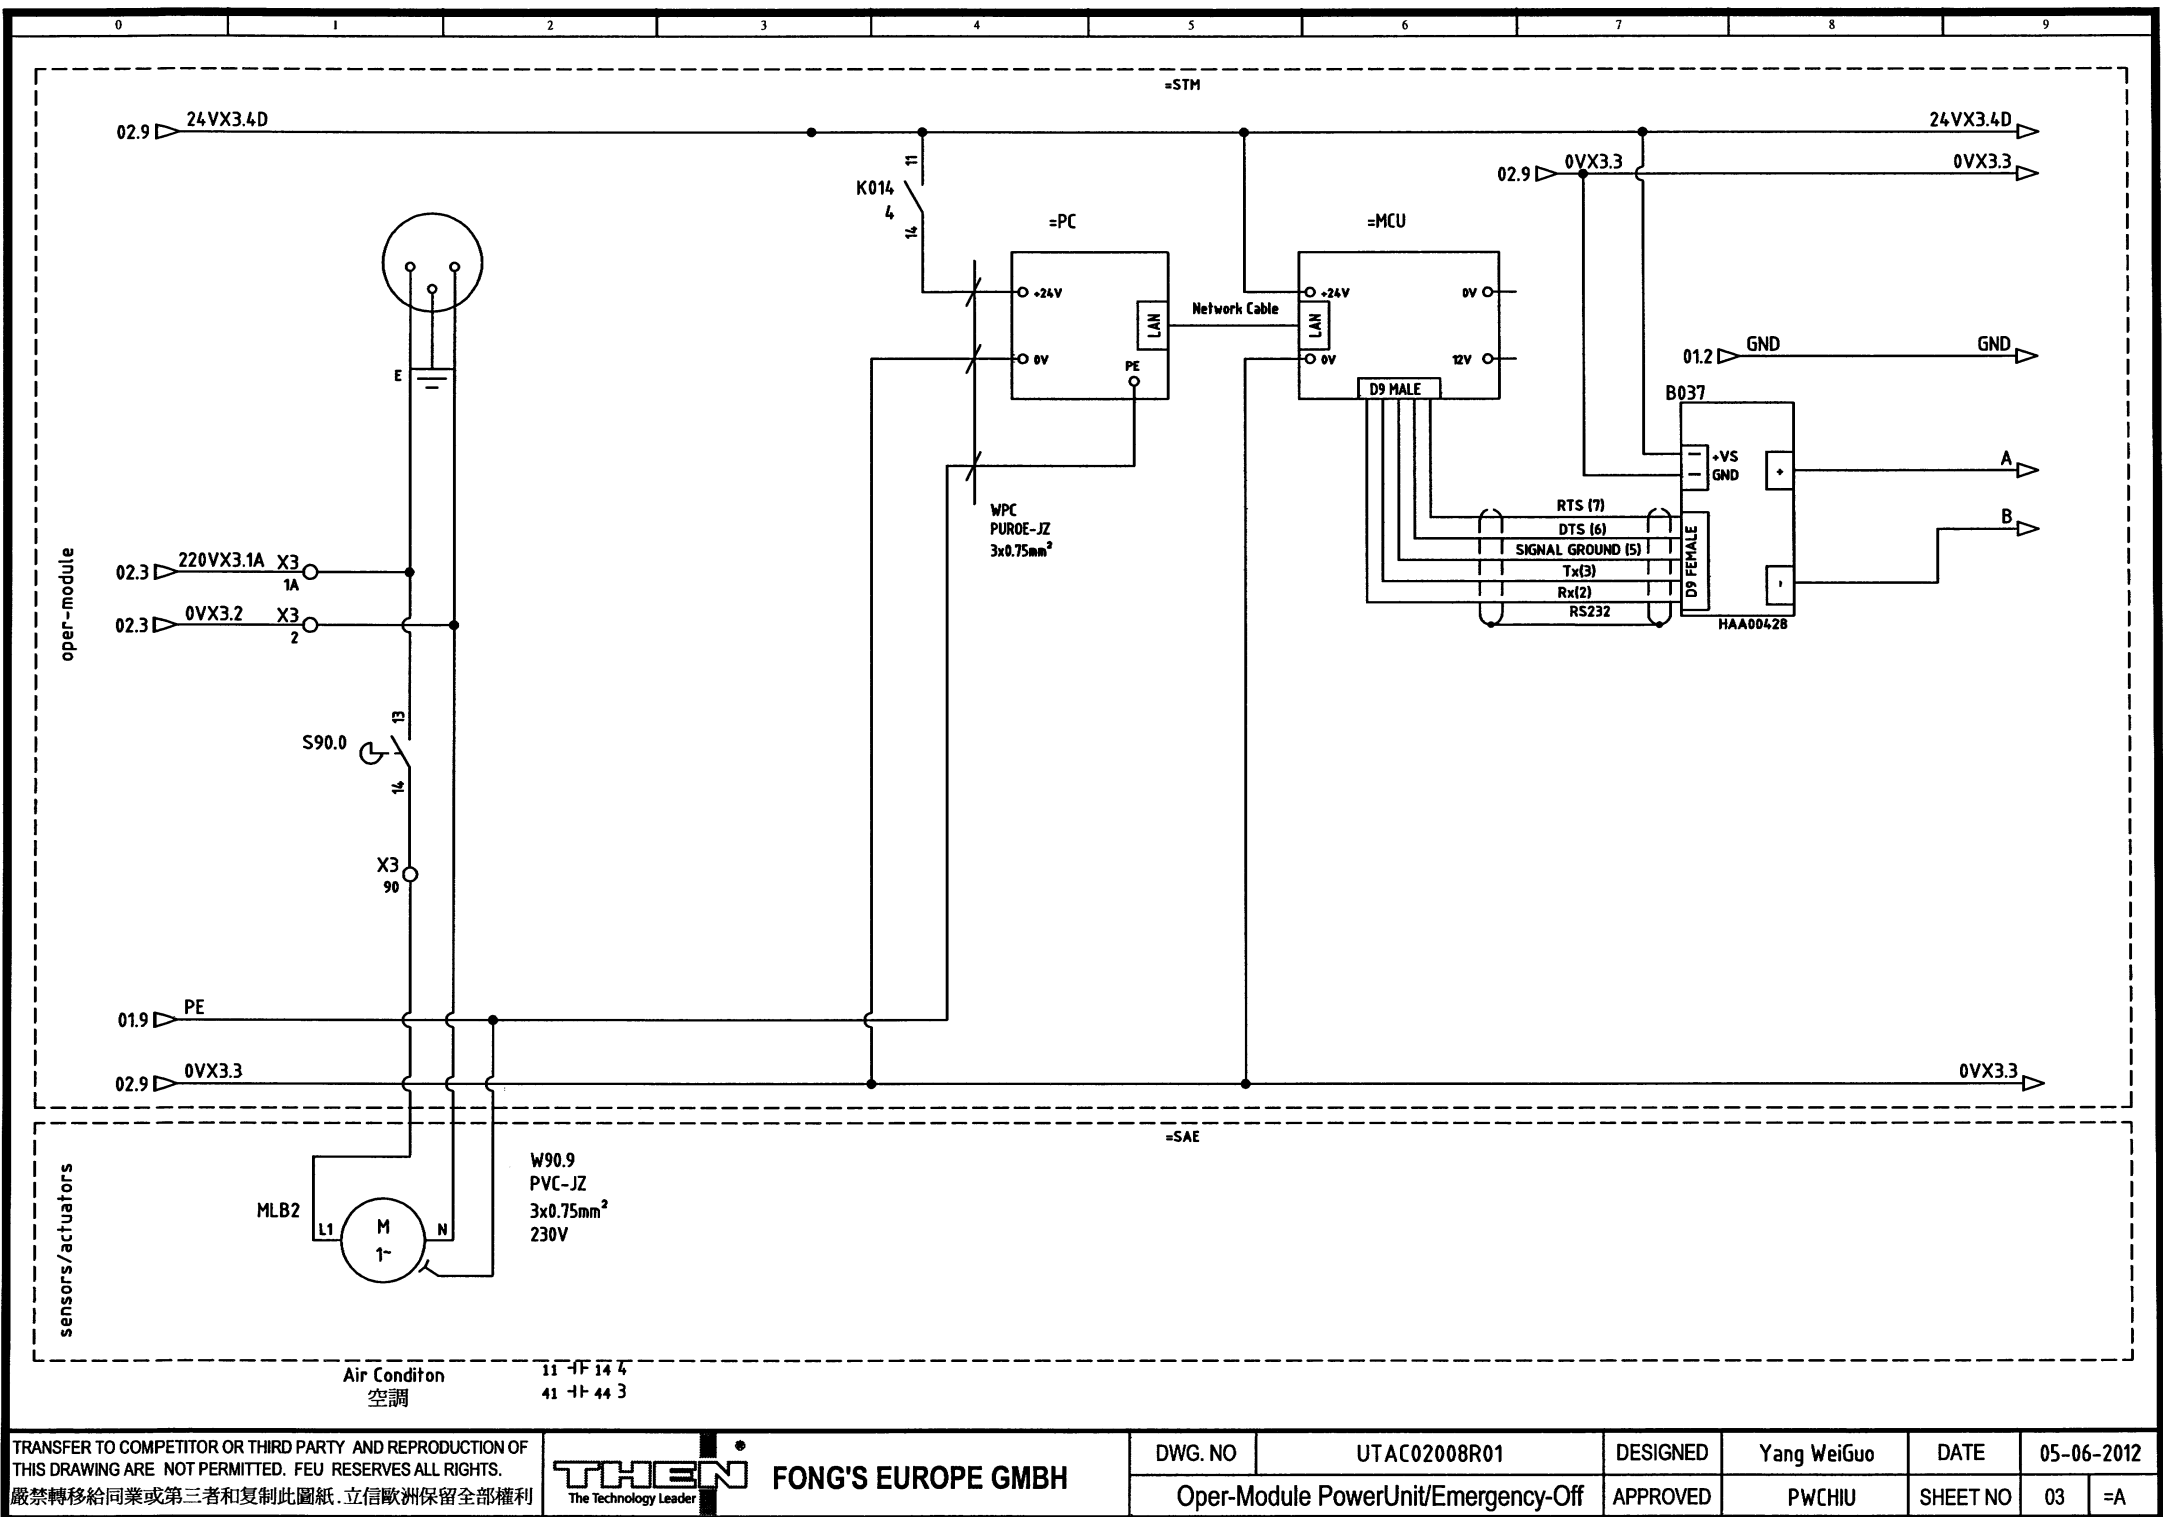



TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.
嚴禁轉移給同業或第三者和复制此圖紙。立信歐洲保留全部權利





FONG'S EUROPE GMBH


DWG. NO	UTAC02008R01	DESIGNED	Yang WeiGuo	DATE	05-06-2012
Oper-Module PowerUnit/Emergency-Off		APPROVED	PWCHIU	SHEET NO	03
					=A

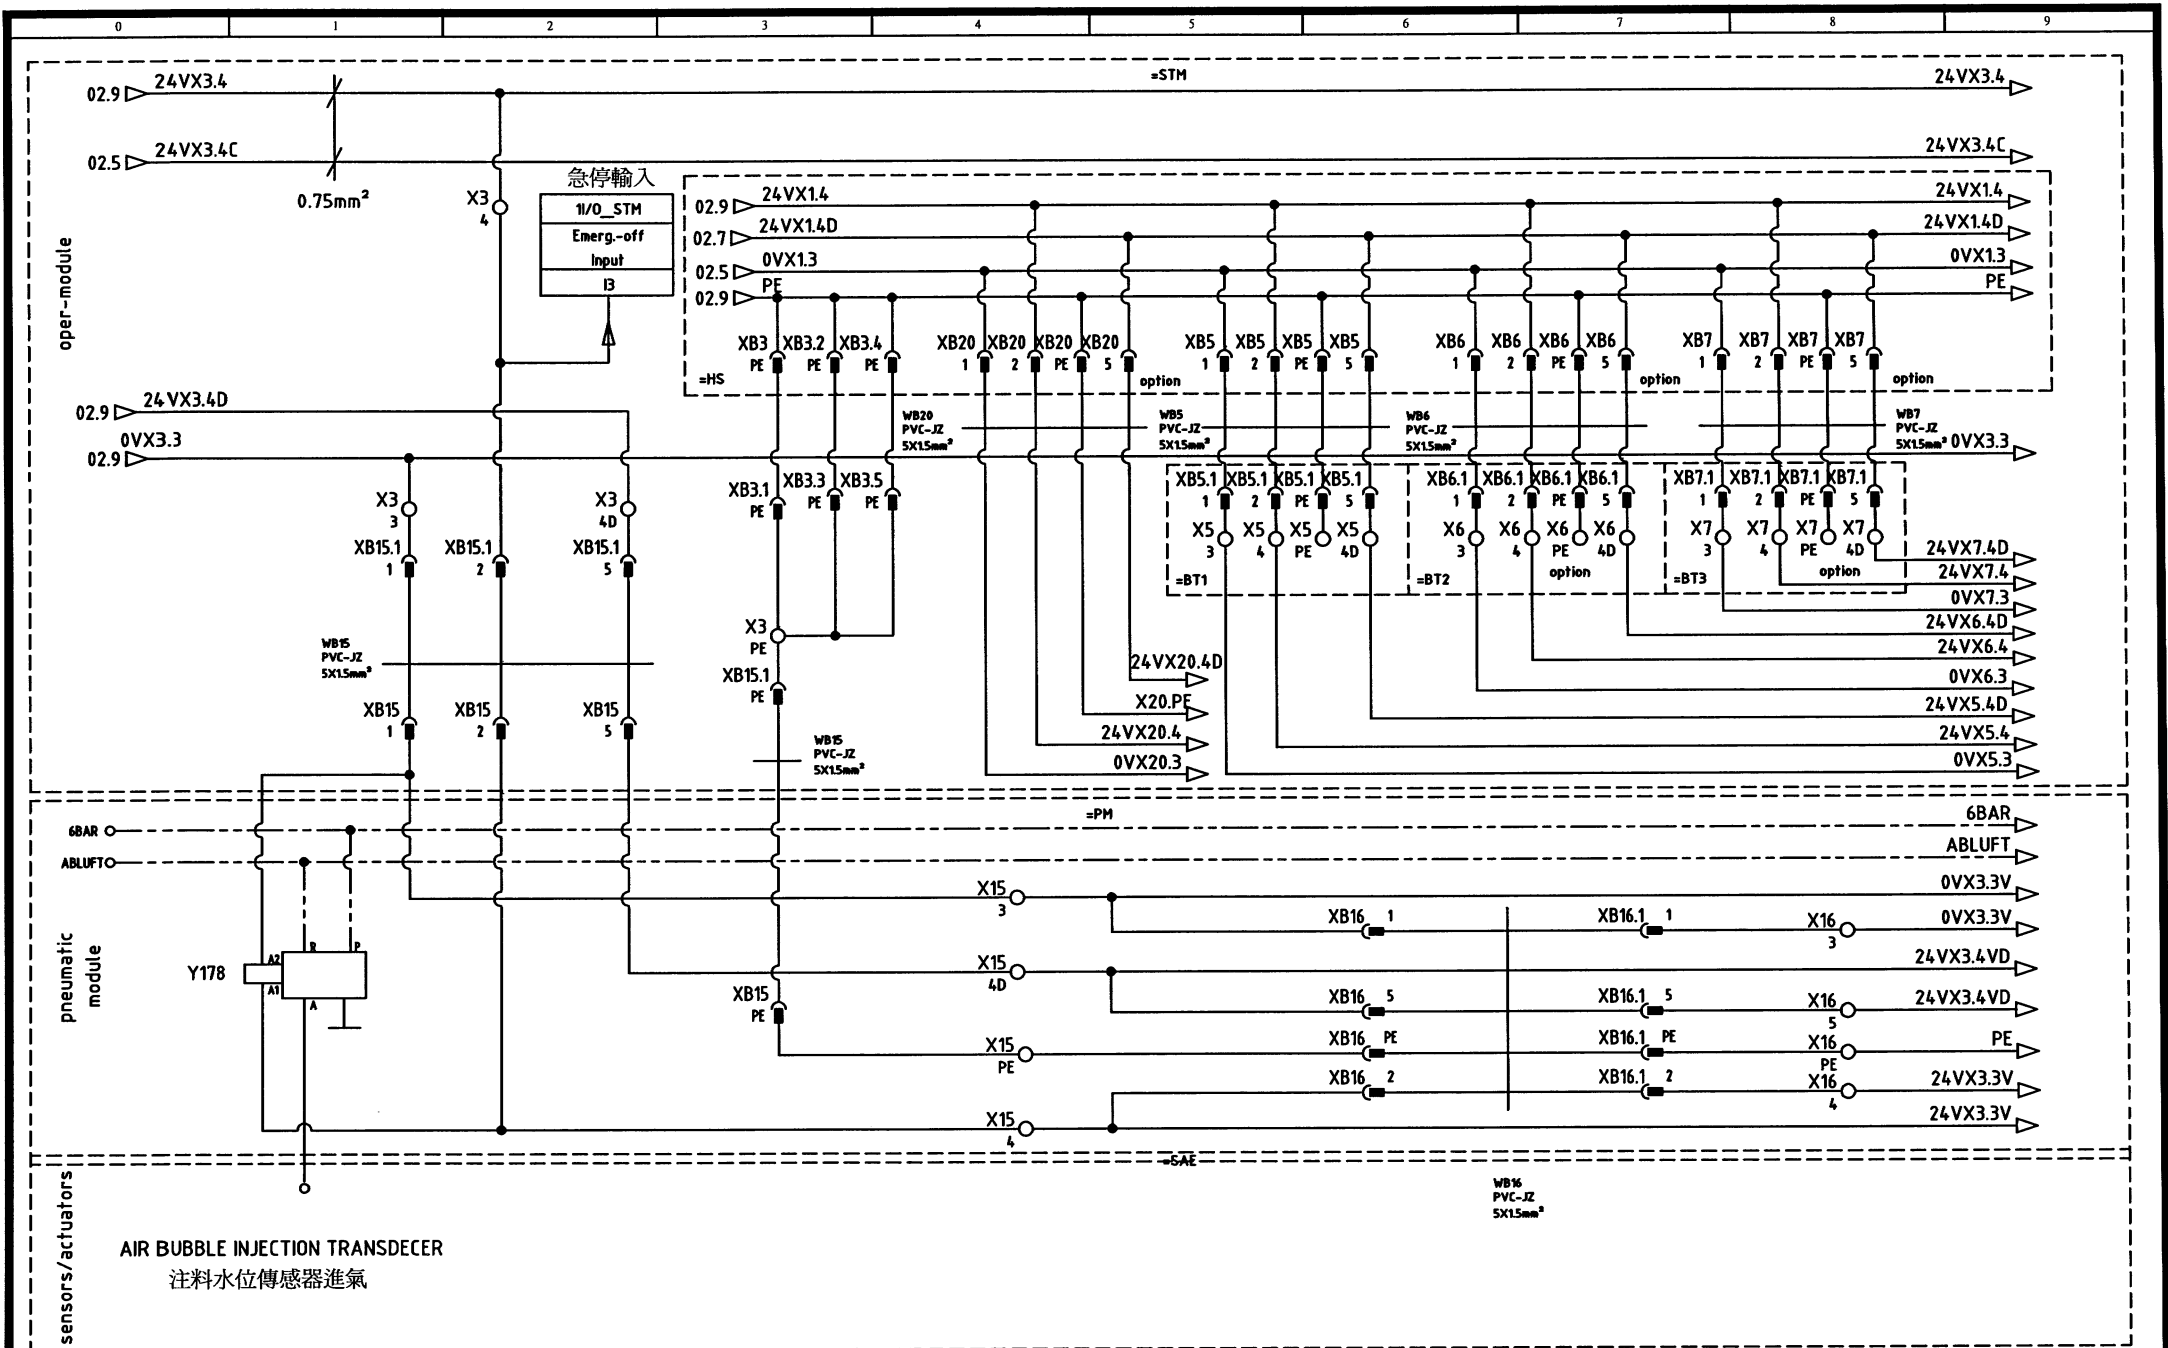


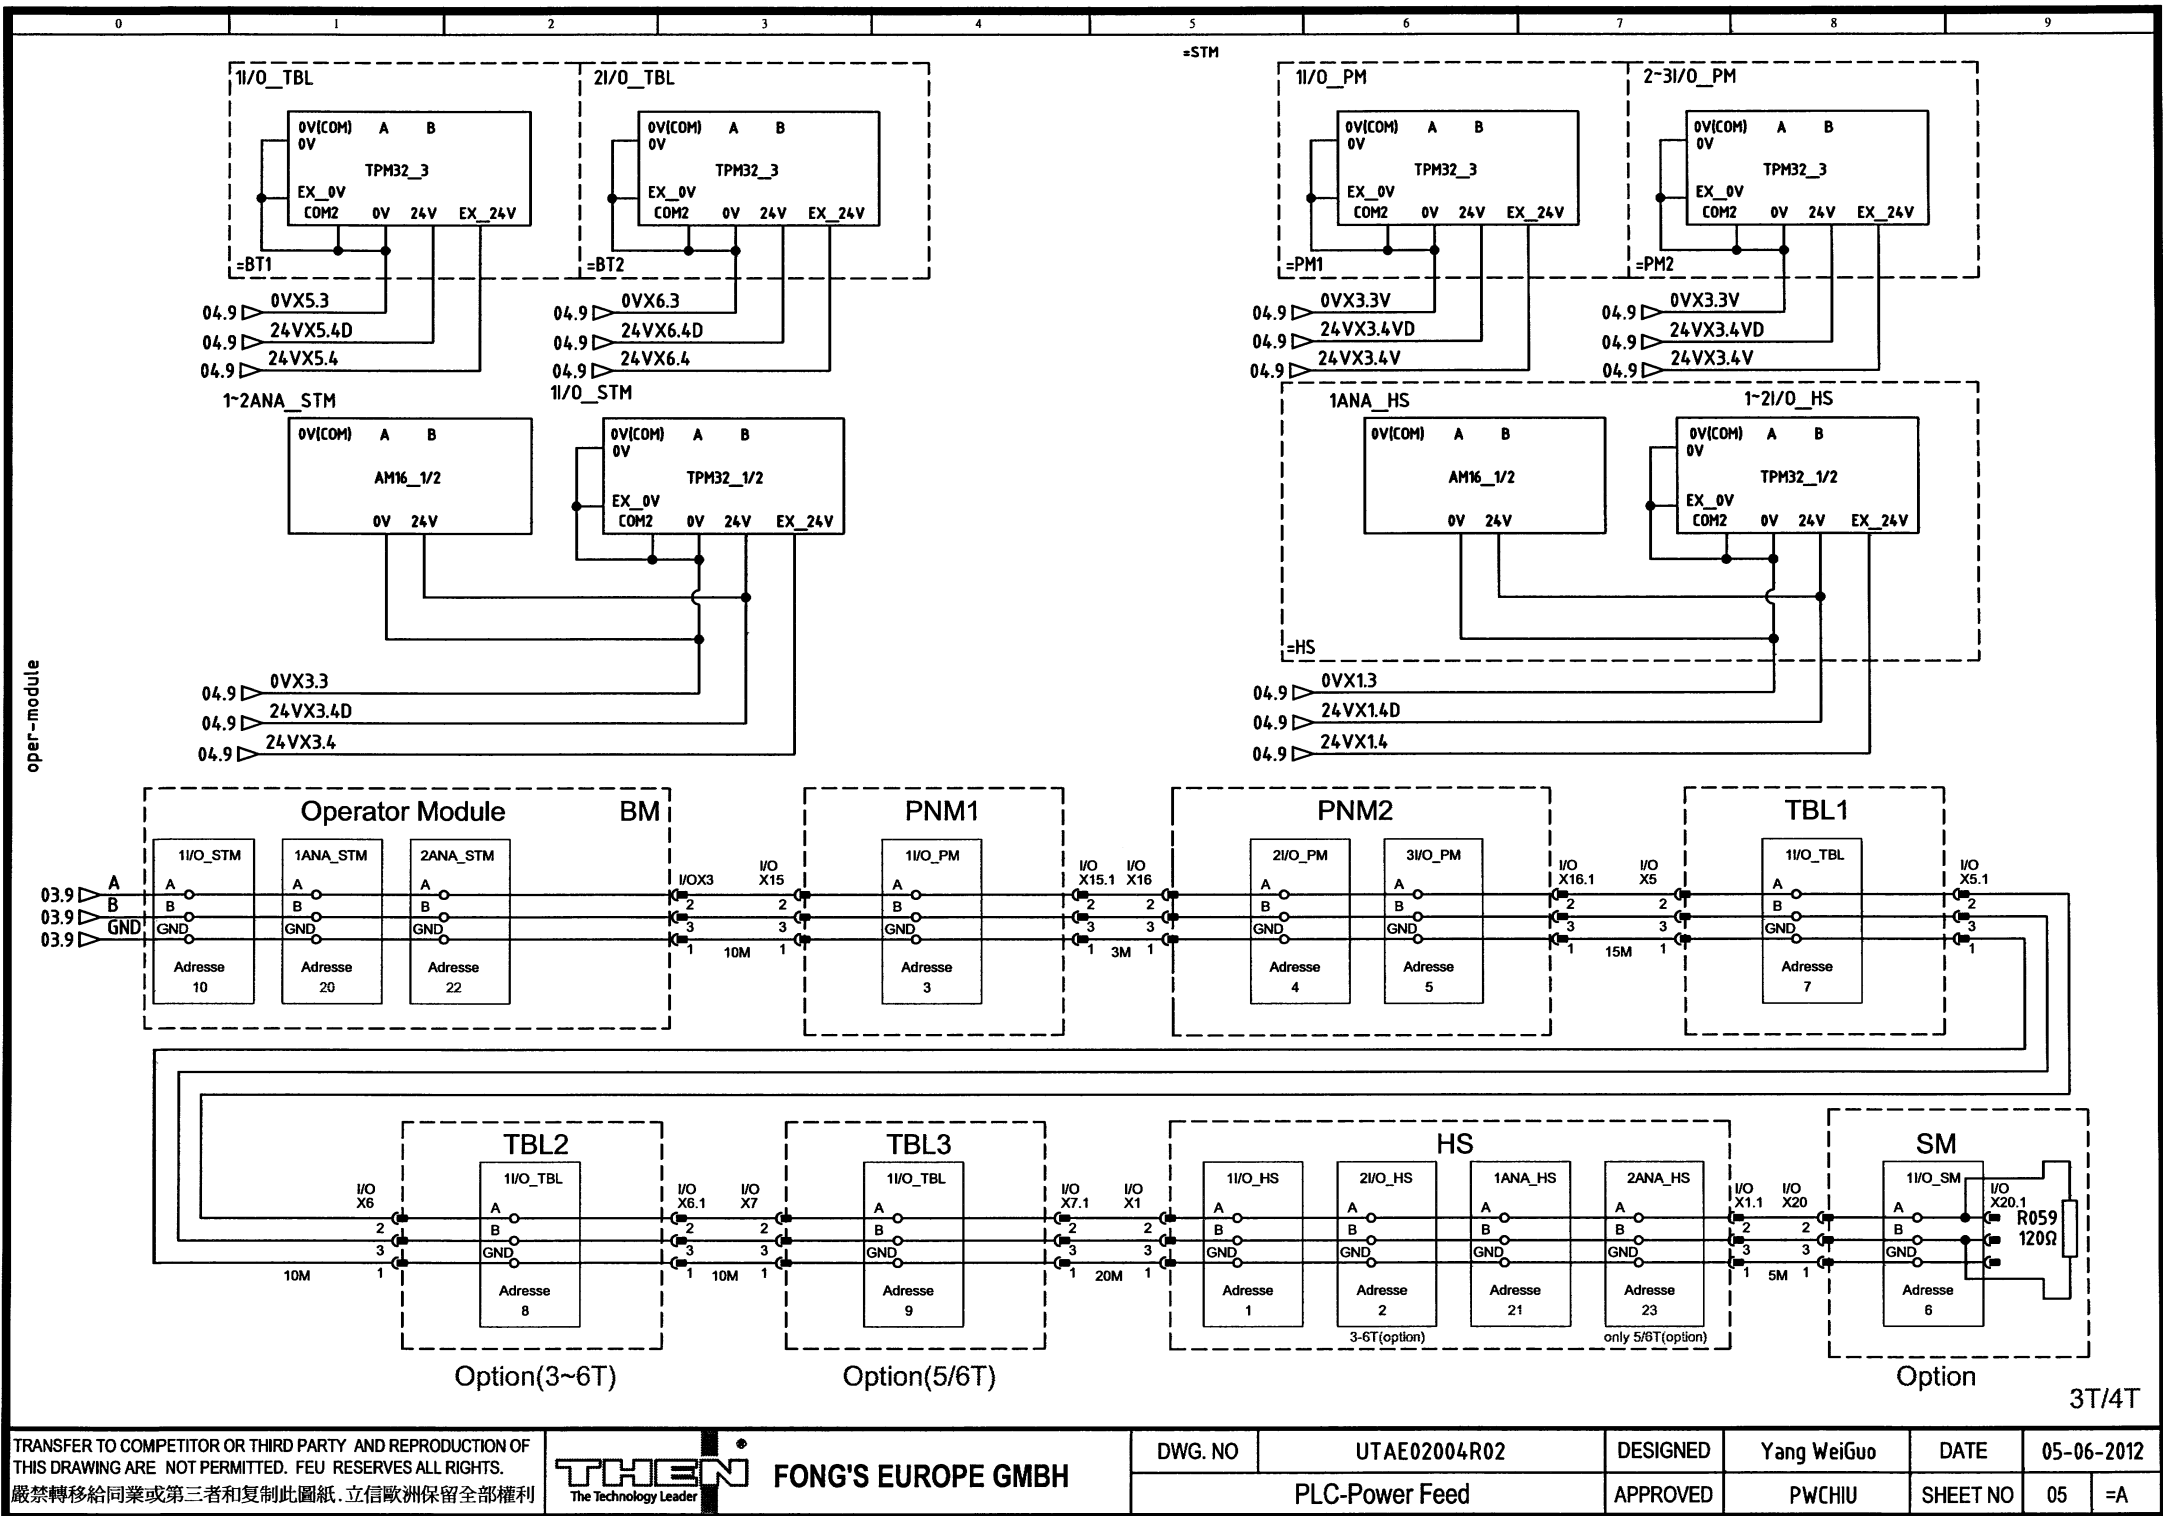


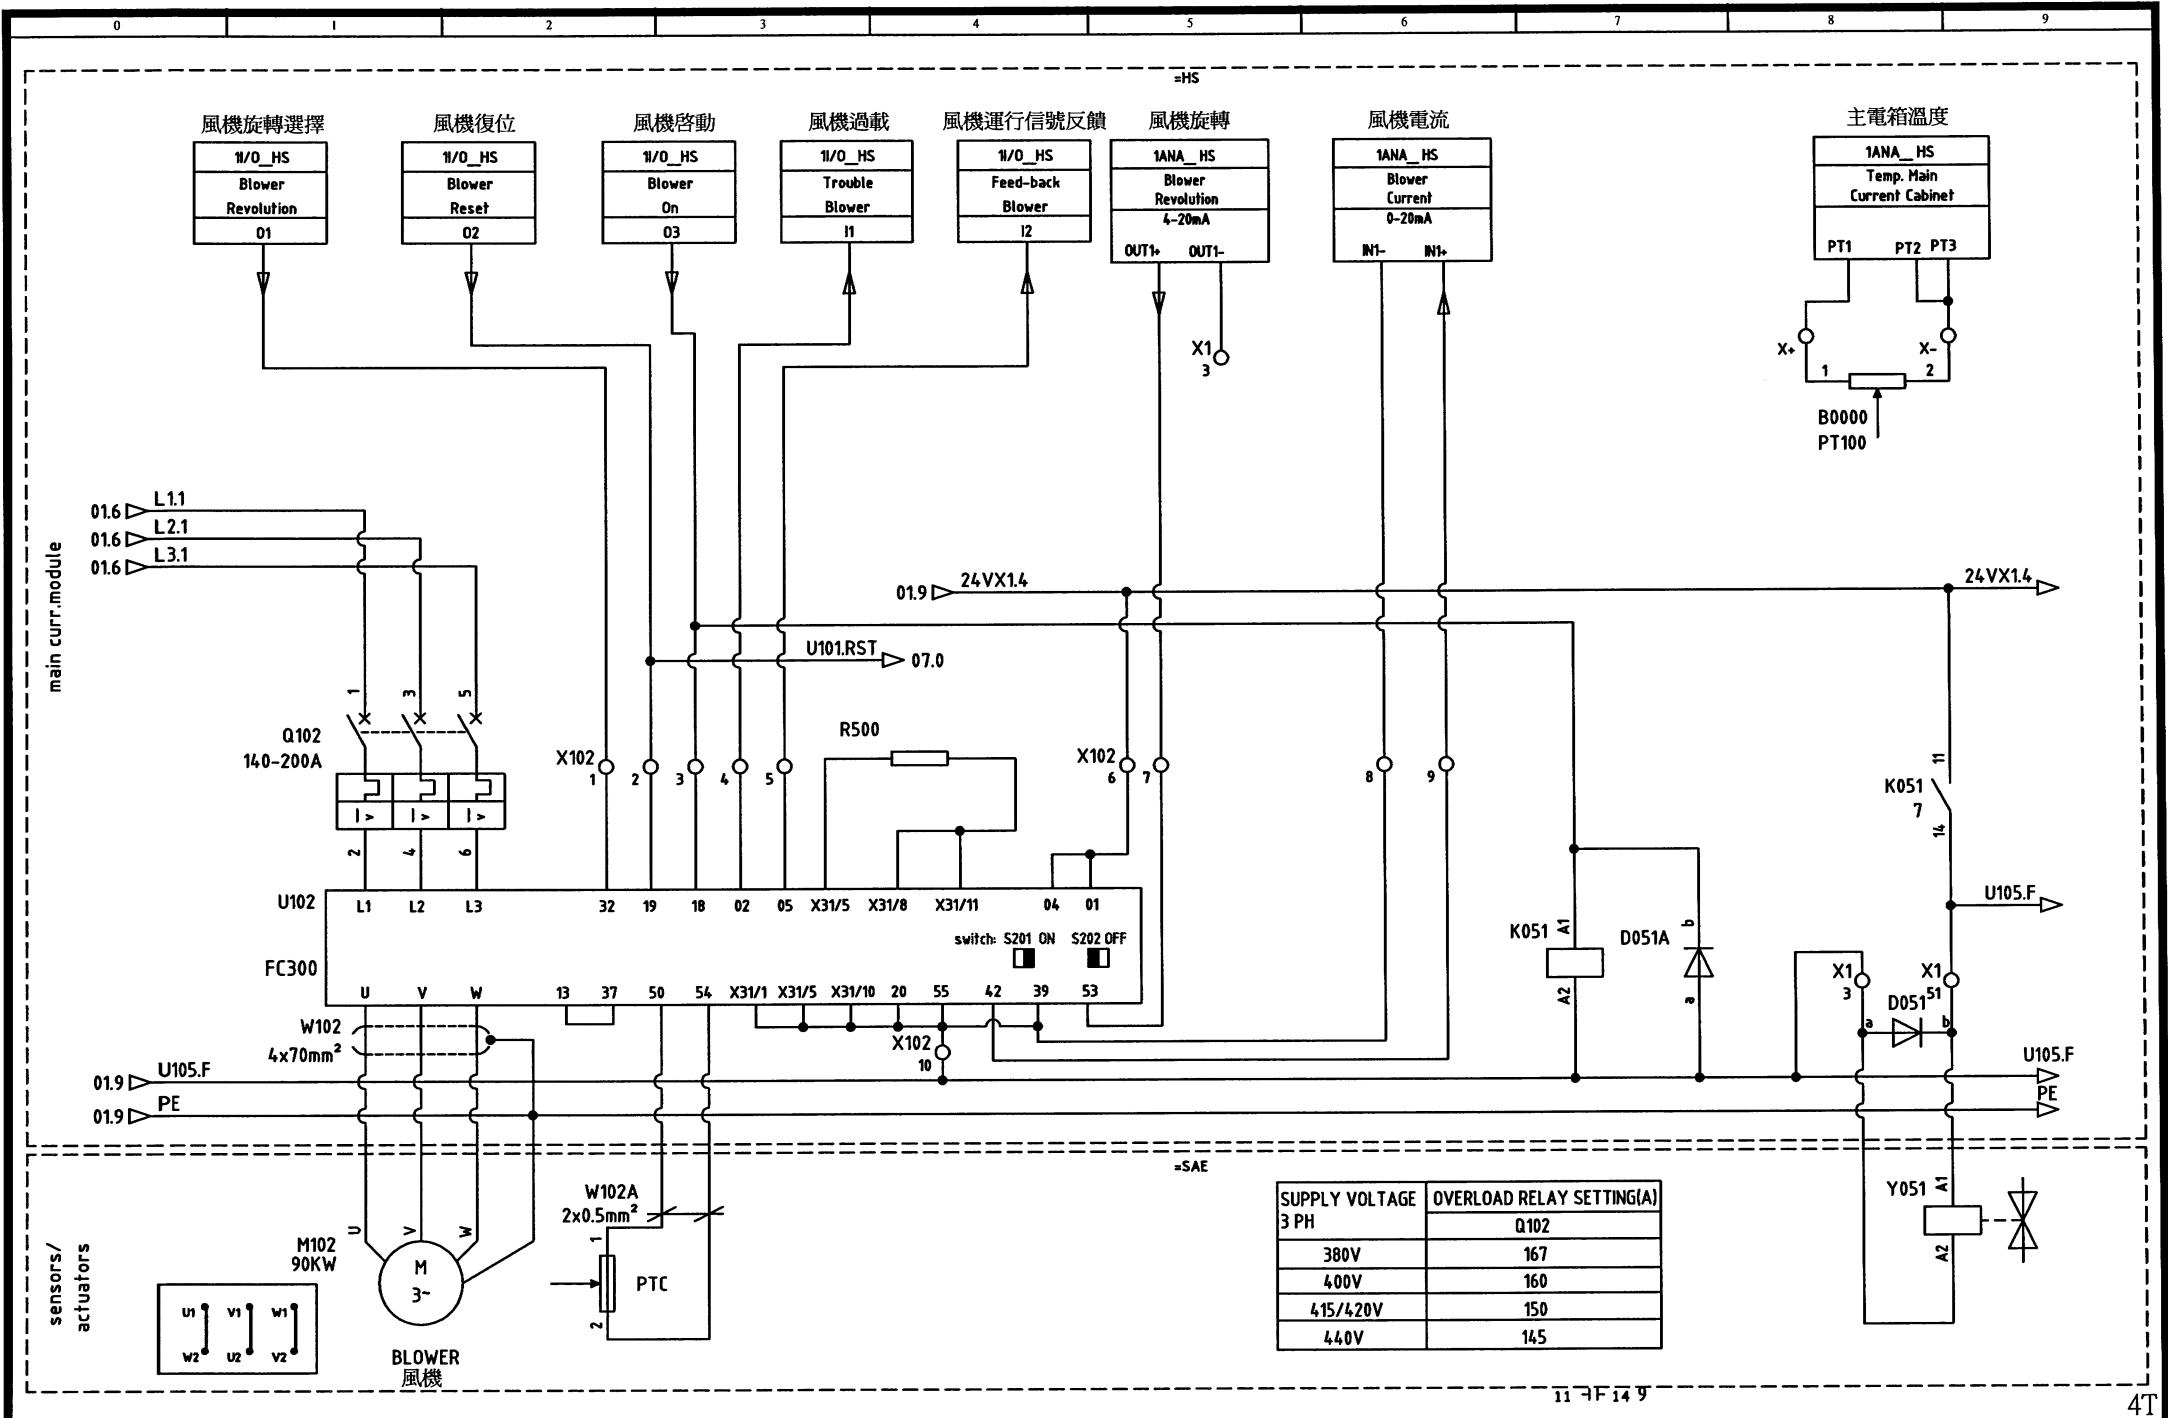


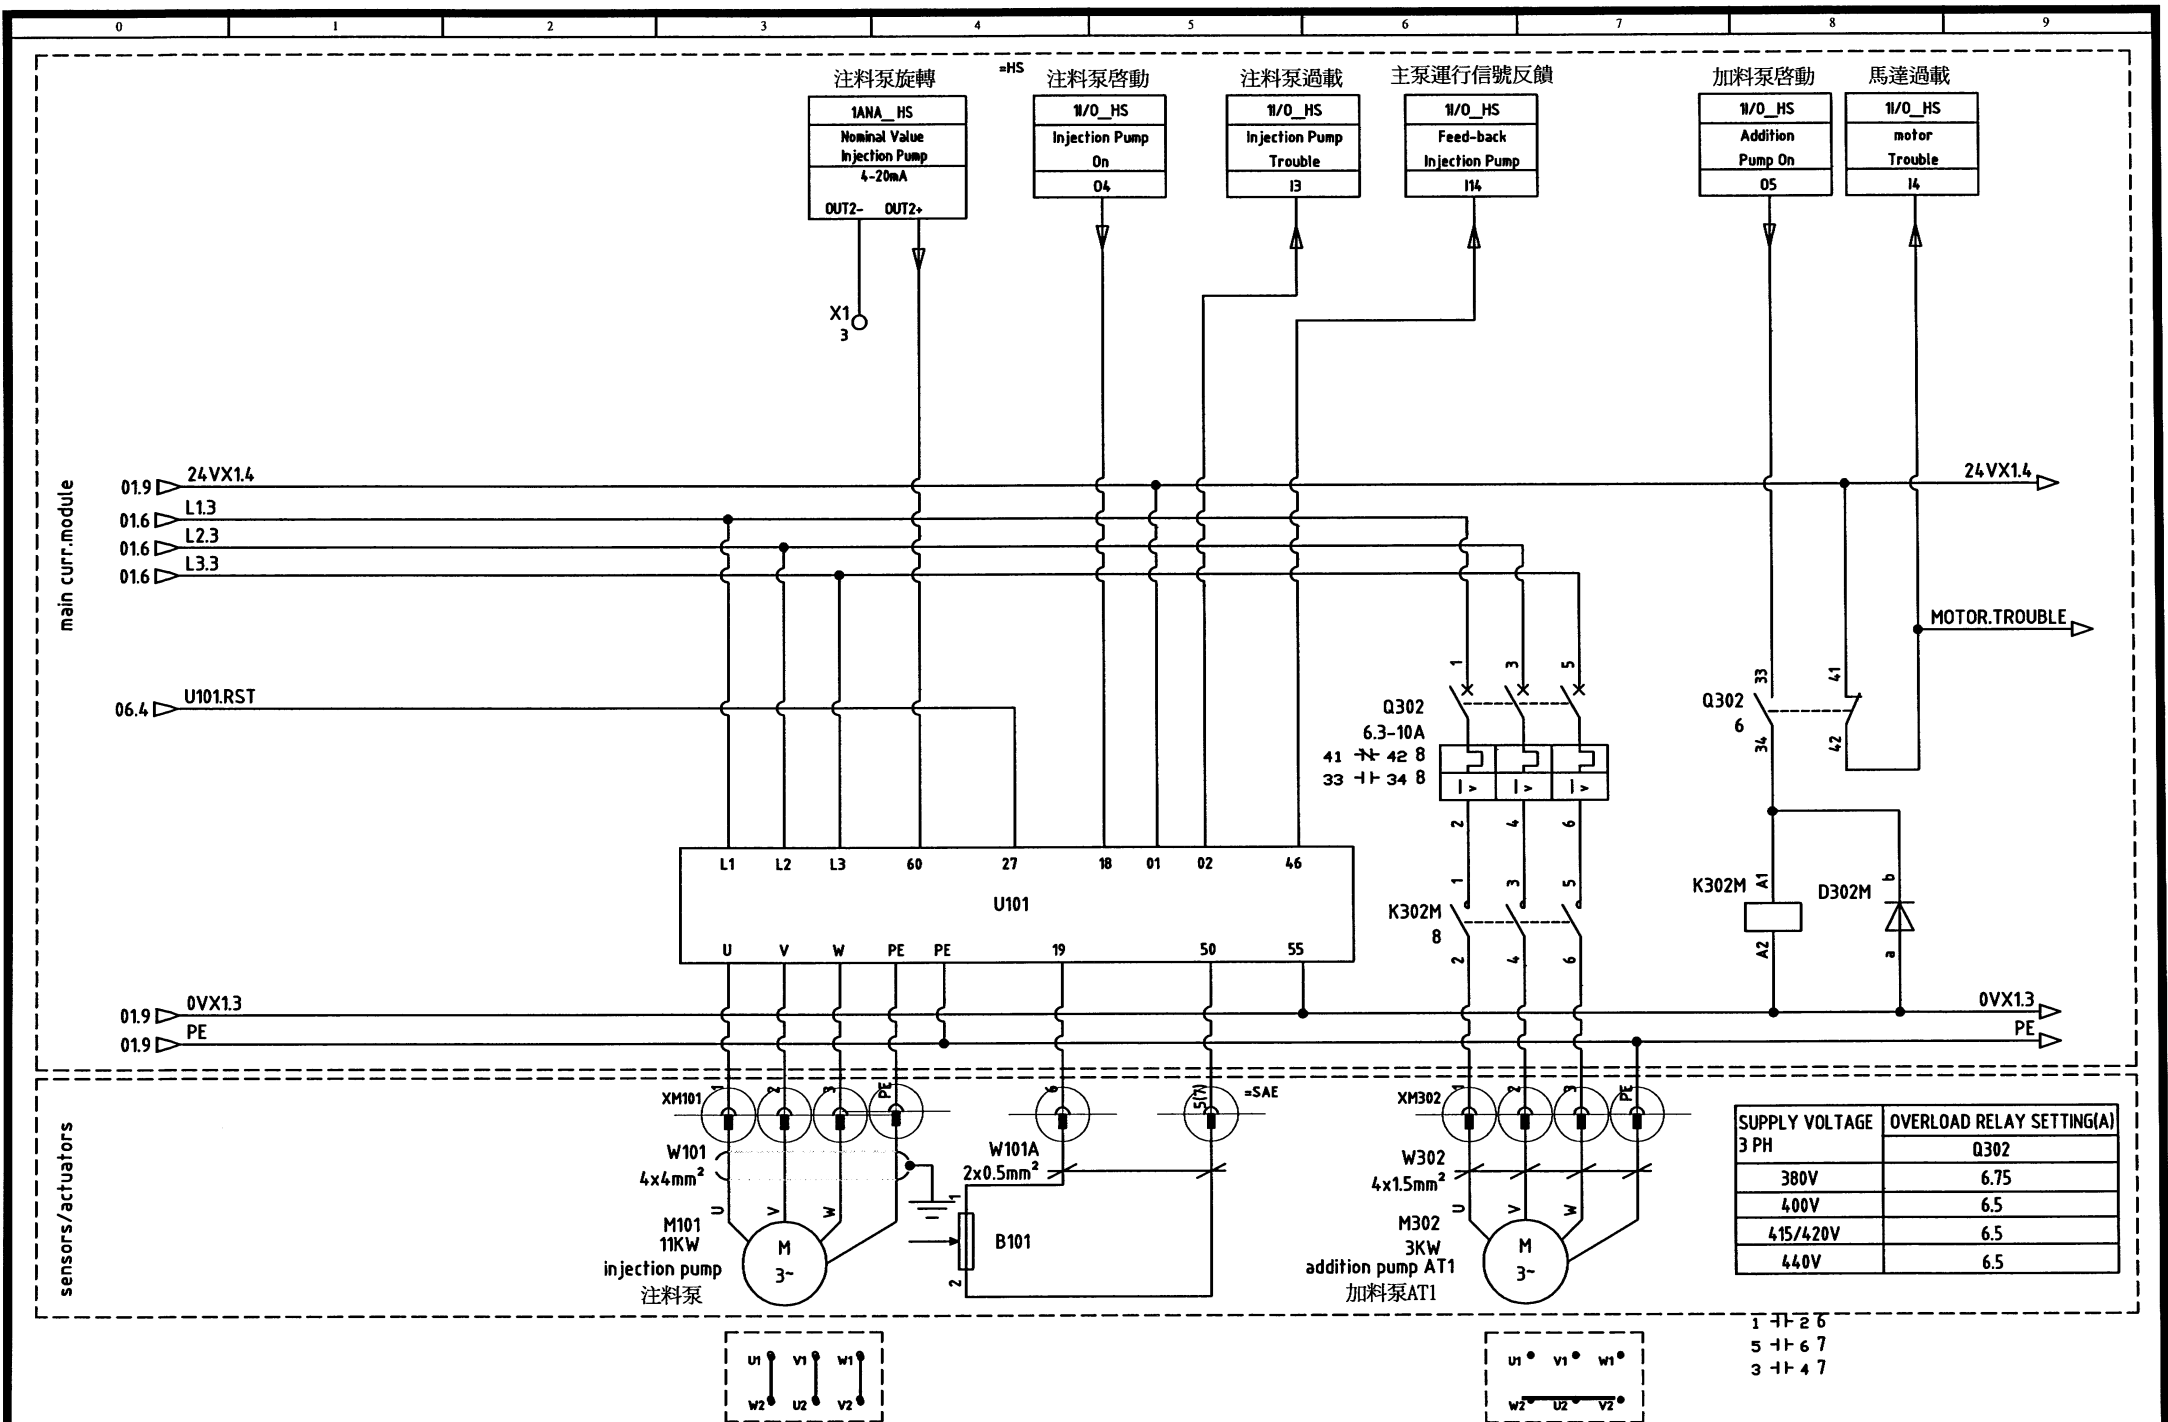

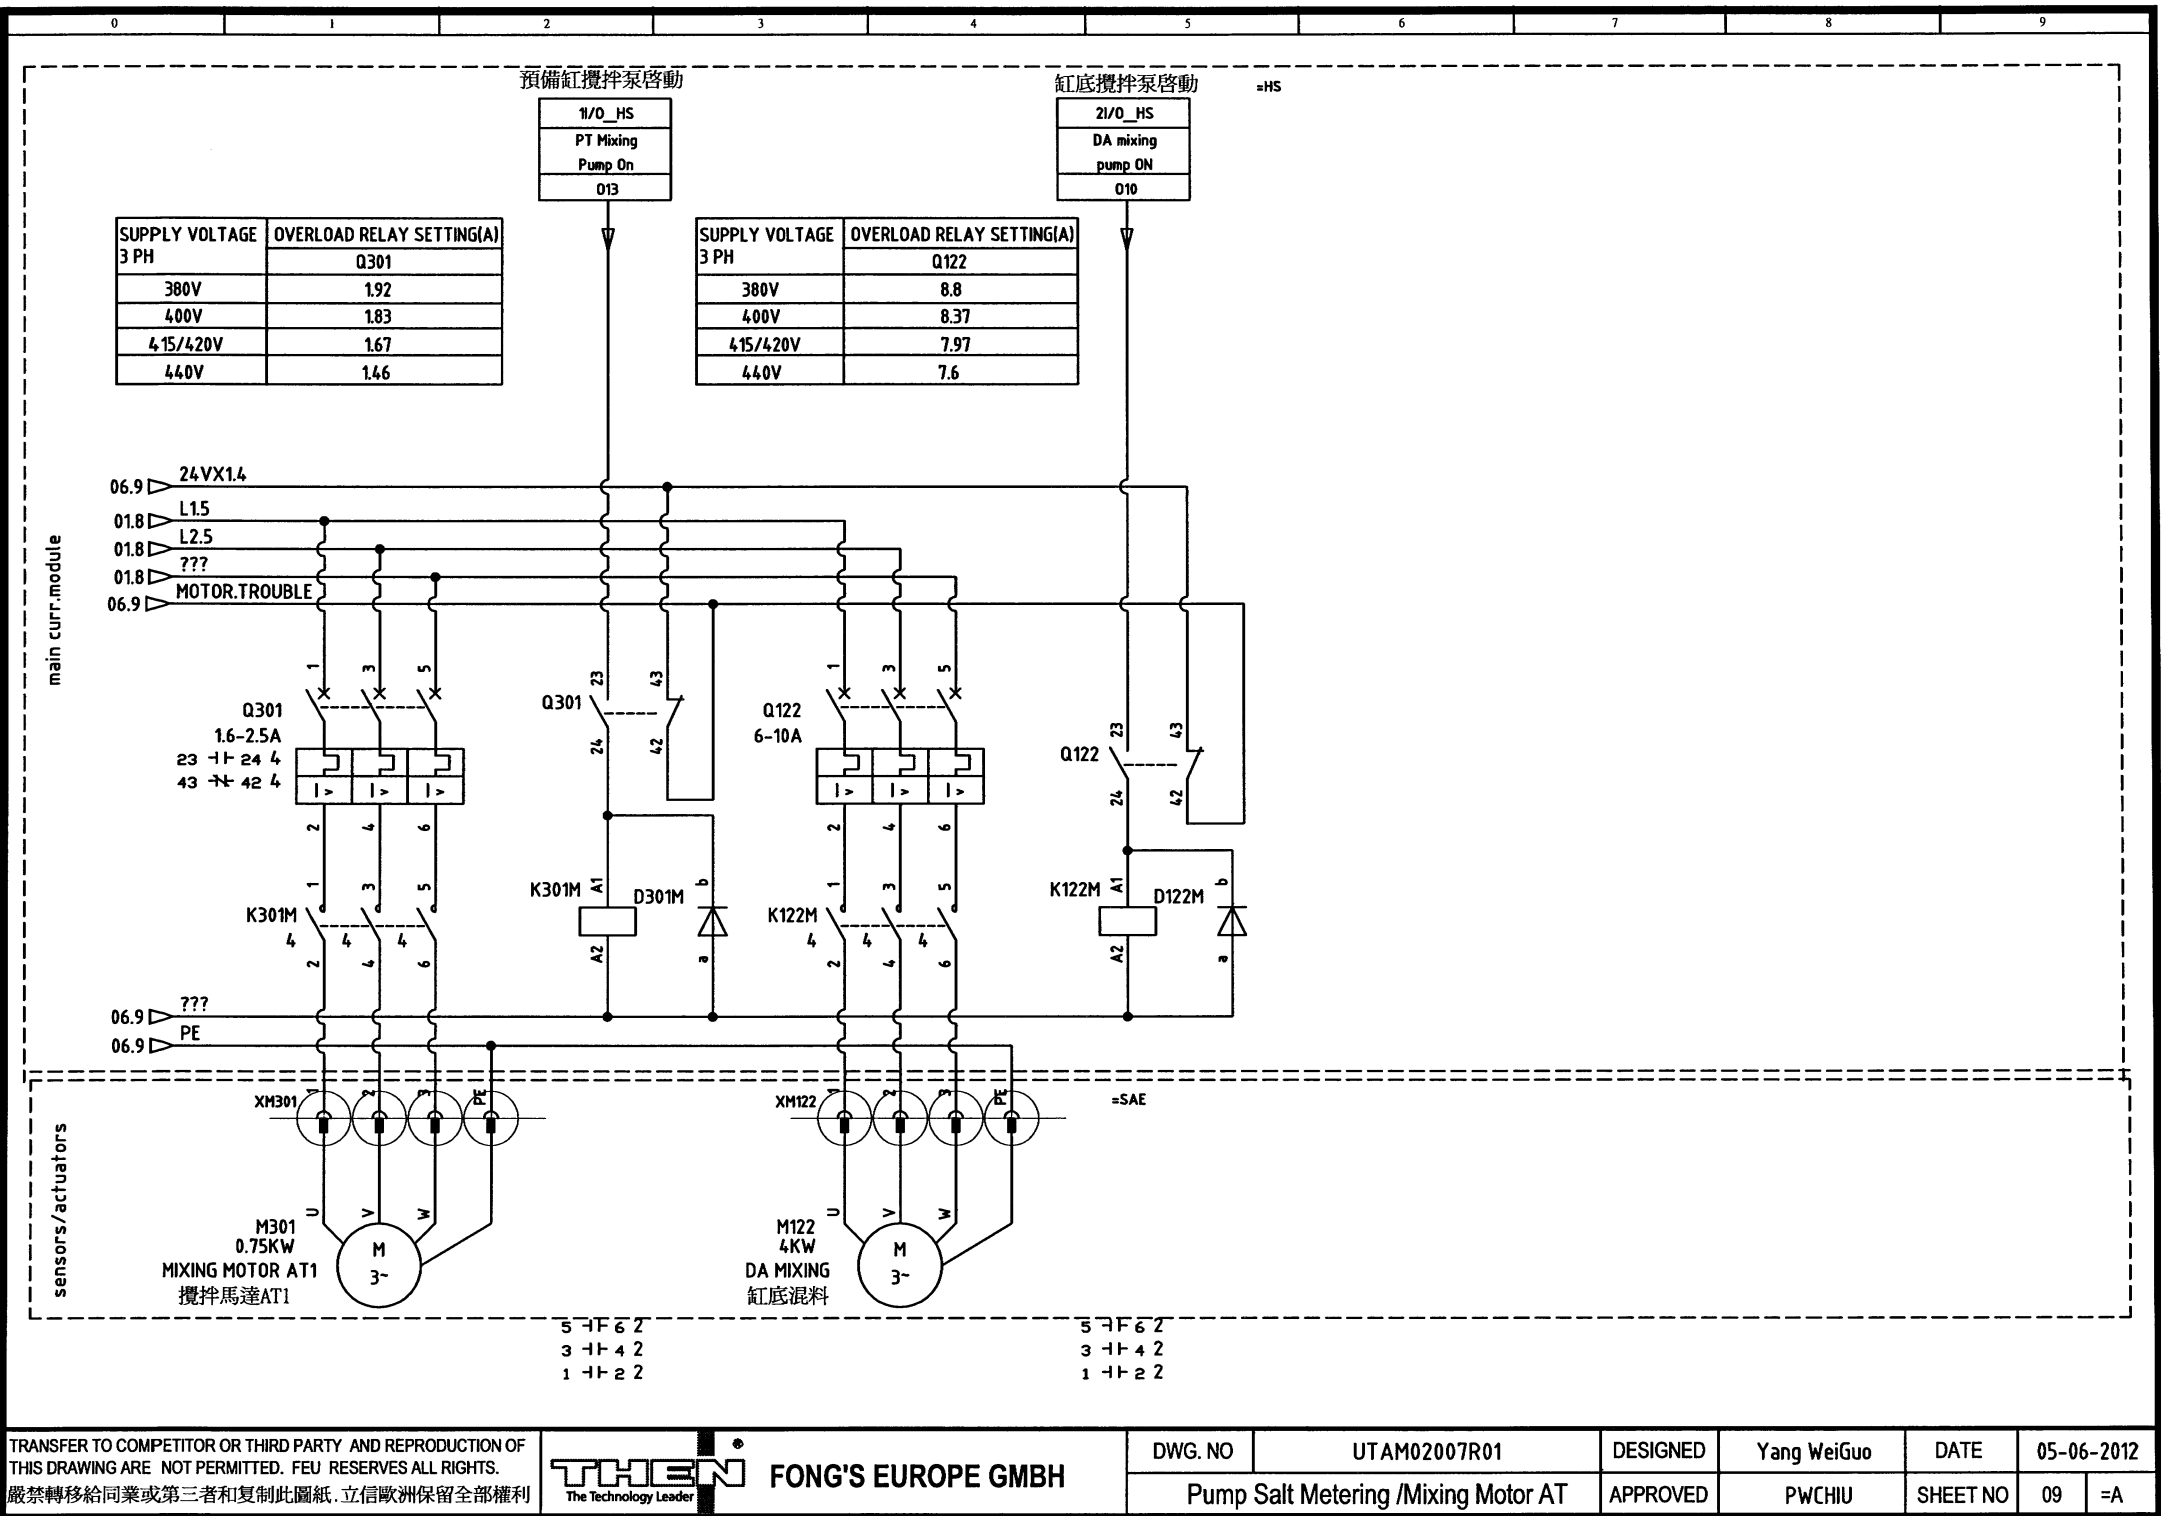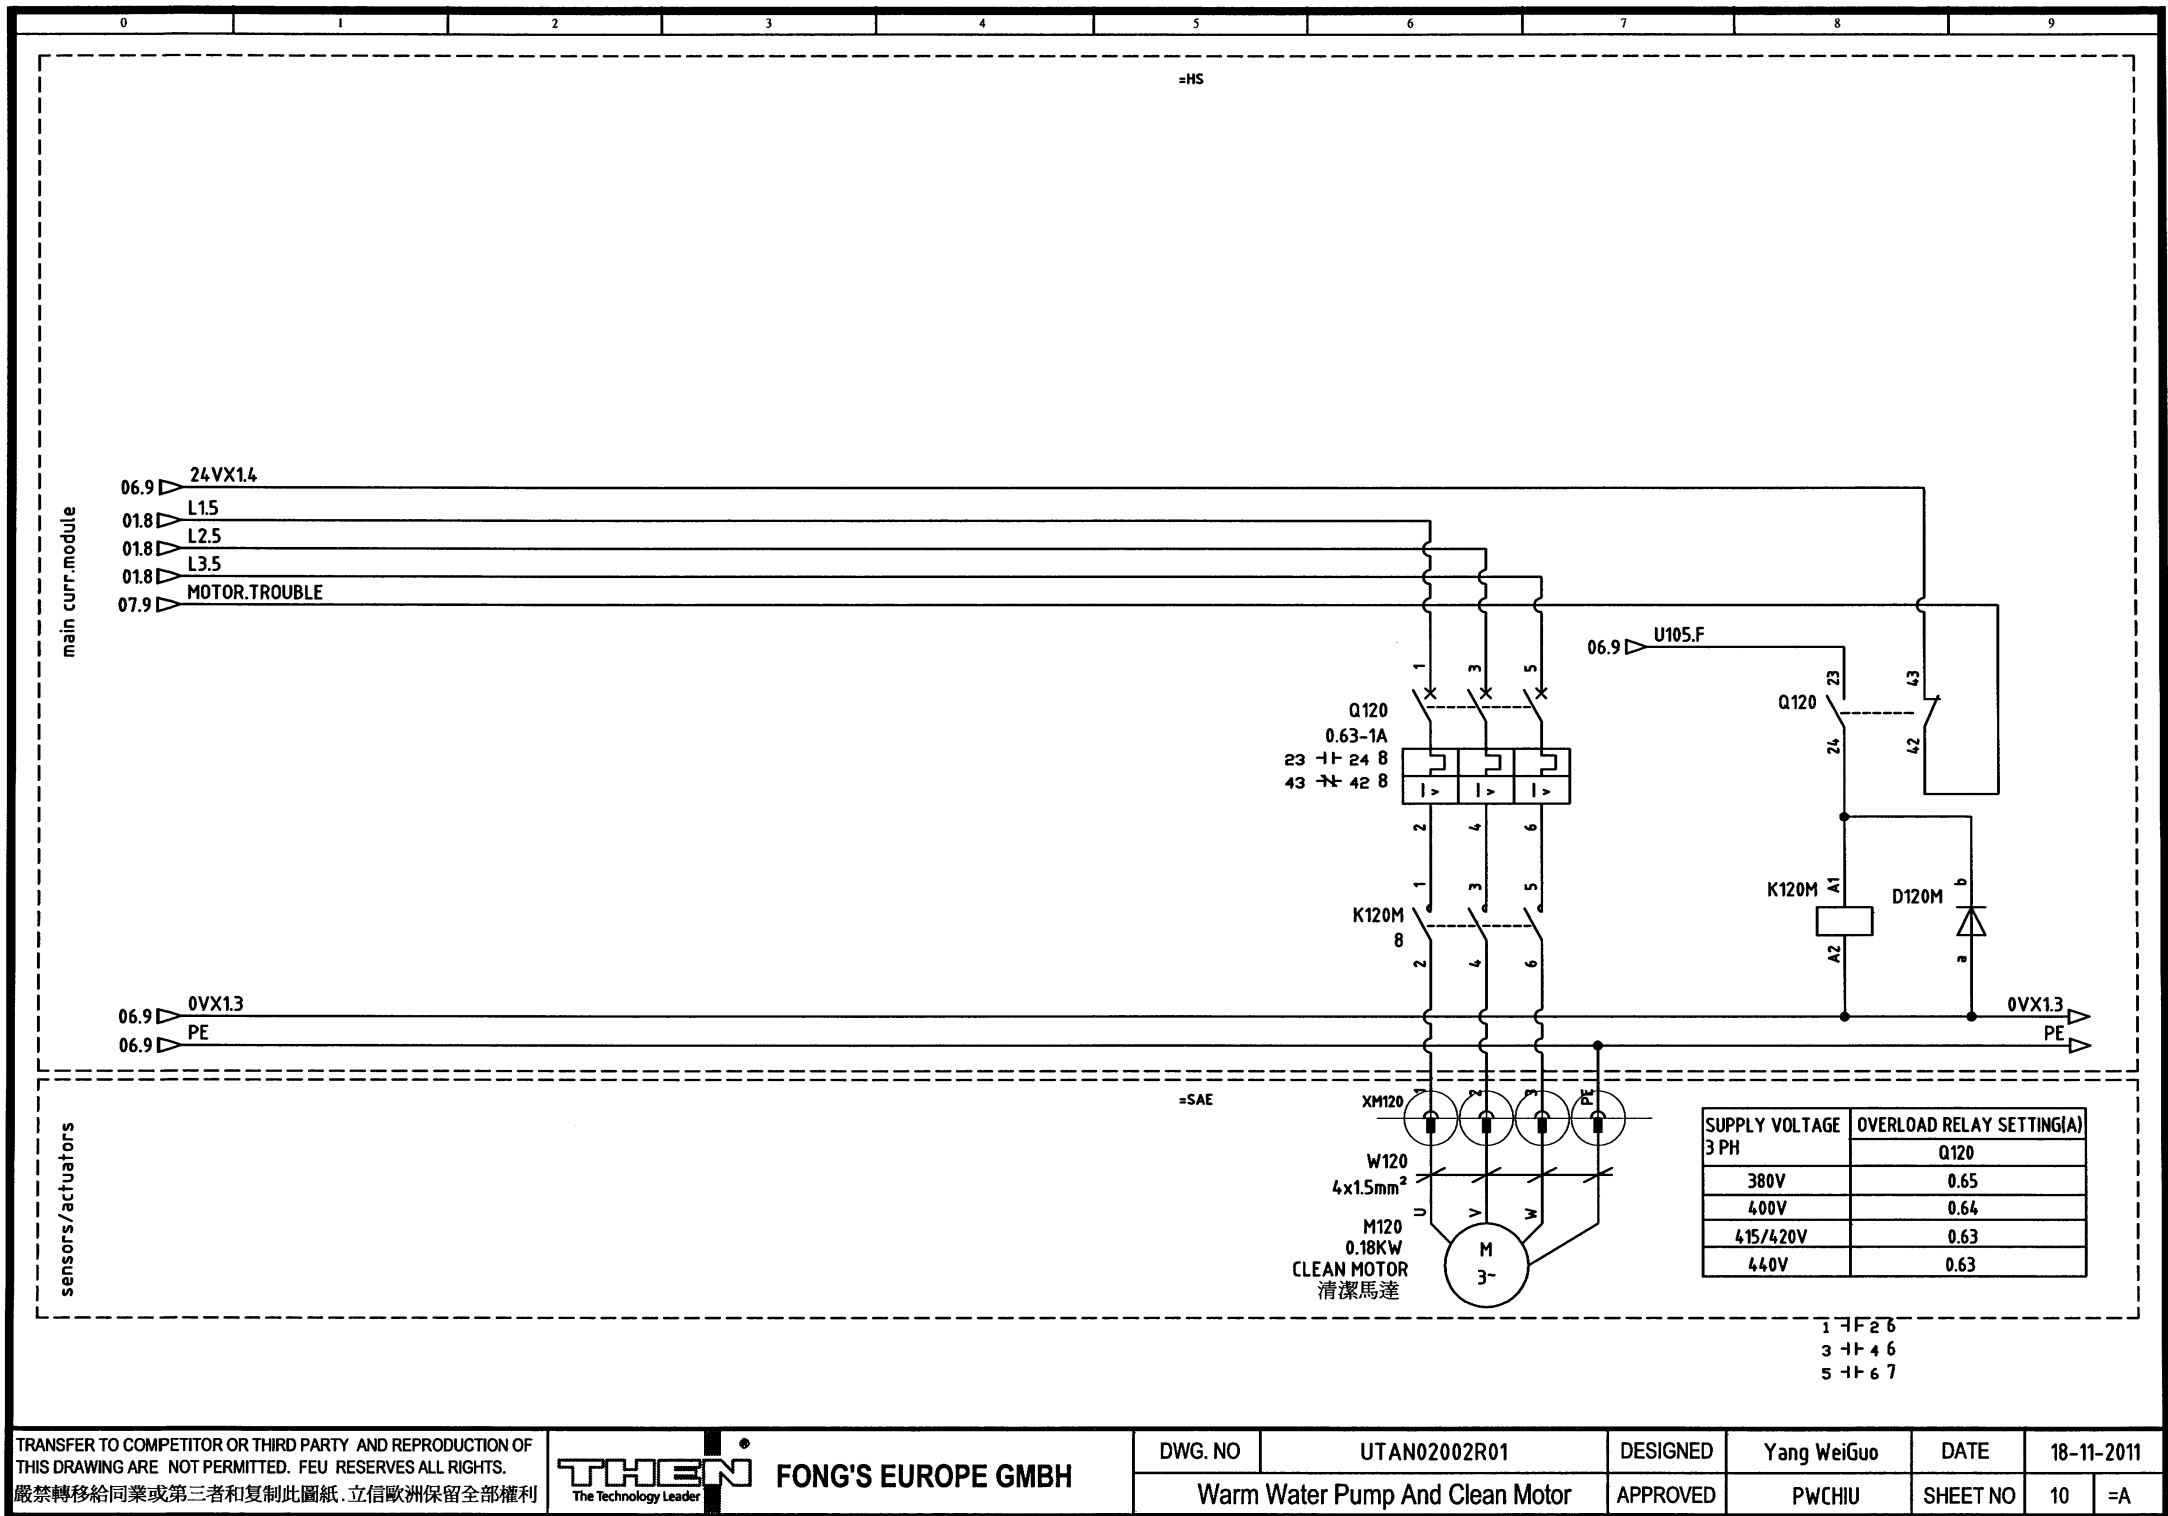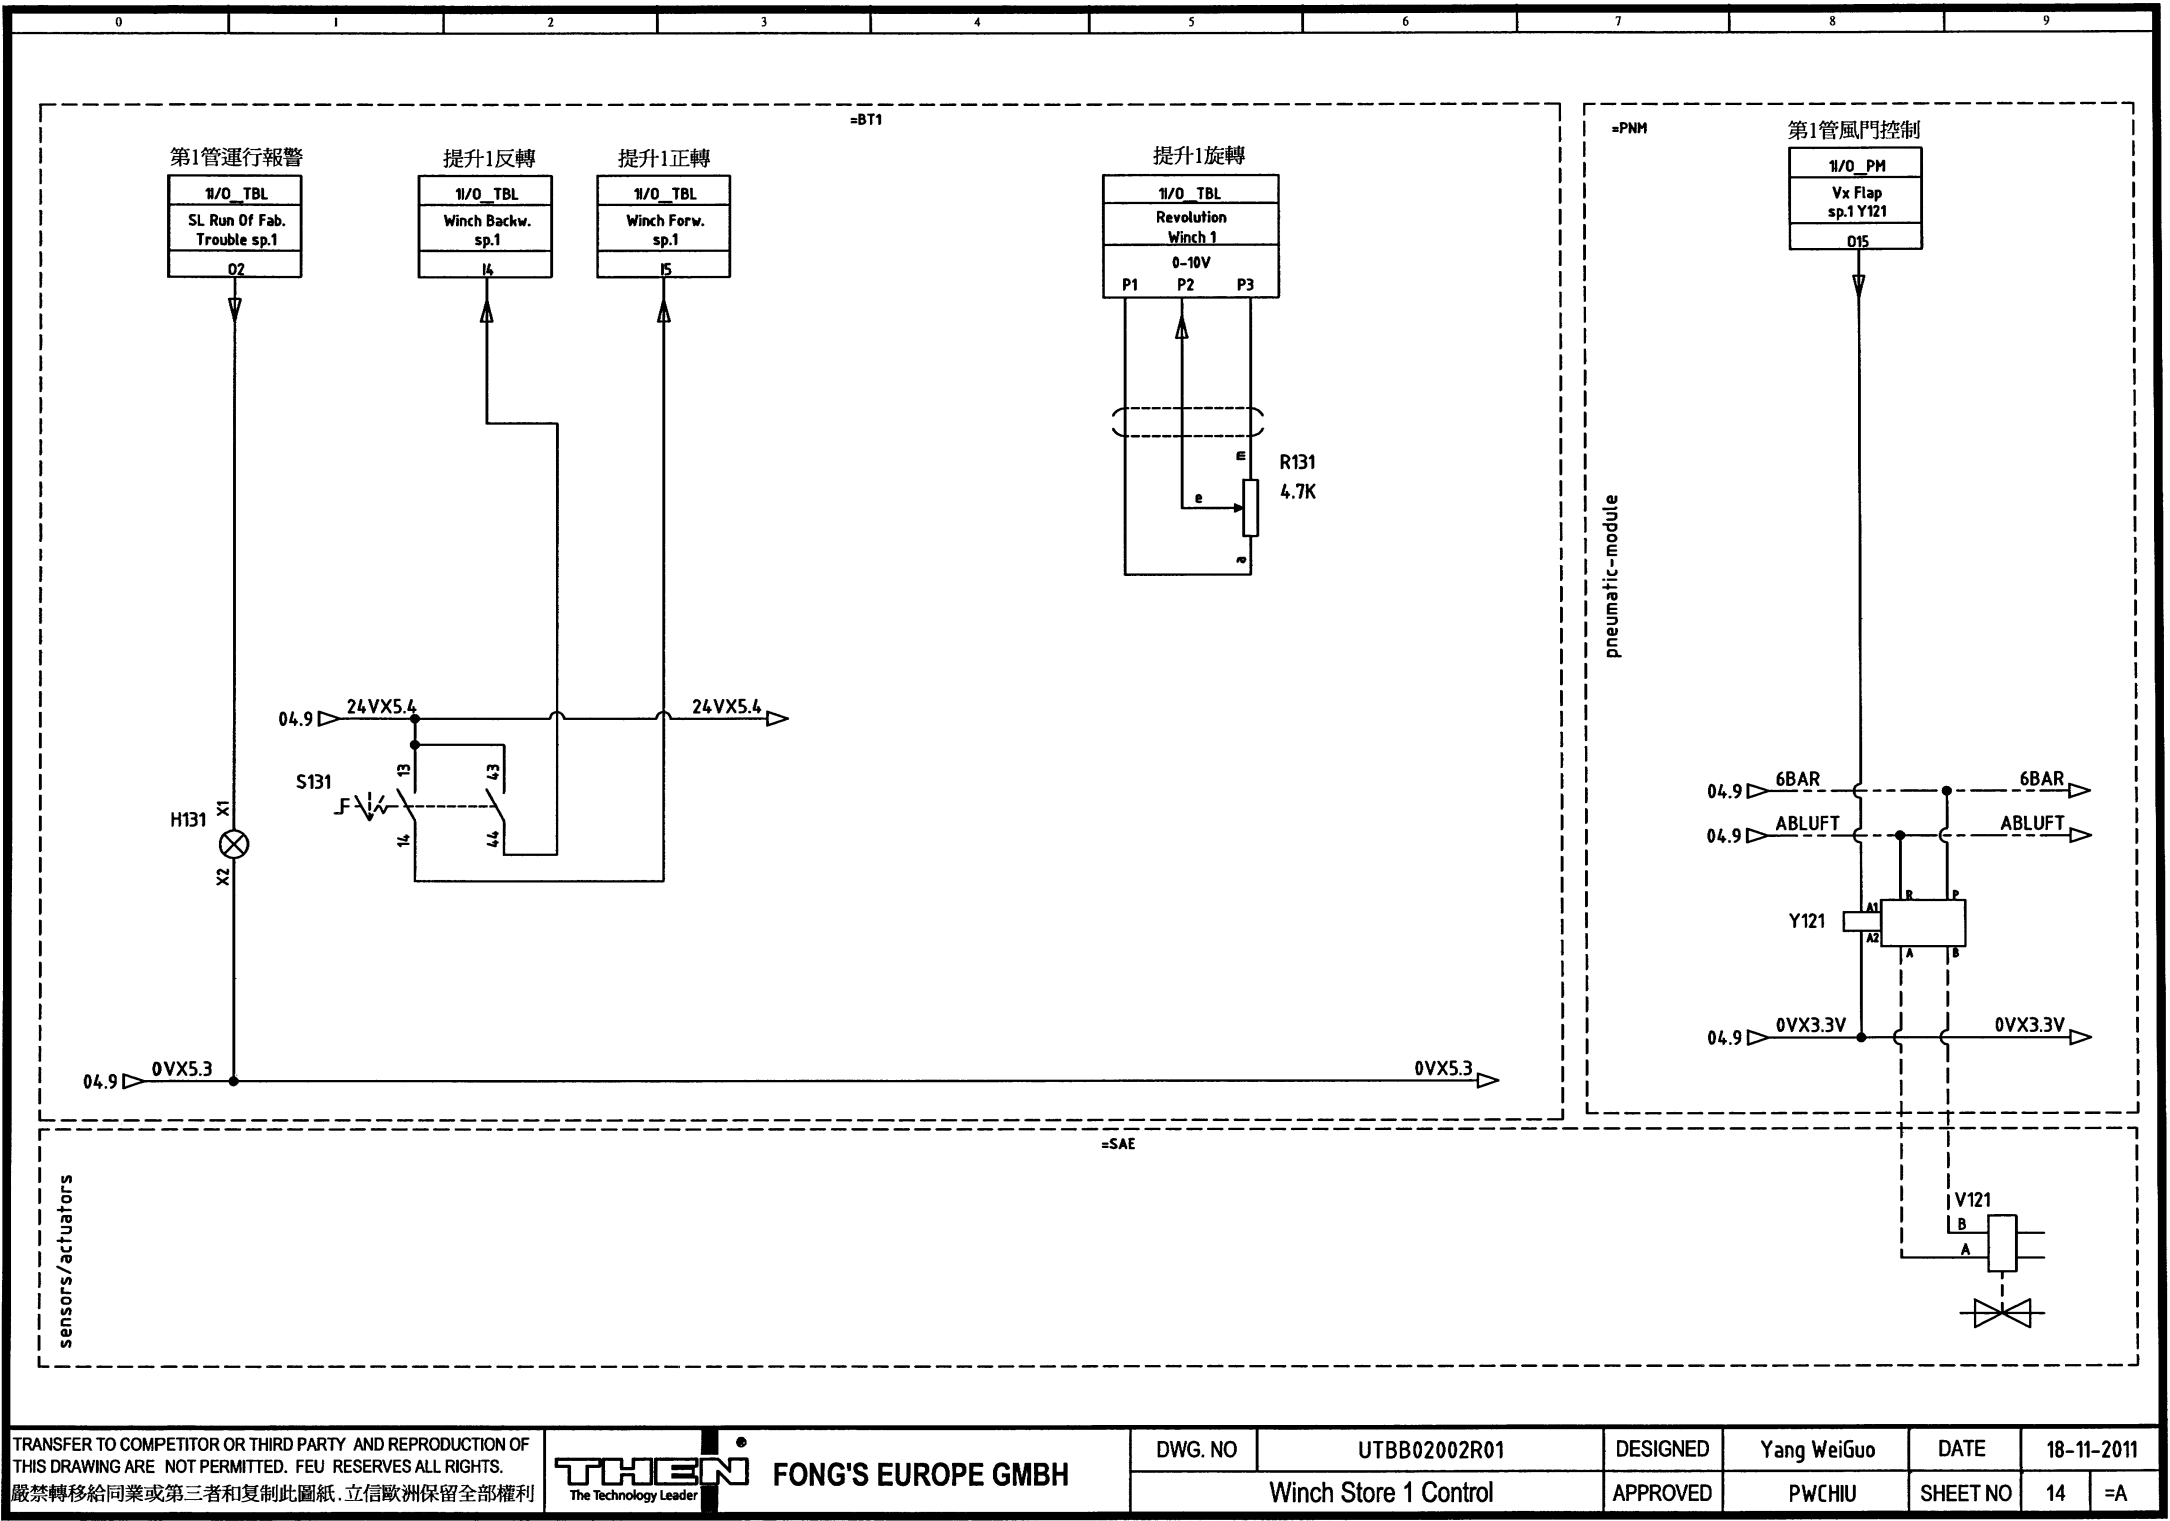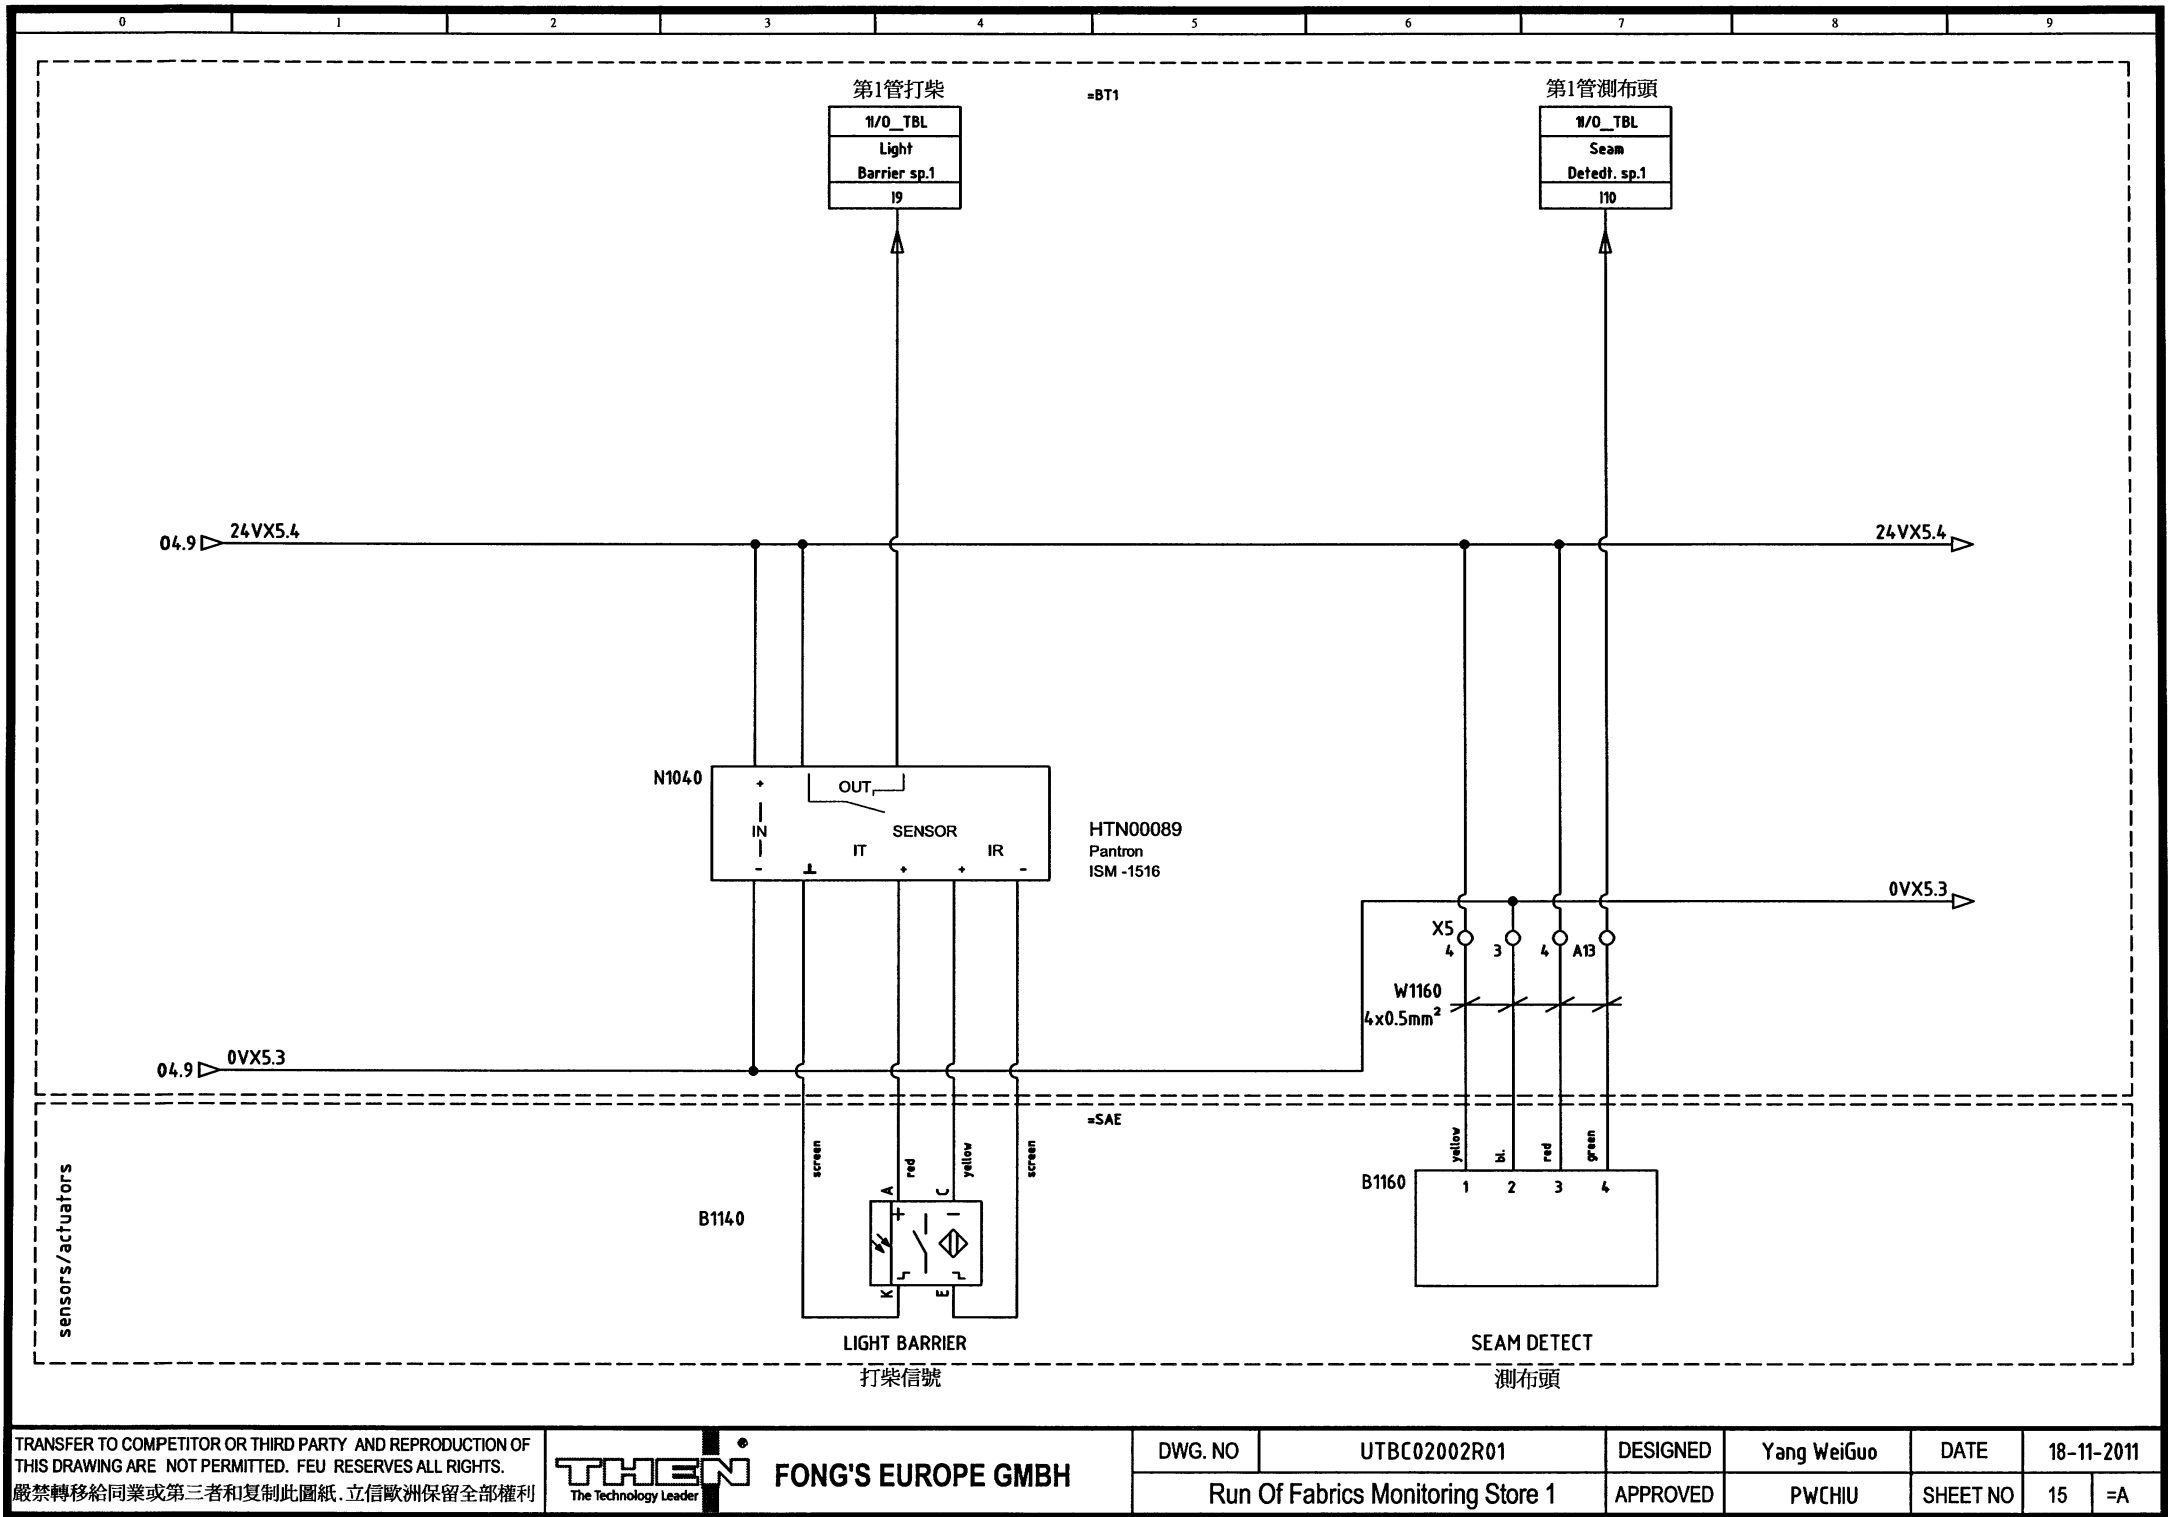







TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.


嚴禁轉移給同業或第三者和复制此圖紙. 立信歐洲保留全部權利

THEN

The Technology Leader

FONG'S EUROPE GMBH

DWG. NO	UTBC02002R01	DESIGNED	Yang WeiGuo	DATE	18-11-2011
Run Of Fabrics Monitoring Store 1		APPROVED	PWCHIU	SHEET NO	15 =A

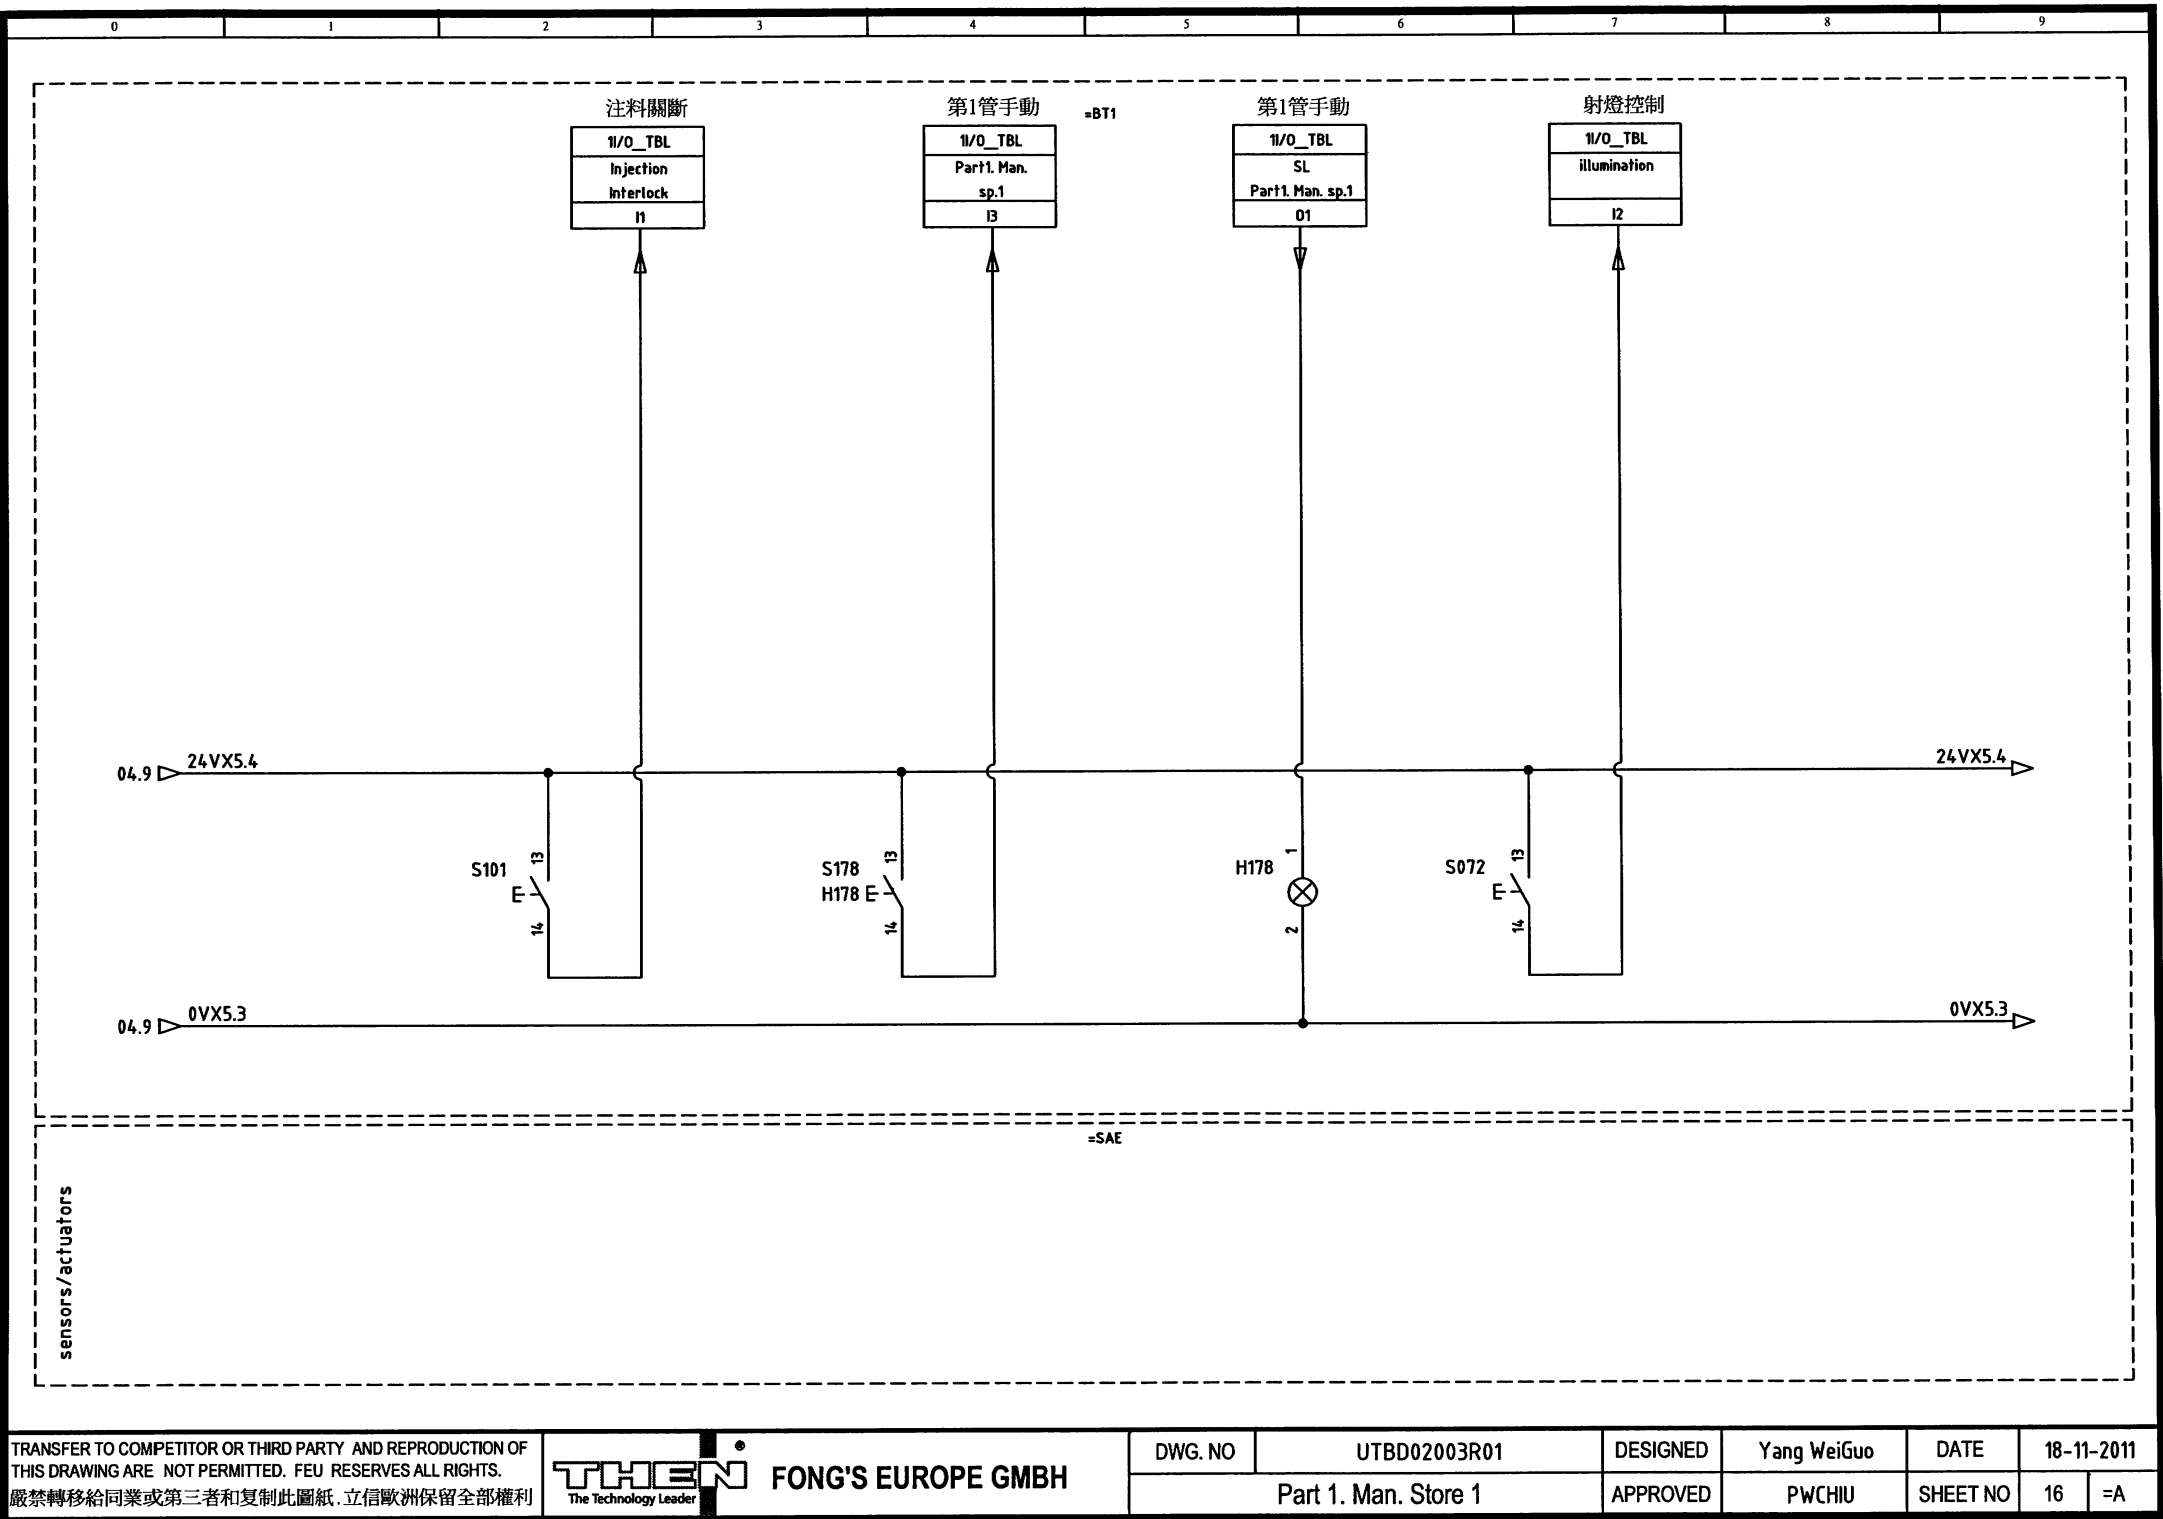


TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.


嚴禁轉移給同業或第三者和复制此圖紙，立信歐洲保留全部權利





THEN
The Technology Leader

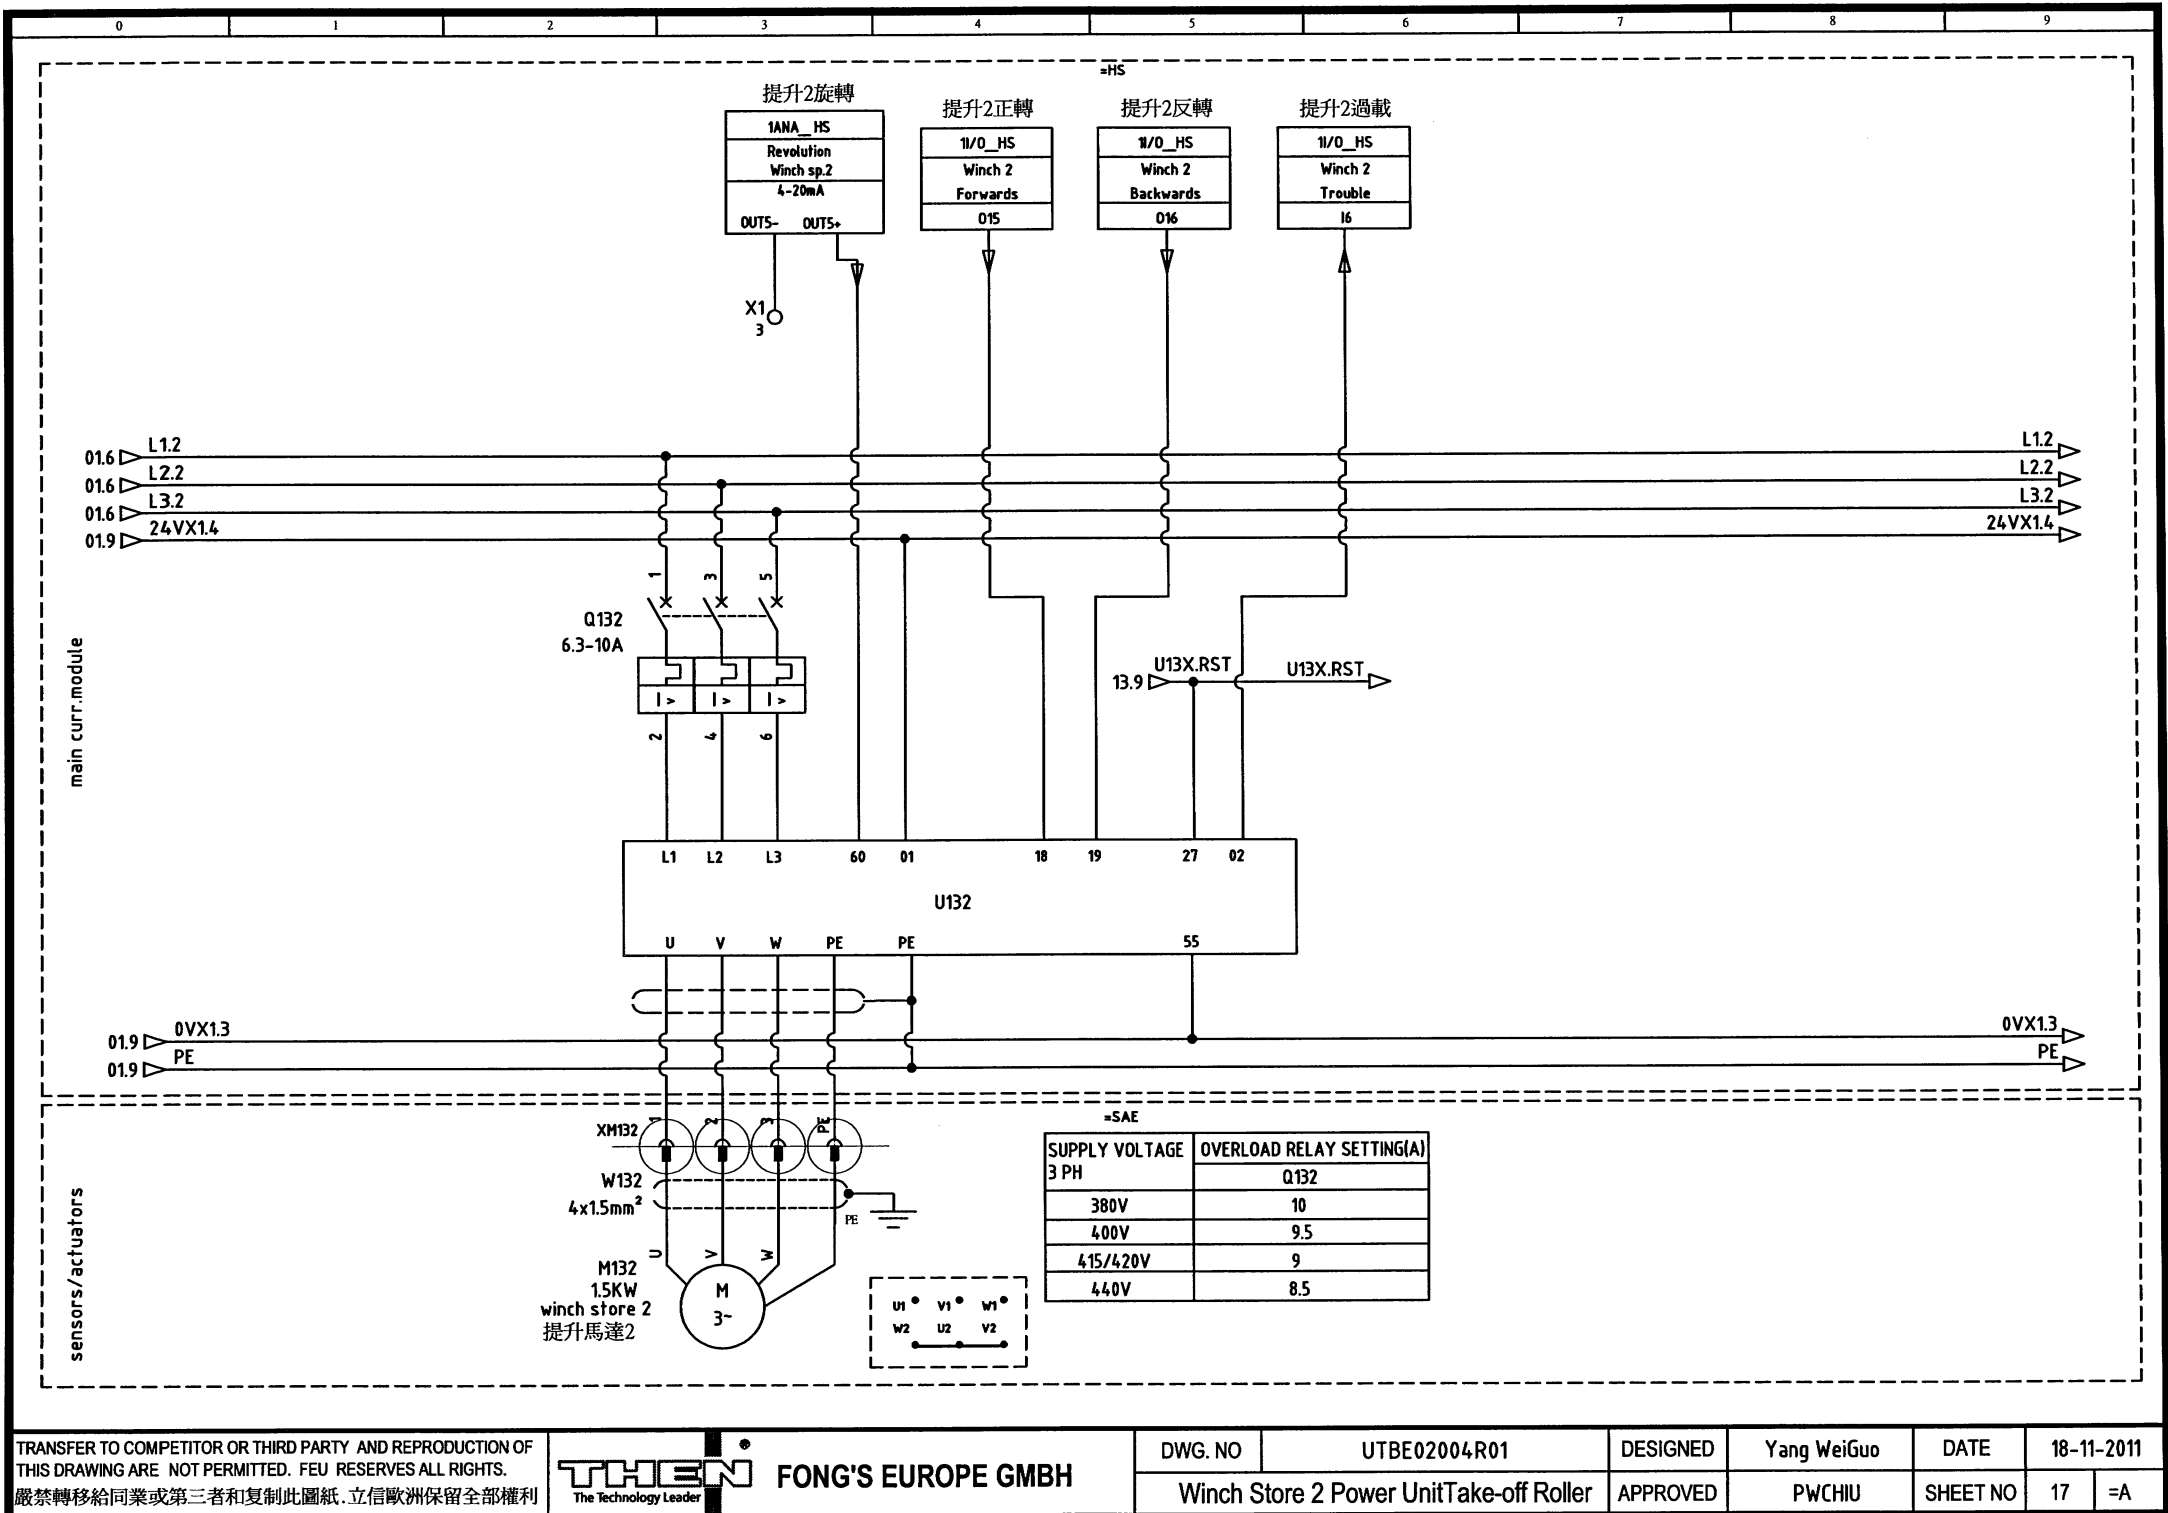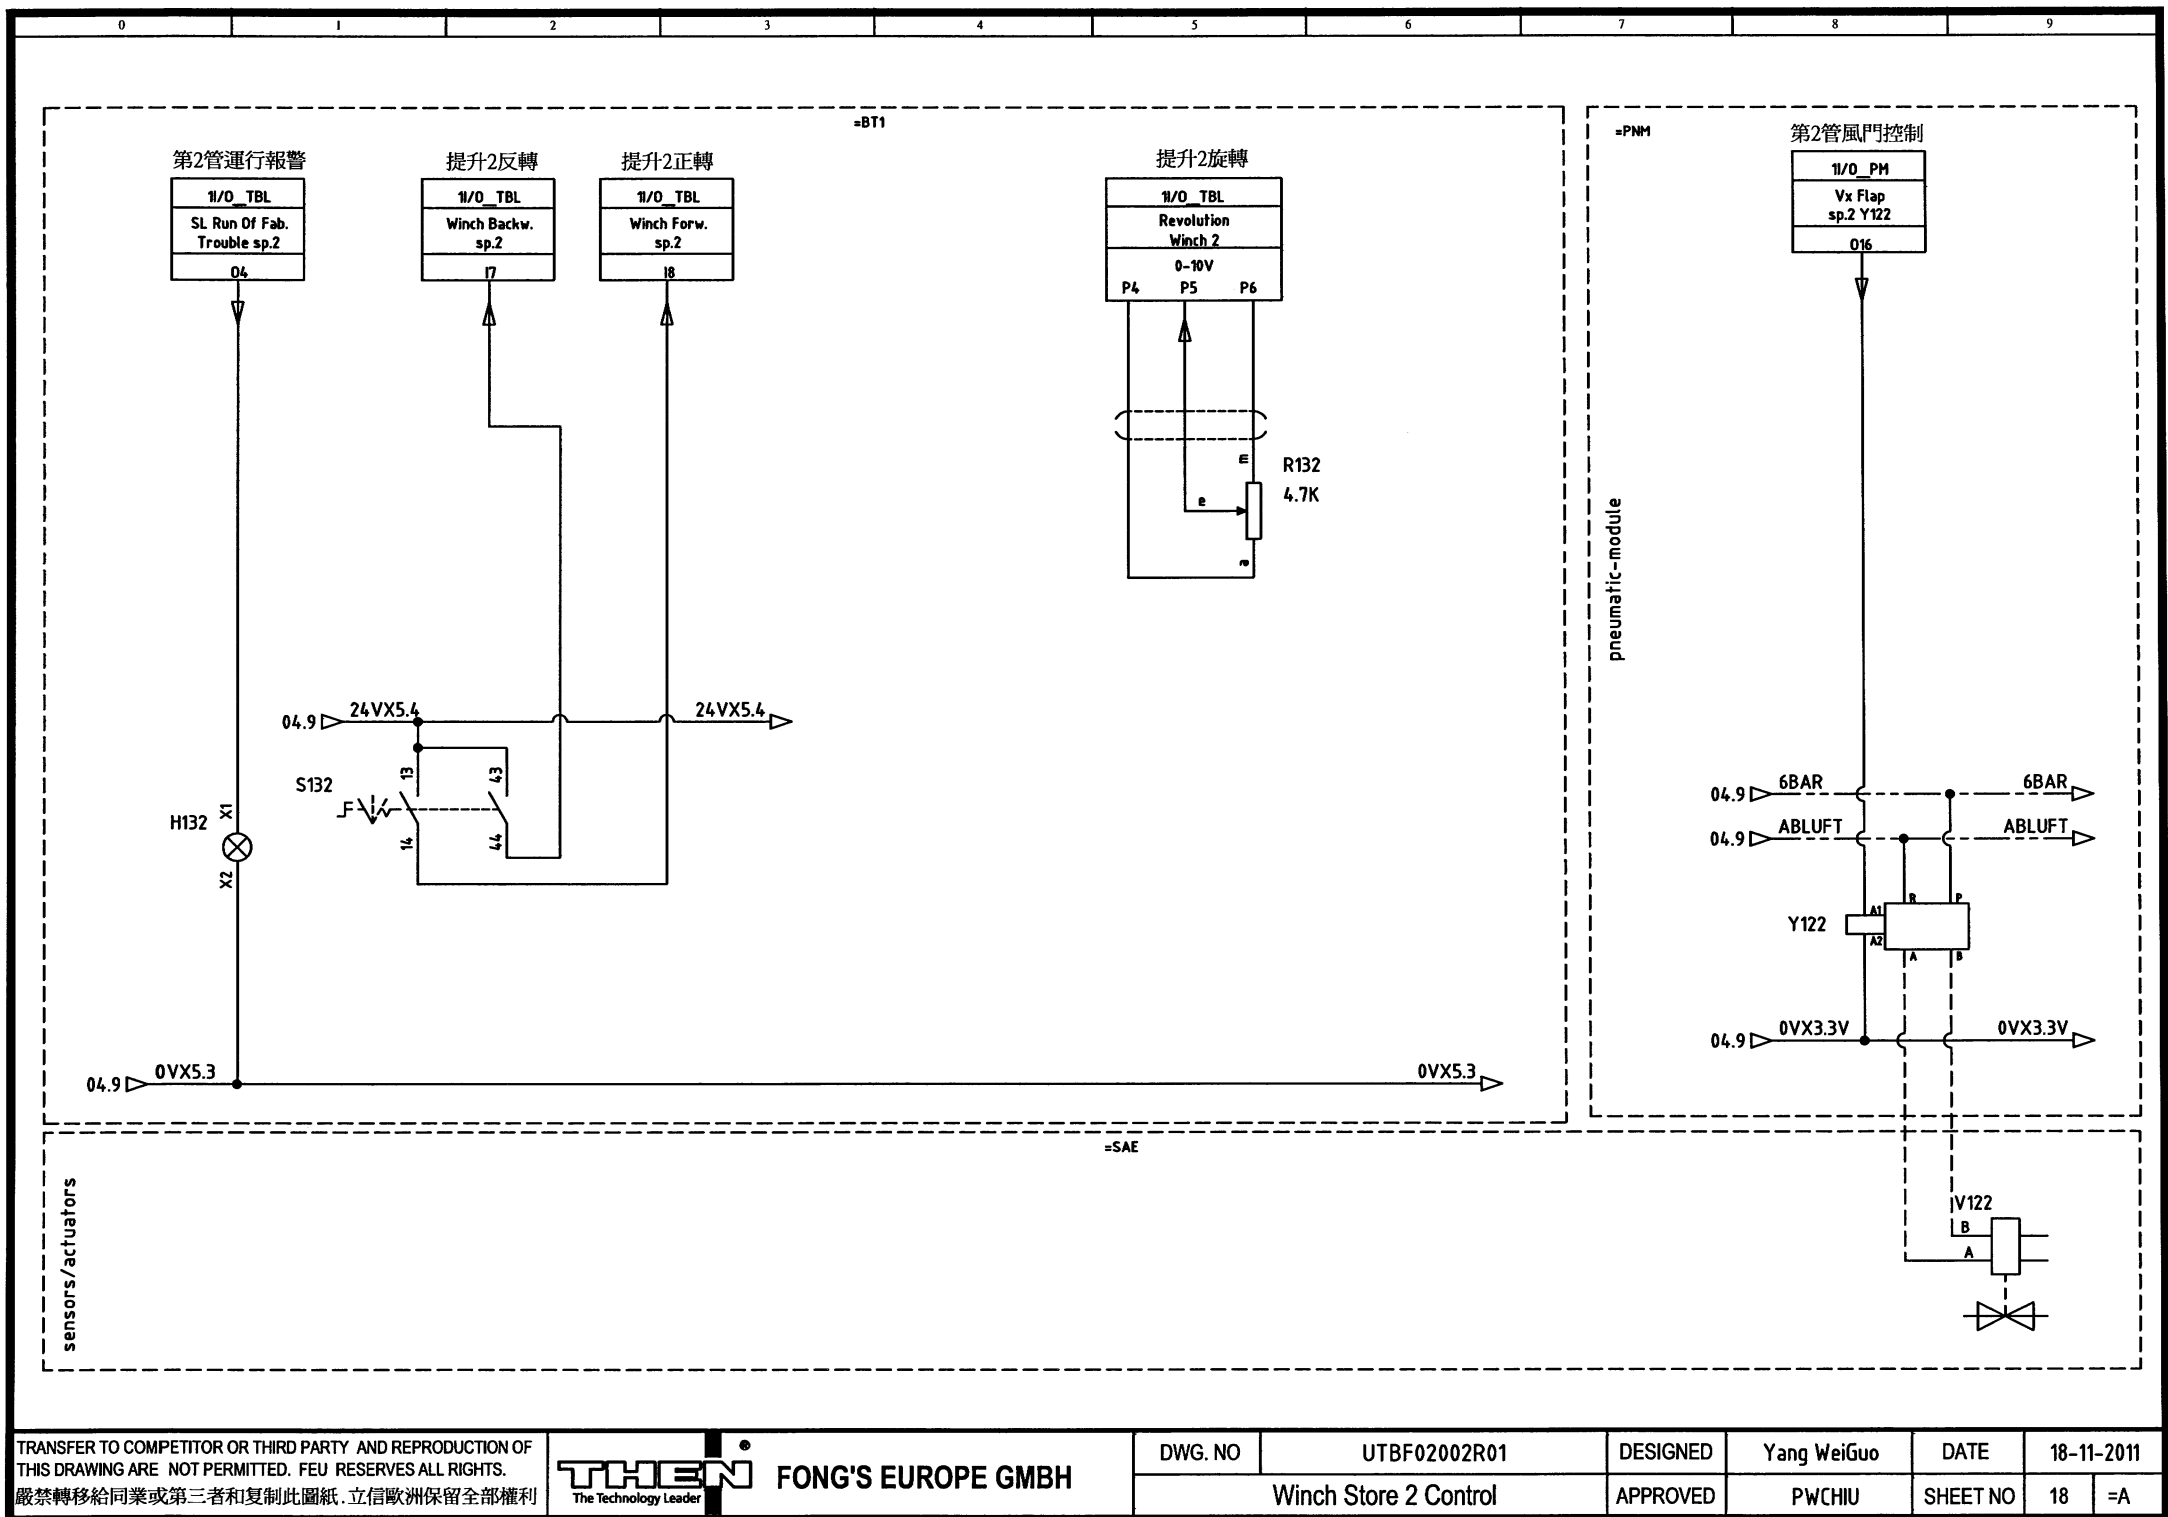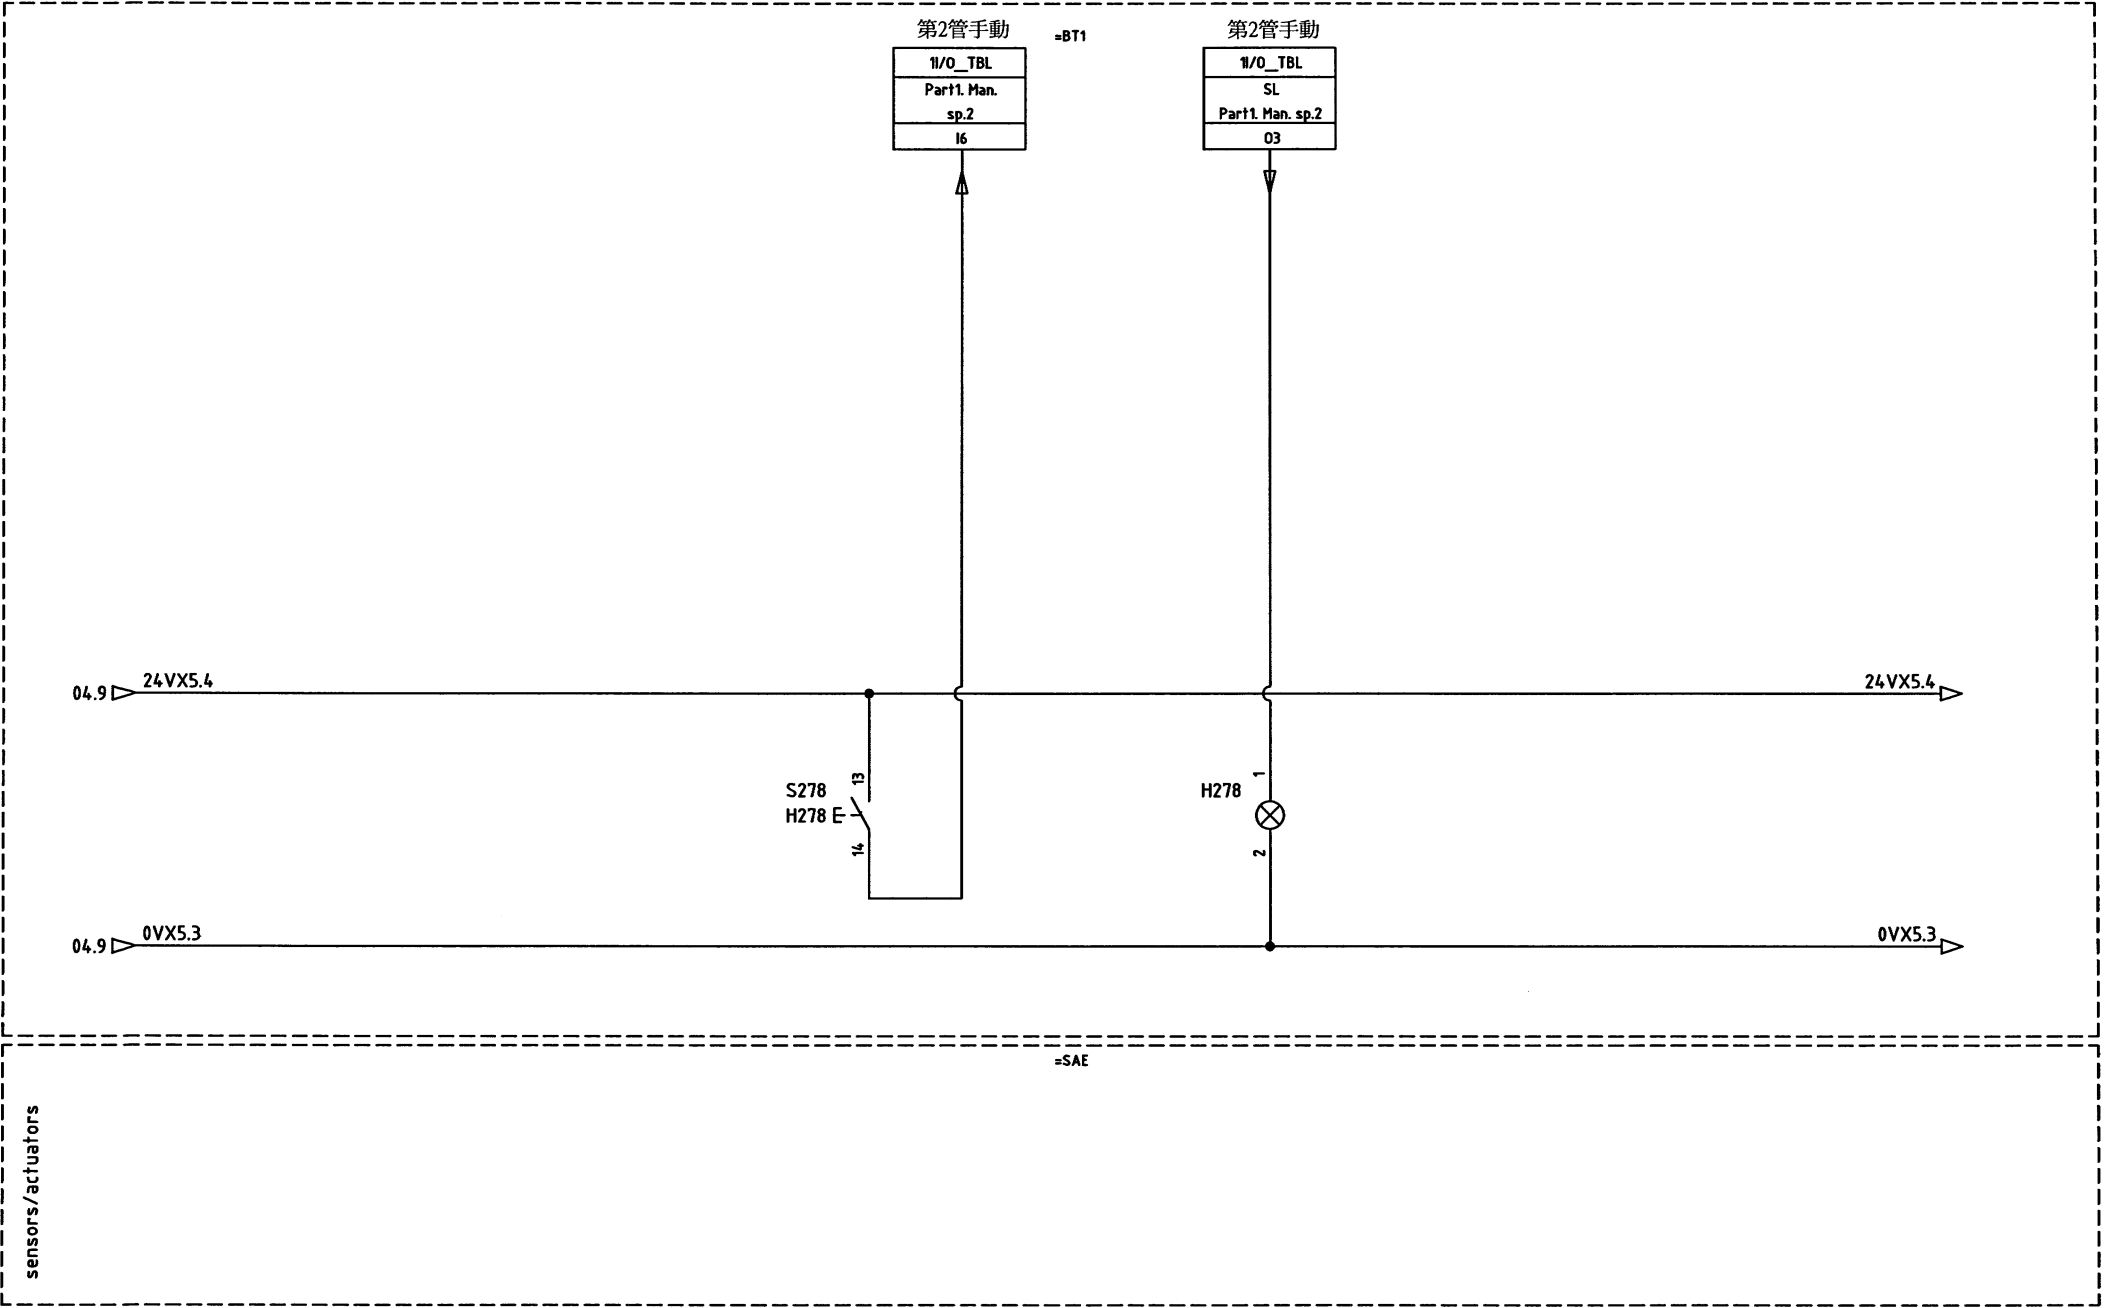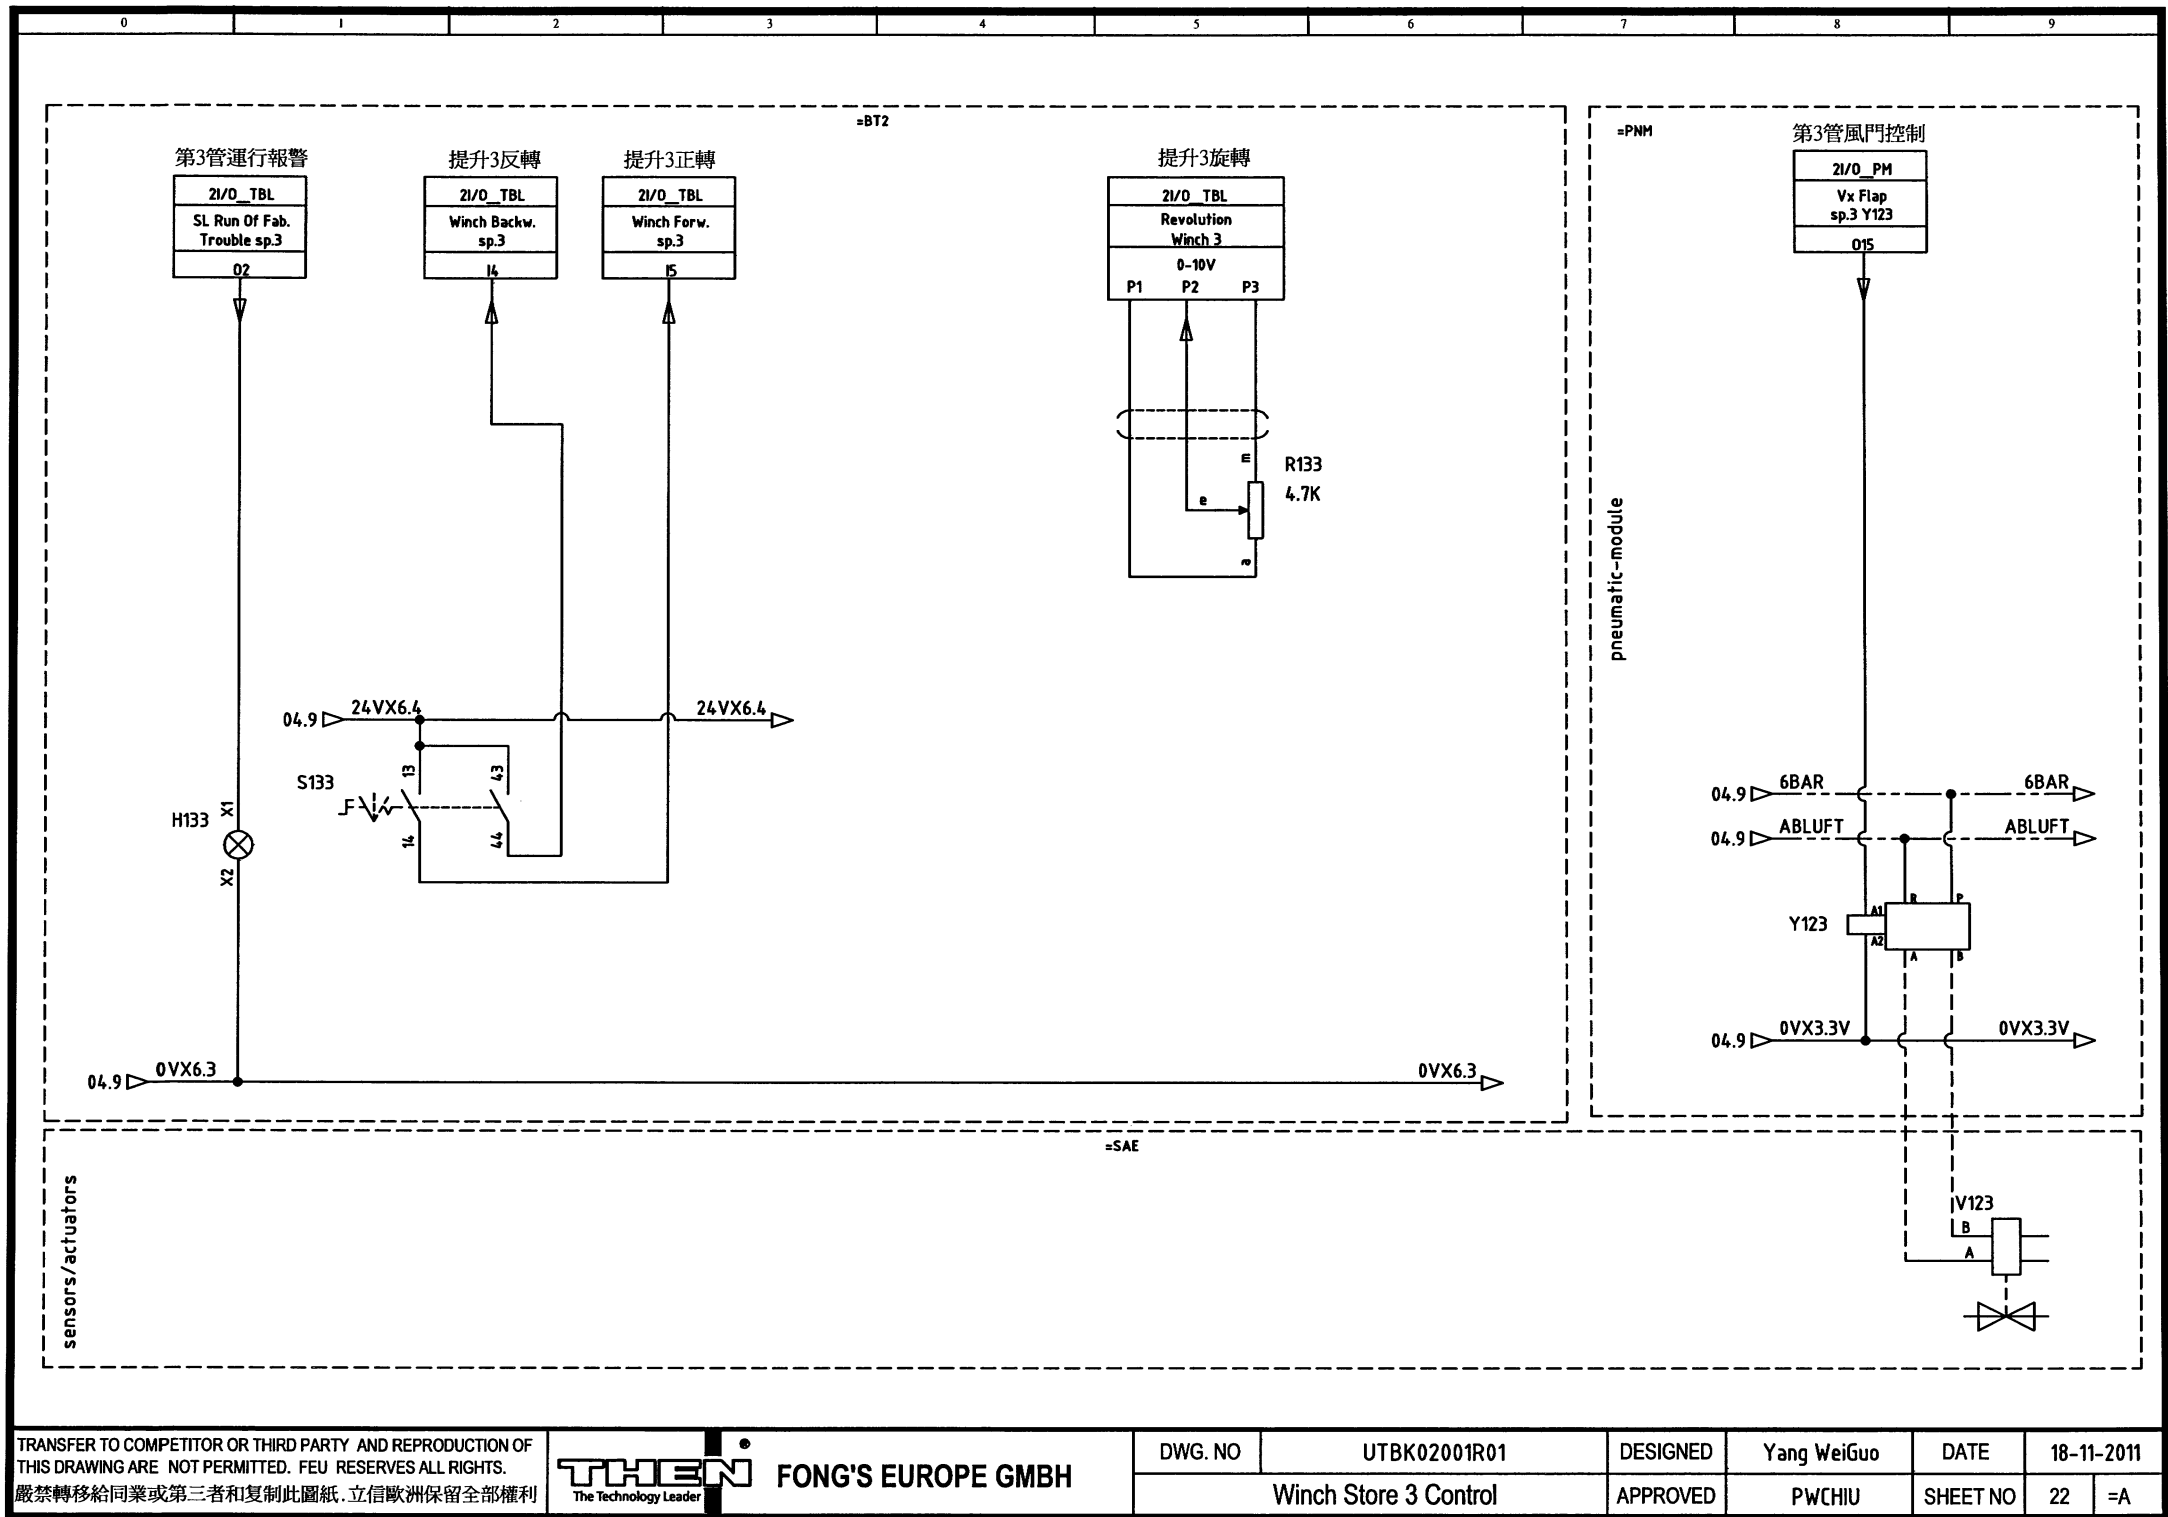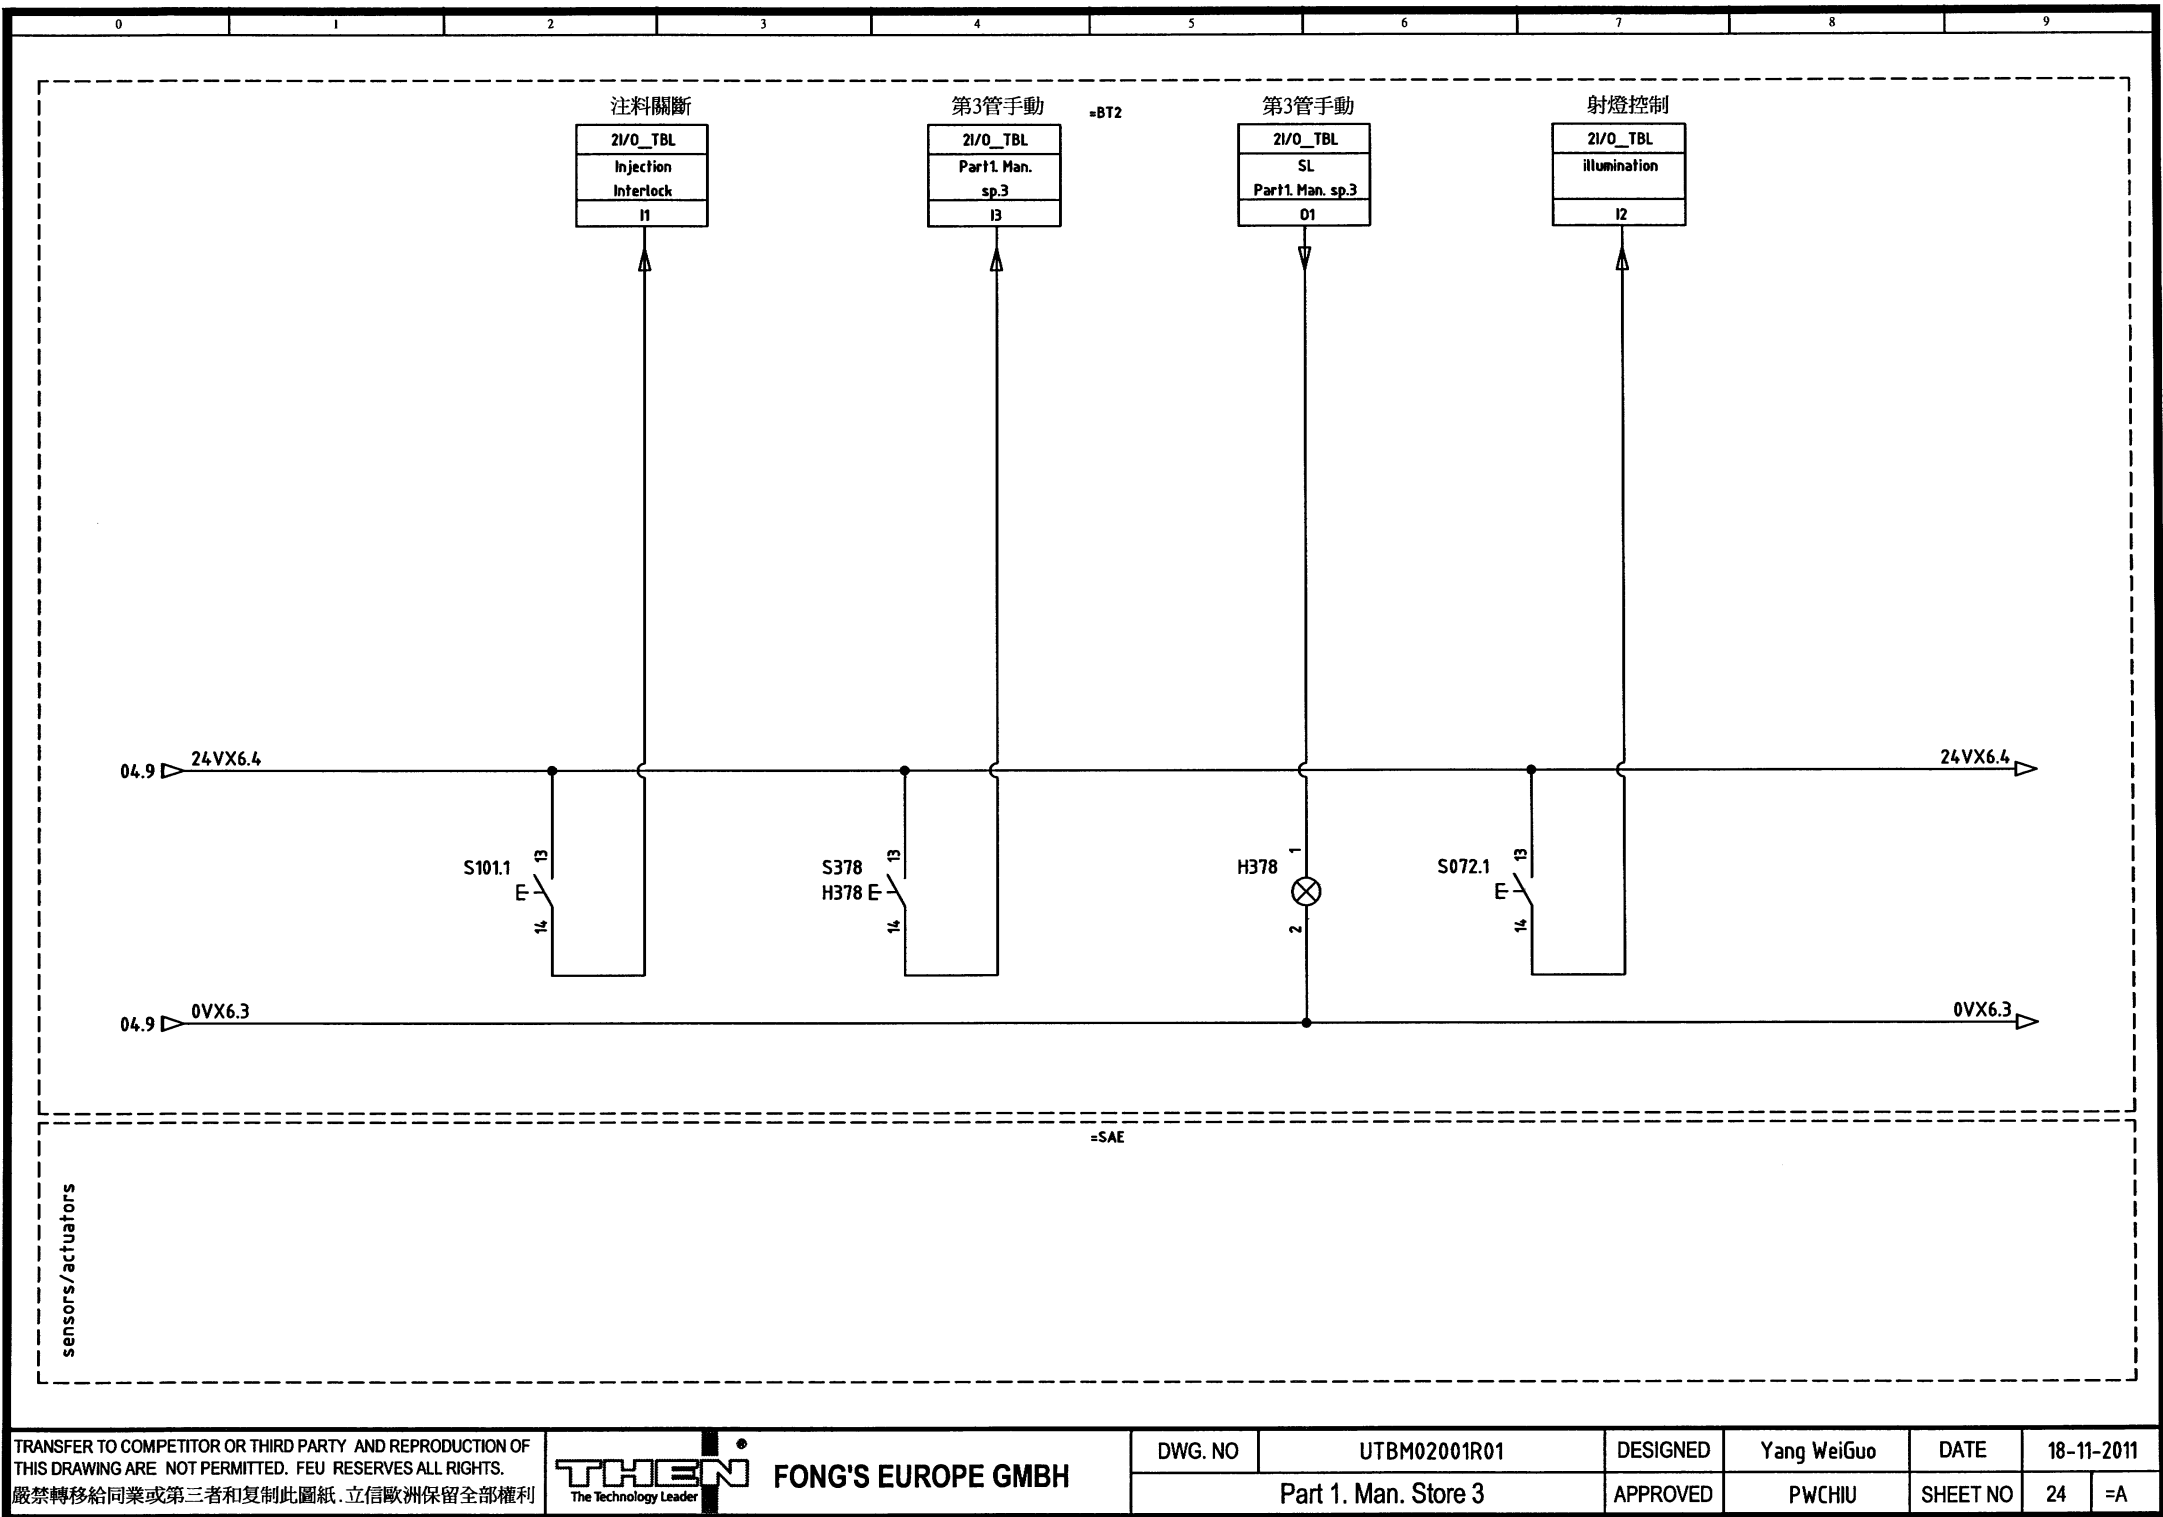
FONG'S EUROPE GMBH












TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.


嚴禁轉移給同業或第三者和复制此圖紙. 立信歐洲保留全部權利





THEN
The Technology Leader

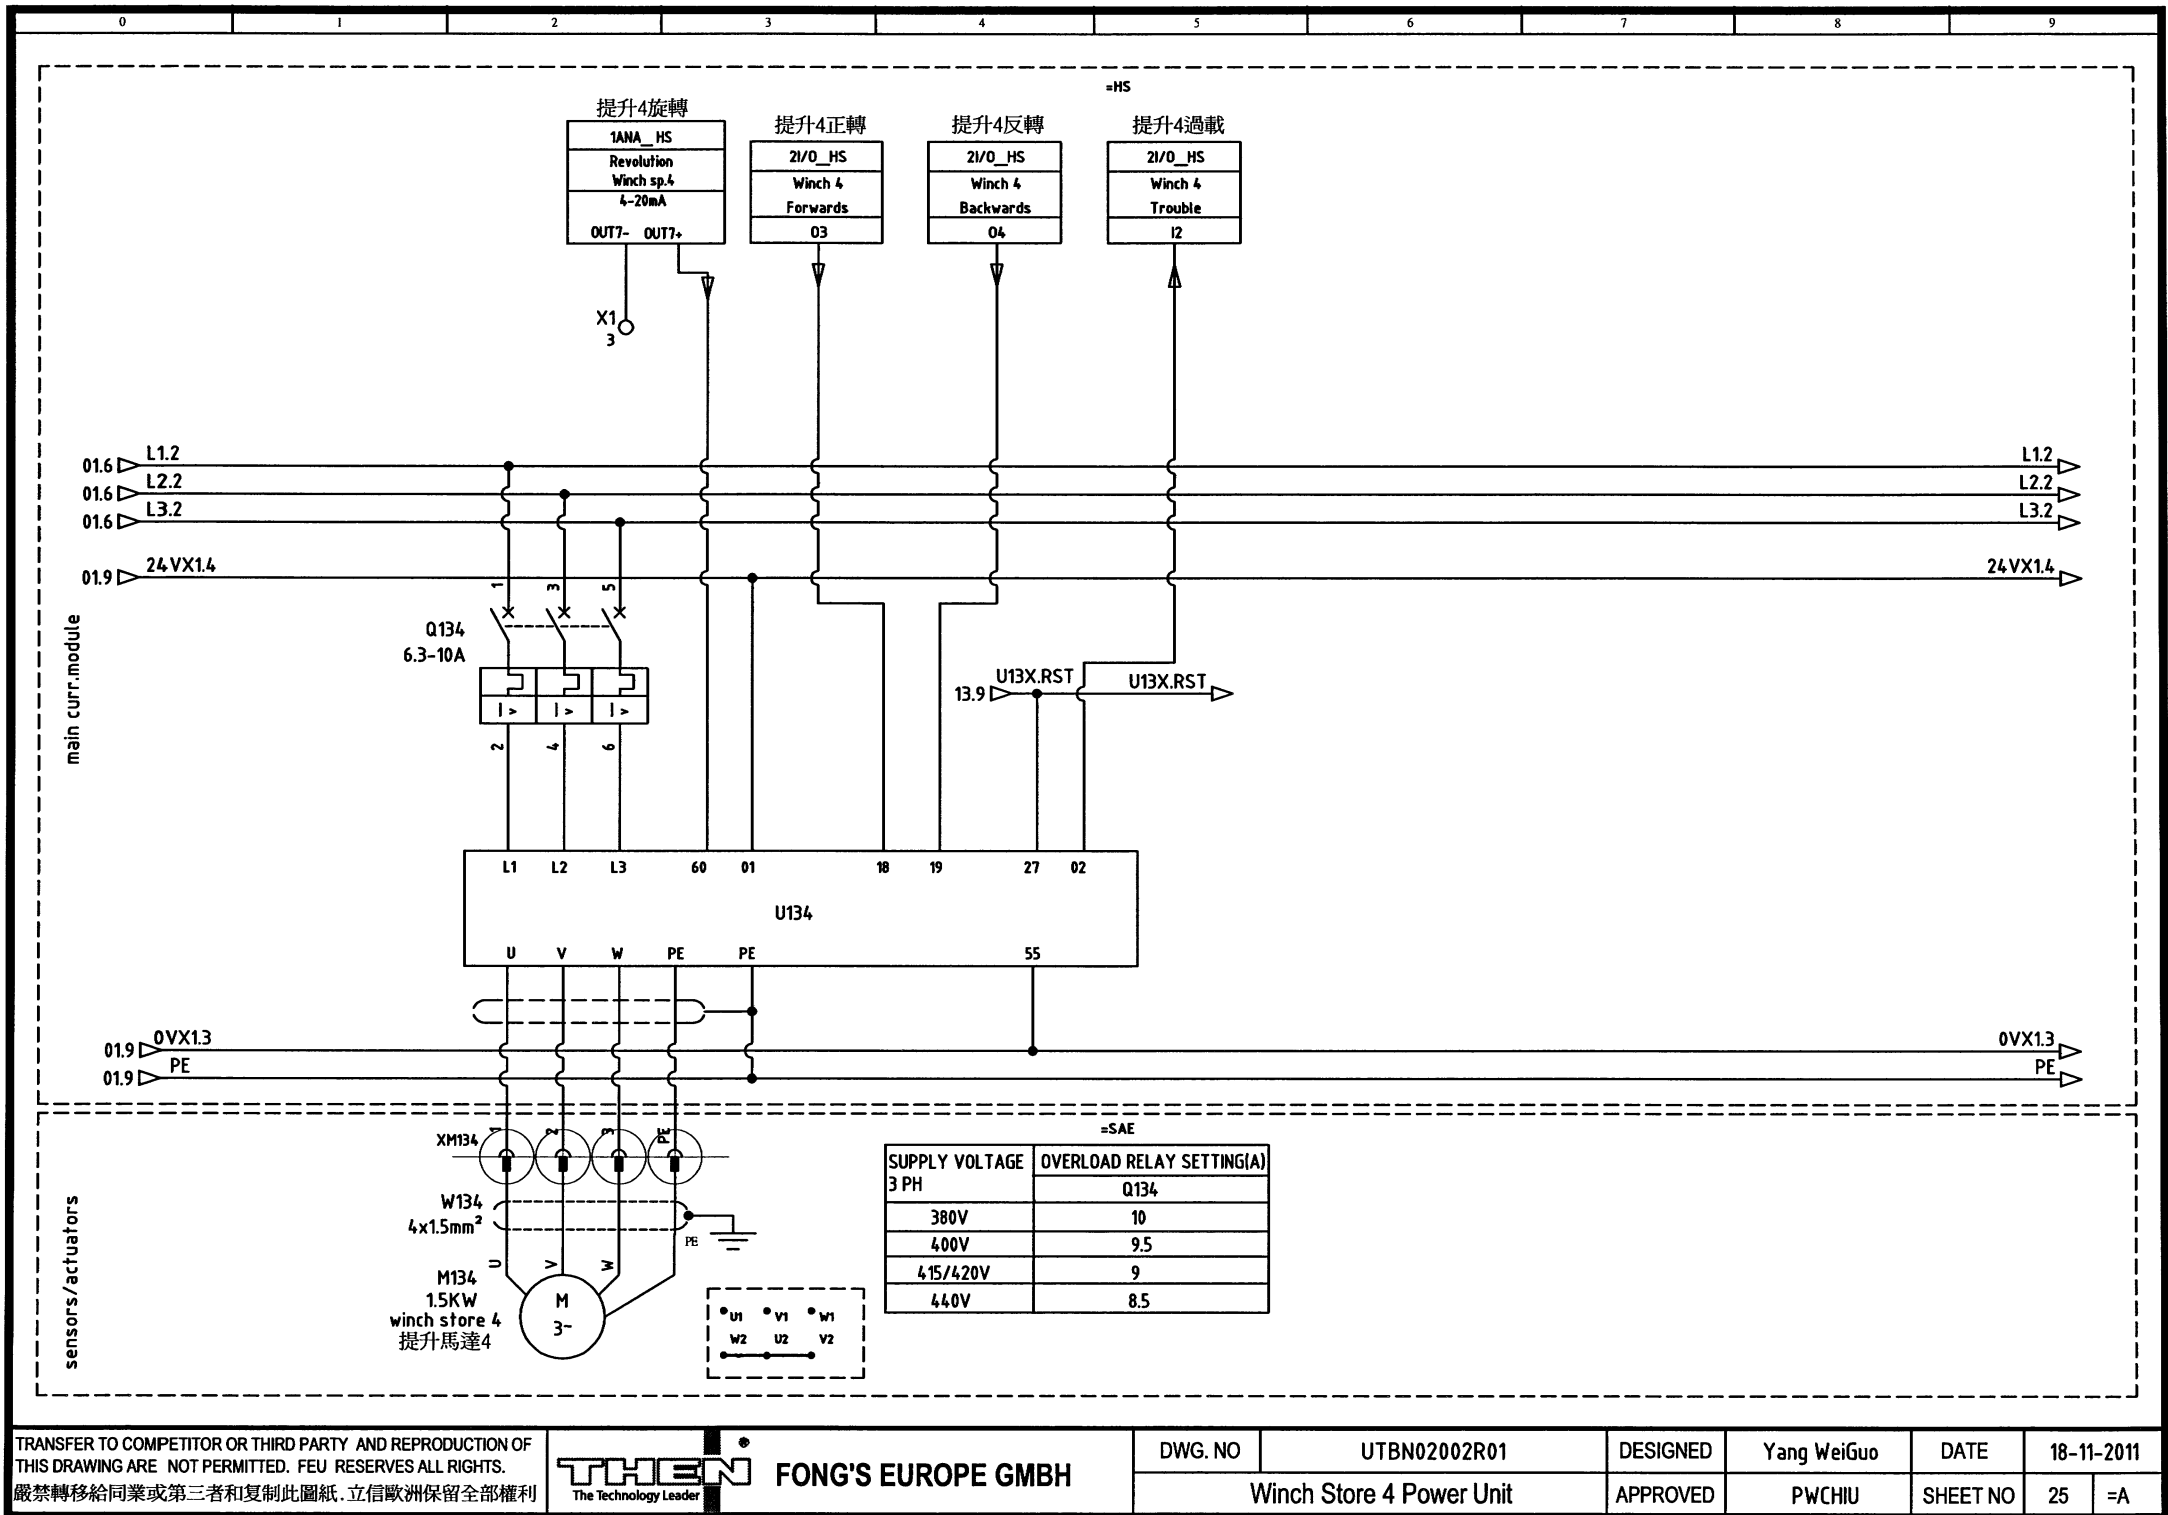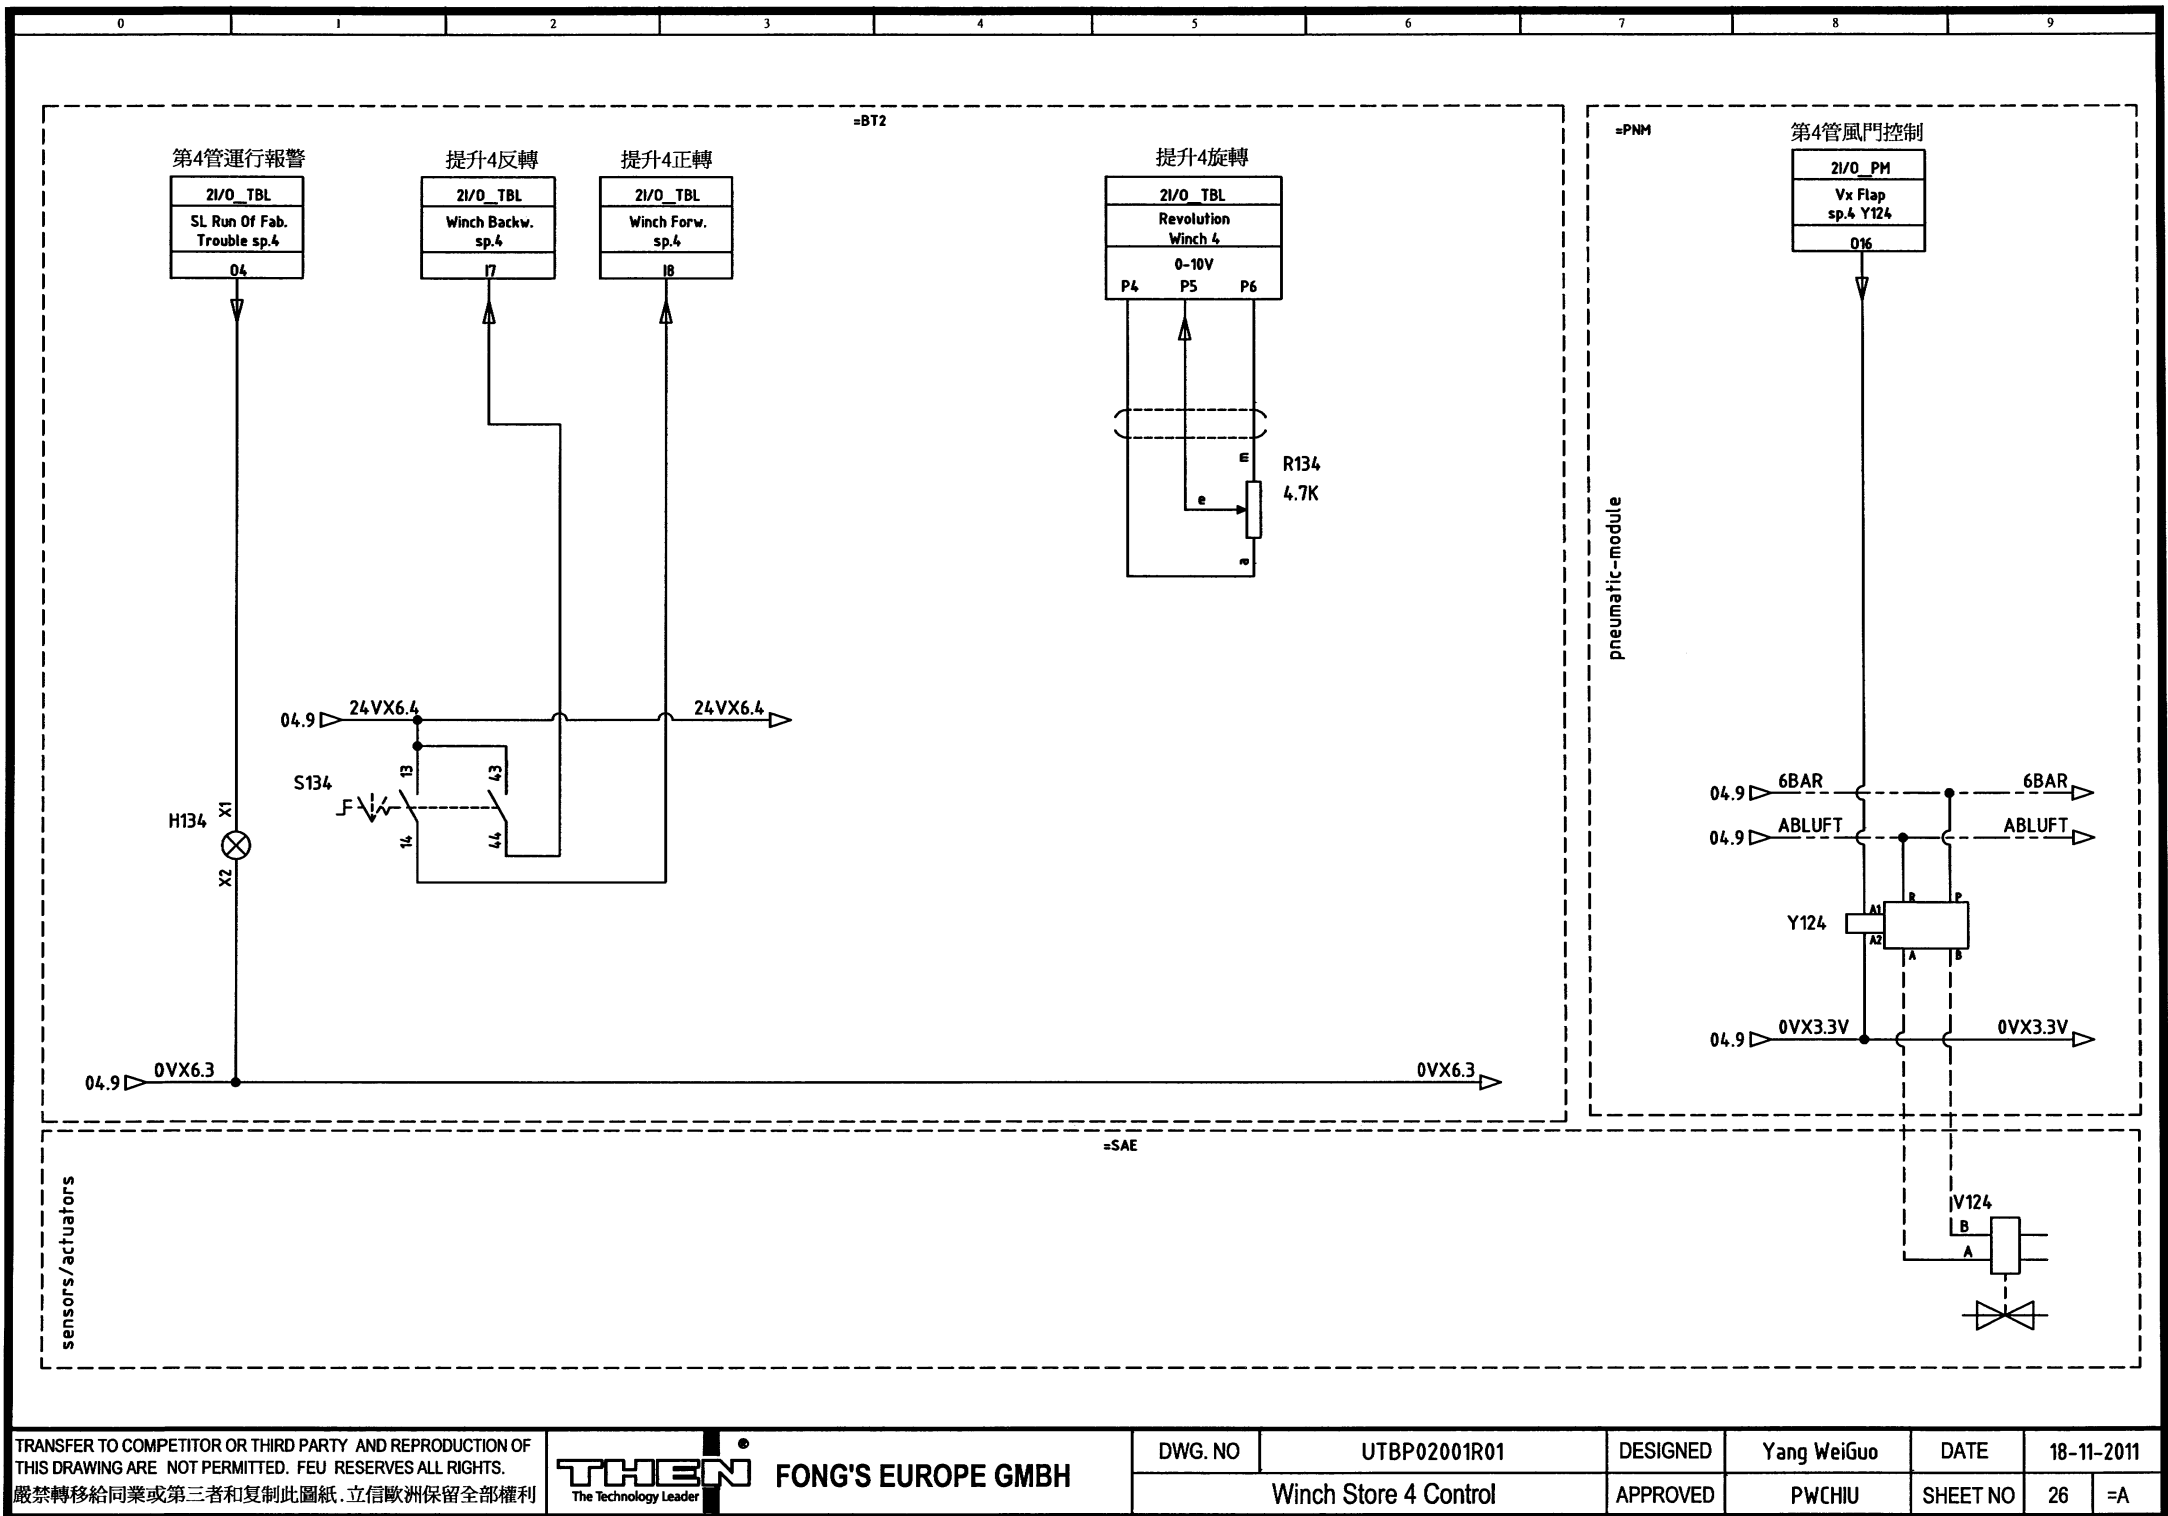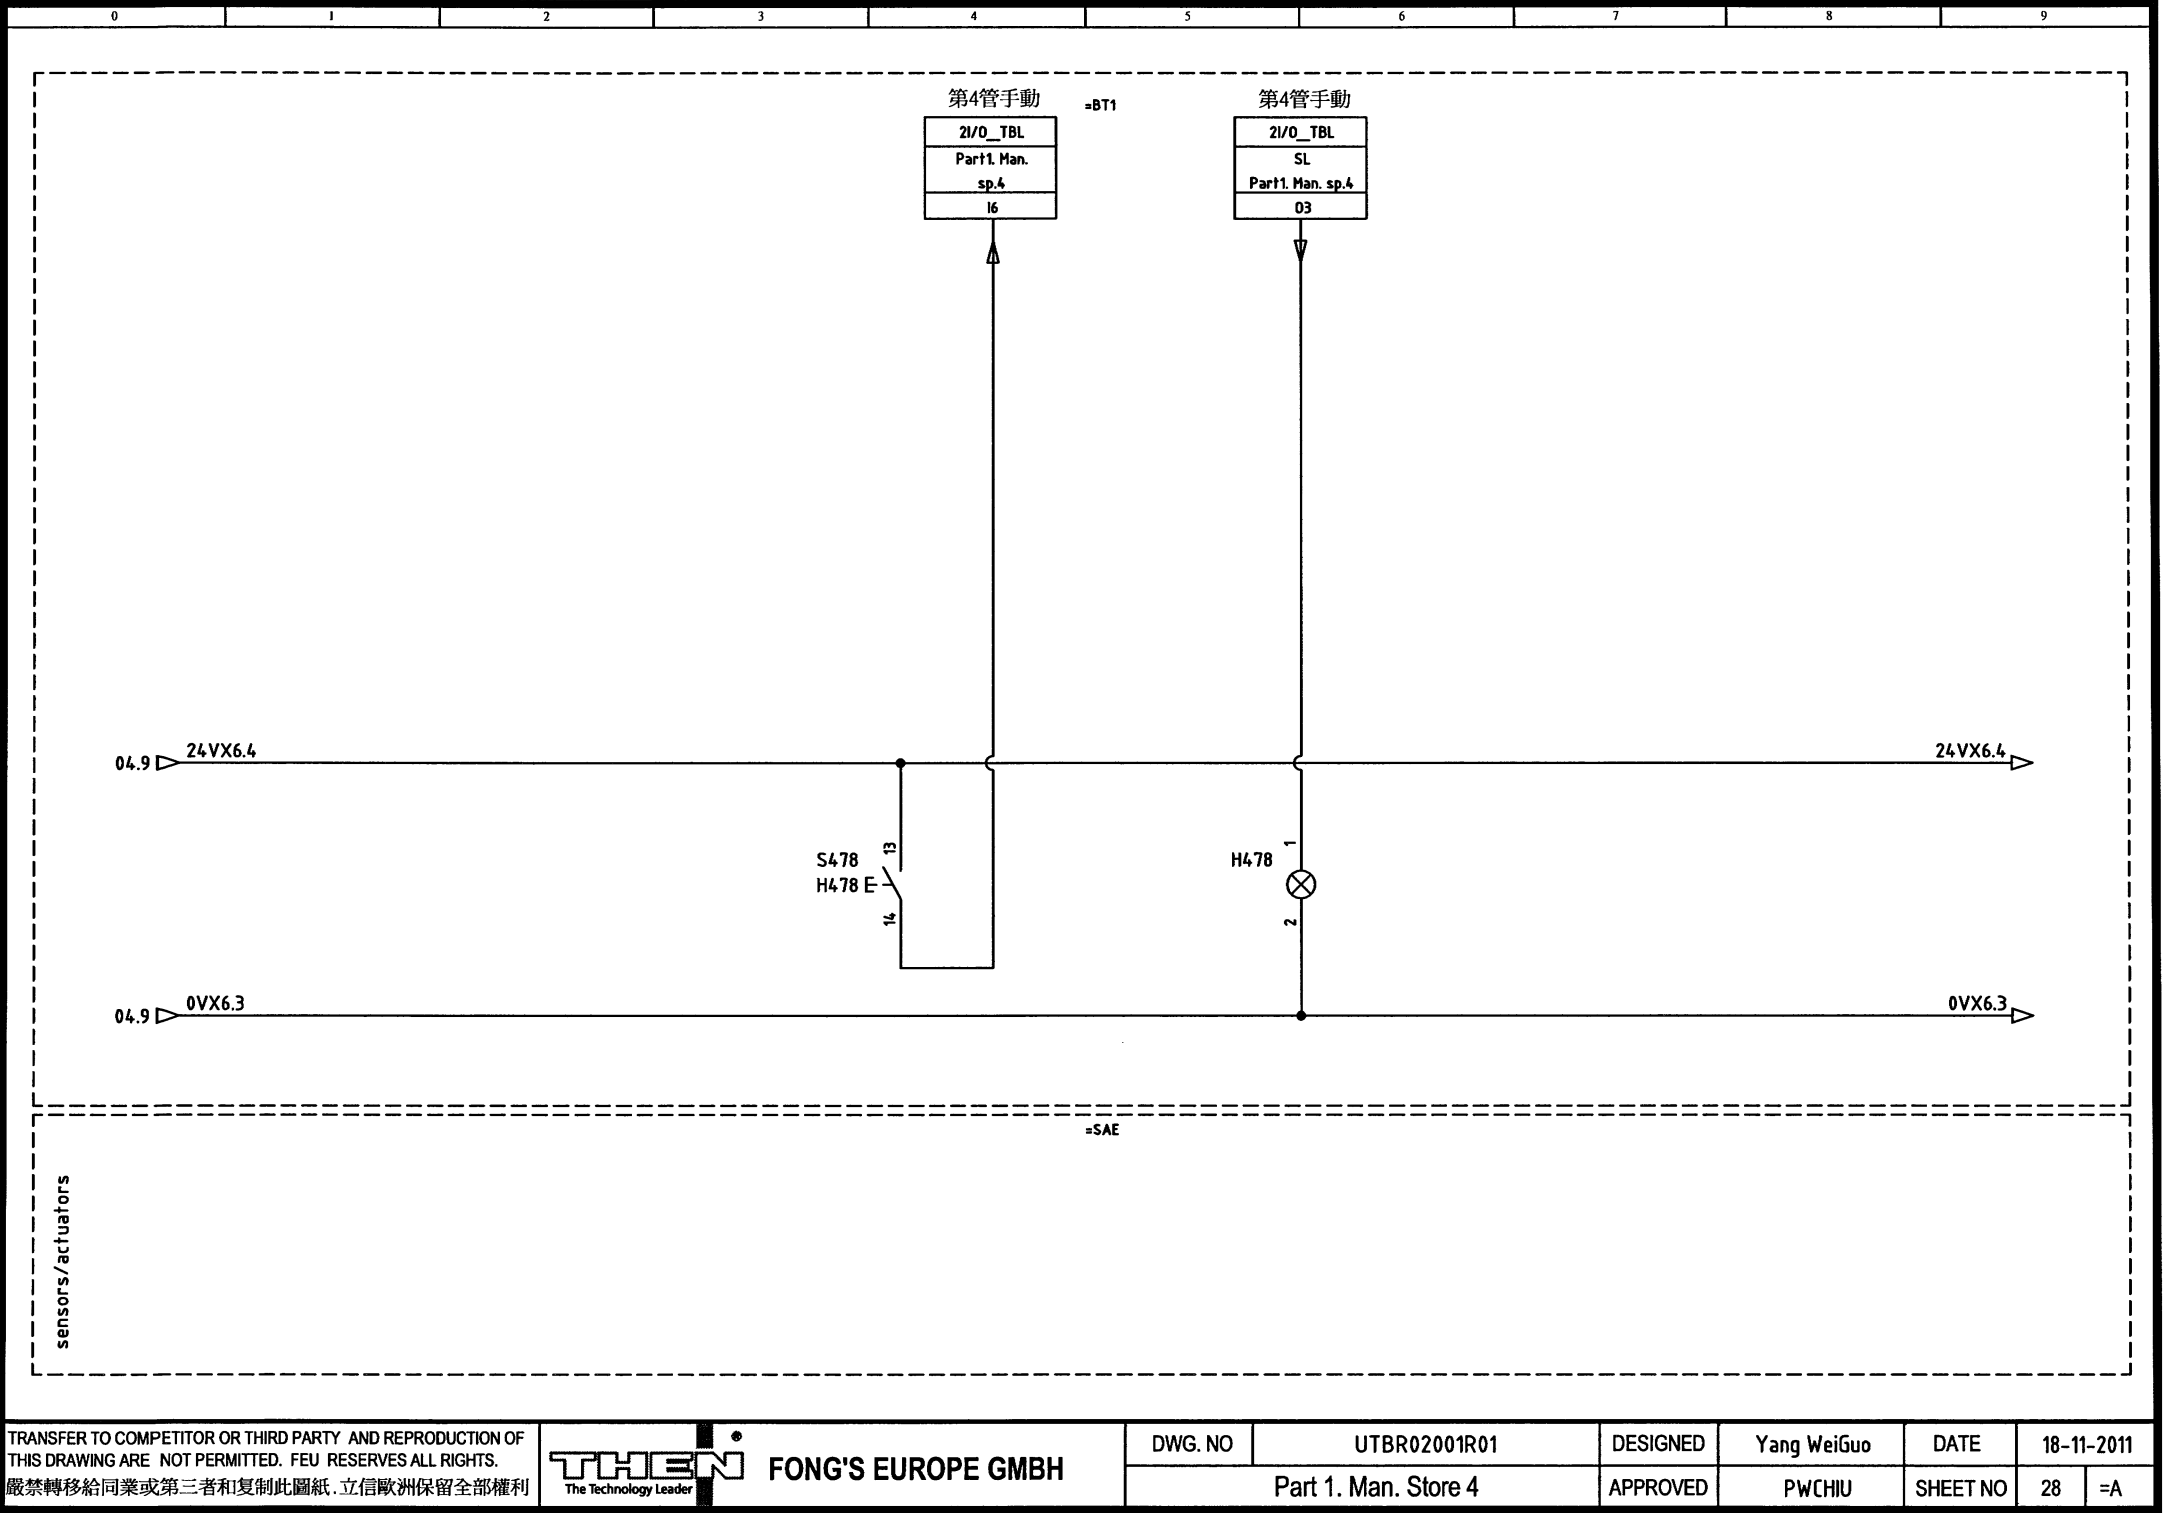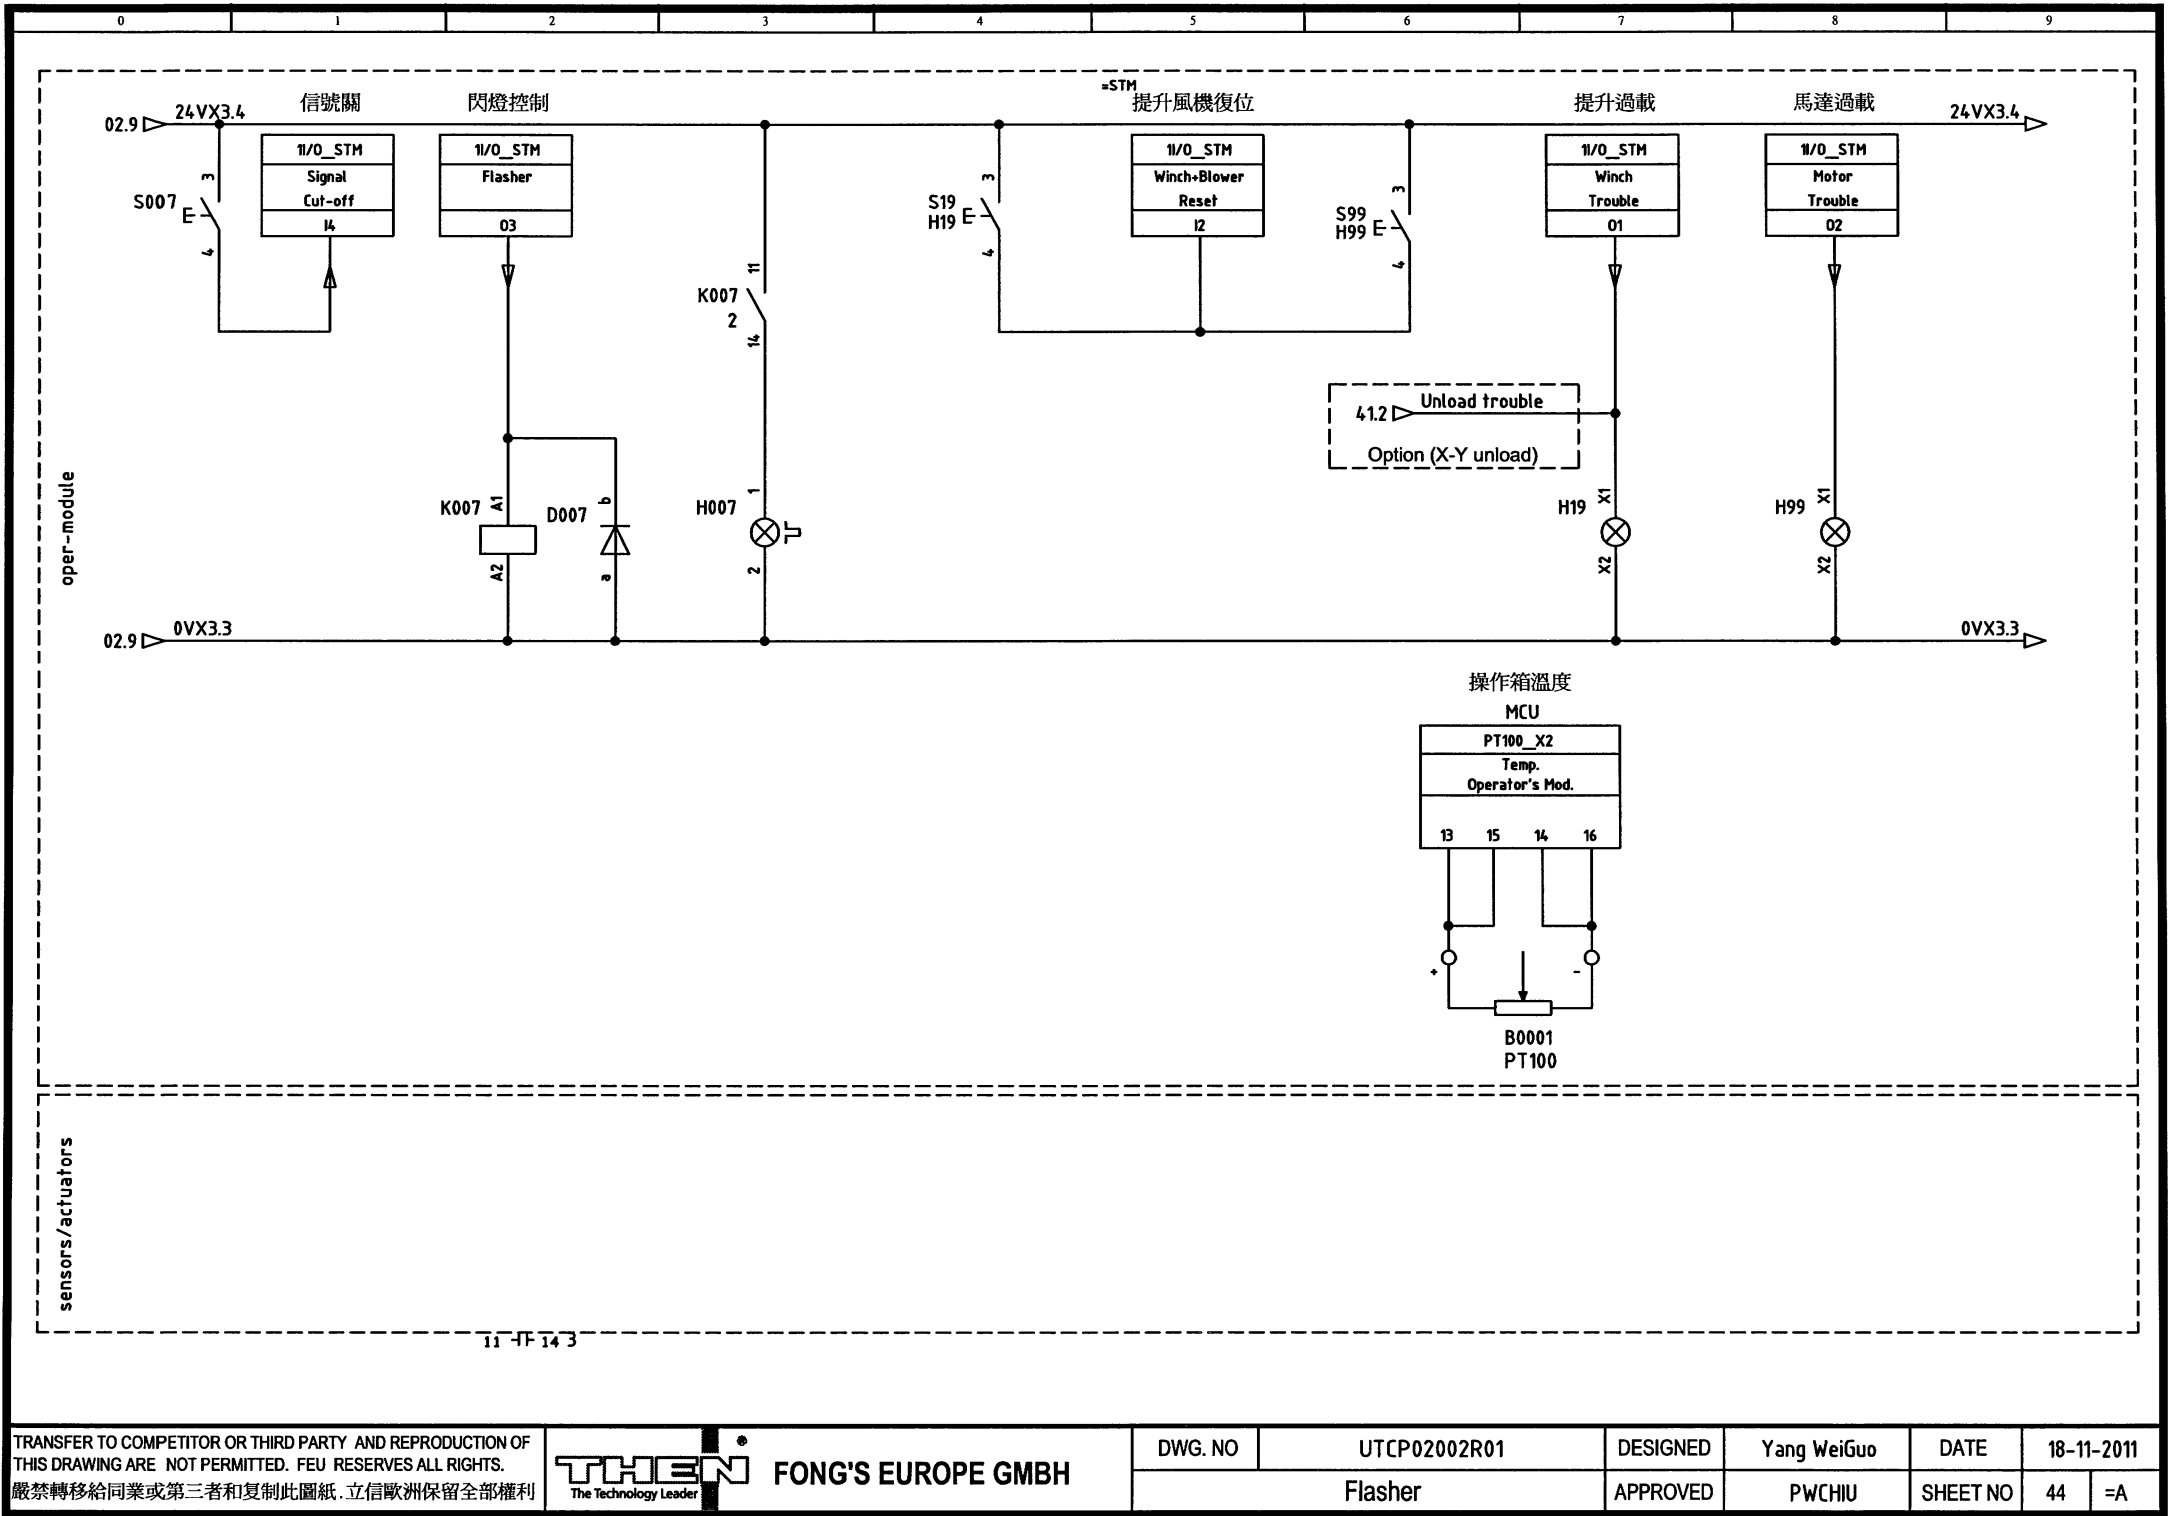FONG'S EUROPE GMBH









11-14 3

TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.
嚴禁轉移給同業或第三者和复制此圖紙. 立信歐洲保留全部權利

THEN

The Technology Leader

FONG'S EUROPE GMBH

DWG. NO

UTCP02002R01

DESIGNED

Yang WeiGuo

DATE

18-11-2011

Flasher

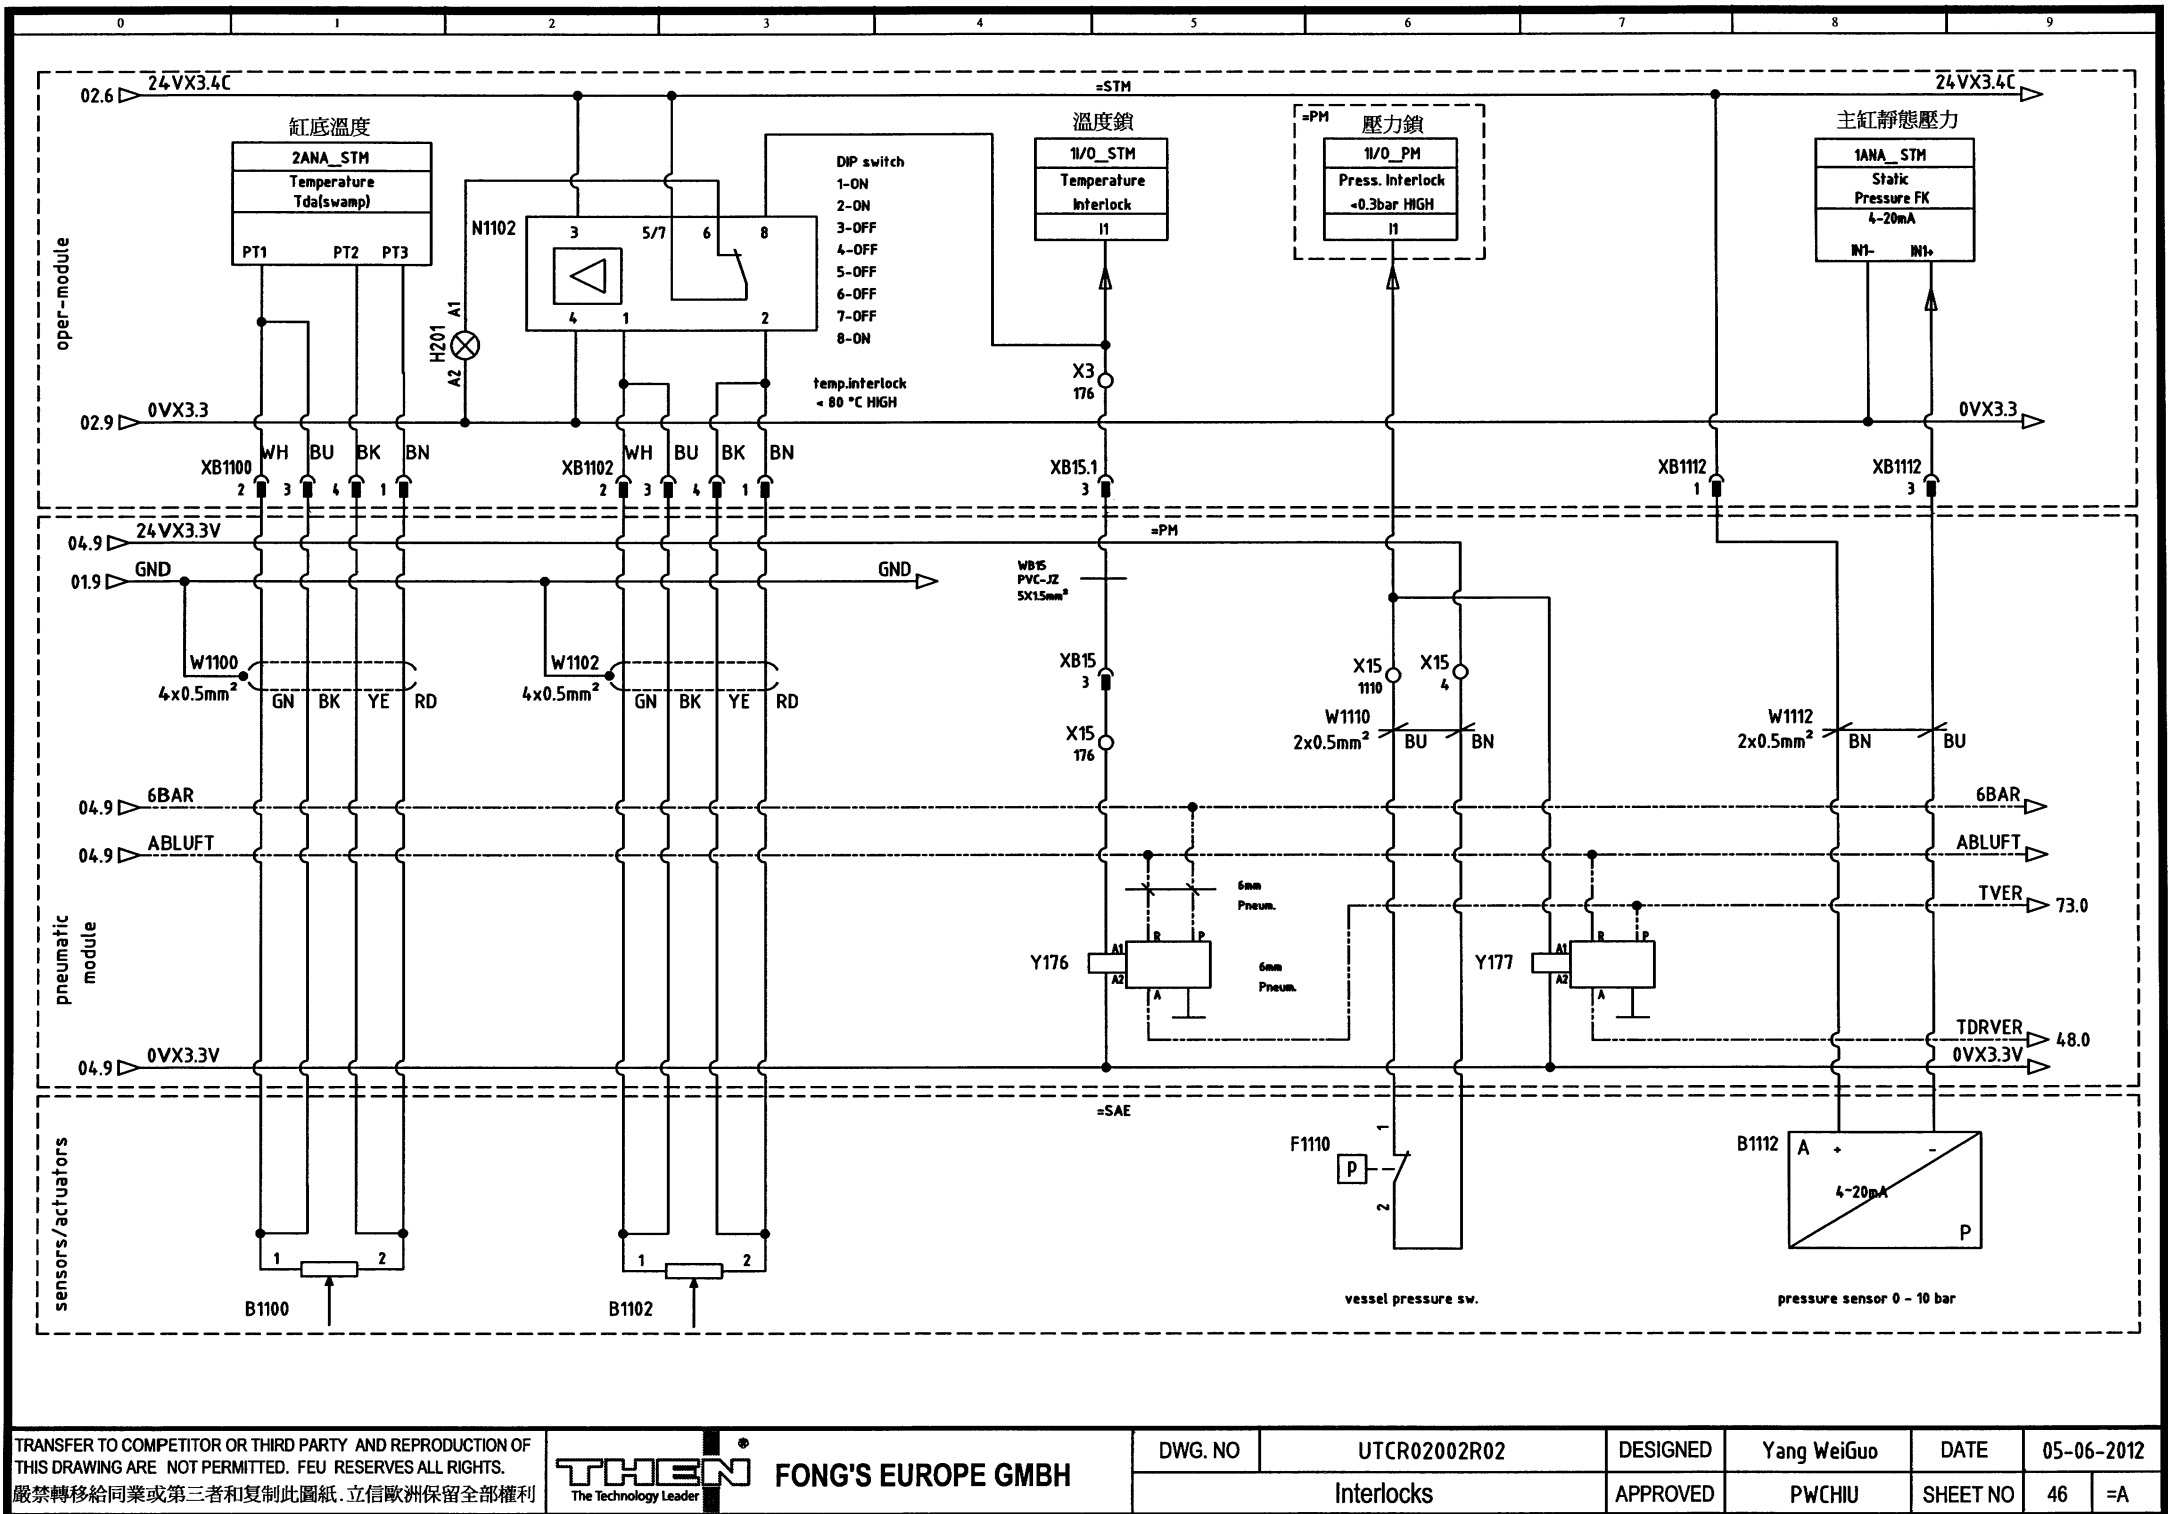
APPROVED

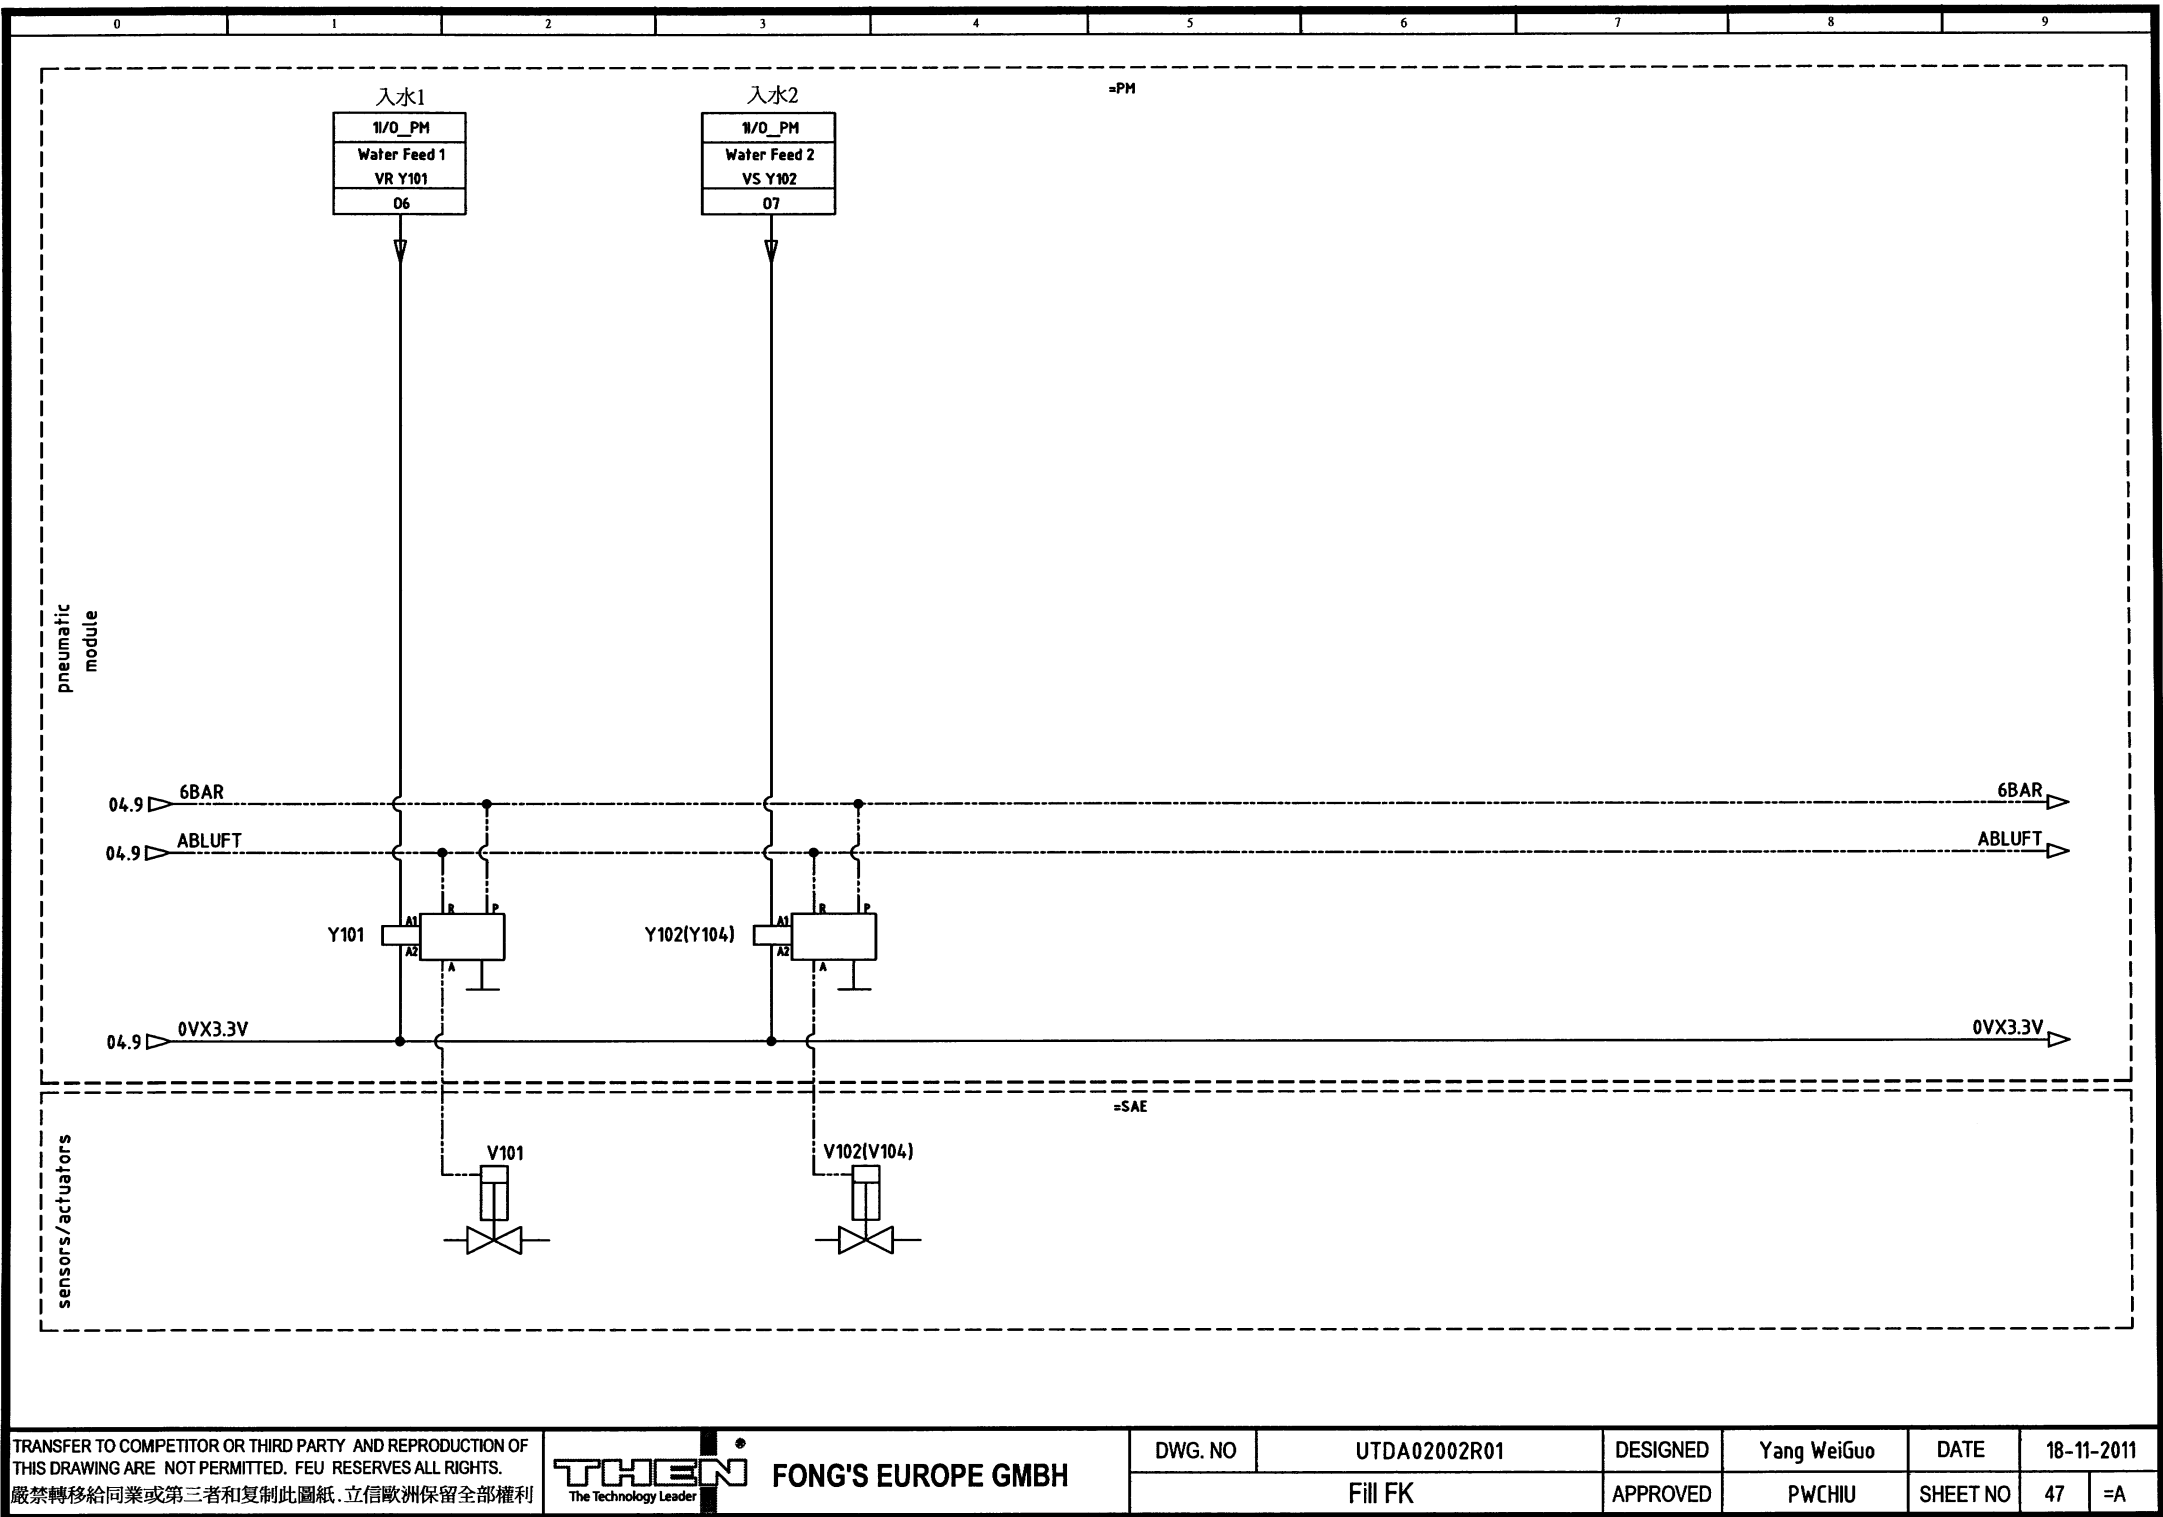
PWCHIU

SHEET NO

44

=A





sensors/actuators

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V102(V104)

04.9

6BAR

04.9

ABLUFT

04.9

0VX3.3V

V101

04.9

6BAR

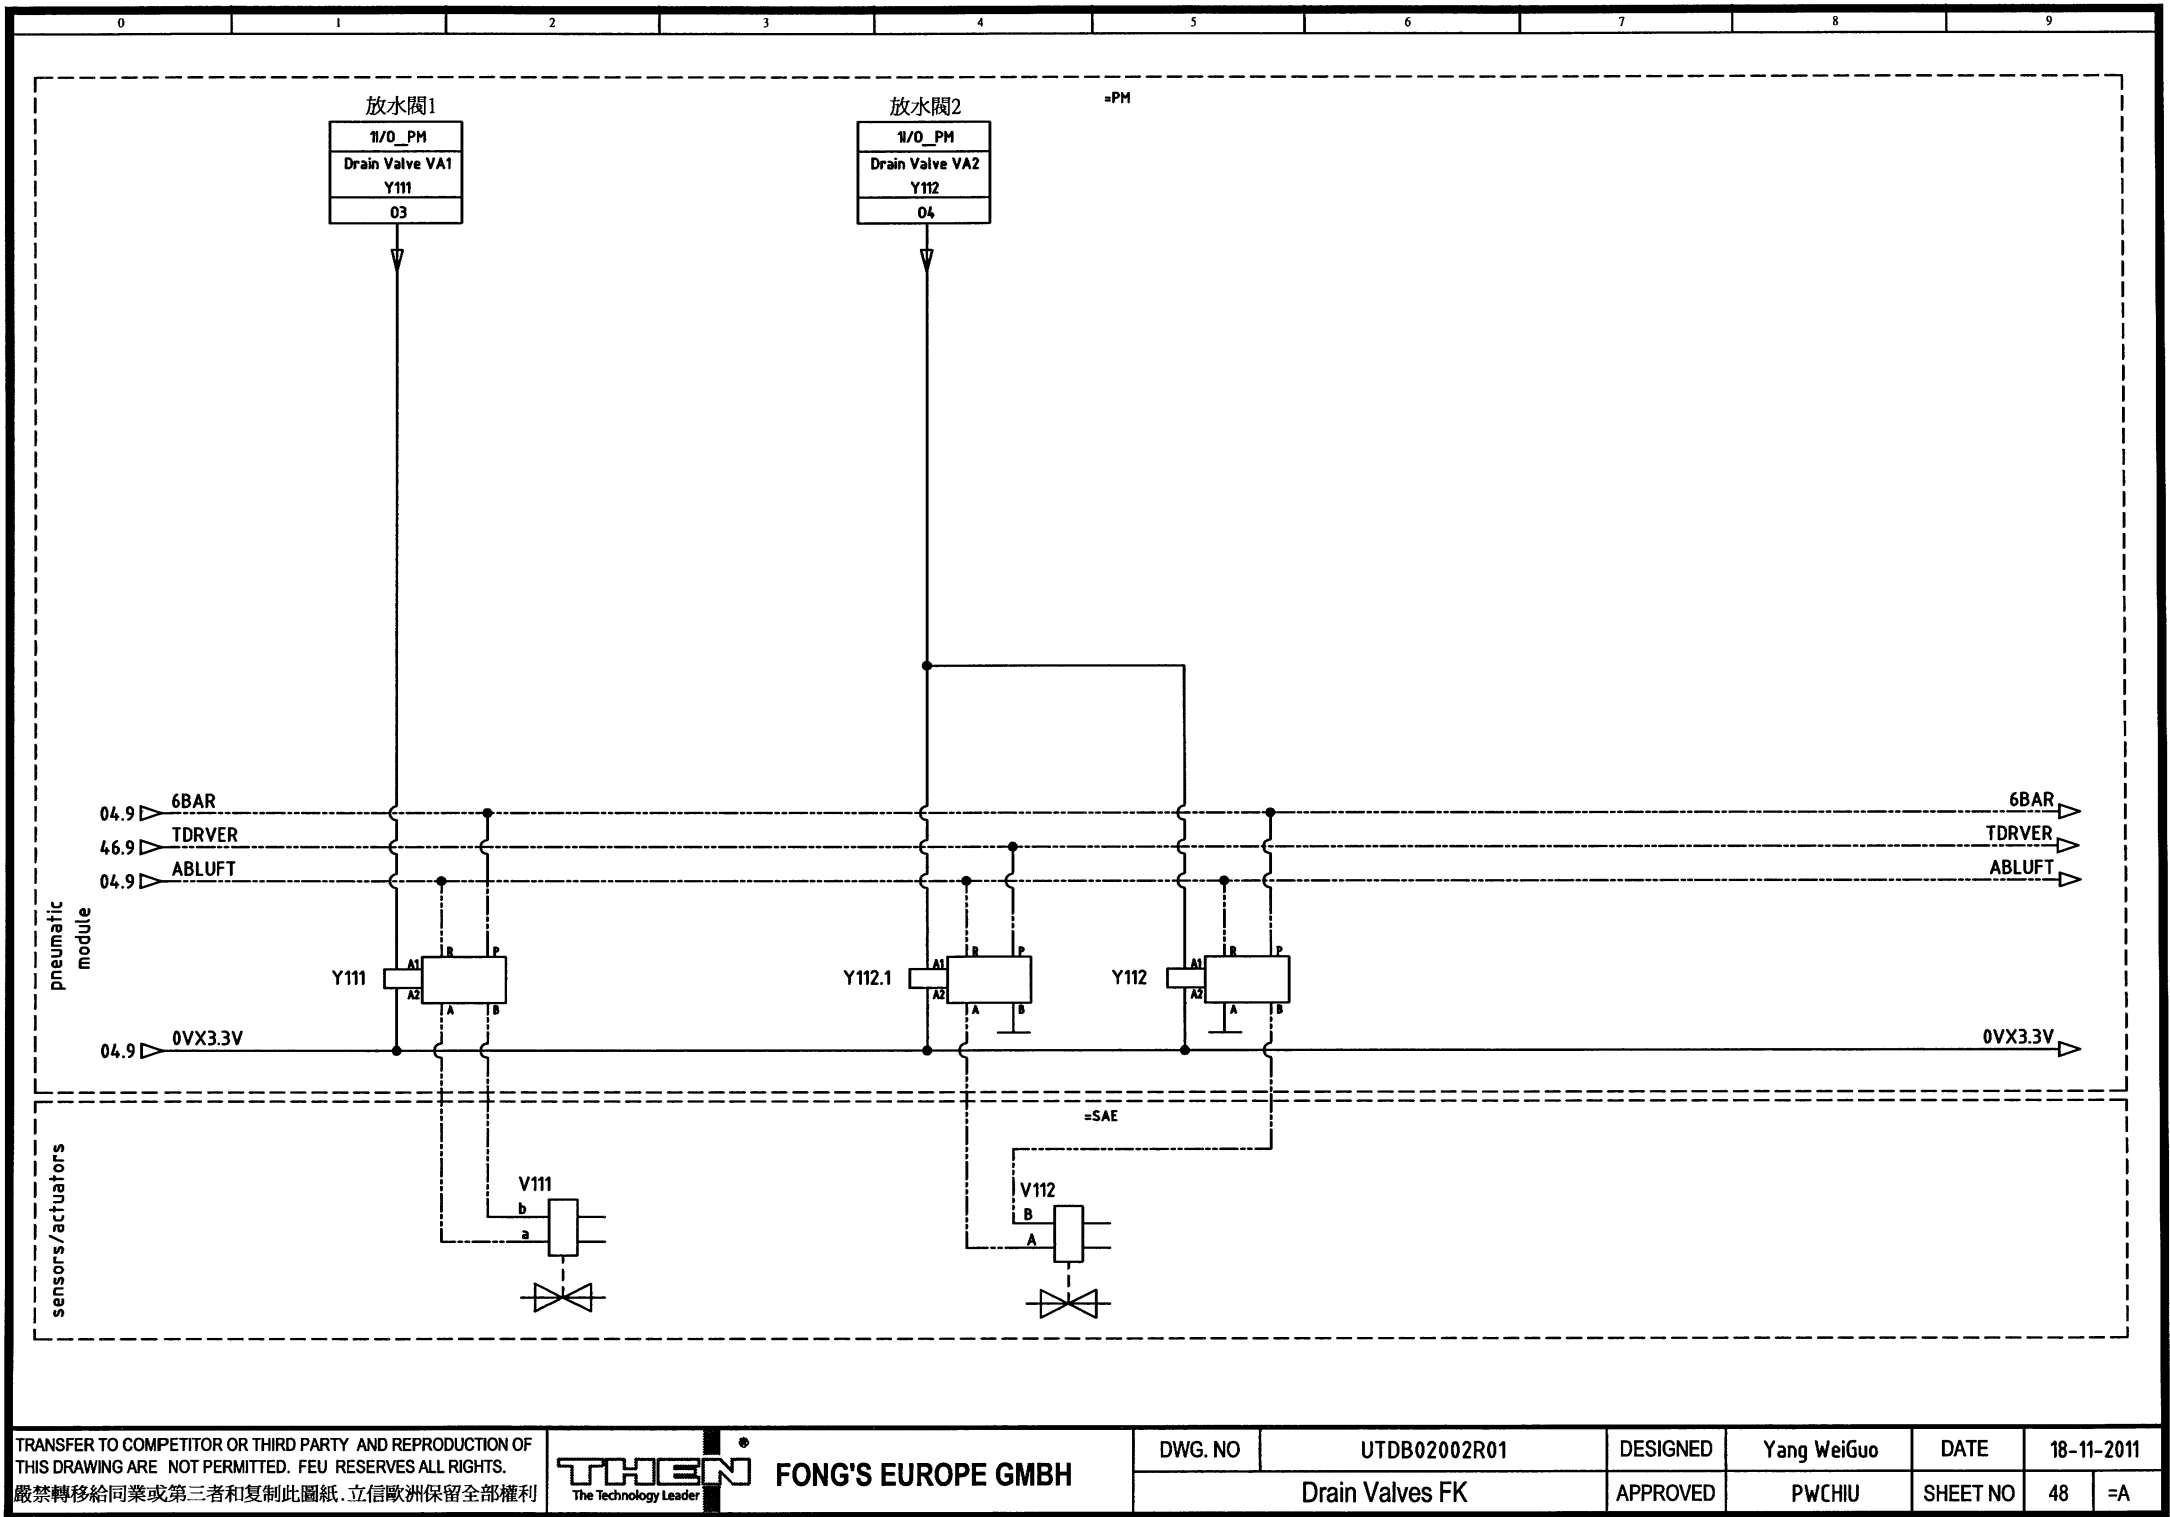
04.9

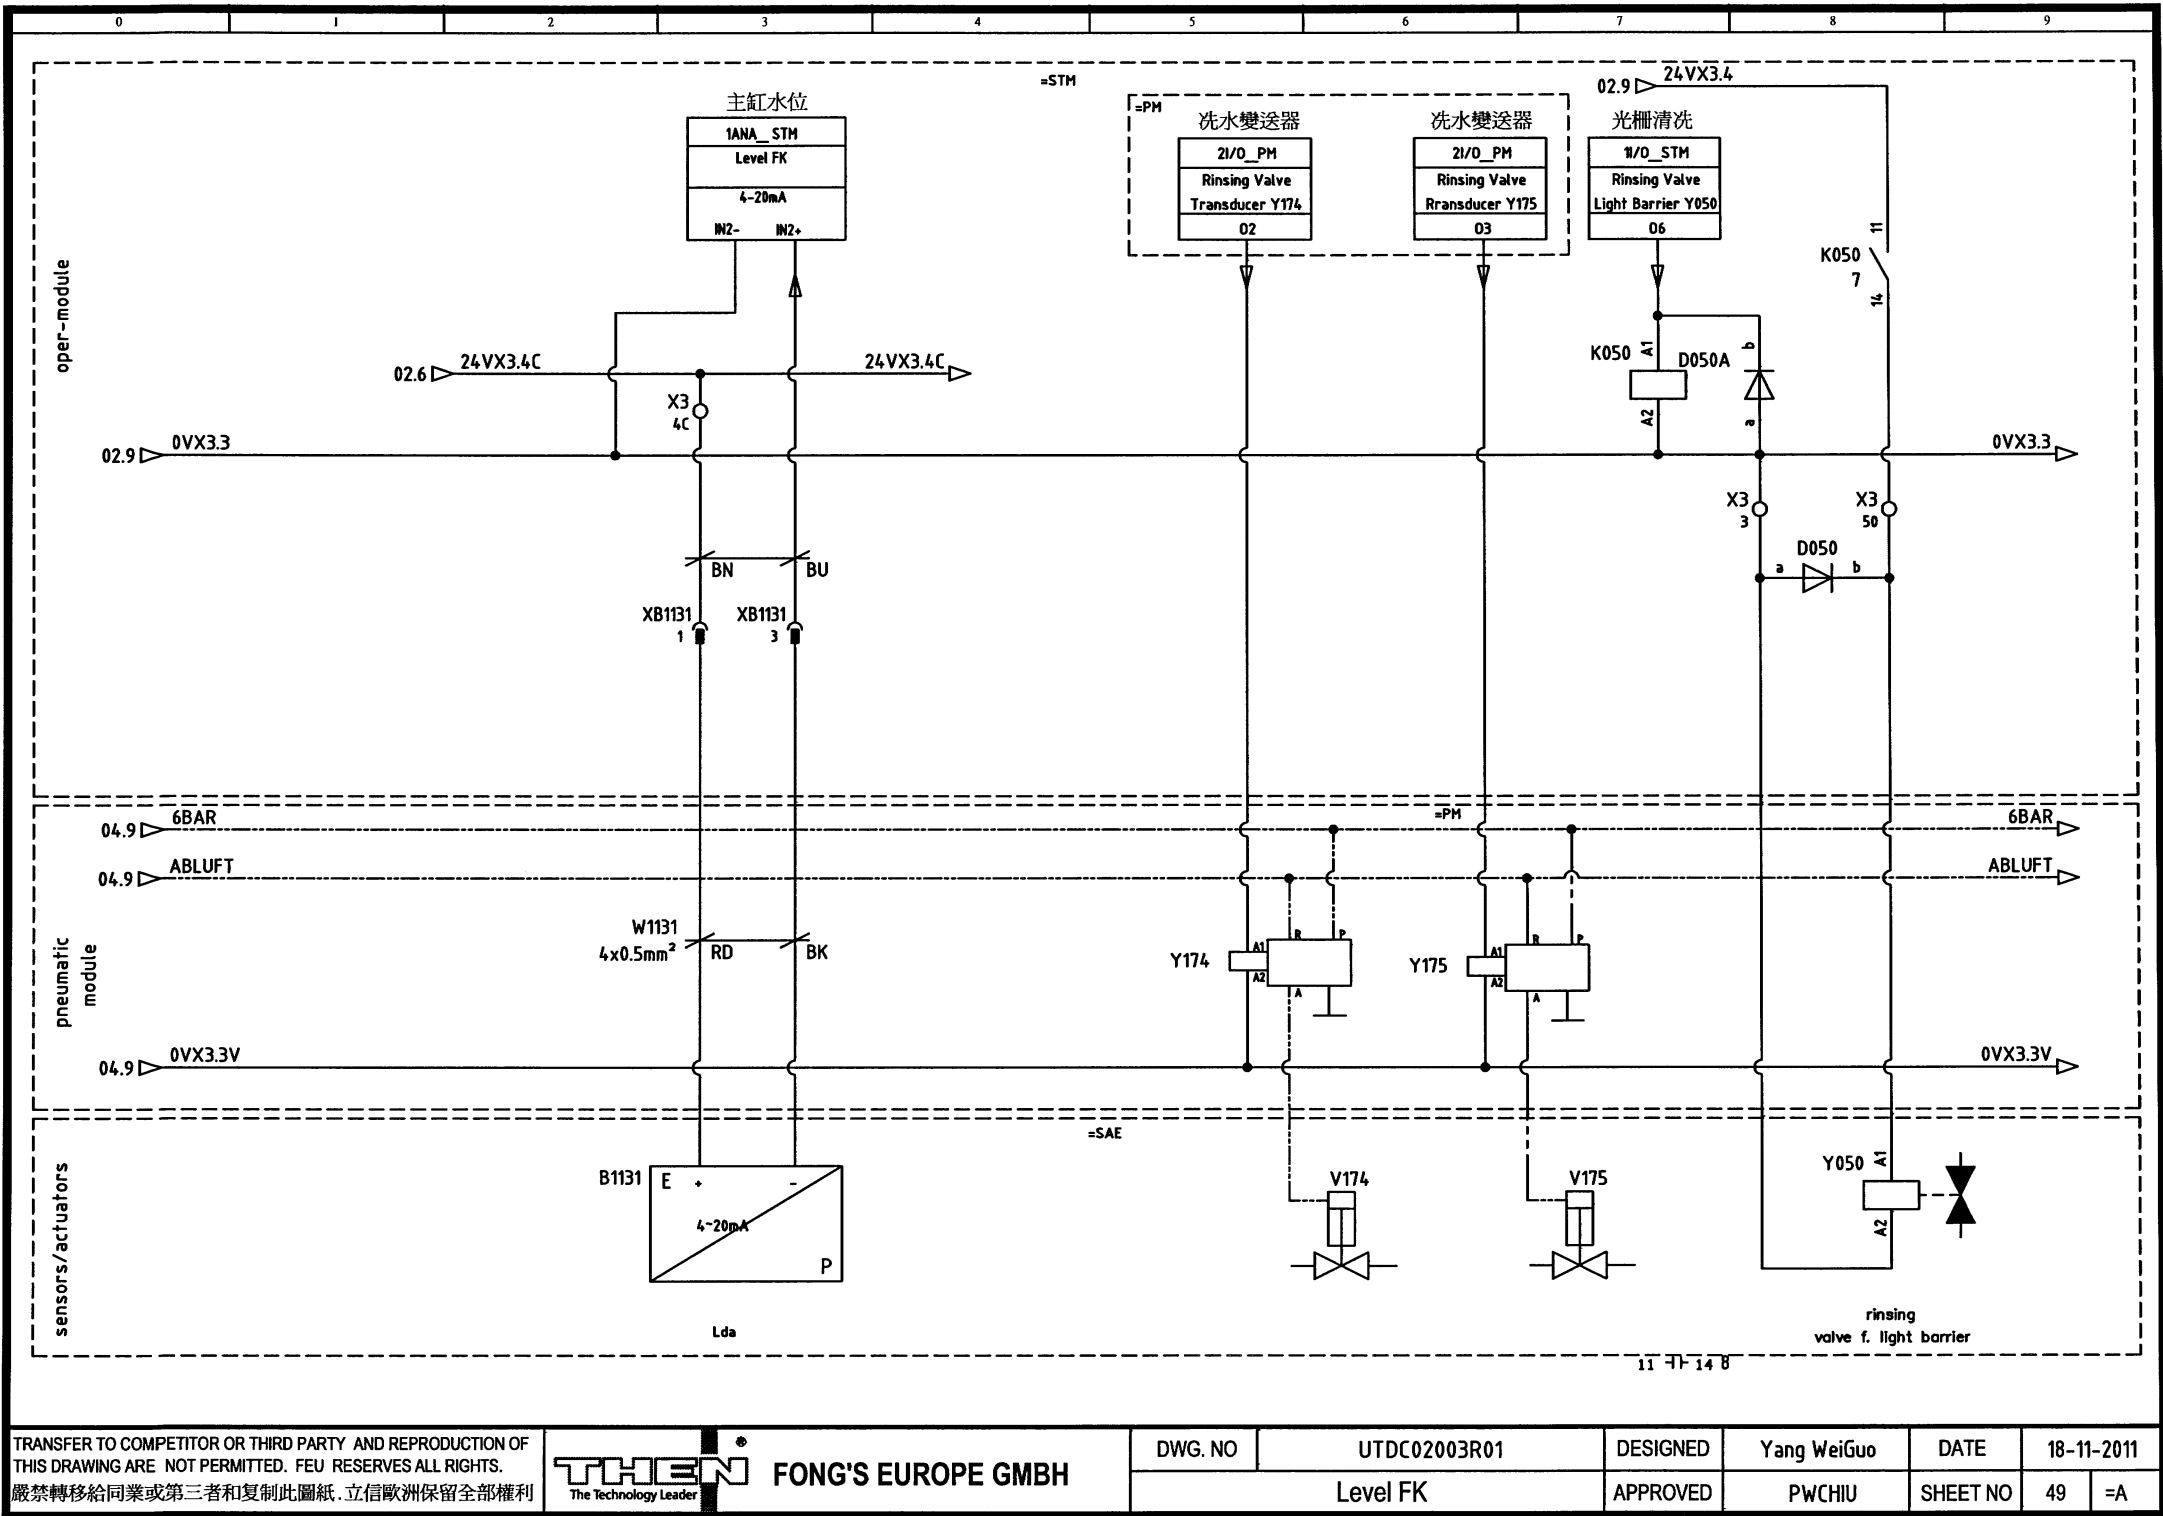
ABLUFT

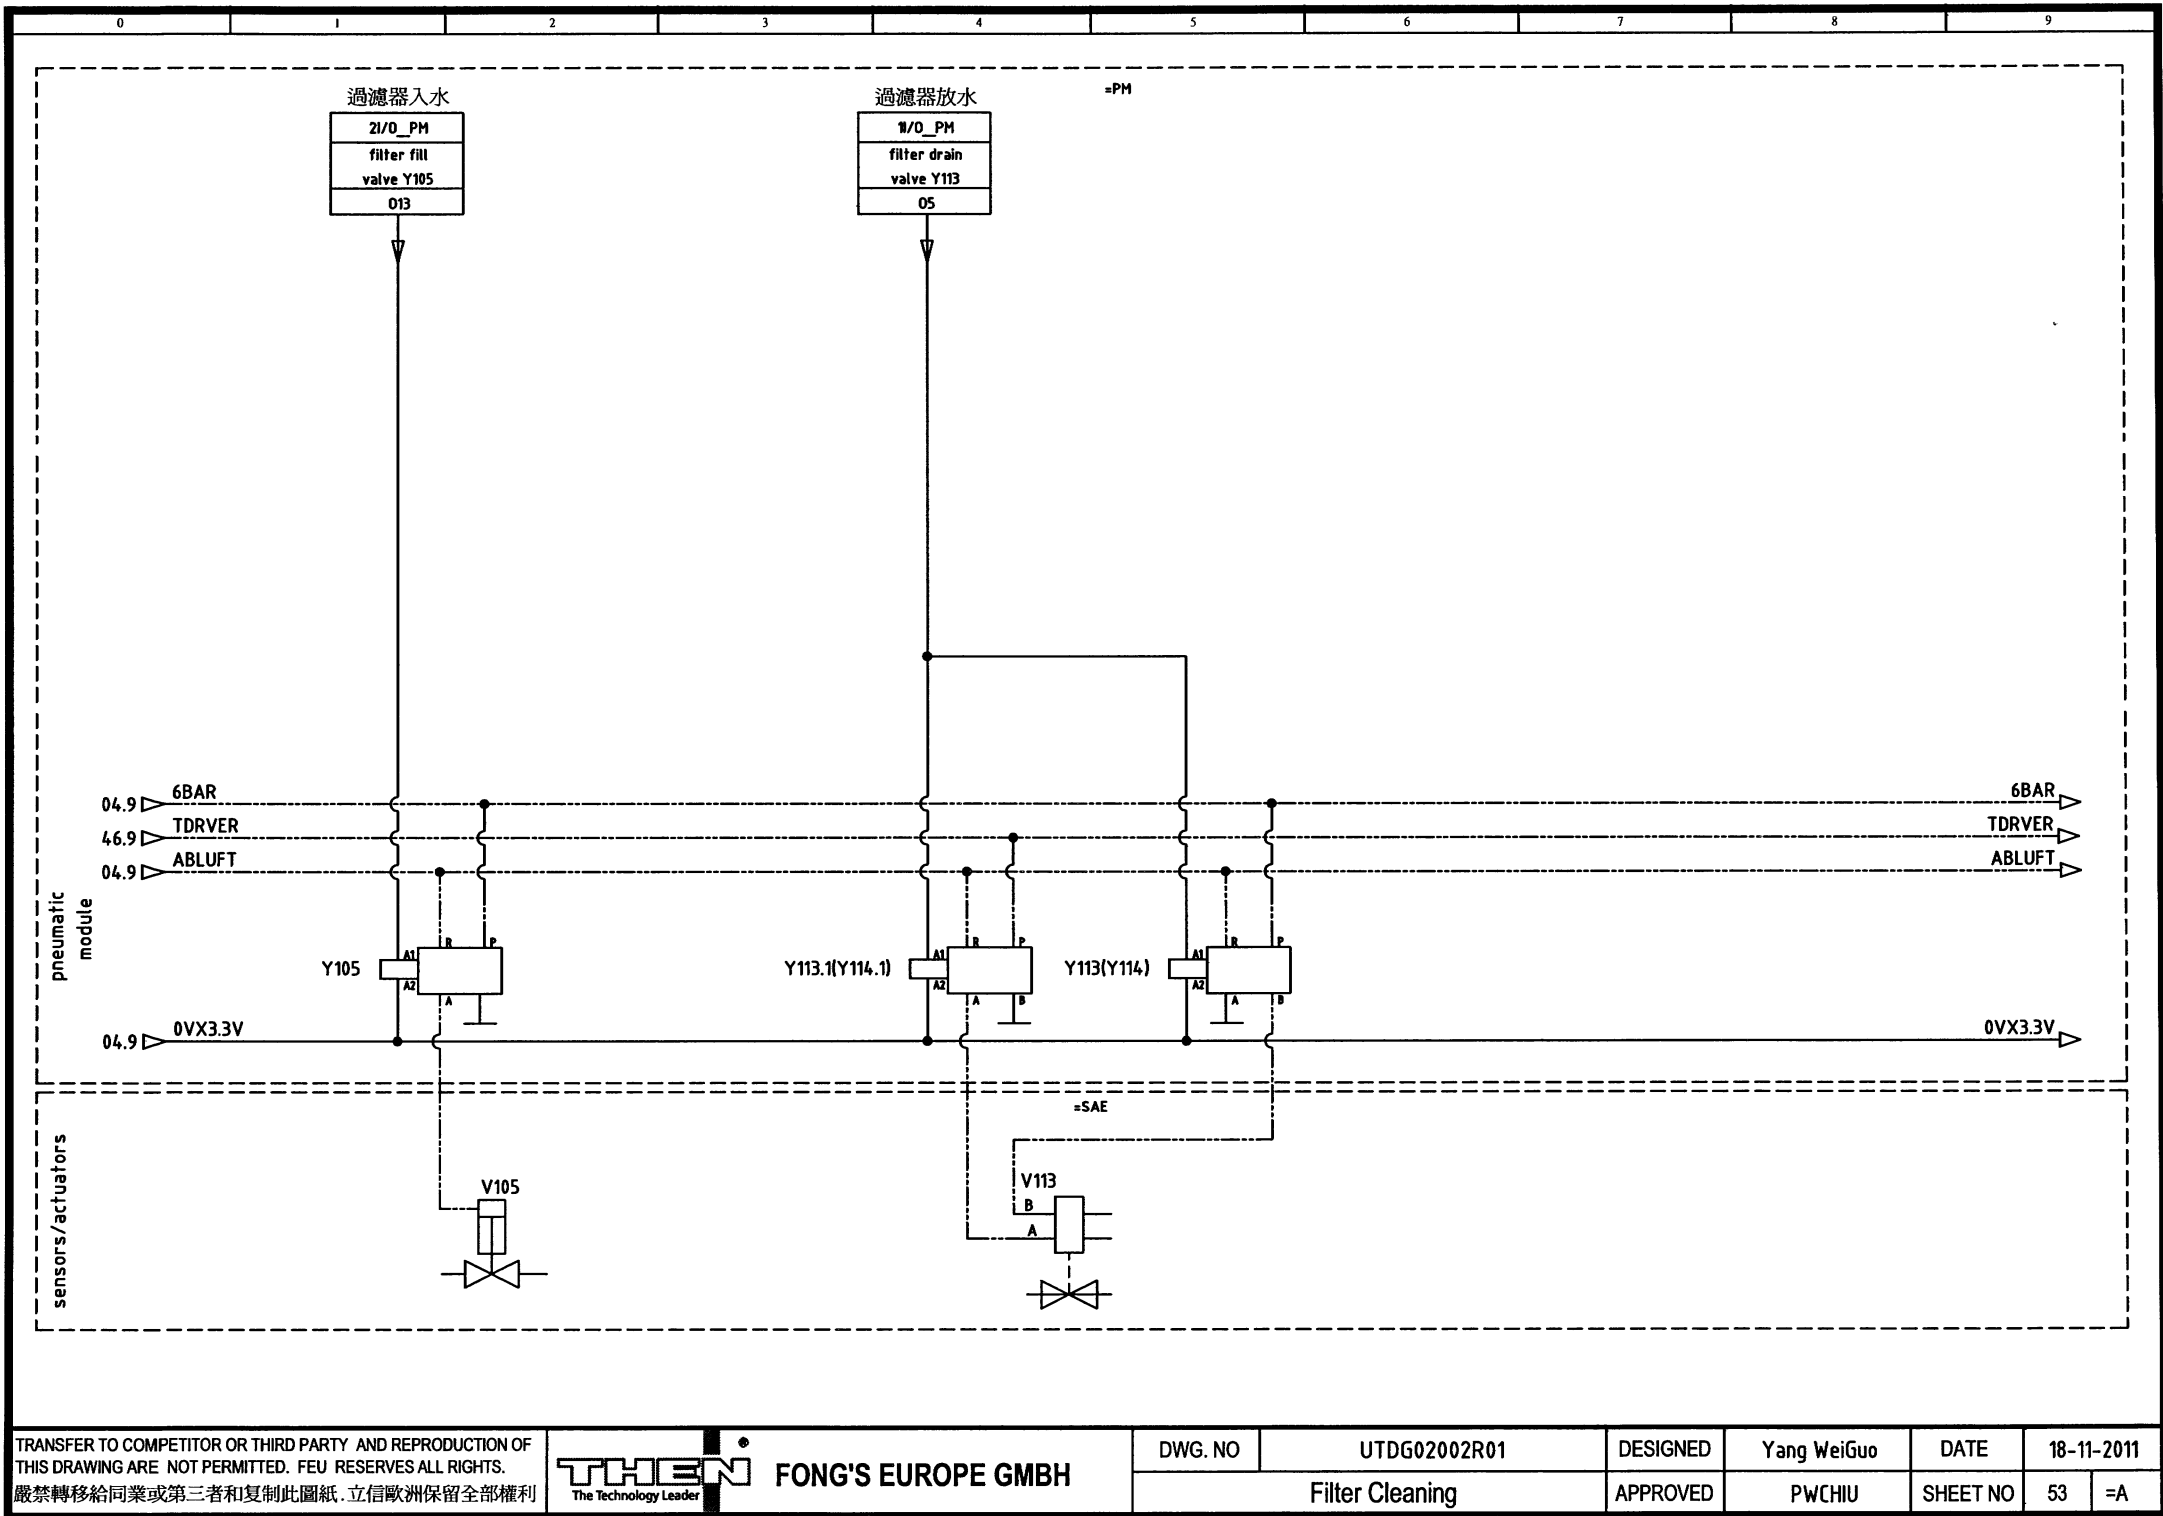
04.9

0VX3.3V

V102(V104)







TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.

嚴禁轉移給同業或第三者和复制此圖紙. 立信歐洲保留全部權利

THEN

The Technology Leader

FONG'S EUROPE GMBH

DWG. NO
Filter Cleaning

UTDG02002R01
Filter Cleaning

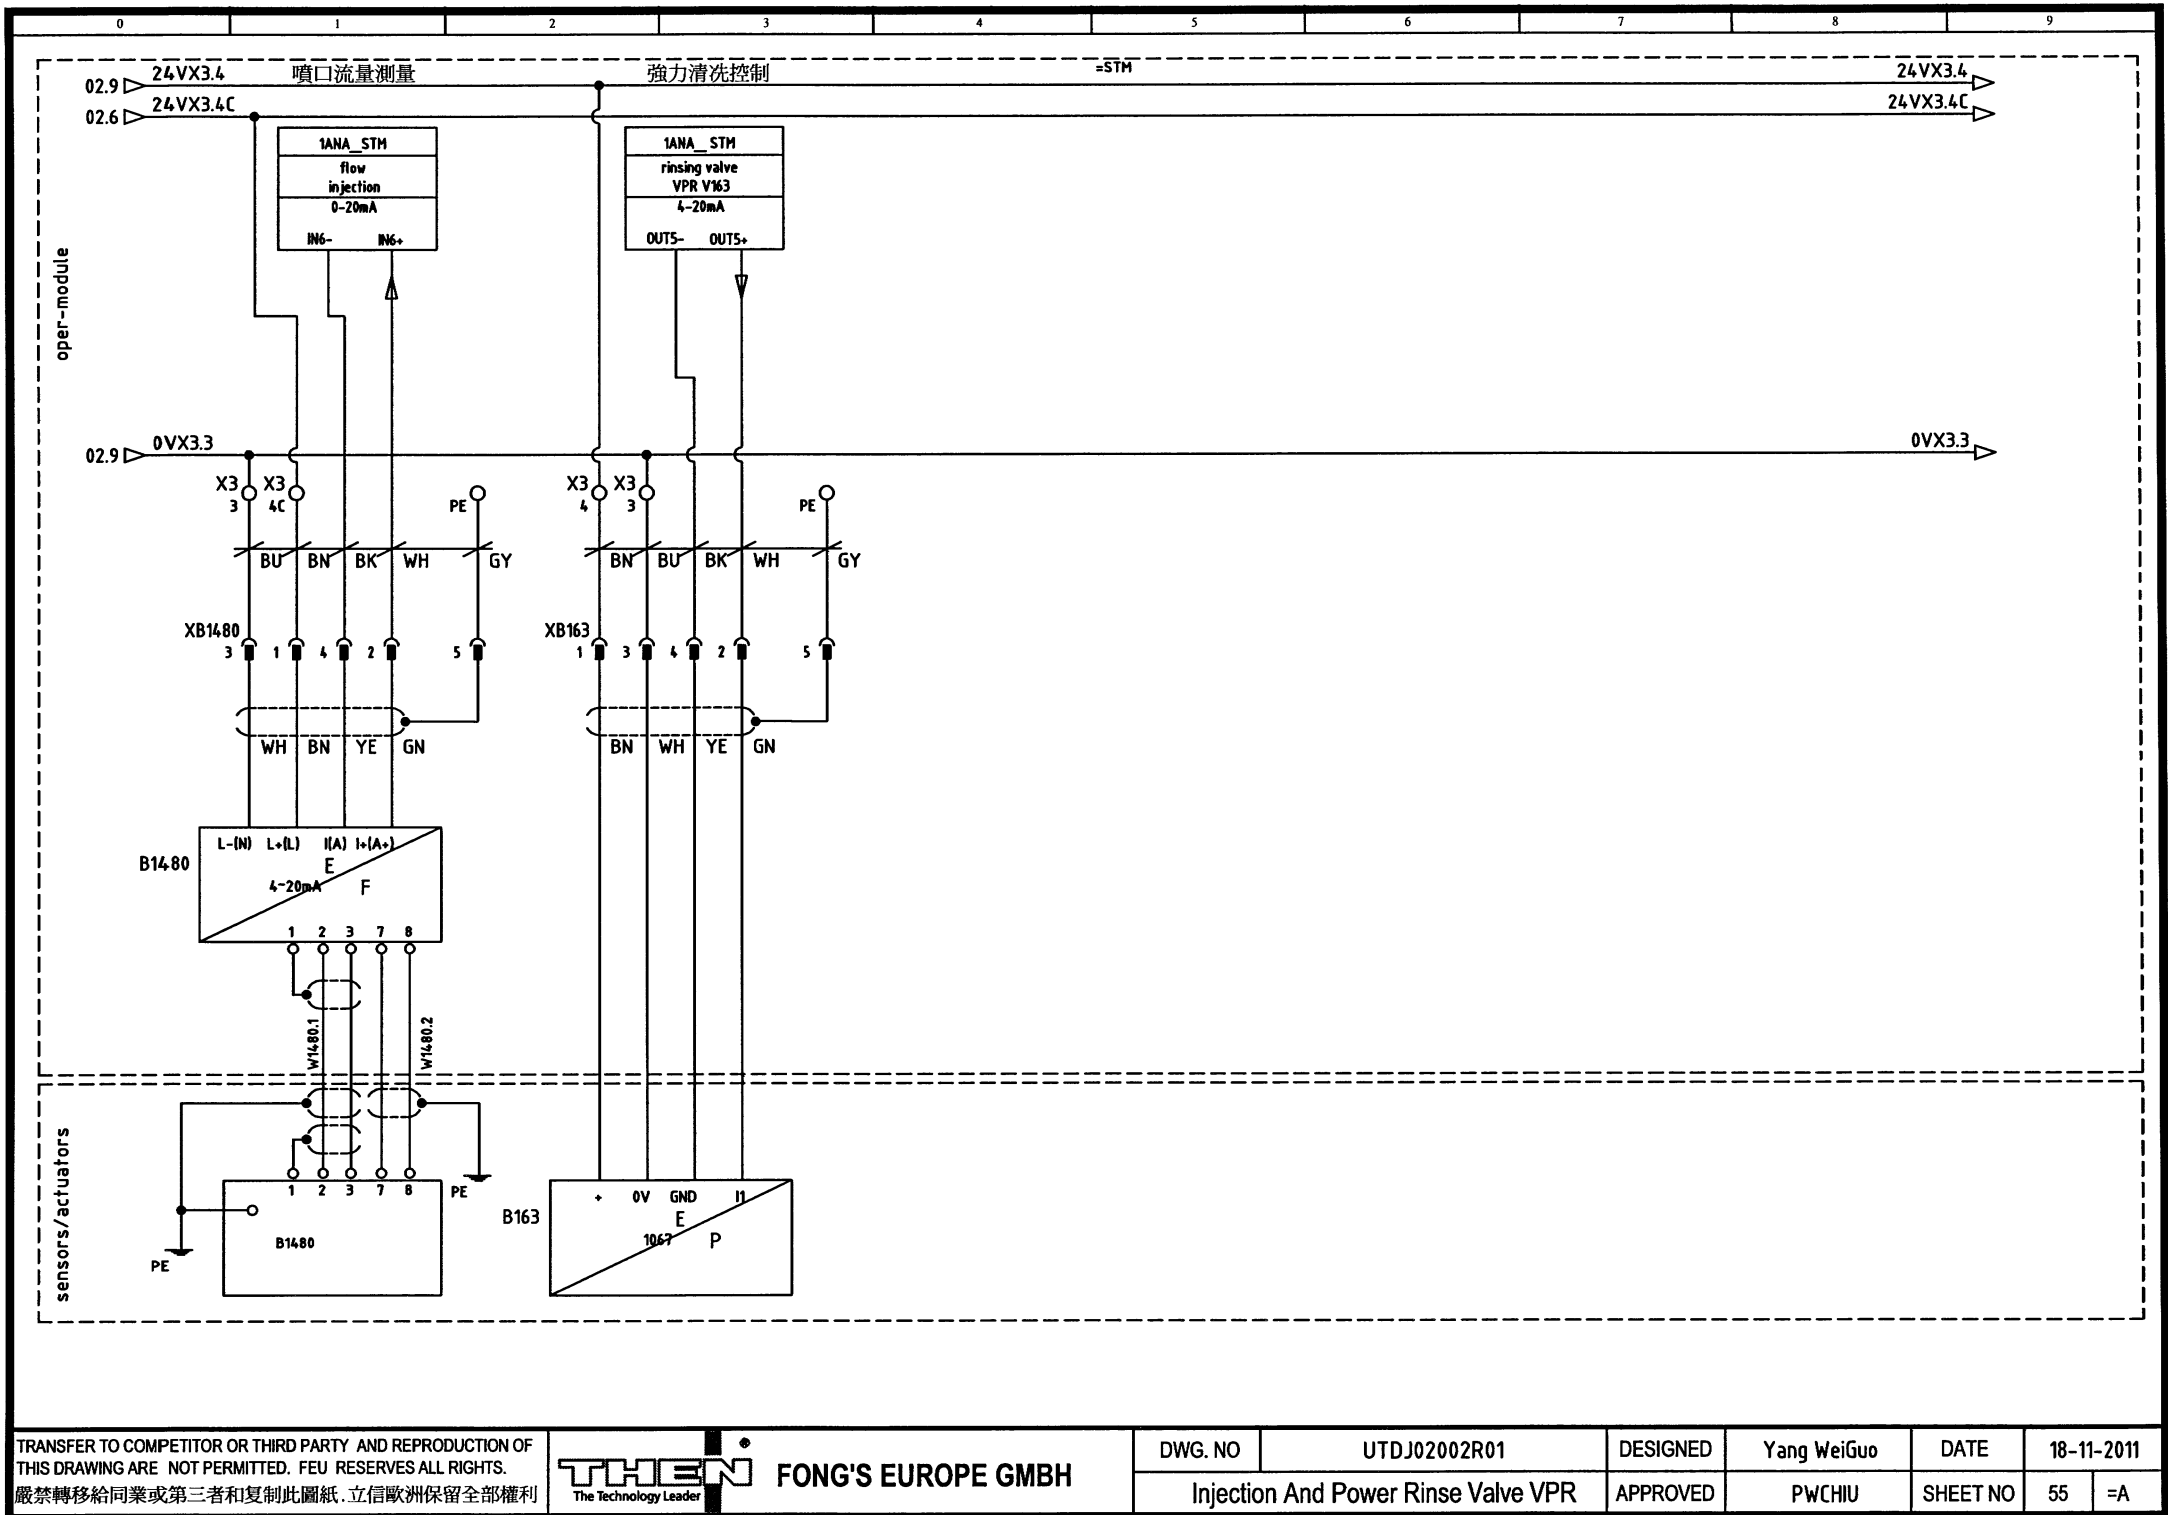
DESIGNED
APPROVED

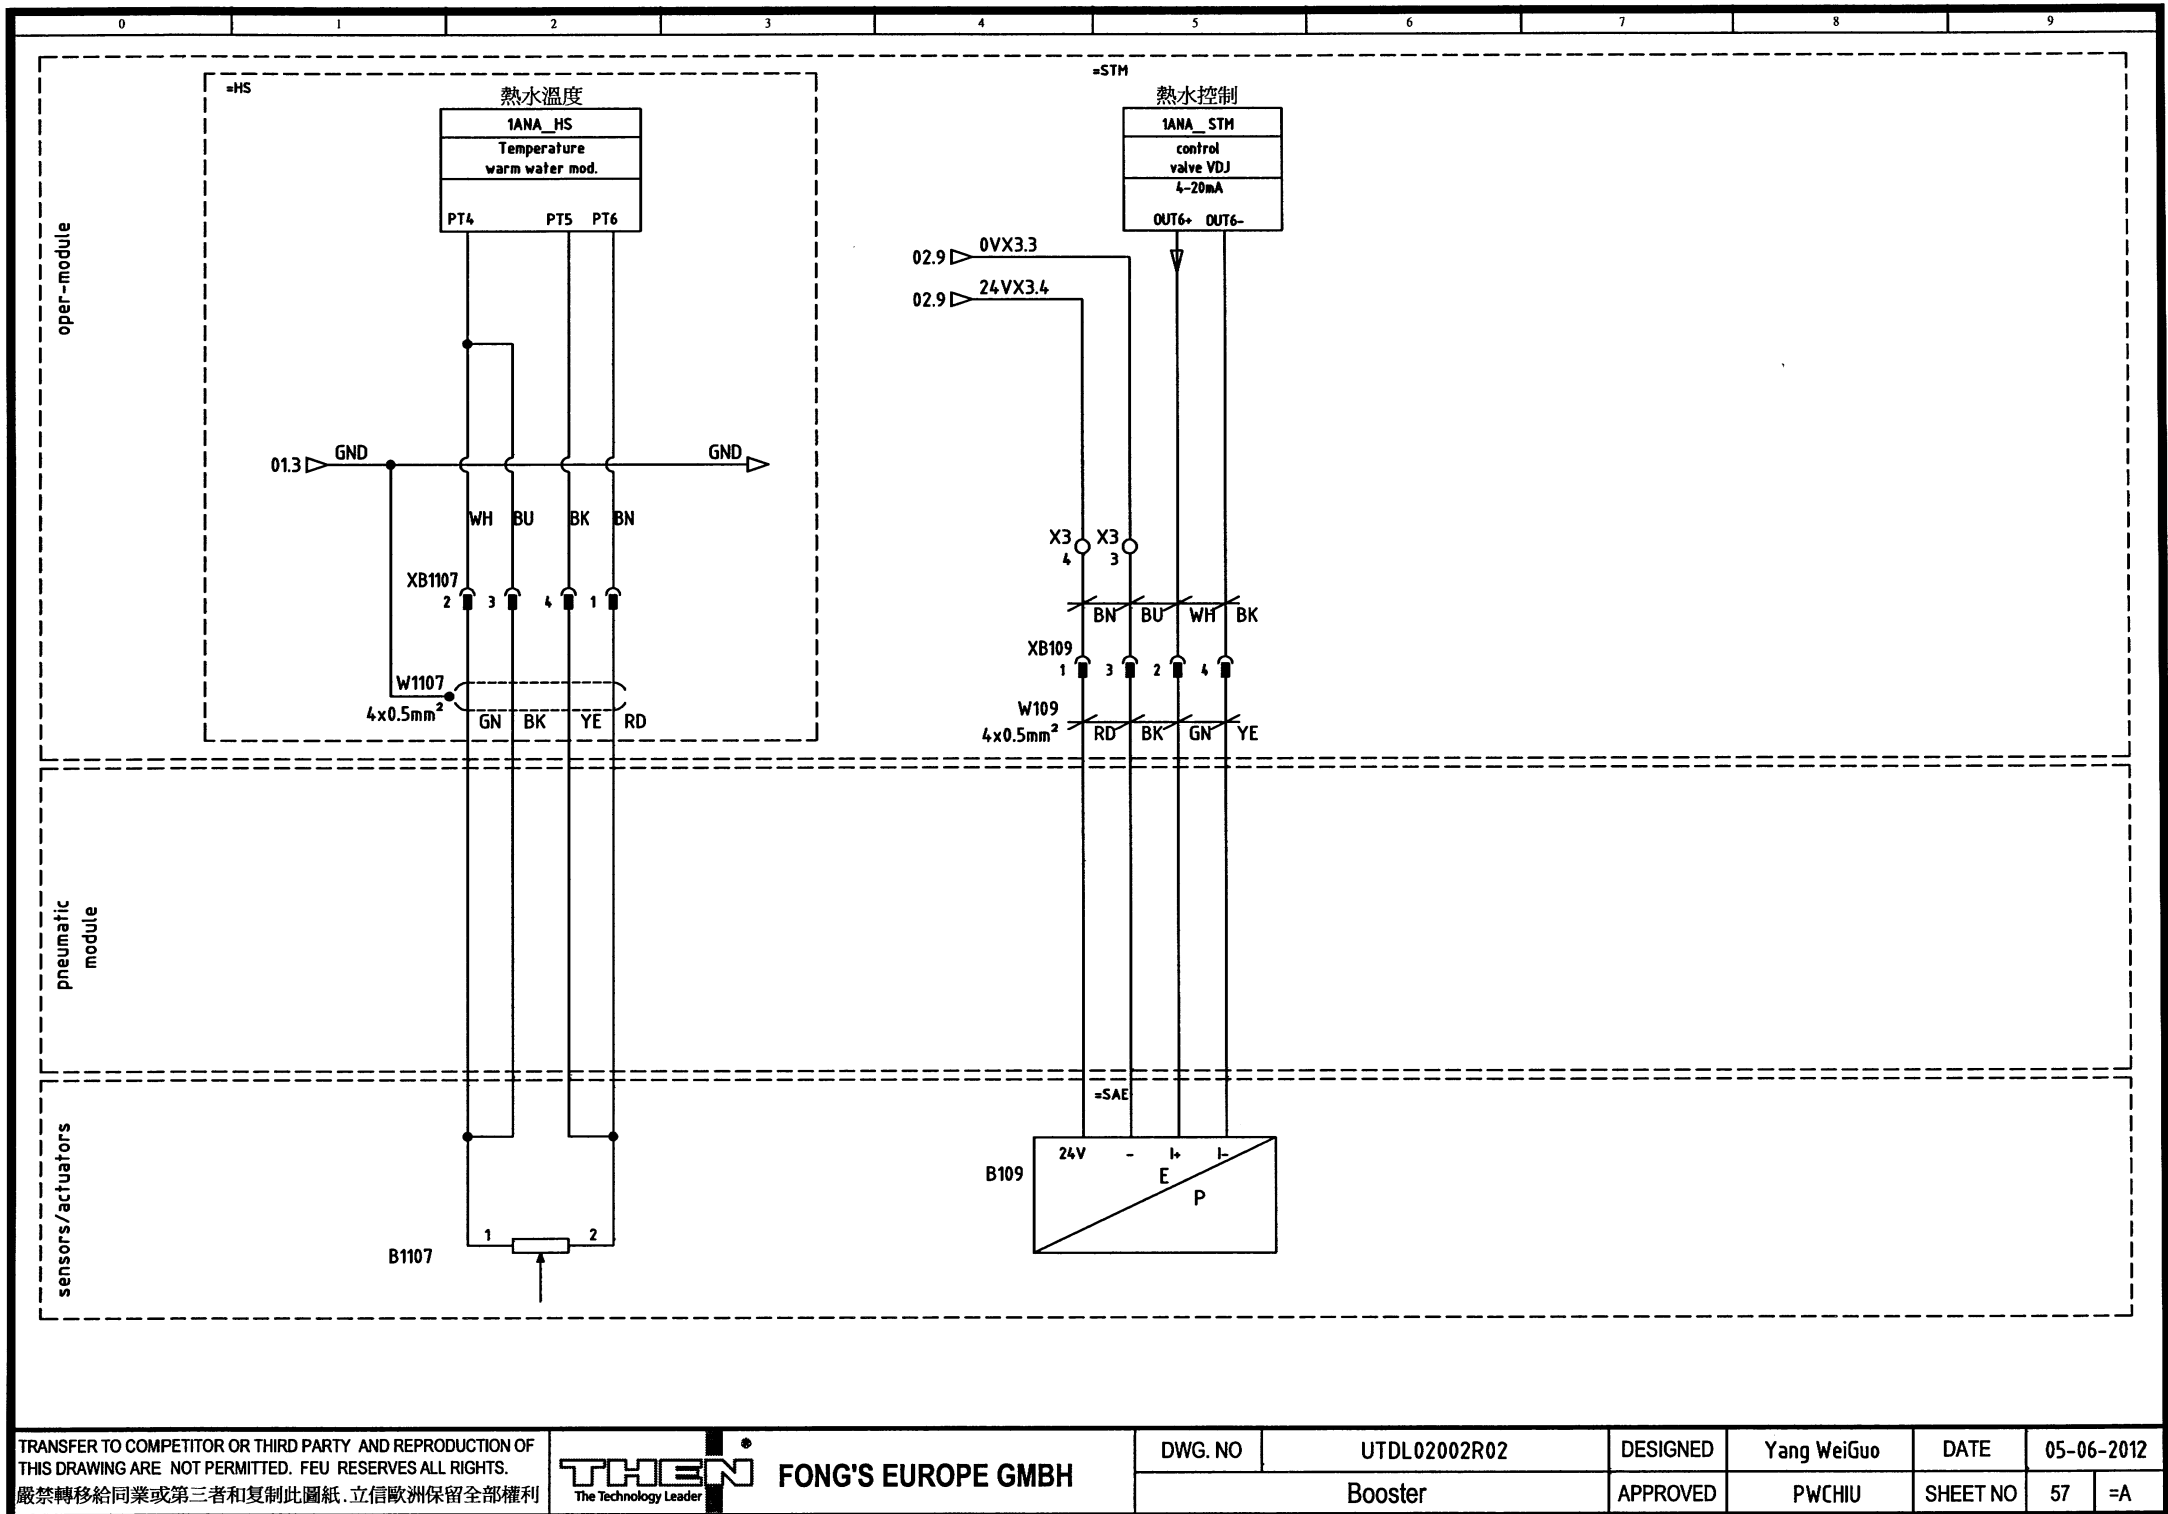
Yang WeiGuo
PWCHIU

DATE
SHEET NO

18-11-2011
53

=A





TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.
嚴禁轉移給同業或第三者和复制此圖紙. 立信歐洲保留全部權利

THEN

The Technology Leader

FONG'S EUROPE GMBH

DWG. NO

UTDL02002R02

DESIGNED

Yang WeiGuo

DATE

05-06-2012

Booster

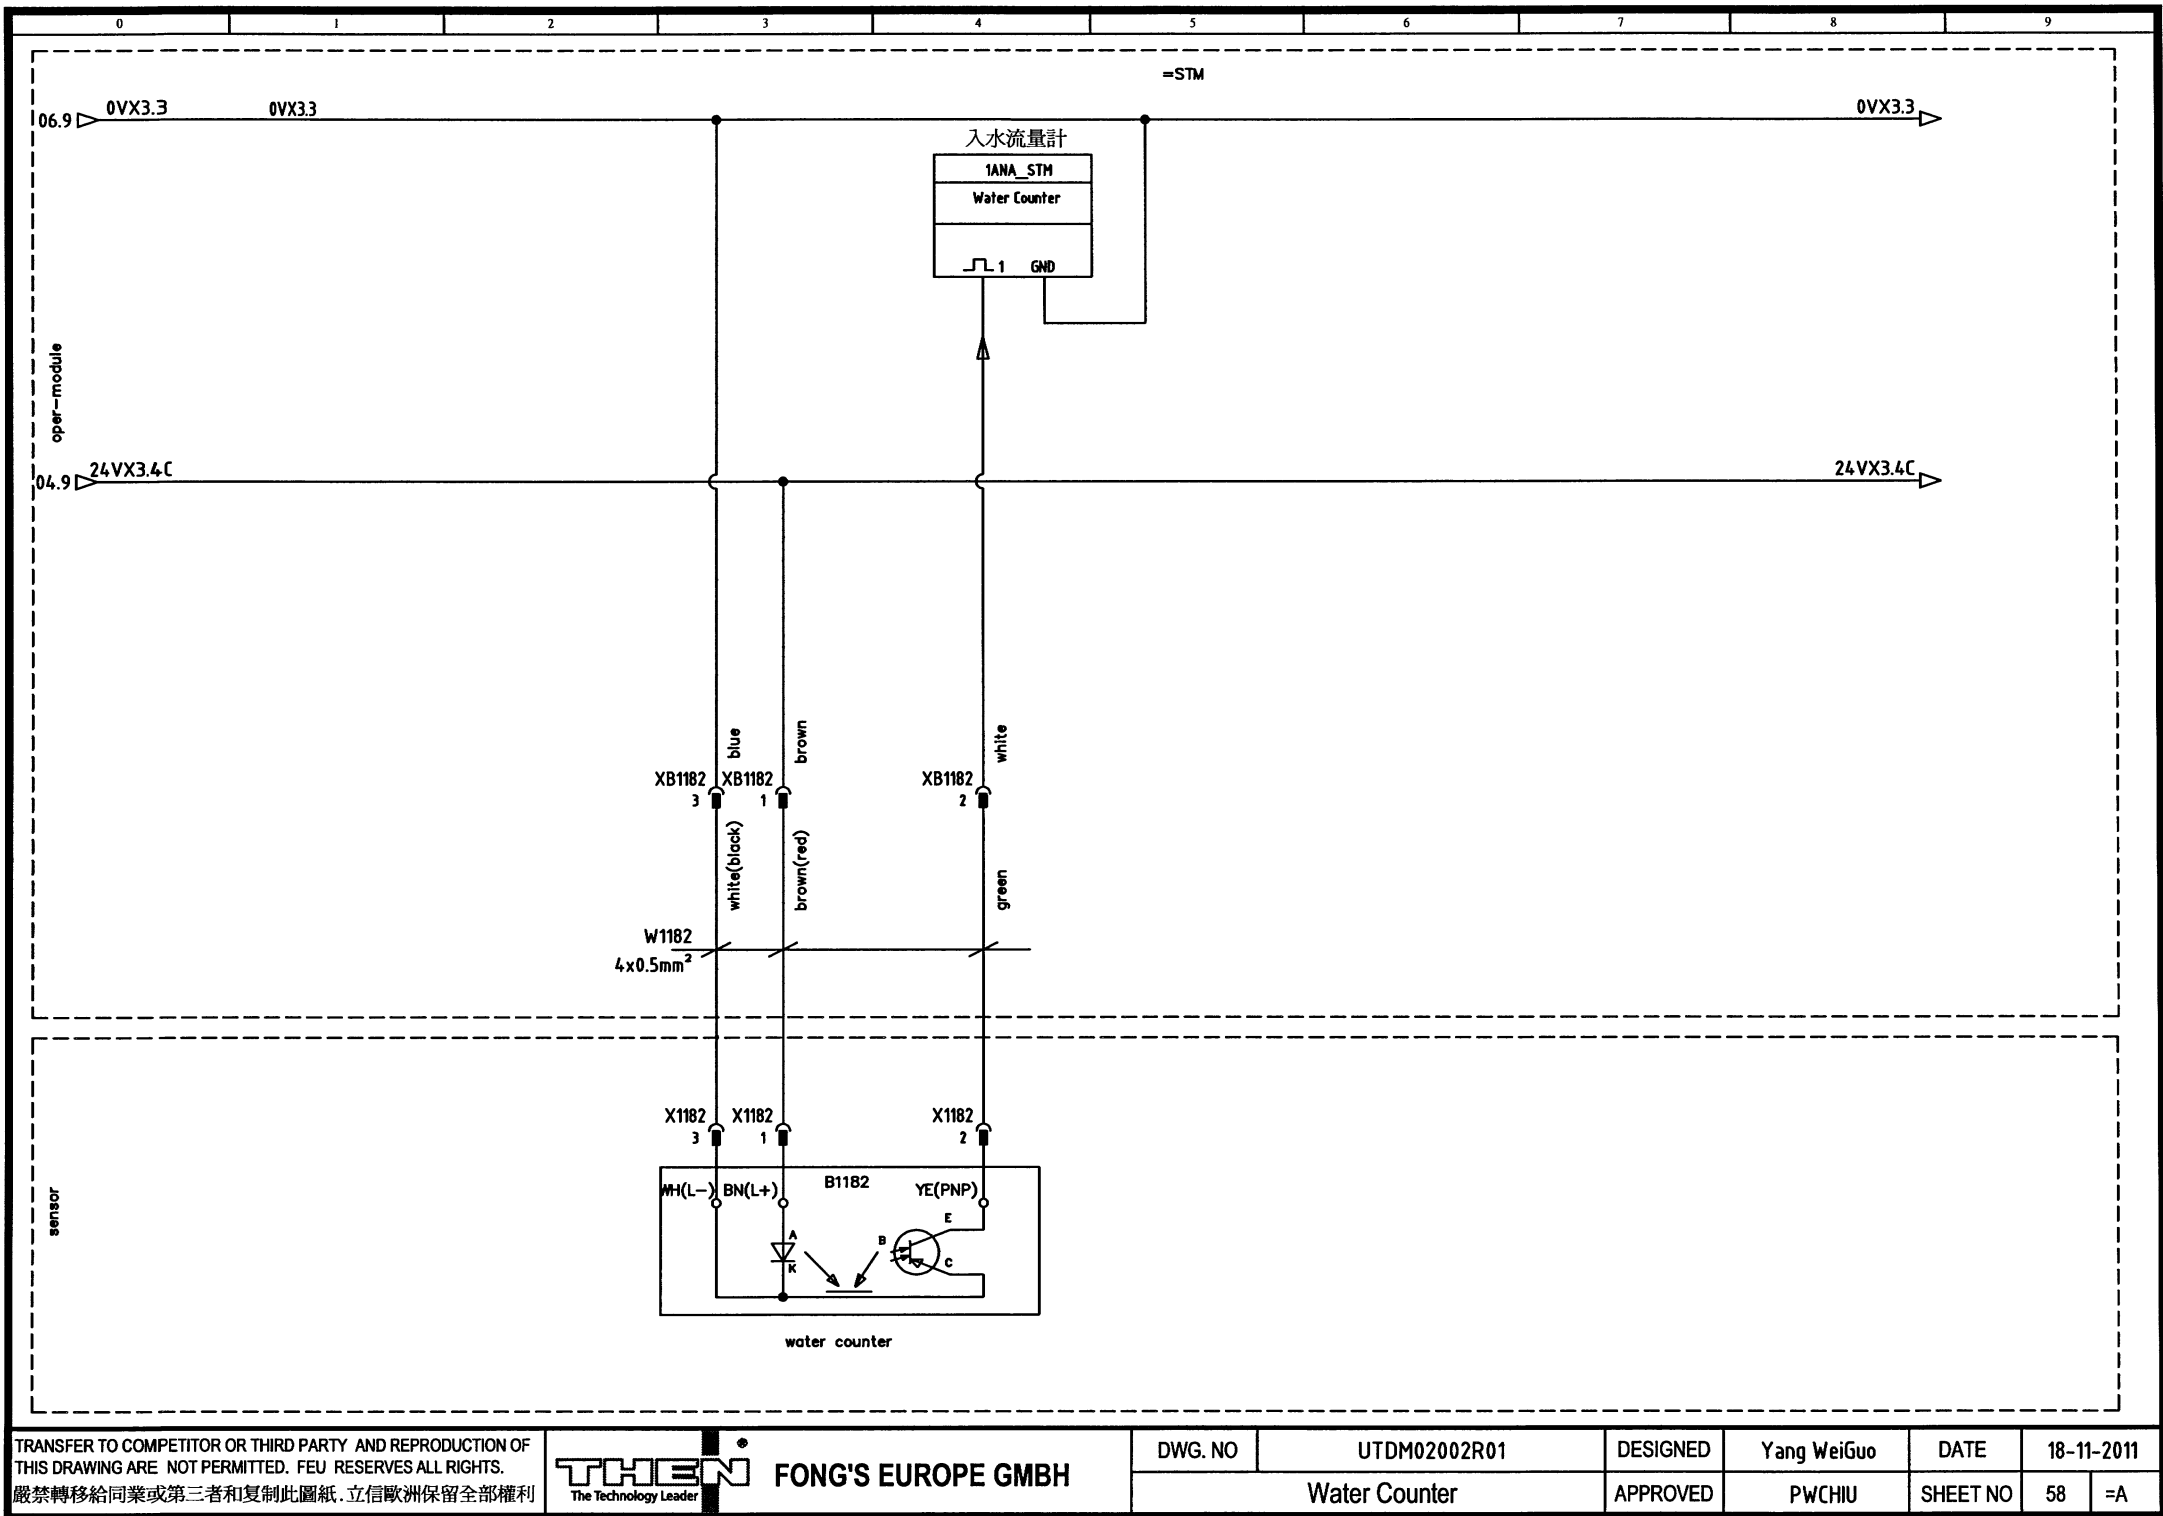
APPROVED

PWCHIU

SHEET NO

57

=A




TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.
嚴禁轉移給同業或第三者和复制此圖紙. 立信歐洲保留全部權利

THEN

The Technology Leader

FONG'S EUROPE GMBH

DWG. NO	UTDM02002R01	DESIGNED	Yang WeiGuo	DATE	18-11-2011
Water Counter		APPROVED	PWCHIU	SHEET NO	58
					=A

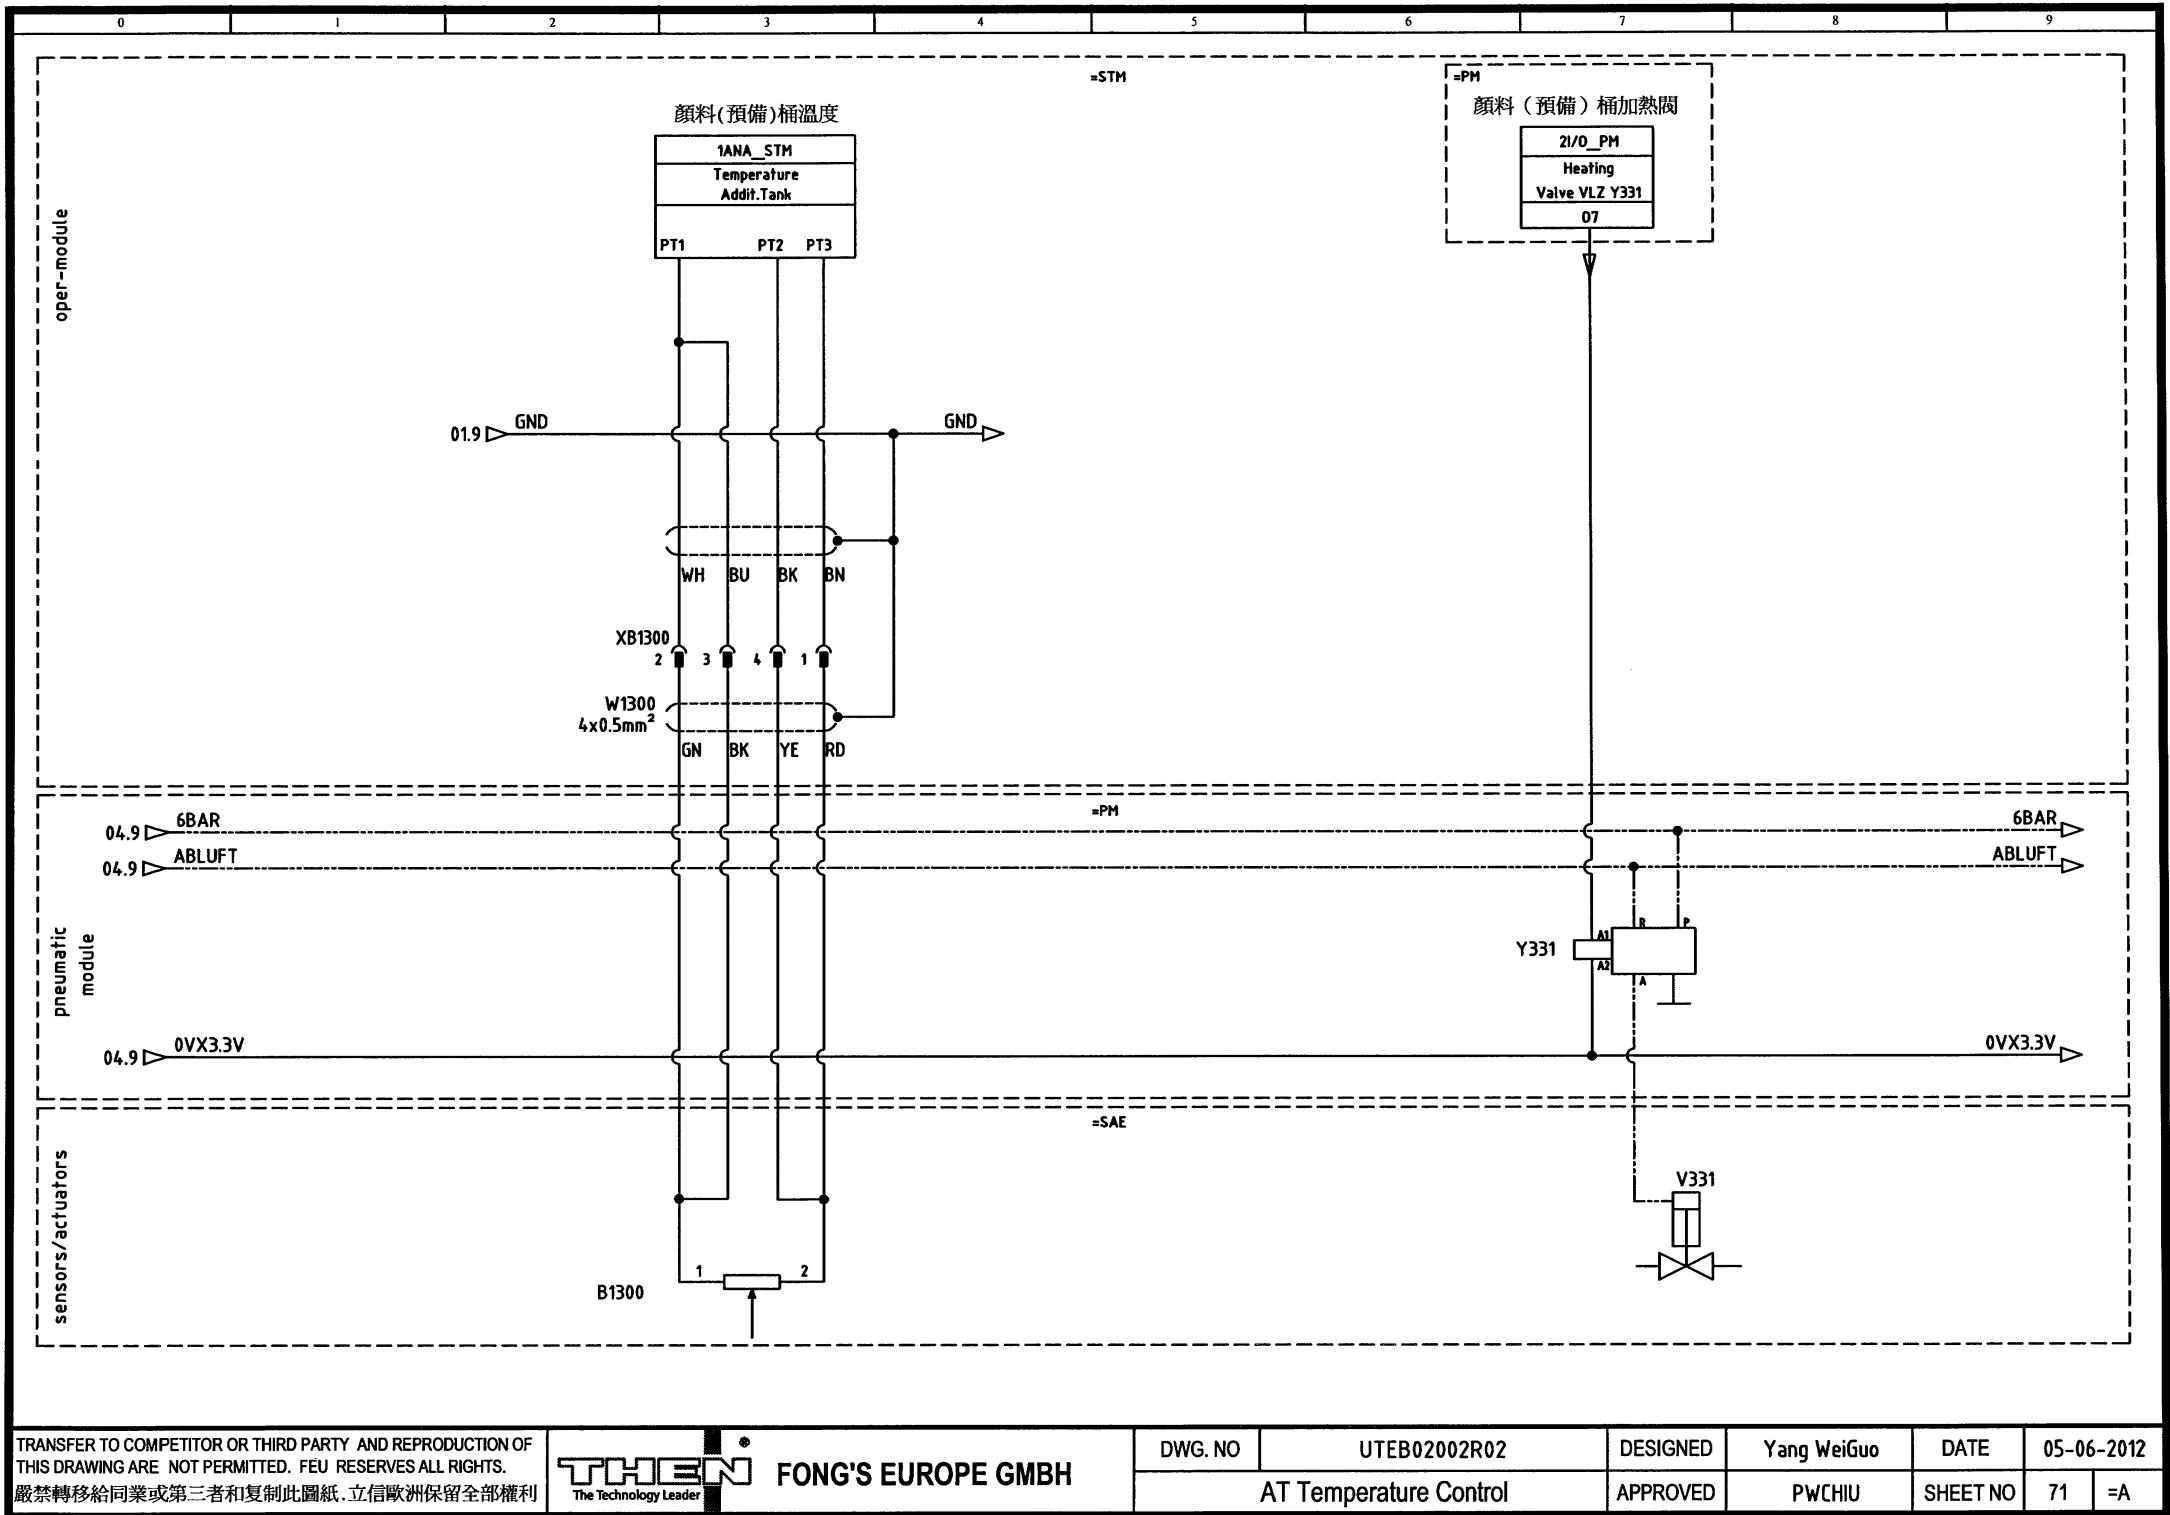

TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.
嚴禁轉移給同業或第三者和复制此圖紙,立信歐洲保留全部權利

THEN

The Technology Leader

FONG'S EUROPE GMBH

DWG. NO

UTEB02002R02

DESIGNED

Yang WeiGuo

DATE

05-06-2012

AT Temperature Control

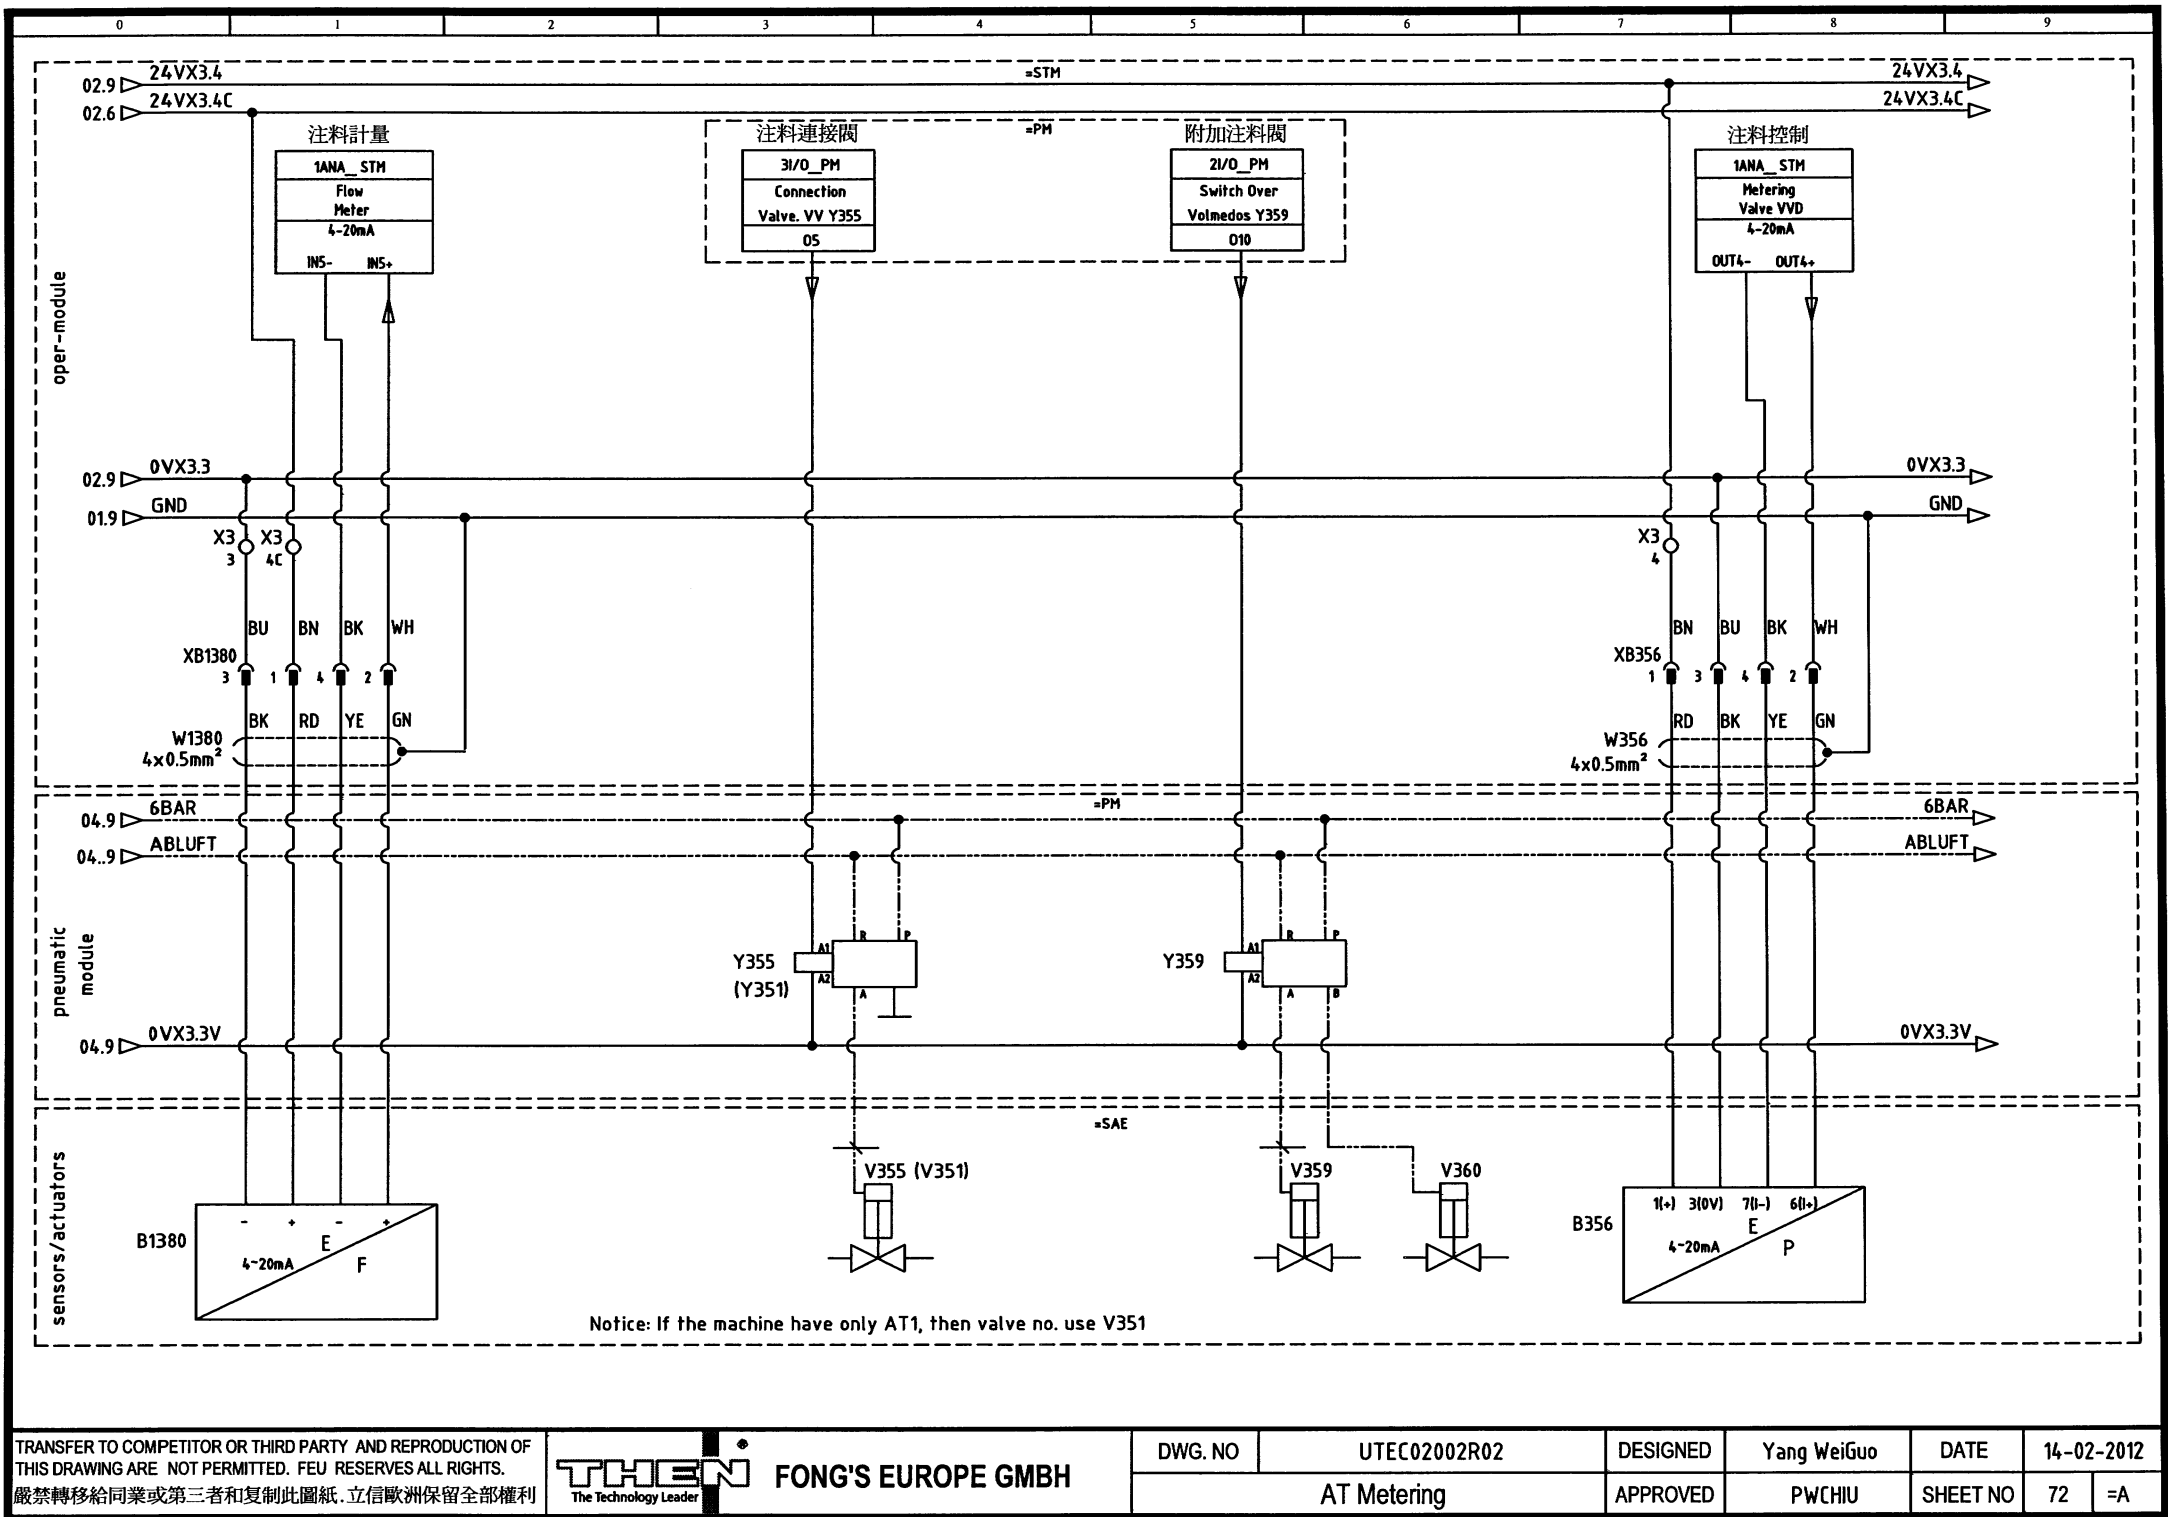
APPROVED

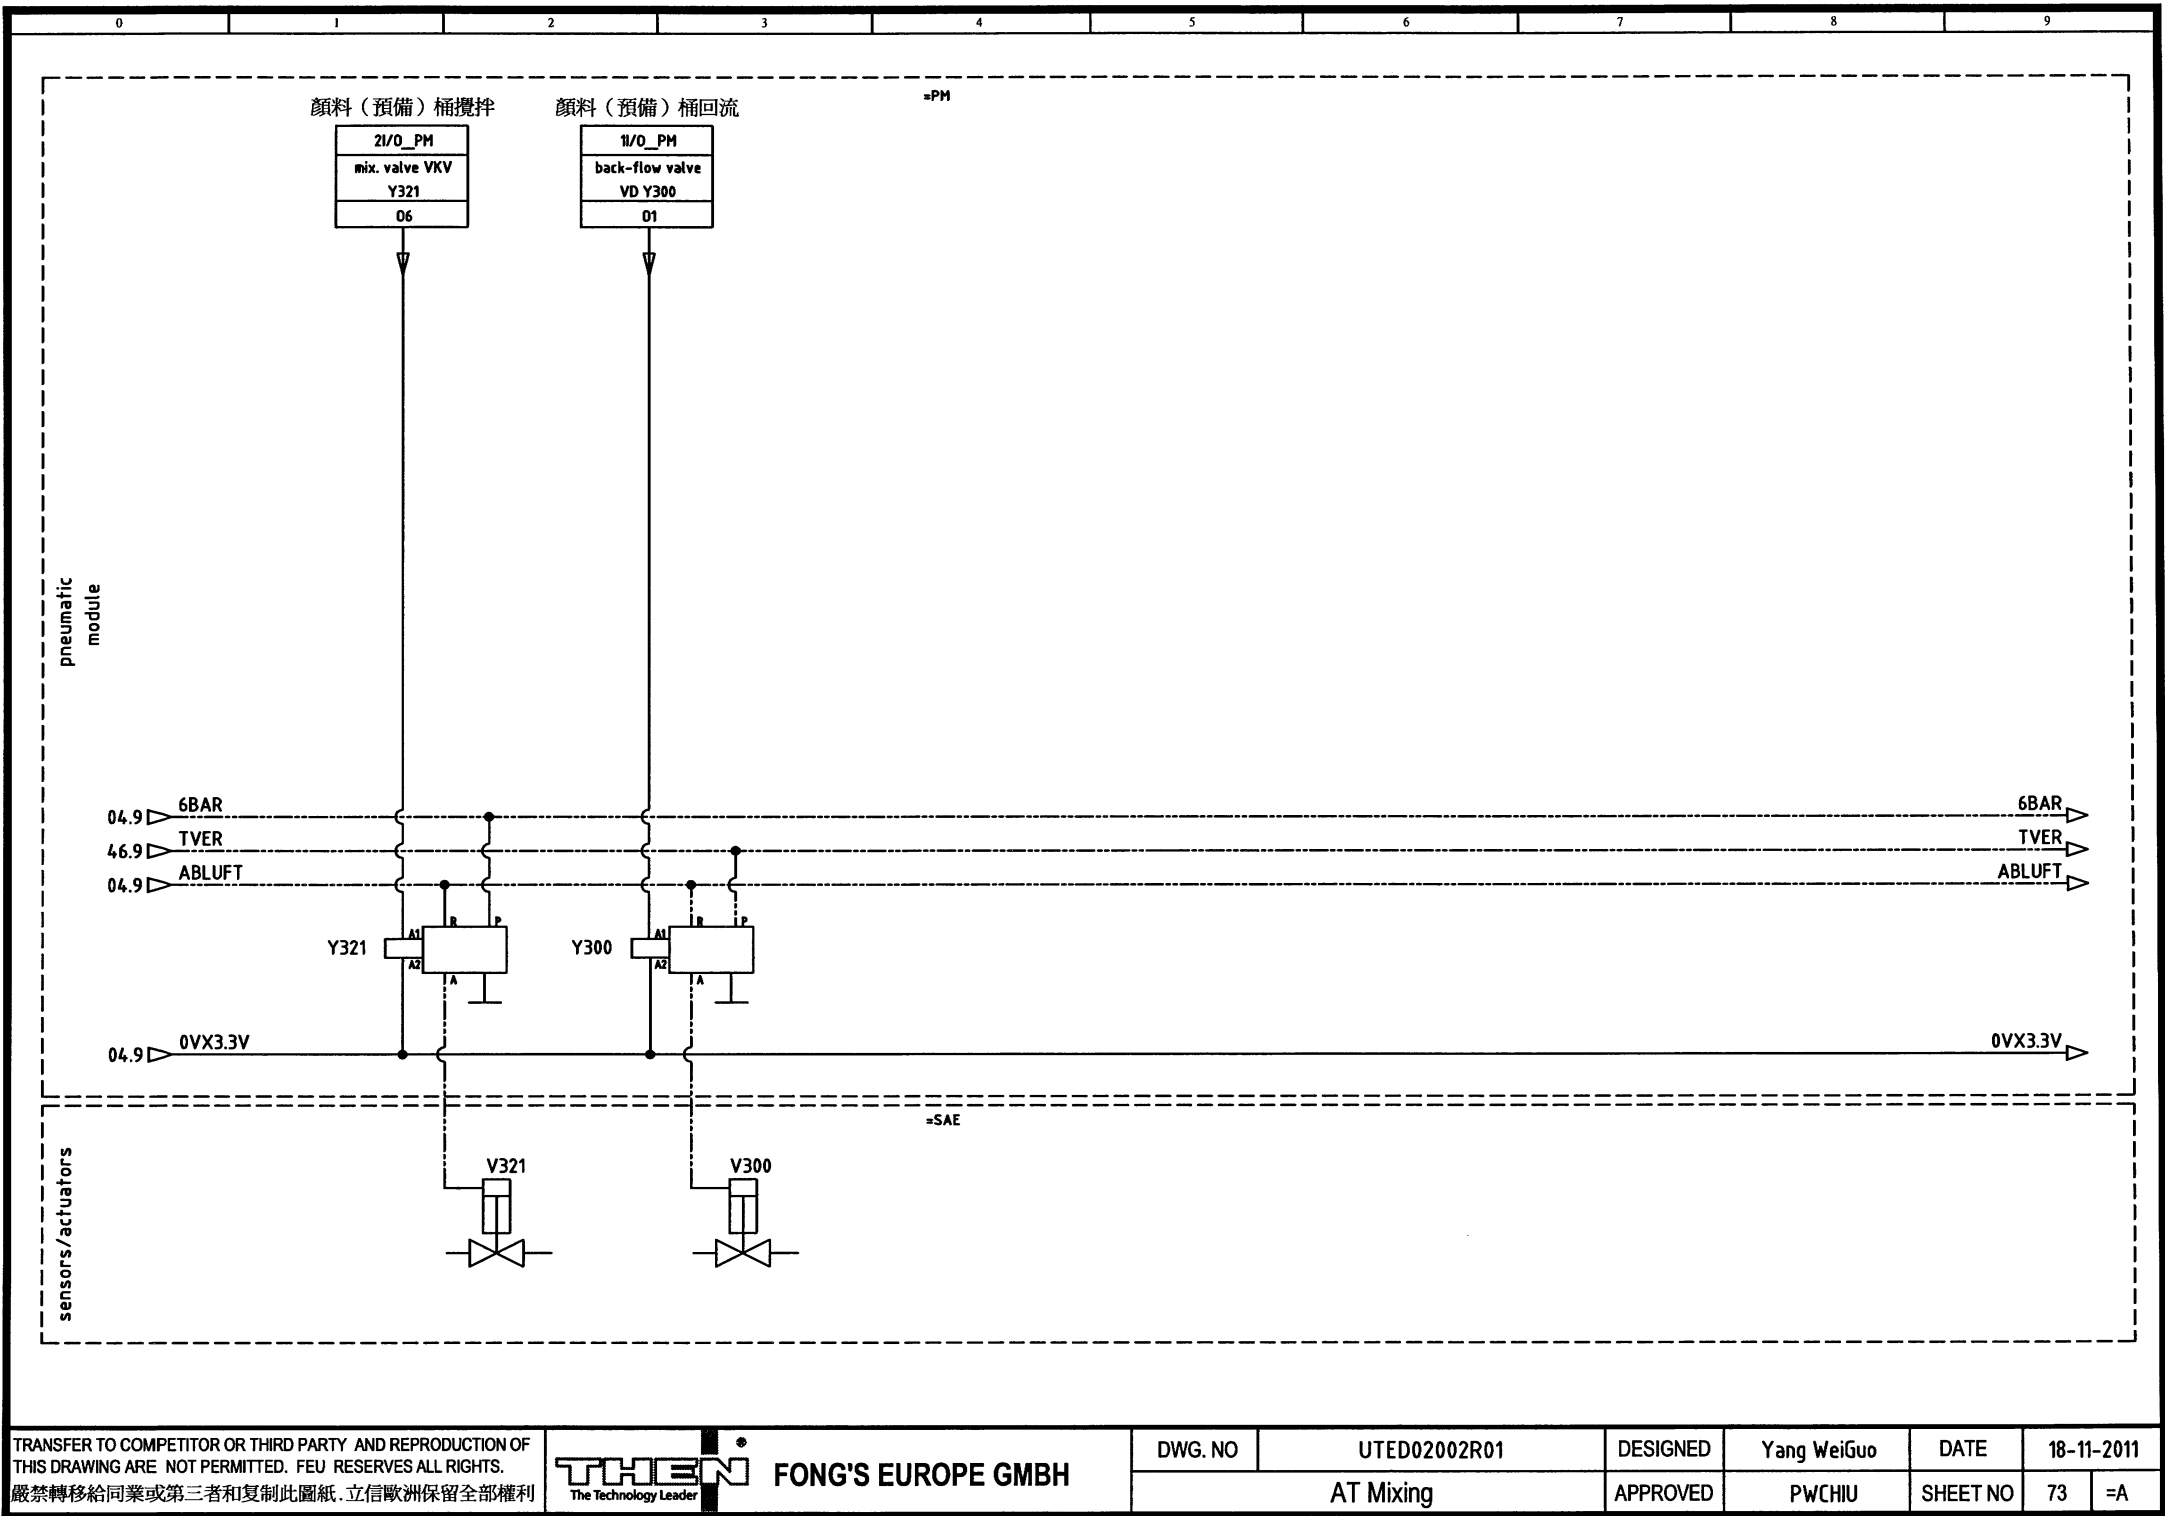
PWCHIU

SHEET NO

71

=A





TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.

嚴禁轉移給同業或第三者和复制此圖紙. 立信歐洲保留全部權利

THEN

The Technology Leader

FONG'S EUROPE GMBH

Terminal Description	COMP 1	PIN 1	WNUM 1	STRIP-ID	TERM	WNUM 2	PIN 2	COMP 2	REF	SH
FEED LINE 電源進線				L1					555	555
				PE	PE	PE		PE	3	01
	U010		PE	PE	PE				3	01
	PE		PE	PE	PE				3	01
STM Temperature									3	555
主控箱溫度電阻									555	555
	B0001				+		15	MCU	6	44
	B0001				-		PT100_X2	MCU	7	44
主電箱溫度電阻									555	555
HS Temperature									3	555
	B0000	1			X+		PT1	1ANA_HS	8	06
	B0000	2			X-		PT2	1ANA_HS	9	06
X1主電箱出線				X1					555	555
X1 HS Terminal				X1					3	555
	ML1	N		X1	1		3	S90.1	3	02
	U010	N	220VX1.2	X1	2				2	02
	T002		220VX1.2	X1	2		2	XB3.4	2	02
	ML2	L	220VX1.2	X1	2	220VX1.2		T002	3	02
				X1	3				7	13
				X1	3				3	17
				X1	3				2	25
				X1	3				3	07
				X1	3				5	06
				X1	3				2	21
				X1	3				2	13
	D051		U105.F	X1	3	0VX3.3			8	06
	X1	51	U105.F	X1	3	0VX3.3	55	U101	8	06
	U010	-	0VX3.3	X1	3		a	D051A	5	02
	N001	A2	0VX3.3	X1	3		1	XB3	5	02
	XB20	2	24VX1.4	X1	4				7	02
	N001	24	24VX1.4	X1	4		2	XB3	7	02
	XB6	3		X1	12		S12	N001	8	02
	F022	14		X1	1A		1	XB3.4	2	02
	F012	14		X1	30				0	02
	T002			X1	31		31	X1	1	02
	XB172	2	24VX3.31	X1	31		31	X1	4	45
	XB172	1		X1	32		24	K072	4	45
	N001	23		X1	4A		13	F016	7	02
	F015	14		X1	4C				5	02
	N001	A1		X1	4C		3	XB3	5	02
				X1	4D		5	XB20	6	02
	F017	13		X1	4D		4	XB3	6	02
	Y051	A1	U105.F	X1	51	U105.F	14	K051	9	06
	X1	3	U105.F	X1	51	U105.F	23	Q120	9	06
	U105	27		X1	60				6	13
	U131	27		X1	60		08	11/Q_HS	6	13
	S100.9	1		X1	416		4	XB3.2	8	02
	K7001	11		X1	417		1	XB3.2	8	02
	N001	S34		X1	418		2	XB3.2	8	02
	N001	42		X1	419		3	XB3.2	9	02
	X1	421		X1	420		4	XB5	4	02
	X1	420		X1	421		5	XB3.2	4	02
X3主線槽出線				X3					555	555
X3 STM Terminal				X3					3	555
	XB3.5	2	0VX3.2	X3	2				1	03
				X3	3	0VX3.3	IN3-	1ANA_STM	5	57
				X3	3	0VX3.3	3	X3	1	55
				X3	3	0VX3.3	3	X3	2	55
				X3	3	0VX3.3	A2	K100	9	52
				X3	3	0VX3.3	3		1	72
				X3	3	0VX3.3	1	XB20	1	04
				X3	3	0VX3.3	-	U010	5	02
	XB109	3	0VX3.3	X3	3	0VX3.3	3	X3	5	57
	XB1480	3	0VX3.3	X3	3	0VX3.3	3	X3	1	55
	XB163	3	0VX3.3	X3	3	0VX3.3	3	X3	2	55
	D100	a	0VX3.3	X3	3	0VX3.3	3	X3	9	52
	XB1380	3	0VX3.3	X3	3	0VX3.3	IN3-	1ANA_STM	1	72
	XB15.1	1		X3	3	0VX3.3		=MCU	1	04

Terminal Description	CMP 1	PIN 1	NUM 1	STRIP-ID	TERM	NUM 2	PIN 2	CMP 2	REF	SH
	Y050	A2		X3	3	0VX3.3	a	D050A	8	49
	D050	a		X3	3	0VX3.3	3	XB136	8	49
	XB3.1	1		X3	3	0VX3.3	A2	K004H	5	02
				X3	4		4	X3	4	57
				X3	4		EX_24V	11/0_STM	2	04
				X3	4		4	X3	2	55
				X3	4				7	72
	XB109	1	24VX3.4	X3	4		4	X3	4	57
	11/0_STM	13	24VX3.4	X3	4		4	X3	2	04
	XB163	1		X3	4		11	K100	2	55
	XB356	1		X3	4		4	X3	7	72
	XB3.1	2		X3	4		4	X3	7	02
	XB3.5	1	220VX3.1A	X3	1A				1	03
				X3	4C		4C	X3	3	49
				X3	4C		4C	X3	1	55
				X3	4C		4C	X3	7	70
				X3	4C				1	72
				X3	4C				3	49
	XB1131	1	24VX3.4C	X3	4C		1	XB1112	5	02
	XB3.1	3		X3	4C		3	S007	1	55
	XB1480	1	24VX3.4C	X3	4C		4C	X3	7	70
	XB1330	1	24VX3.4C	X3	4C		4C	X3	1	72
		1	24VX3.4C	X3	4C		4C	X3	2	04
		5		X3	4D	24VX3.4D	24V	1-2ANA_STM	555	555
	XB15.1	5		X3	4D	24VX3.4D	=MCU		3	555
	XB3.1	4	24VX3.4D	X3	4D	24VX3.4D	11	K014	8	45
	D050	b		X3	50		14	K050	8	49
	MLB2	L1		X3	90		14	S90.0	1	03
				X3	PE		PE	XB3.1	3	04
	XB15.1	PE		X3	PE		PE	XB3.5	3	04
	Y100	A1		X3	100				9	52
	D100	b		X3	100	1	14	K100	9	52
	XB15.1	3		X3	176		11	11/0_STM	5	46
	XB3.3	4		X3	416		2	S100	8	02
	XB3.3	1		X3	417		4	S700	8	02
	XB3.3	2		X3	418		3	S700	8	02
	XB3.3	3		X3	419		1	H700	9	02
	XB3.3	5		X3	421		1	S100	4	02
				X4					555	555
X4射燈控制盒出線				X4					3	555
X4 Illumination Terminal				X4			2	XB172	8	45
	H172.2	2		X4	31		31	X4	8	45
	H172.1	2		X4	31		2	XB172	6	45
	H172	2		X4	31		31	X4	4	45
				X4	32		1	XB172	7	45
	H172.2	1		X4	32		32	X4	7	45
	H172.1	1		X4	32		32	X4	5	45
	H172	1		X4	32		1	XB172	4	45
				X5					6	555
X5 BT1 Terminal				X5					555	555
X5 拾手箱BT1出線				X5					7	19
				X5	3		2	H278	7	15
				X5	3		2	H178	7	15
	B1162	2	0VX5.3	X5	3		2	H178	7	19
	B1160	2	0VX5.3	X5	3		0V	11/0_TBL	7	15
	11/0_TBL	EX_0V		X5	3		1	XB5.1	5	04
				X5	4		4	X5	6	19
				X5	4		4	X5	6	15
				X5	4		13	S278	7	19
				X5	4		13	S101	7	15
	B1162	1	24VX5.4	X5	4		13	S072	6	19
	B1160	1	24VX5.4	X5	4		EX_24V	11/0_TBL	6	15
	B1162	3	24VX5.4	X5	4		4	X5	7	19
	11/0_TBL	EX_24V		X5	4		2	XB5.1	5	04
	B1160	3	24VX5.4	X5	4		4	X5	7	15
	11/0_TBL	24V		X5	4D		5	XB5.1	6	04
	B1162	4		X5	B5		112	11/0_TBL	7	19
				X5	PE		PE	XB5.1	6	04
	XB5.1	4		X5	420		1	S100.1	4	02
	S100.1	2		X5	422		3	XB5.1	1	02

TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF
THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.
嚴禁轉移給同業或第三者和复制此圖紙。立信歐洲保留全部權利

Terminal Description	CMP 1	PIN 1	UNUM 1	STRIP-ID	TERM	UNUM 2	PIN 2	CMP 2	REF	SH
	XB5.1	5		XB5	5		5	XB20	6	04
				XB5	PE	PE		XB20	6	04
	XB5.1	PE		XB5	PE	PE		XB6	6	04
XB6主電箱對插				XB6					6	555
XB6 HS Plug (3-6T)				XB6					555	555
				XB6					6	04
	XB6.1	1		XB6	1	0VX3.3	1	XB7	6	04
				XB6	1	0VX3.3	1	XB5	6	04
				XB6	2	24VX1.4	2	XB7	7	04
	XB6.1	2		XB6	2	24VX1.4	2	XB5	7	04
	XB6.1	3		XB6	3		12	X1	4	02
	XB5	3		XB6	4		4	XB6.1	2	02
				XB6	5		5	XB7	7	04
	XB6.1	5		XB6	5		5	XB5	7	04
				XB6	PE	PE		XB7	7	04
	XB6.1	PE		XB6	PE	PE		XB5	7	04
XB7主電箱對插				XB7					6	555
XB7 HS Plug (5-6T)				XB7					555	555
				XB7					8	04
	XB7.1	1		XB7	1	0VX3.3	1	XB6	8	04
				XB7	1	0VX3.3	0V	1~2ANA_STM	8	04
				XB7	2	24VX1.4	2	XB6	8	04
	XB7.1	2		XB7	2	24VX1.4	EX_24V	1~2I/O_HS	8	04
				XB7	5		5	XB6	8	04
	XB7.1	5		XB7	5		24V	1ANA_HS	8	04
				XB7	PE	PE		XB6	8	04
	XB7.1	PE		XB7	PE	PE		M102	8	04
X102 HS to inverter Te				X102					6	555
X102主電箱去風機變頻器				X102					555	555
	U102	32		X102	1		01	1I/O_HS	2	06
	U102	19		X102	2		02	1I/O_HS	2	06
				X102	3		b	D051A	3	06
	U102	18		X102	3		03	1I/O_HS	3	06
	U102	02		X102	4		11	1I/O_HS	3	06
	U102	05		X102	5		12	1I/O_HS	3	06
				X102	6	24VX1.4	11	K051	5	06
	U102	01	24VX1.4	X102	6	24VX1.4	EX_24V	1~2I/O_HS	5	06
	U102	53		X102	7		OUT1+	1ANA_HS	5	06
	X102	10	U105.F	X102	8	U105.F	IN1-	1ANA_HS	6	06
	U102	X31/1	U105.F	X102	8		IN1+	1ANA_HS	6	06
	U102	42		X102	9				6	06
	K051	A2	0VX3.3	X102	10				4	06
	1~2I/O_HS	COM2	0VX3.3	X102	10	U105.F	8	X102	4	06
	S106	3		X106	1		IN2	N106	5	41
	S106B	3		X106	2		IN1	N106	6	41
	D106M	a	0VX3.3	X106	3				6	41
	K106BM	A2	0VX3.3	X106	3		4	S106B	6	41
	N106	0V	0VX3.3	X106	3				5	41
	D108	a	0VX3.3	X106	3		4	S106	5	41
				X106	4	24VX1.4	11	K106	9	41
	X106	4	24VX1.4	X106	4	24VX1.4	4	X106	9	41
	D106AM	b		X106	5				8	41
	K106AM	A1		X106	5		22	K106BM	8	41
	N106	D2		X106	6		X2	H106	5	41
XB15 PMI Plug				XB15					3	555
XB15風動箱PMI對插				XB15					555	555
	X15	3		XB15	1				1	04
	Y178	A2		XB15	1		1	XB15.1	1	04
	Y178	A1		XB15	2		2	XB15.1	2	04
	X15	176		XB15	3		3	XB15.1	5	46
	X15	4D		XB15	5		5	XB15.1	2	04
	X15	PE		XB15	PE		PE	XB15.1	3	04
XB16風動箱PMI對插				XB16					555	555
XB16 PMI Plug				XB16					3	555
	X16	3		XB16	1				6	04
	X15	3		XB16	1		1	XB16.1	6	04
	X16	4		XB16	2				6	04
	X15	4		XB16	2		2	XB16.1	6	04
	X15	4D		XB16	5		5	XB16.1	6	04
	X16	5		XB16	5		5	XB16.1	6	04

Terminal Description	CHP 1	PIN 1	UNUM 1	STRIP-ID	TERM	UNUM 2	PIN 2	CHP 2	REF	SH
XB20主電箱對插	X15	PE		XB16	PE		PE	XB16.1	6	04
XB20 HS Plug				XB20					6	555
				XB20					555	555
				XB20	1	0VX3.3	1	XB5	4	04
				XB20	1	0VX3.3	3	XB5	4	04
				XB20	2	24VX1.4	2	XB5	4	04
				XB20	2	24VX1.4	4	X1	4	04
				XB20	5		5	XB5	5	04
				XB20	5		4D	X1	5	04
				XB20	PE	PE	PE	XB3.4	5	04
				XB20	PE	PE	PE	XB5	5	04
XB172 Illumination Plug				XB172					555	555
XB172射燈對插				XB172					6	555
	X4	32		XB172	1				4	45
	X4	32		XB172	1		32	X1	4	45
	X4	31		XB172	2				4	45
	X4	31		XB172	2	24VX3.31	31	X1	4	45
XB3.1 STM Plug				XB3.1					3	555
XB3.1主控箱對插				XB3.1					555	555
	XB3	1		XB3.1	1		3	XB3	5	02
	XB3	2		XB3.1	2		4	XB3	7	02
	XB3	3		XB3.1	3		4C	XB3	5	02
	XB3	4		XB3.1	4	24VX3.4D	4D	XB3	6	02
	X3	PE		XB3.1	PE		PE	XB3	3	04
XB3.2 HS Plug				XB3.2					555	555
XB3.2主電箱對插				XB3.2					6	555
	X1	417		XB3.2	1		1	XB3.3	8	02
	X1	418		XB3.2	2		2	XB3.3	8	02
	X1	419		XB3.2	3		3	XB3.3	9	02
	X1	416		XB3.2	4		4	XB3.3	8	02
	X1	421		XB3.2	5		5	XB3.3	4	02
				XB3.2	PE	PE	PE	XB3	3	04
XB3.3 STM Plug				XB3.2	PE	PE			3	04
XB3.3主控箱對插				XB3.3					3	555
				XB3.3					555	555
	XB3.2	1		XB3.3	1		417	XB3	8	02
	XB3.2	2		XB3.3	2		418	XB3	8	02
	XB3.2	3		XB3.3	3		419	XB3	9	02
	XB3.2	4		XB3.3	4		416	XB3	8	02
	XB3.2	5		XB3.3	5		421	XB3	4	02
	XB3.5	PE		XB3.3	PE		PE	XB3.2	3	04
XB3.4 HS Plug				XB3.4					6	555
XB3.4主控箱對插				XB3.4					555	555
	X1	1A		XB3.4	1		1	XB3.5	2	02
	X1	2		XB3.4	2		2	XB3.5	2	02
				XB3.4	PE	PE	PE	XB20	4	04
	XB3.5	PE		XB3.4	PE	PE	PE	XB3	4	04
XB3.5 STM Plug				XB3.5					3	555
XB3.5主控箱對插				XB3.5					555	555
	XB3.4	1		XB3.5	1	220VX3.1A	1A	XB3	2	02
	XB3.4	2		XB3.5	2	0VX3.2	2	XB3	2	02
	XB3.3	PE		XB3.5	PE				4	04
	X3	PE		XB3.5	PE		PE	XB3.4	4	04
XB3.7 STM Plug				XB3.7					1	555
XB3.7主控箱對插				XB3.7					0	555
XB5.1 BT1 Plug				XB5.1					555	555
XB5.1揸手箱BT1對插				XB5.1					6	555
	X5	3		XB5.1	1		1	XB5	5	04
	X5	4		XB5.1	2		2	XB5	5	04
	X5	422		XB5.1	3		3	XB5	1	02
	XB5	4		XB5.1	4		420	X5	4	02
	X5	4D		XB5.1	5		5	XB5	6	04
	X5	PE		XB5.1	PE		PE	XB5	6	04
XB6.1揸手箱BT2對插				XB6.1					6	555
XB6.1 BT2 Plug (3-6T)				XB6.1					555	555
	X6	3		XB6.1	1		1	XB6	6	04
	X6	4		XB6.1	2		2	XB6	7	04
	SI00.2	2		XB6.1	3		3	XB6	4	02

Terminal Description	CMP 1	PIN 1	UNUM 1	STRIP-ID	TERM	UNUM 2	PIN 2	CMP 2	REF	SH
	XB6	4		XB6.1	4		1	S100.2	3	02
	X6	4D		XB6.1	5		5	XB6	7	04
	X6	PE		XB6.1	PE		PE	XB6	7	04
XB7.1拾手箱BT3對插				XB7.1					6	555
XB7.1 BT3 Plug (5-6T)				XB7.1					555	555
	X7	3		XB7.1	1		1	XB7	8	04
	X7	4		XB7.1	2		2	XB7	8	04
	X7	4D		XB7.1	5		5	XB7	8	04
	X7	PE		XB7.1	PE		PE	XB7	8	04
XB15.1 STM Plug				XB15.1					3	555
XB15.1主控箱對插				XB15.1					555	555
	XB15	1		XB15.1	1		3	X3	1	04
	XB15	2		XB15.1	2				2	04
	XB15	3		XB15.1	3		176	X3	5	46
	XB15	5		XB15.1	5		4D	X3	2	04
	XB15	PE		XB15.1	PE		PE	X3	3	04
XB16.1 PM2 Plug				XB16.1					3	555
XB16.1風動箱PM2對插				XB16.1					555	555
	XB16	1		XB16.1	1		3	X16	7	04
	XB16	2		XB16.1	2		4	X16	7	04
	XB16	5		XB16.1	5		5	X16	7	04
	XB16	PE		XB16.1	PE		PE	X16	7	04
XB20.1 SM Plug				XB20.1					555	555
XB20.1雙槽箱對插				XB20.1					6	555

legend

Q001	250A
L001	power throttle 120KW
U101	inverter 11KW 23A
U102	inverter 90KW 167A
U105	inverter 0,75KW 1.92A
U131	inverter 1.5KW 3.7A
U132~4	inverter 1.5KW 3.7A
K004M	contactor
K302M	contactor
K301M	contactor
K108M	contactor
K122M	contactor
K120M	contactor
Q008	6A
Q131	10A
Q132~4	10A
Q302	6.75A
Q301	1.92A

Q108	0.82A
Q122	8.8A
Q120	0.65A
F003	32A
F004	40A
F005	25A
F010	6A
F012	6A
F015	2A
F016	6A
F017	6A
F022	6A
U010	10A
N001	emergency- cut-off
T002	Trennverstärker

0	1	2	3	4	5	6	7	8	9
---	---	---	---	---	---	---	---	---	---

INVERTER PARAMETER SETTING #1

U102			U102		
PARAMETER NO.	SETUP 1 (OPEN LOOP) SETTING(U102) FC300	SETUP 2 (PROCESS) SETTING(U102) FC300	PARAMETER NO.	SETUP 1 (OPEN LOOP) SETTING(U102) FC300	SETUP 2 (PROCESS) SETTING(U102) FC300
540.0 Function Relay	Alarm	Alarm	002 Motor speed unit	Hz	Hz
540.1 Function Relay	VLT running	VLT running	010 Active set-up	Multi set-up	Multi set-up
612 Terminal 53 Low Current	4	4	011 Edit set-up	Active set-up	Active set-up
615 Terminal 53 High Ref./Feedb. Value	100	100	012 This set-up linked to	Set-up 2	Set-up 1
631 Term. X30/11 High Voltage	10	9.5	040 [Hand on] Key on LCP	Disabled	Disabled
636 Term. X30/11 Filter Time Constant	0.01	7	042 [Auto on] Key on LCP	Disabled	Disabled
650 Terminal 42 Output	Max Output Freq	Max Output Freq	100 Configuration mode	Speed open loop	Process
652 Terminal 42 Output Max Scale	100	100	103 Torque characteristics	Variable torque	Variable torque
720 Process CL Feedback 1 Resource		X30/11	120 Motor power [KW]	Pe (KW)	Pe (KW)
732 Process PID Start Speed		1400	122 Motor voltage	Ue (V)	Ue (V)
733 Process PID Proportional Gain		0.75	123 Motor frequency	fe (Hz)	fe (Hz)
734 Process PID Integral Time		3.0	124 Motor current	Ie (A)	Ie (A)
735 Process PID differentiation Time		0.04s	125 Motor nominal speed	n (rpm)	n (rpm)
			190 Motor thermal protection	Thermistor trip	Thermistor trip
			193 Thermistor resource	Analog input 54	Analog input 54
			210 Brake function	Off	Off
			217 Over-voltage control	Enabled (not at stop)	Enabled (not at stop)
			300 Reference range	Min - Max	Min - Max
			301 Reference/Feedback unit	Hz	%
			303 Maximum reference	50	100
			341 Ramp 1 ramp up time		
			342 Ramp 1 ramp down time		
			413 Motor Speed High Limit [RPM]	3300	3300
			414 Motor Speed High Limit [Hz]	55	55
			416 Torque Limit Motor Mode	110	110
			510 Terminal 18 Digital Input	Start	Start
			511 Terminal 19 Digital Input	Reset	Reset
			512 Terminal 27 Digital Input	No operation	No operation
			514 Terminal 32 Digital Input	Set-up select bit 0	Set-up select bit 0
			515 Terminal 33 Digital Input	Set-up select bit 1	Set-up select bit 1

NOTE:

#1 THE OTHER PARAMETERS MUST BE SET TO THEIR DEFAULT VALUE.

#2 SET 103/122 TO THE MOTOR NAME-PLATE RATE VOLTAGE VALUE.

#3 SET 104/123 ACCORDING TO THE MOTOR RATE FREQUENCY.

#4 SET 105/124 TO THE MOTOR NAMEPLATE FULL LOAD AMPS.

#5 SET 106/125 TO THE MOTOR NAMEPLATE RATE SPEED.

#6 SET 120 TO THE MOTOR NAMEPLATE POWER

	U101	U131-U134	U105
PARAMETER NO.	VLT2800	VLT2800	VLT2800
013 Local control	2	2	2
014 Local stop	0	0	0
101 Torque characteristic	3		
103 Motor voltage	Ue (V)	Ue (V)	Ue (V)
104 Motor frequency	fe (Hz)	fe (Hz)	fe (Hz)
105 Motor current	Ie (A)	Ie (A)	Ie (A)
106 Rated motor speed	n (rpm)	n (rpm)	n (rpm)
128 Thermal motor protection	2	4	4
200 Output frequency range		1	0
201 Output frequency low limit	0(Hz)	0(Hz)	0(Hz)
202 Output frequency high limit	55(Hz)	77(Hz)	55(Hz)
204 Minimum reference	0(Hz)	0(Hz)	0(Hz)
205 Maximum reference	50(Hz)	77(Hz)	20(Hz)
207 Ramp-up time	10 S	4.0 S	4 S
208 Ramp-down time	10 S	4.5 S	4.5 S
221 Current limit			
303 Reverse terminal 19 action	25	10	0
304 Reset terminal 27 action	1	1	1
308 Voltage terminal 53 analog input	0	0	0
309 Terminal 53 Min. scaling	0V		
310 Terminal 53 Max. scaling	10V		
314 Current terminal 60 analog input	1	1	1
315 Terminal 60 Min. scaling	4mA	4mA	4mA
316 Terminal 60 Max. scaling	20mA	20mA	20mA
323 Relay output 1-3	19	19	19
341 Digital output terminal 46	3		
409 Trip delay overcurrent	59 S	59 S	59 S
018 Lock for data changes	1	1	1

#2

#3

#4

#5

#6

#2

#3

#4

#5

TRANSFER TO COMPETITOR OR THIRD PARTY AND REPRODUCTION OF THIS DRAWING ARE NOT PERMITTED. FEU RESERVES ALL RIGHTS.

嚴禁轉移給同業或第三者和复制此圖紙，立信歐洲保留全部權利



FONG'S EUROPE GMBH

DWG. NO

UXLA00379R01

DESIGNED

Yang WeiGuo

DATE

05-06-2012

Inverter parameter

APPROVED

PWCHIU

SHEET NO

10

=LIB

List for parameter setting menu for a glance: #1

Fct. No.	Text	Description	Setting
C1.1.2	Size	Select from size table	#2
C1.1.13	Field frequency	Setting as on measuring sensor nameplate	1/6
C1.1.16	Line frequency	Set line frequency	50Hz/60Hz
C1.2.2	Flow direction	Define polarity of flow values	#2
C1.2.3	Time constant	For all flow measurements and outputs	0.2Sec
C2.1	Hardware	Terminal A	Current output
C2.2.1	Range 0%--100%	Current range	0--20mA
C2.2.5	Measurement	Measured variables	Volume flow
C2.2.6	Range	0--100% of the measured variable	#2
C2.2.9	Low flow cutoff	Sets output value to "0"	ON(1%) ,OFF(2%)
C2.2.10	Time constant	For all flow measurements and outputs	0.02Sec
C5.7.1	Volume flow	Volume flow	l/min
C5.7.4	Mass flow	Mass flow	kg/min
C5.7.7	Flow speed	Flow speed	m/s
C5.7.10	Volume	Volume	l
C5.8.1	HART	Switch HART communication on/off	off

NOTE:
#1 The other parameters must be set to their default value
其它的參數設置為默認值
#2 Set according to the fact
按照實際設定

