


Embedded systems exp 8

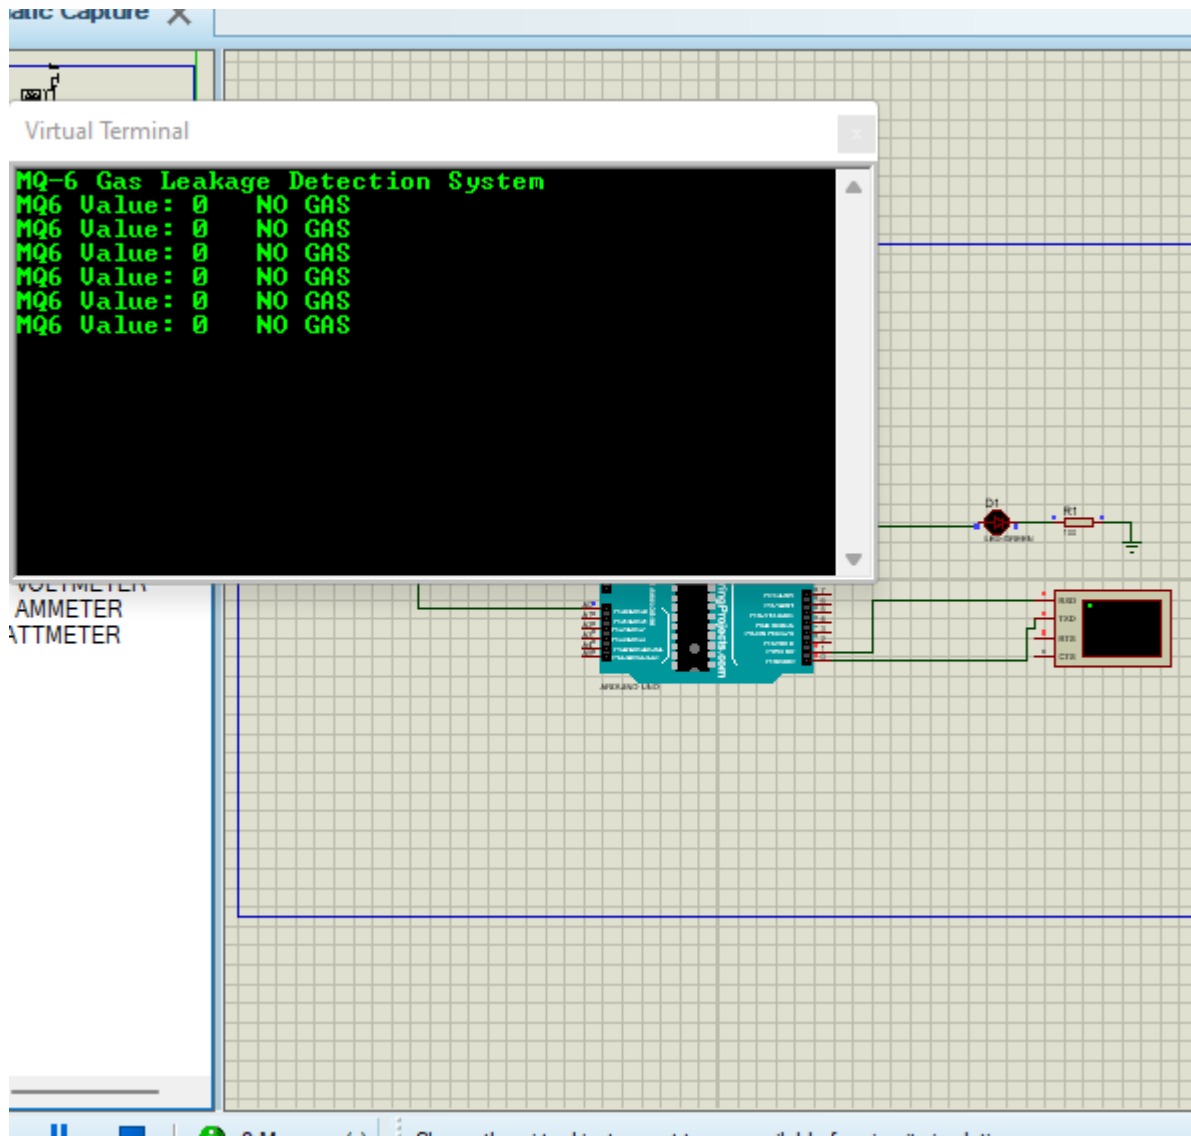

Program

```
#define MQ6 A0
#define LED 13

const int threshold = 600;

void setup()
{
    pinMode(LED, OUTPUT);
    pinMode(MQ6, INPUT);

    Serial.begin(9600);
```

```
    Serial.println("MQ-6 Gas Leakage Detection System");
}

void loop()
{
    int gasValue = analogRead(MQ6);

    Serial.print("MQ6 Value: ");
    Serial.print(gasValue);

    if (gasValue >= threshold)
    {
        digitalWrite(LED, HIGH);
        Serial.println("    GAS DETECTED");
    }
    else
    {
        digitalWrite(LED, LOW);
        Serial.println("    NO GAS");
    }

    delay(500);
}
```