


EMBEDDED SYSTEMS EXP11(KEIL)

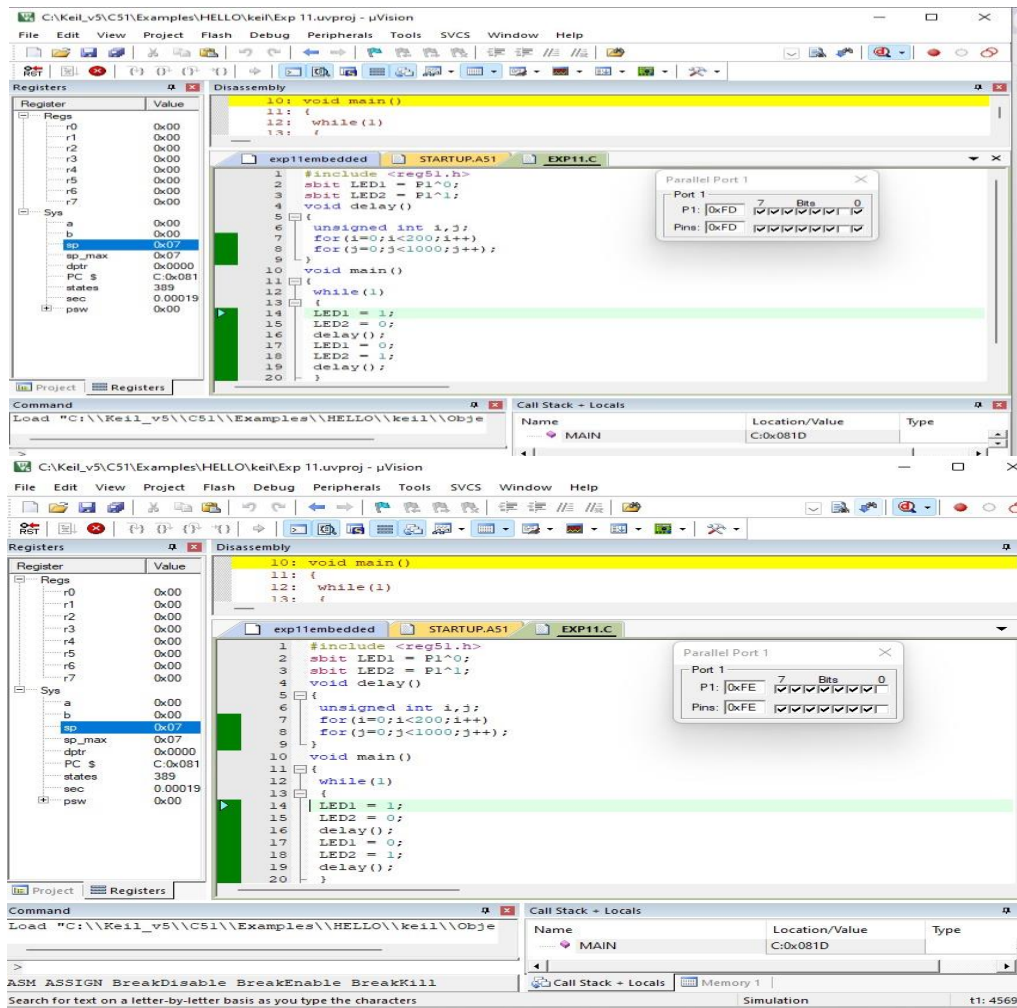

PROGRAM

```
#include <reg51.h>

sbit LED1 = P1^0;
sbit LED2 = P1^1;

void delay()
{
    unsigned int i, j;
    for(i = 0; i < 200; i++)
    {
        for(j = 0; j < 1000; j++);
    }
}
```

```
    }  
}  
void main()  
{  
    while(1)  
    {  
        LED1 = 1;    // Turn ON LED1  
        LED2 = 0;    // Turn OFF LED2  
        delay();  
        LED1 = 0;    // Turn OFF LED1  
        LED2 = 1;    // Turn ON LED2  
        delay();  
    }  
}
```