

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-1 Forward Observer Seat (including associated equipment)****25-10-1-1**

Interval	Installed	Required	Procedure
B	1	0	(M)

May be inoperative provided the seat is removed, stowed, or secured in the retracted position.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Forward Observer Seat must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Forward Observer Seat.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-1 Forward Observer Seat (including associated equipment)****25-10-1-2**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative provided:

- The seat is not required to be occupied in an official capacity for extended periods of time, and
- The seat is removed, stowed, or secured in the retracted position.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Forward Observer Seat must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

- Placard inoperative Forward Observer Seat.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-10-2 Pilot's Seat Adjustments****25-10-2-1 Vertical Mode Adjustment**

Interval	Installed	Required	Procedure
C	2	0	(M#)

Vertical adjustment may be inoperative provided the seat is secured in a position, which meets individual pilot requirements.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Vertical Mode must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Vertical adjustment metering pins are spring loaded to engage and lock in metering holes in vertical seat tubes. To adjust seat, manually unseat metering pins and position seat to desired height. Vertical adjustment metering pins will engage in vertical seat tubes and lock.
2. Have crew member sit in seat and adjust vertical position to desired height.
3. Repeat steps (1) and (2) as required to achieve desired seat adjustment.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-2 Pilot's Seat Adjustments****25-10-2-2 Fore/Aft Mode**

Interval	Installed	Required	Procedure
B	2	0	(M#)

Fore/aft adjustment may be inoperative provided the seat is secured in a position, which meets individual pilot requirements.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Fore/aft Mode must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Fore/aft adjustment metering pins are spring loaded to engage and lock in metering holes in the seat rails. To adjust, manually unseat pins and position seat to desired location. Fore/aft metering pins will lock in place.
2. Have crew member sit in seat and adjust fore/aft position to desired location.
3. Repeat steps (1) and (2) as required to achieve desired seat adjustment.
4. Placard inoperative seat in flight compartment.
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-2 Pilot's Seat Adjustments****25-10-2-3 Crew Armrests**

Interval	Installed	Required	Procedure
C	4	0	(M#)

May be inoperative provided the armrest(s) is (are) removed from the seat.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Crew Armrest(s) must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Remove inoperative crew armrest from the seat.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-2 Pilot's Seat Adjustments****25-10-2-4 Lumber Support**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative in the lowest position provided the seat is acceptable to the affected crew member.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Lumber Support must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative or damaged lumber support in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-2 Pilot's Seat Adjustments****25-10-2-5 Lumbar Support Padding**

Interval	Installed	Required	Procedure
D	2	0	NIL

May be worn or damaged if acceptable to the affected crew member.

Minimum Equipment List Procedures (MELP)**Placard**

Damaged Lumbar Support padding must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative or damaged lumbar support in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-2 Pilot's Seat Adjustments****25-10-2-6 Recline Mechanism**

Interval	Installed	Required	Procedure
B	2	0	(M#)

May be inoperative provided backrest is secured in a position acceptable to the affected crew member.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative recline mechanism must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Recline adjustment metering pins are spring loaded to engage and lock in metering holes. To adjust back rest of seat manually unseat pins and adjust to desired angle of recline. Recline adjustment metering pins will lock in place.
2. Have crew member sit in seat and adjust desired angle of recline.
3. Repeat steps (1) and (2) as required to achieve desired seat adjustment.
4. Placard inoperative seat in flight compartment.
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-2. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-3 Pilot's Seat Heaters****25-10-3-1**

Interval	Installed	Required	Procedure
D	2	1	(M#)

May be inoperative provided the affected Heater is deactivated.

NOTE: Applicable only for VT-SUQ.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Seat Heater(s) must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Open and clip the Right Secondary Bus circuit breaker "FLT CREW SEAT HTRS" on the Right DC Circuit Breaker Panel.
2. Disconnect, cap and stow appropriate connector (2511-P1 for the pilot's seat and 2511-P2 for the co-pilot's seat).
3. Reset circuit breaker.
4. Placard the affected seat "SEAT HEATER INOP" in the Flight Compartment.
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-10-3 Pilot's Seat Heaters****25-10-3-2**

Interval	Installed	Required	Procedure
D	2	0	(M)

May be inoperative provided the affected Heater is deactivated.

NOTE: Applicable only for VT-SUQ.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Seat Heater(s) must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Open and clip the Right Secondary Bus circuit breaker "FLT CREW SEAT HTRS" on the Right DC Circuit Breaker Panel.
2. Placard the affected seat "SEAT HEATER INOP" in the flight compartment.
3. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-10-3. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-1 Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF)****25-20-1-1 Passenger Convenience Items**

Interval	Installed	Required	Procedure
	-	0	NIL

May be inoperative, damaged or missing provided that the item(s) is (are) deferred in accordance with the SpiceJet's Cabin Deferred Defect Policy.

NOTE:

1. Exterior lavatory door ash tray is not considered a convenience item.
2. Galley equipment restraining devices such as latches, etc. must be serviceable or the compartment must not be used for storage and placarded "INOPERATIVE - DO NOT USE".
3. Movie equipment individual screens, if applicable, must be capable of being stowed.
4. Audio or audio-visual entertainment equipment which is used as the sole means of providing safety briefings and demonstrations is not considered a passenger convenience item.
5. Items considered to be PCI are: PAX window blinds, Galley/Wardrobe Inserts, PSU Reading Lights/Louvre, Food Tray, Magazine Pocket, and Armrest Cover.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF) must be placarded.

Operating Procedures

None required.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-1. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

**25-20-1 Passenger Convenience Items / Non-Essential
Equipment and Furnishings (NEF)**

25-20-1-1 Passenger Convenience Items

Maintenance Procedures

1. Placard appropriate inoperative Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF).
2. To be developed by operator, as necessary, such that relevant safety standards are maintained.
3. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-1 Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF)****25-20-1-2 Non-Essential Equipment and Furnishings (NEF)**

Interval	Installed	Required	Procedure
	-	0	NIL

May be inoperative, damaged or missing provided that the item(s) is (are) deferred in accordance with the SpiceJet's Cabin Deferred Defect Policy.

NOTE:

1. Exterior lavatory door ash trays are not considered NEF items.
2. Items considered to be NEF are: LAV Soap Dispenser/Paper Holder, Cabin Trim Panels and Passenger to Attendant Call System.
3. Items addressed elsewhere in the MEL document cannot be considered for NEF relief.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF) must be placarded.

Operating Procedures

To be developed by operator, as necessary, such that relevant safety standards are maintained.

*(...Continued)***25-20-1 Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF)**

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-1. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-20-1-2

Non-Essential Equipment and Furnishings (NEF)

Maintenance Procedures

1. Placard appropriate inoperative Passenger Convenience Items / Non-Essential Equipment and Furnishings (NEF).
2. To be developed by operator, as necessary, such that relevant safety standards are maintained.
3. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-1. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2A**

Interval	Installed	Required	Procedure
C	38/40	-	(M)

May be inoperative provided:

- Procedures are established to secure bins/compartments/closets CLOSED,
- Associated bin/compartment/closet is prominently placarded "INOPERATIVE – DO NOT USE",
- Any emergency equipment located in affected bin/compartment/closet is considered inoperative, and
- Affected bin/compartment/closet is not used for storage of any item(s) except for those permanently affixed.

NOTE:

- If no partitions are installed, the entire overhead storage compartment is considered to be one bin or compartment.
- An inoperative door/lid latch renders the door/lid inoperative.
- Required quantity of emergency equipment must be observed.
- Qty 40 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative overhead, cabin and galley storage bins/compartments and closets must be placarded. If items affixed on doors are moved, placarded the old location and new location indicating moved equipment.

Operating Procedures

None required.

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

(...Continued)

25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets

25-20-2A

Maintenance Procedures

1. Placard inoperative overhead storage bins, cabin or galley storage compartment/closets "INOPERATIVE – DO NOT USE".
2. Ensure storage bin/compartment/closet is empty other than those items permanently affixed and secure bin/compartment/closet door/lid in closed position.
3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2B**

Interval	Installed	Required	Procedure
C	38/40	-	(M)(O)

May be inoperative provided:

- Affected bin/compartment/closet door(s) is (are) removed,
- Associated bin/compartment/closet is not used for storage of any item(s), except for those permanently affixed,
- Items located on removed doors/lids are relocated to the nearest feasible location and their original and new location are placarded.
- Associated bin/compartment/closet is prominently placarded "INOPERATIVE – DO NOT USE",
- Procedures are established and used to alert crew members and passengers of inoperative bins/compartments/closets, and
- Passengers are briefed that associated bin/compartment/closet is not used.

NOTE:

- If no partitions are installed, the entire overhead storage compartment is considered to be one bin or compartment.
- Any emergency equipment located in the associated compartment (permanently affixed) is available for use.
- An inoperative door/lid latch renders the door/lid inoperative.
- Qty 40 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative overhead, cabin and galley storage bins/compartments and closets must be placarded. If items affixed on doors are moved, placard the old location and new location indicating moved equipment.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2B****Operating Procedures**

Procedures are established and used to alert crew members and passengers of inoperative bins, compartments or closets, relocated equipment, and passengers are briefed that affected bins, compartments or closets are not to be used.

Maintenance Procedures

1. Remove overhead storage bin, cabin or galley storage compartment/closet door/lid.
2. Ensure storage bin/compartment/closet is empty other than those items permanently affixed.
3. If there is any equipment (Emergency or otherwise) that is affixed on the door / lid that is being removed:
 - a) Relocate the equipment to the nearest feasible location for which that emergency equipment was meant for,
 - b) Make sure equipment is secured in a manner as to allow easy removal and access.
 - c) Placard the original location area where the equipment has been relocated to,
 - d) Placard the new location indicating the availability of the relocated equipment.
4. Placard inoperative overhead storage bins, cabin or galley storage compartments/closets "INOPERATIVE – DO NOT USE".
5. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-1 Quarter Turn Latches/Fasteners****25-20-2-1A**

Interval	Installed	Required	Procedure
C	-	-	(O)

Bin/compartments/closet with multiple latches/fasteners may have one inoperative provided:

- The remaining latch(es) on affected bin/compartments/closet operates normally, and
- Inoperative latch/fastener is placarded "INOPERATIVE".

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative latch/fastener.

Operating Procedures

Procedures are established and used to alert crew member of an inoperative latch and to inform them to exercise extra care in latching / unlatching compartments with mobile / loose galley equipment / trolleys. Inoperative latch should be / remain in unlatched position if utilizing the associated bin / latch / closet.

Maintenance Procedures

- Placard inoperative latch / fastener, "INOPERATIVE".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-1 Quarter Turn Latches/Fasteners****25-20-2-1B**

Interval	Installed	Required	Procedure
C	-	-	(O)

More than one latch, or all latches on a bin/compartments/closet may be inoperative provided:

- Affected bin/compartments/closet is not used for storage of any items except for those permanently affixed,
- Affected bin/compartments/closet is permanently placarded "INOPERATIVE – DO NOT USE", and
- Procedures are established and used to alert crew members and passengers of inoperative bins/compartments/closets.

Minimum Equipment List Procedures (MELP)**Placard**

Bin/compartments/closet with more than one of its latch(es) inoperative must be placarded.

Operating Procedures

Procedures are established and used to alert crew members of inoperative bins, compartments or closets, and are briefed that affected bins, compartments or closets are not to be used, including storage of trolley / galley carts.

Maintenance Procedures

- Placard inoperative bin / compartment / closet, "INOPERATIVE – DO NOT USE".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-2 Storage Compartment Key Locks**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative in the unlocked position provided doors can be secured by other means.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

1. Procedures are established and used to secure bin, compartment or closet with an inoperative key lock by other means.
2. Verify that security of storage compartment is not degraded considerably when utilizing alternate means. Otherwise, any equipment required to be behind lock and key must be either relocated or another secure location or removed.
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2A**

Interval	Installed	Required	Procedure
C	38/40	-	(M)

May be inoperative provided:

- Procedures are established to secure bins/compartments/closets CLOSED,
- Associated bin/compartment/closet is prominently placarded "INOPERATIVE – DO NOT USE",
- Any emergency equipment located in affected bin/compartment/closet is considered inoperative, and
- Affected bin/compartment/closet is not used for storage of any item(s) except for those permanently affixed.

NOTE:

- If no partitions are installed, the entire overhead storage compartment is considered to be one bin or compartment.
- An inoperative door/lid latch renders the door/lid inoperative.
- Required quantity of emergency equipment must be observed.
- Qty 40 will be installed for aircraft VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative overhead, cabin and galley storage bins/compartments and closets must be placarded. If items affixed on doors are moved, placarded the old location and new location indicating moved equipment.

Operating Procedures

None required.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 1



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

**25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets**

25-20-2A

Maintenance Procedures

1. Placard inoperative overhead storage bins, cabin or galley storage compartment/closets "INOPERATIVE – DO NOT USE".
2. Ensure storage bin/compartment/closet is empty other than those items permanently affixed and secure bin/compartment/closet door/lid in closed position.
3. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2B**

Interval	Installed	Required	Procedure
C	38/40	-	(M)(O)

May be inoperative provided:

- Affected bin/compartments/closet door(s) is (are) removed,
- Associated bin/compartments/closet is not used for storage of any item(s), except for those permanently affixed,
- Items located on removed doors/lids are relocated to the nearest feasible location and their original and new location are placarded.
- Associated bin/compartments/closet is prominently placarded "INOPERATIVE – DO NOT USE",
- Procedures are established and used to alert crew members and passengers of inoperative bins/compartments/closets, and
- Passengers are briefed that associated bin/compartments/closet is not used.

NOTE:

- If no partitions are installed, the entire overhead storage compartment is considered to be one bin or compartment.
- Any emergency equipment located in the associated compartment (permanently affixed) is available for use.
- An inoperative door/lid latch renders the door/lid inoperative.
- Qty 40 will be installed for aircraft VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative overhead, cabin and galley storage bins/compartments and closets must be placarded. If items affixed on doors are moved, placard the old location and new location indicating moved equipment.

*(...Continued)***ISS III R00****APPROVED BY DAW DELHI, DAT 00 –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2B****Operating Procedures**

Procedures are established and used to alert crew members and passengers of inoperative bins, compartments or closets, relocated equipment, and passengers are briefed that affected bins, compartments or closets are not to be used.

Maintenance Procedures

1. Remove overhead storage bin, cabin or galley storage compartment/closet door/lid.
2. Ensure storage bin/compartment/closet is empty other than those items permanently affixed.
3. If there is any equipment (Emergency or otherwise) that is affixed on the door / lid that is being removed:
 - a) Relocate the equipment to the nearest feasible location for which that emergency equipment was meant for,
 - b) Make sure equipment is secured in a manner as to allow easy removal and access.
 - c) Placard the original location area where the equipment has been relocated to,
 - d) Placard the new location indicating the availability of the relocated equipment.
4. Placard inoperative overhead storage bins, cabin or galley storage compartments/closets "INOPERATIVE – DO NOT USE".
5. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-1 Quarter Turn Latches/Fasteners****25-20-2-1A**

Interval	Installed	Required	Procedure
C	-	-	(O)

Bin/compartments/closet with multiple latches/fasteners may have one inoperative provided:

- The remaining latch(es) on affected bin/compartments/closet operates normally, and
- Inoperative latch/fastener is placarded "INOPERATIVE".

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative latch/fastener.

Operating Procedures

Procedures are established and used to alert crew member of an inoperative latch and to inform them to exercise extra care in latching / unlatching compartments with mobile / loose galley equipment / trolleys. Inoperative latch should be / remain in unlatched position if utilizing the associated bin / latch / closet.

Maintenance Procedures

- Placard inoperative latch / fastener, "INOPERATIVE".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-1 Quarter Turn Latches/Fasteners****25-20-2-1B**

Interval	Installed	Required	Procedure
C	-	-	(O)

More than one latch, or all latches on a bin/compartments/closet may be inoperative provided:

- Affected bin/compartments/closet is not used for storage of any items except for those permanently affixed,
- Affected bin/compartments/closet is permanently placarded "INOPERATIVE – DO NOT USE", and
- Procedures are established and used to alert crew members and passengers of inoperative bins/compartments/closets.

Minimum Equipment List Procedures (MELP)**Placard**

Bin/compartments/closet with more than one of its latch(es) inoperative must be placarded.

Operating Procedures

Procedures are established and used to alert crew members of inoperative bins, compartments or closets, and are briefed that affected bins, compartments or closets are not to be used, including storage of trolley / galley carts.

Maintenance Procedures

- Placard inoperative bin / compartment / closet, "INOPERATIVE – DO NOT USE".
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 6

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-2 Overhead, Cabin and Galley Storage
Bins/Compartments/Closets****25-20-2-2 Storage Compartment Key Locks**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative in the unlocked position provided doors can be secured by other means.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

1. Procedures are established and used to secure bin, compartment or closet with an inoperative key lock by other means.
2. Verify that security of storage compartment is not degraded considerably when utilizing alternate means. Otherwise, any equipment required to be behind lock and key must be either relocated or another secure location or removed.
3. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-2. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-3 Megaphones****25-20-3-1**

Interval	Installed	Required	Procedure
	1	1	NIL

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49**25-20-3. 1**

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-4 Flight Attendant Seat****25-20-4-1 Required Flight Attendant Seats**

Interval	Installed	Required	Procedure
B	2	1	(M)(O)

One seat may be inoperative provided:

- Affected seat is not occupied,
- Affected flight attendant displaced by inoperative seat occupies the passenger seat which is most accessible to the inoperative seat, so as to most effectively perform assigned duties,
- Alternate procedures are established and used as published in the crew member manuals,
- Folding type seat stows automatically or is removed, stowed, or secured in the retracted position, and
- Passenger seat assigned to the flight attendant is placarded "FOR FLIGHT ATTENDANT USE ONLY".

NOTE:

- If automatic stow feature of a folding seat is inoperative, the seat is considered inoperative and must be secured in the stowed position.
- A seat position with a missing or inoperative required component, such as safety belt (including shoulder harness) or headrest, renders the seat inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Attendant Seat and Passenger Seat assigned to flight attendant must be placarded.

Operating Procedures

If the Jump Seat is INOP Inflight- the crew is supposed mark it INOP, using the shoulder harness; inform the PIC and take his advise with reference to the alternate seat to be occupied (it has to be the nearest possible seat to the assigned exit, as per Rule 38B); mention the

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-4. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-4 Flight Attendant Seat****25-20-4-1 Required Flight Attendant Seats**

defect in CDLB; get it signed by PIC and inform the engg. on arrival On Ground- the defect to be notified to PIC/ AME immediately and follow PIC instructions. Interphone/PA Unserviceable. Reference is drawn to SEP Manual Ch 6B

Maintenance Procedures

1. Placard Flight Attendant Seat “INOPERATIVE”.
2. Folding Flight Attendant’s Seat must be secured in the retracted (up) position.

NOTE: If the seat pan cannot be secured in the retracted position, it must be removed (refer to Chapter 25, Section 22 of the Aircraft Maintenance Manual PSM 1-84-2).

3. Placard Passenger Seat assigned to flight attendant “FOR FLIGHT ATTENDANT USE ONLY”.
4. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-4. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-4 Flight Attendant Seat****25-20-4-2 Excess Equipment**

Interval	Installed	Required	Procedure
D	-	-	(M)

(M) Seats in excess of requirements and not assigned to a flight attendant may be inoperative provided they are placarded, not occupied, and are:

- Properly stowed, or
- Secured in the retracted position, or
- Removed.

NOTE:

- If automatic stow feature of a folding seat is inoperative, the seat is considered inoperative and must be secured in the stowed position.
- A seat position with a missing or inoperative required component, such as safety belt (including shoulder harness) or headrest, renders the seat inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Attendant Seat and Passenger Seat assigned to flight attendant must be placarded.

Operating Procedures

None required.

Maintenance Procedures

- Placard Flight Attendant Seat "INOPERATIVE".
- Folding Flight Attendant's Seat must be secured in the retracted (up) position.

NOTE: If the seat pan cannot be secured in the retracted position, it must be removed (refer to Chapter 25, Section 22 of the Aircraft Maintenance Manual PSM 1-84-2).

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-4. 3



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-20-4 Flight Attendant Seat

25-20-4-2 Excess Equipment

3. Placard Passenger Seat assigned to flight attendant “FOR FLIGHT ATTENDANT USE ONLY”.
4. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-4. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-20-5 Passenger Seats**

Interval	Installed	Required	Procedure
D	78/90	-	(M)

May be inoperative provided:

- Seat does not block or restrict access to an emergency exit,
- Seat does not restrict any passenger from access to the main aircraft aisle, and
- The affected seat is not used, blocked, and placarded "DO NOT OCCUPY".

NOTE:

- A seat with an inoperative or missing safety belt is considered to be inoperative.
- A seat with an inoperative recline mechanism in a non-upright position is considered inoperative.
- The affected seats may include the seat behind and/or the adjacent outboard seats.
- Any damage to passenger seats and components must not be detrimental to passenger safety.
- Qty 90 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Seats or Seat Belts must be placarded on affected seat in passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- Block and placard affected seat "DO NOT OCCUPY".

NOTE: The affected seats may include the seats behind and/or the adjacent outboard seats, as such they too may need to be placarded, "DO NOT OCCUPY".

- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-20-5 Passenger Seats****25-20-5-1 Recline Mechanism**

Interval	Installed	Required	Procedure
D	78/90	-	(M)

May be inoperative and the affected seat occupied provided the seat is secured in the full upright position.

NOTE: Qty 90 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Seats or Seat Belts must be placarded on affected seat in passenger compartment.

Operating Procedures

None required.

Maintenance Procedures**1. Securing Seat Model 925 / 935 Seat Backs**

Tools Required: Snap Ring Pliers

- Remove and retain bottom cushion to access seat recline mechanism.
- Rotate clear, plastic barrel to adjust mechanism. As barrel is rotated, brass tab inside barrel will move up or depending upon direction of rotation.
- To secure back in fully upright position, rotate barrel until brass tab is at the top of the recline lock mechanism.
- Reinstall retained snap ring in slot of mechanism (between spring and barrel).
- Reinstall retained bottom cushion.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-5 Passenger Seats****25-20-5-1 Recline Mechanism****2. Securing Slimplus Model Seat Backs**

Equipment Required: Slimplus Recline Spacers (X4) or similar part

- a) Remove and retain bottom cushion to access seat recline mechanism.
- b) Pull locking pin located under fore of seat bottom. Pin is visible through the viewing hole located forward– center of the seat bottom.
- c) Lift seat bottom until it is vertical and against seat back. Recline mechanism should now be accessible.
- d) Operative seat with recline mechanism will have 2 Spacers already installed to control recline mechanism angle.
- e) Install 4 more Spacers flush with the already installed 2 Spacers. The 6 Spacers should now be flush from the canister down to the locking bolt's thread.
- f) Return seat bottom to horizontal position taking care to guide seat bottom rails through the guides located on the seat's front bar.
- g) Reinstall locking pin and verify seat bottom is secured.
- h) Reinstall retained bottom cushion.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-5 Passenger Seats****25-20-5-2 Armrest with Recline Mechanism**

Interval	Installed	Required	Procedure
D	78/90	-	(M)

May be inoperative, damaged, or missing, and seat occupied provided:

- The affected armrest does not block an emergency exit,
- The affected armrest does not restrict any passenger from access to the main aircraft aisle, and
- If armrest is missing, seat back is secured in the full upright position

NOTE: Qty 90 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Seats or Seat Belts must be placarded on affected seat in passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- If armrest is missing, seat back is secured in the full upright position.
- If armrest restricts access to aircraft aisle, seat must be placarded "DO NOT OCCUPY" and blocked to prohibit use. May be necessary to block off aft row if inoperative seat restricts passenger access to main aisle.
- If armrest restricts access through the aircraft aisle or is not in a horizontal position, armrest must be removed and seat back secured in full upright position.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED —**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-5 Passenger Seats****25-20-5-3 Armrest without Recline Mechanism**

Interval	Installed	Required	Procedure
D	39/45	-	(M)

May be inoperative, damaged, or missing, and seat occupied provided:

- The affected armrest does not block an emergency exit, and
- The affected armrest does not restrict any passenger from access to the main aircraft aisle.

NOTE: Qty 45 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Seats or Seat Belts must be placarded on affected seat in passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- If armrest restricts access to aircraft aisle, seat must be placarded "DO NOT OCCUPY" and blocked to prohibit use. May be necessary to block off aft row or aft inboard seat if inoperative seat restricts passenger access to main aisle.
- If armrest restricts access through the aircraft aisle or is not in a horizontal position, armrest must be removed.
- Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 5

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-5 Passenger Seats****25-20-5-4 Tray table in the unstowed position**

Interval	Installed	Required	Procedure
D	78/90	-	(M)

May be inoperative provided:

- The affected tray table does not block an emergency exit,
- The affected tray table does not restrict any passenger from access to the main aircraft aisle, and
- The affected seats are blocked and placarded "DO NOT OCCUPY".

NOTE:

- A missing, or inoperative tray table in the stowed position is a Passenger Convenience/Non-Essential Equipment and Furnishings item.
- Affected seats may include those aft of the unstowed tray table if they restrict access to the aircraft aisle.
- Qty 90 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Seats or Seat Belts must be placarded on affected seat in passenger compartment.

Operating Procedures

None required.

Maintenance Procedures

- For Seat Back Tray Tables:
 - The seat aft of a seat with an inoperative unstowed tray table must be blocked and placarded "DO NOT OCCUPY".

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 6



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-20-5 Passenger Seats

25-20-5-4 Tray table in the unstowed position

- b) If tray table is inoperative in unstowed position, and is located such that it blocks access to the main aircraft aisle, (i.e. located on the inboard seat), both affected aft seats must be blocked and placarded "DO NOT OCCUPY".
- 2. For In-Arm Tray Tables:
 - a) A seat with an inoperative unstowed tray table must be blocked and placarded "DO NOT OCCUPY".
 - b) If tray table is inoperative in unstowed position, and is located such that it blocks access to the main aircraft aisle, (i.e. located on the inboard seat), both affected seats must be blocked and placarded "DO NOT OCCUPY".
- 3. Make appropriate entry in the aircraft journey log.

NOTE: An inoperative tray table in the stowed position is a Passenger Convenience/Non-Essential Equipment and Furnishings item.

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED –

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-5. 7

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-6****“Fasten Seat Belt While Seated” and “No Smoking” Signs or Placards**

Interval	Installed	Required	Procedure
C	76/88	-	NIL

One or more signs or placards may be illegible or missing provided a legible sign or placard is readable from each occupied passenger seat.

NOTE: Qty 88 is applicable for VT-SQA and VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-6. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-7 Lavatory “NO SMOKING” Placard**

Interval	Installed	Required	Procedure
B	1	0	NIL

May be missing provided the lavatory smoke detection system is operative.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-7. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-9****Flight Attendant Reading Light**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative provided a suitable alternate light source is available.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Attendant Reading Light must be placarded.

Operating Procedures

Alternative procedures for using existing cabin lighting or handheld flashlight as light source for flight attendant duties that requires reading on flight attendant station should be developed and used.

Maintenance Procedures

1. Placard Flight Attendant Reading Light switch with "LIGHT INOP".
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-9. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-10 Passenger Service Unit (PSU)****25-20-10A**

Interval	Installed	Required	Procedure
C	41 / 47	-	(M)

Passenger seats from which “No Smoking/Fasten Seat Belt” light is not readily legible shall not be occupied and must be blocked and placarded “DO NOT OCCUPY”.

NOTE : Qty 47 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Service Unit must be placarded in the flight and passenger compartments.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the affected PSU on the PSU panel and Flight Attendant’s LIGHTING panel.
2. Placard appropriate inoperative passenger convenience / NEF items.
3. Block each seat in the passenger compartment from which an operative “No Smoking/Fasten Seat Belt” sign is not readily legible and placard the affected seat(s) “DO NO OCCUPY”.
4. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-10. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-10 Passenger Service Unit (PSU)****25-20-10B**

Interval	Installed	Required	Procedure
C	41/47	-	(O)

The affected seat(s) may be occupied provided:

- The Crew Cabin Interphone System, Cabin Chime System and Passenger Address System are operative, and
- Procedures are established and used to alert flight attendants and to notify affected passengers smoking is prohibited, and when seat belts should be fastened.

NOTE : Qty 47 will be installed for aircraft VT-SQA and SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Passenger Service Unit must be placarded in the flight and passenger compartments.

Operating Procedures

- Verify that the Passenger Address System operates normally as follows:
 - Ensure aircraft DC bus system is powered.
 - Ensure PA AMP Circuit Breaker on the left Essential DC circuit breaker panel is closed.
 - Push release lever and remove the attendant handset from the cradle assembly. Select PA system switchlight at the Attendant Control Unit (ACU), press the PUSH-TO-TALK switch on the handset and make announcements over the passenger address (PA) system.
 - Deselect or terminate PA mode by pressing the PA switch at the control unit, and replace the handset to cradle assembly.
 - From the cockpit, initiate an attendant call and verify cabin chime sound and normal voice communication is present.
- Establish procedures whereby notification to passengers to fasten seat belts and/or not to smoke is given via the PA system.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DAT 00 -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-10. 2



DHC-8-402

MINIMUM EQUIPMENT LIST

EQUIPMENT AND FURNISHINGS

ATA 25

25-20-10 Passenger Service Unit (PSU)

25-20-10B

3. Establish alternate procedures for calling the attention of the flight attendant to the passengers.

Maintenance Procedures

1. Placard the affected PSU on the PSU panel and on the Flight Attendant's LIGHTING panel.
2. Placard the appropriate inoperative passenger convenience items.

■ ■ ■ ■

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-10. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-20-10 Passenger Service Unit (PSU)****25-20-10-1 Flight Attendant Panel PSU TEST Switch**

Interval	Installed	Required	Procedure
D	1	0	(O)

May be inoperative.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Attendant Panel PSU TEST switch must be placarded on the Flight Attendant Panel.

Operating Procedures

Alternate procedures should be established and used for verification of PSUs' operability in lieu of inoperative PSU TEST switch.

Maintenance Procedures

1. Placard the inoperative PSU TEST switch on the Flight Attendant's Lighting panel.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-20-10. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-30-1 Galley Waste Compartment****25-30-1-1 DOOR**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- The container is empty and the access is secured to prevent waste introduction into the compartment, and
- Procedures are established to ensure that sufficient waste containers are available to accommodate all waste that may be generated on a flight.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Galley Waste Compartment Door must be placarded in the flight compartment.

Operating Procedures

Procedures are established such that sufficient galley waste compartments are available to accommodate all waste that may be generated in flight.

Maintenance Procedures

- Tape the surrounding areas of the waste Compartment Flap and Door to secure it closed.
- Placard inoperative Galley Waste Compartment Flap or Door.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-30-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-30-1 Galley Waste Compartment****25-30-1-2 Flap**

Interval	Installed	Required	Procedure
C	1	0	(M)(O)

May be inoperative provided:

- The container is empty and the access is secured to prevent waste introduction into the receptacle, and
- Procedures are established to ensure that sufficient waste containers are available to accommodate all waste that may be generated on a flight.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Galley Waste Compartment Flap must be placarded in the flight compartment.

Operating Procedures

Procedures are established such that sufficient galley waste compartments are available to accommodate all waste that may be generated in flight.

Maintenance Procedures

- Tape the surrounding areas of the waste Compartment Flap and Door to secure it closed.
- Placard inoperative Galley Waste Compartment Flap or Door.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-30-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-40-1 Exterior Lavatory Door Ashtrays**

25-40-1-2 Aircraft with only one exterior lavatory door or entry area ashtray installed

Interval	Installed	Required	Procedure
B	1	0	NIL

May be missing.

NOTE:

1. Repair interval extensions are not permitted.
2. Interior lavatory ashtrays are considered under passenger convenience items/NEF and are not required by regulations.

Minimum Equipment List Procedures (MELP)**Placard**

Placard appropriate side of lavatory door indicating missing ashtray.

Operating Procedures

None required.

Maintenance Procedures

1. Placard appropriate side of lavatory door indicating missing ashtray.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-40-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-50-1 Aft Baggage Divider Nets**

Interval	Installed	Required	Procedure
D	1	0	(M)

May be inoperative or missing provided:

- Inoperative aft baggage divider net installation is completely removed including associated mounting hardware.
- Ground crew is notified of missing aft baggage divider nets.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

Remove inoperative installation and secure aft baggage compartment. Make certain that no loose items remain in compartment to interfere with baggage loading or door closure.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-50-2 Aft Baggage Door Threshold Net****25-50-2-1**

Interval	Installed	Required	Procedure
D	1	1	(M)

May be damaged provided:

- The number of detached stitching locations does not exceed six,
- The number of detached stitching locations per nylon strap (horizontal or vertical) does not exceed two,
- Detached stitching locations are separated by a minimum of two horizontal or vertical nylon strap intersection locations,
- No more than 25% of a nylon strap width is found to be defective,
- No more than one detached stitching location exists on main horizontal securing straps,
- There is no detached stitching on the two outermost vertical straps,
- Of the four installed, no more than one attachment clip is missing/inoperative, and
- Net is inspected weekly to ensure no further damage exists.

Minimum Equipment List Procedures (MELP)**Placard**

“Warning damaged or missing aft baggage door threshold net” must be placarded outside the aft baggage compartment door to notify ground crew of a missing net.

Operating Procedures

None required.

Maintenance Procedures

- Refer to Figure 25–1 and 25–2 for damage limitation details.
- Make certain that no loose items remain in the compartment to interfere with baggage loading or door closure.
- In the event of an unattached clip, secure the loose strap end with a tie wrap to the undamaged vertical or horizontal strap to prevent the strap from catching during loading or unloading of the compartment.

(...Continued)

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-2. 1



DHC-8-402


MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

25-50-2 Aft Baggage Door Threshold Net

25-50-2-1

4. Placard damaged aft baggage door threshold net on exterior of aft baggage compartment door.
5. Make appropriate entry in the aircraft journey log.

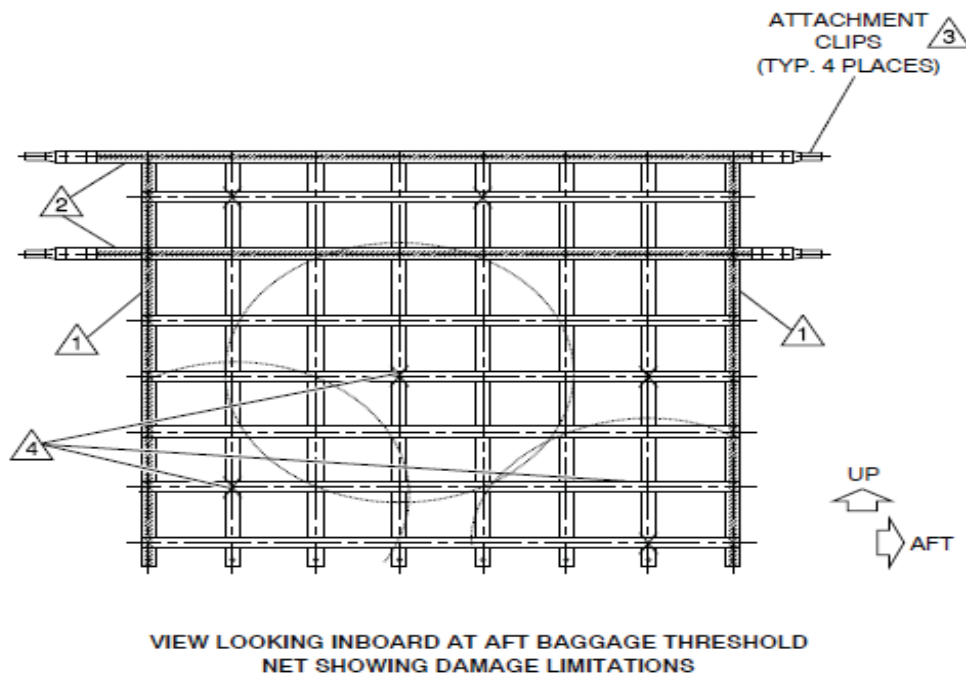

- 1 No detached stitching permitted on these two vertical straps (shaded).
- 2 At most one detached stitching location permitted on these two horizontal straps (shaded).
- 3 Only one of these clips may be missing/inoperative.
- 4 Typical detached stitching locations (separated by a minimum of two horizontal or two vertical strap intersection locations).

AFT BAGGAGE DOOR THRESHOLD NET DAMAGE LIMITATIONS

Figure 25-1

ISS III R00

APPROVED BY DAW DELHI, DATE -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49


25-50-2. 2



DHC-8-402

MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS

ATA 25

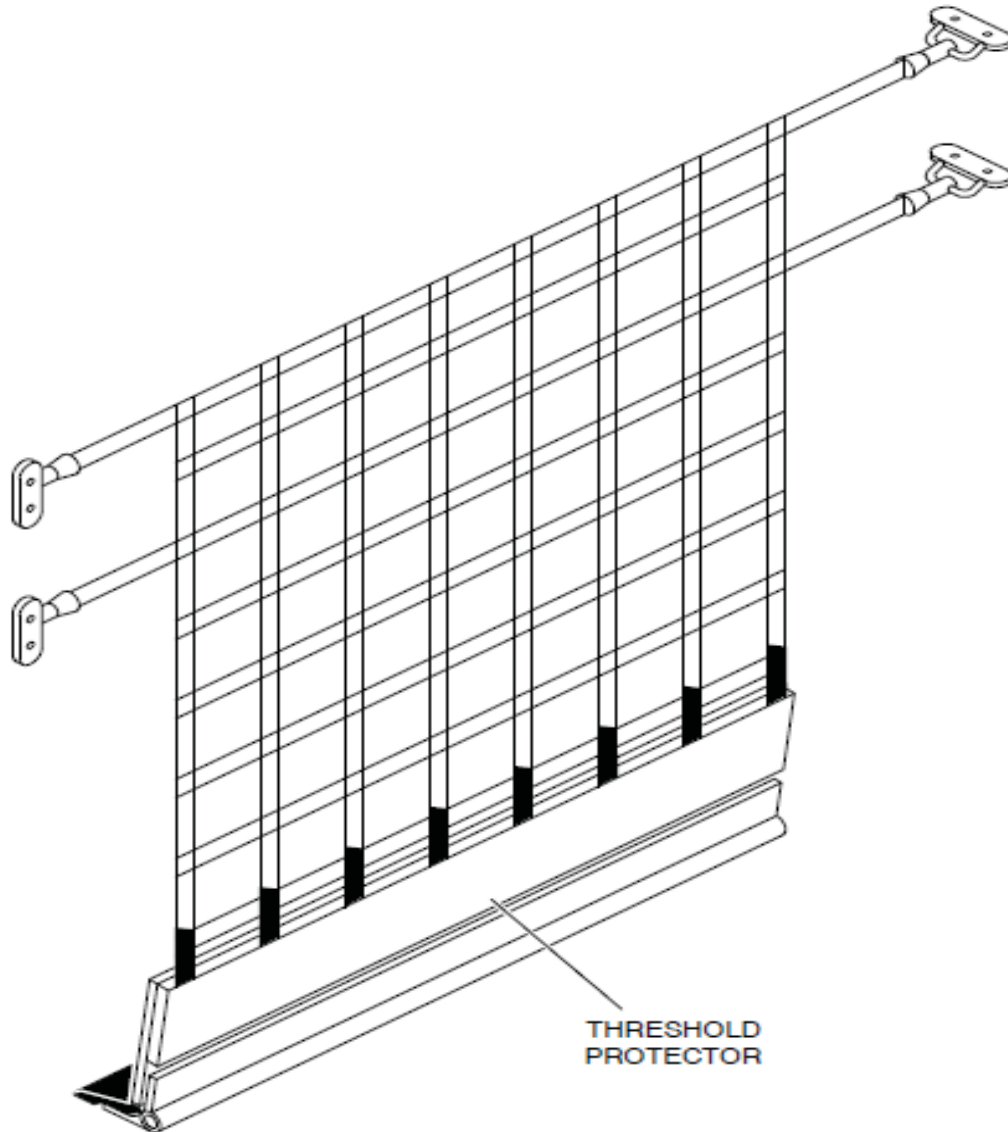

AFT BAGGAGE DOOR THRESHOLD NET AND PROTECTOR

Figure 25-2

— — — —

ISS III R00

APPROVED BY DAW DELHI, DATED -

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-2. 3

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-50-2 Aft Baggage Door Threshold Net****25-50-2-2**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be missing provided:

- Inoperative aft baggage door threshold net assembly is completely removed,
- Baggage threshold protector remains installed, and
- Ground crew is notified of missing aft baggage door threshold net prior to unloading aircraft.

Minimum Equipment List Procedures (MELP)**Placard**

“Warning damaged or missing aft baggage door threshold net” must be placarded outside the aft baggage compartment door to notify ground crew of a missing net.

Operating Procedures

None required.

Maintenance Procedures

- Remove inoperative net assembly from the threshold protector.
- Make certain that no loose items remain in the compartment to interfere with baggage loading or door closure.
- Placard missing aft baggage door threshold net on exterior of aft baggage compartment door.
- Make appropriate entry in the aircraft journey log.

— — — —**ISS III R00****APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-2. 4

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-50-3 Cargo Compartment Liners and Floor Panels
(Applicable to Forward and/or Aft Baggage
Compartments)**

Interval	Installed	Required	Procedure
C	-	-	(O)

Liner panels may be damaged or missing provided cargo is not carried in the associated compartment.

NOTE: Unit Load Devices (ULDs) may be carried in the associated compartment provided no cargo is carried on or in these devices. For ballast purposes, use of bags (made of glass fibre or Kevlar) of sand or ingots of non-magnetic metals (such as lead) is acceptable.

Minimum Equipment List Procedures (MELP)**Placard**

1. Damaged/missing Fwd and/or aft cargo/baggage compartment liners are placarded in the flight compartment.
2. Placard outboard of the external baggage doors, and inboard of the internal door (if applicable), of inoperative Cargo/Baggage Compartment.

Operating Procedures

1. Cargo carried in the affected cargo compartment must be emptied out.
2. If ballasts are required, proper installation must be carried out by proper installation procedures.
3. Loading/unloading equipment must be affixed properly, otherwise it must be removed from the affected cargo compartment.

Maintenance Procedures

1. Placard inoperative cargo/baggage compartment in the flight compartment.
2. Placard outboard of external baggage door, and inboard of internal door (if applicable), "Cargo/Baggage Compartment is inoperative."
3. Make appropriate entry in aircraft journey log.

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-50-3. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-1 Emergency Locator Transmitter (ELT)****25-60-1-1 Fixed ELT**

Interval	Installed	Required	Procedure
	1	1	NIL

NOTE: Required as per CAR Section 8, Series O.**Minimum Equipment List Procedures (MELP)****Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-1 Emergency Locator Transmitter (ELT)****25-60-1-2 Survival Type ELTs**

Interval	Installed	Required	Procedure
	1	1	NIL

NOTE: Required as per CAR Section 8, Series O.**Minimum Equipment List Procedures (MELP)****Placard**

None required.

Operating Procedures

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-2 First Aid Kit****25-60-2-1 FAK**

Interval	Installed	Required	Procedure
A	1/2	0	NIL

If the seal is broken during Bomb threat inspection or due security reasons or uses of the kit and cannot be recertified due non availability of qualified Doctor, first Aid Kit may be carried on board in unsealed condition provided it is recertified/replaced at first available opportunity or arrival at base, whichever is earlier.

NOTE:

1. This item is as stipulated by CAR series 'X' Part III.
2. Quantity 2 FAK is installed for aircraft VT-SQA, VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

NOTE: Cockpit Crew shall ask the SCC to make a cabin log entry indicating the purpose of breaking the seal and to request replacement at first available opportunity.

None required.

Maintenance Procedures

None required.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED —**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-2 First Aid Kit****25-60-2-2 Universal Precaution Kit**

Interval	Installed	Required	Procedure
A	1	0	NIL

If the seal is broken during Bomb threat inspection or due security reasons or uses of the kit and cannot be recertified due non availability of qualified Doctor, UPK may be carried on board in unsealed condition provided it is recertified/replaced at first available opportunity or arrival at base, whichever is earlier.

NOTE: This item is as stipulated by CAR series 'X' Part III.

Minimum Equipment List Procedures (MELP)**Placard**

None required.

Operating Procedures

NOTE: Cockpit Crew shall ask the SCC to make a cabin log entry indicating the purpose of breaking the seal and to request replacement at first available opportunity.

None required.

Maintenance Procedures

None required.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-4 Flight Attendant Flashlights****25-60-4-1 Flashlights**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative or missing provided the flight attendant assigned to the associated seat has a flashlight of equivalent characteristics readily available.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative flashlight/flashlight holder.

Operating Procedures

The flight attendant assigned to the associated seat has a flashlight of equivalent characteristics readily available.

Maintenance Procedures

NIL

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-2. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-60-4 Flight Attendant Flashlights****25-60-4-2 Flashlight Holders**

Interval	Installed	Required	Procedure
C	2	0	(M)(O)

May be inoperative or missing provided alternate stowage provisions are provided.

Minimum Equipment List Procedures (MELP)**Placard**

Placard inoperative flashlight holder.

Operating Procedures

Cabin Crew to ensure flashlight is secured via masking tape in its original location.

Maintenance Procedures

1. Secure the Flash Light near inoperative flash light holder by using masking tape to ensure no movement of flashlight during acceleration.
2. Ensure at no time flashlight is removed from its original compartment during invoking of MEL.
3. Placard normal stowage location with direction to alternate stowage location.
4. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-2. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-6****Airstair Door Ditching Dam**

Interval	Installed	Required	Procedure
C	1	0	(M)

May be inoperative provided:

- The ditching dam is secured in the stowed position,
- Extended overwater operations are prohibited, and
- Take-offs and landings are not conducted on runways that may lead to imminent ditching.

NOTE: "Extended Overwater Operations means operation over the water at a horizontal distance of more than 50 nautical miles from the nearest shore.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Airstair Door Ditching Dam and flight compartment must be placarded.

Operating Procedures

None required.

Maintenance Procedures

- Verify that Ditching Dam is in stowed position.
- Using appropriate tape, tape the following sides of ditching dam to the surrounding interior:
 - The full length of upper edge.
 - One half of left and right edge.
- Tape over Ditching Dam Handle.
- Ensure "DITCHING DAM INOPERATIVE" placards are posted in the following areas:
 - Pilot glare shield panel.
 - Ditching Dam.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -****Signature valid**

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-6. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-60-7 Flight Deck Sun Visors****25-60-7-1**

Interval	Installed	Required	Procedure
C	2	0	NIL

May be inoperative provided affected sun visor does not obstruct either pilot's field of view for take-off and landing.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Deck Sun Visor must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Placard inoperative Sun Visor.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-7. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-7 Flight Deck Sun Visors****25-60-7-2**

Interval	Installed	Required	Procedure
C	2	0	(M#)

May be inoperative provided affected Sun Visor is removed.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flight Deck Sun Visor must be placarded.

Operating Procedures

None required.

Maintenance Procedures

1. Remove inoperative sun visor assembly as follows:

NOTE: The removal of the LH and the RH sun visor assembly is almost the same. The procedure given is for the LH sun visor assembly only.

- a) Give support to the sun visor assembly.
 - b) Remove the screws, washers and the LH sun visor assembly.
2. Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-7. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-8 Flight Deck Flashlights/Flashlight Holders****25-60-8-1 Flashlights**

Interval	Installed	Required	Procedure
C	2	0	(O)

May be inoperative or missing provided that a flashlight of equivalent characteristics is readily available.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flashlight Holder should be placarded.

Operating Procedures

Engineering has to inform the PIC of the alternate location of flashlights.

Maintenance Procedures

1. Placard normal stowage location with direction to alternate stowage location.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-8. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-60-8 Flight Deck Flashlights/Flashlight Holders****25-60-8-2 Flashlight Holders**

Interval	Installed	Required	Procedure
C	2	0	(M)(O)

May be inoperative or missing provided alternate stowage provisions are provided.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Flashlight Holder should be placarded.

Operating Procedures

Engineering has to inform the PIC of the alternate location of flashlights.

Maintenance Procedures

1. Determine alternate location in flight compartment for flashlight stowage where its movement will be constrained during accelerations and be accessible to crew member.
2. Placard normal stowage location with direction to alternate stowage location.
3. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-8. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-60-9 Life Vests****25-60-9-1 Flight Crew and Flight Attendant Life Vests**

Interval	Installed	Required	Procedure
C	5	4	NIL

Any in excess of those required for intended flight may be inoperative or missing.

NOTE 1: Provisions must be made for SNY Crew.

NOTE 2: Required distribution must be maintained.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Life Vests and/or its installed locations are placarded inoperative.

Operating Procedures

SNY can use the additional spare passenger Life jackets carried on board in case of an emergency.

Maintenance Procedures

1. Placard inoperative life vest(s) and its installed location(s).
2. Make appropriate entry in aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-9. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST
EQUIPMENT AND FURNISHINGS****ATA 25****25-60-9 Life Vests****25-60-9-2 Passenger Life Vests**

Interval	Installed	Required	Procedure
C	90/102	-	NIL

Any in excess of those required for intended flight may be inoperative or missing.

NOTE:

1. Installed Quantity includes 7 infant life vest, of which Quantity 5 is required for dispatch.
2. Quantity 102 life vest is installed on aircraft VT-SQA, VT-SQB onwards.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Life Vests and/or its installed locations are placarded inoperative. Passenger seats with inoperative life vests and floatation cushions are placarded, "DO NOT OCCUPY".

Operating Procedures

1. Inoperative life vests are placarded inoperative, and inoperative seats (where applicable), are placarded, "DO NOT OCCUPY".
2. Procedures are established and used to alert crew members about missing or inoperative life vest(s) and their location(s).

Maintenance Procedures

1. Placard inoperative life vest(s) and its installed location(s).
2. Make appropriate entry in aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-60-9. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-62-1 Cabin Video Monitoring and Surveillance System****25-62-1-1****25-62-1-1A**

Interval	Installed	Required	Procedure
C	1	0	(O)

May be inoperative provided:

- Alternate procedures are established and used for monitoring the area outside the flight crew compartment,
- Communication between the flight crew and flight attendant is available via intercom, and
- Spy hole view on the cockpit door is available.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Video Monitoring and Surveillance System must be placarded in the flight compartment.

Operating Procedures

Fasten seat belt sign is used to communicate from the cockpit to CCIC on the service interphone. Captain must brief the CCIC about this procedure prior to start during the pre-flight the cabin. The crew must recycle the seat belt sign once to get the briefing.

Maintenance Procedures

- Placard the inoperative Cabin Video Monitoring and Surveillance System in the flight compartment.
- Make appropriate entry in the aircraft journey log.

■■■■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-62-1. 1

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-62-1 Cabin Video Monitoring and Surveillance System****25-62-1-1****25-62-1-1B**

Interval	Installed	Required	Procedure
D	1	0	NIL

May be inoperative provided procedures do not require its use.

Minimum Equipment List Procedures (MELP)**Placard**

Inoperative Cabin Video Monitoring and Surveillance System must be placarded in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the inoperative Cabin Video Monitoring and Surveillance System in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

— — — —

ISS III R00**APPROVED BY DAW DELHI, DATED –**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-62-1. 2

**DHC-8-402****MINIMUM EQUIPMENT LIST*****EQUIPMENT AND FURNISHINGS******ATA 25*****25-62-1 Cabin Video Monitoring and Surveillance System****25-62-1-2 Video Converter**

Interval	Installed	Required	Procedure
D	2	1	NIL

One may be inoperative provided operative video converter is connected to an operative FMS.

Minimum Equipment List Procedures (MELP)**Placard**

Associated display must be placarded, "Inoperative Cabin Video Monitoring and Surveillance Display" in the flight compartment.

Operating Procedures

None required.

Maintenance Procedures

1. Placard the inoperative Cabin Video Monitoring and Surveillance System in the flight compartment.
2. Make appropriate entry in the aircraft journey log.

■ ■ ■ ■

ISS III R00**APPROVED BY DAW DELHI, DATED -**

Signature valid

Signed by: Manoj
Kumar Bajpai
Director
(Airworthiness)
Date: 07-Jun-
2024 13:52:49

25-62-1. 3