


Chapter III-9 — Signal Processing

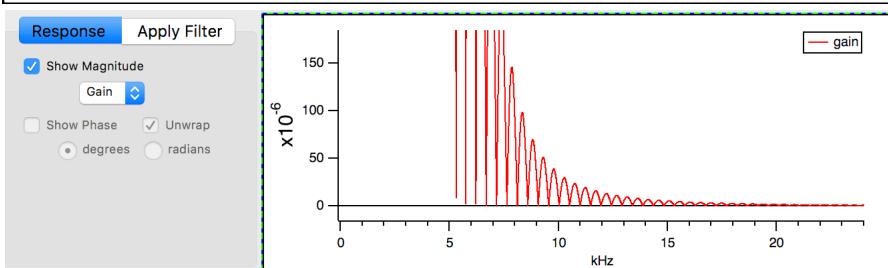

Choosing FIR Band Frequencies

You can avoid reducing the amplitude of frequencies near the end of the pass band by increasing the End of Pass Band frequency. A larger number of coefficients may be needed.

Choosing Number of Coefficients for FIR Designs

You can obtain a steeper transition from the pass band to the reject band by increasing the number of coefficients.

