


HSP_Protoseed Offboard Wiring


NOTE: You have some freedom as to where you want to place the pots and switches and in what orientation. I suggest mounting them and attaching long leads, then cutting them to the correct length. If you use tie wraps don't use too many and keep them a bit loose to allow for movement. The cutout on the bottom right is to give some extra space to run wires to the other side of the board.

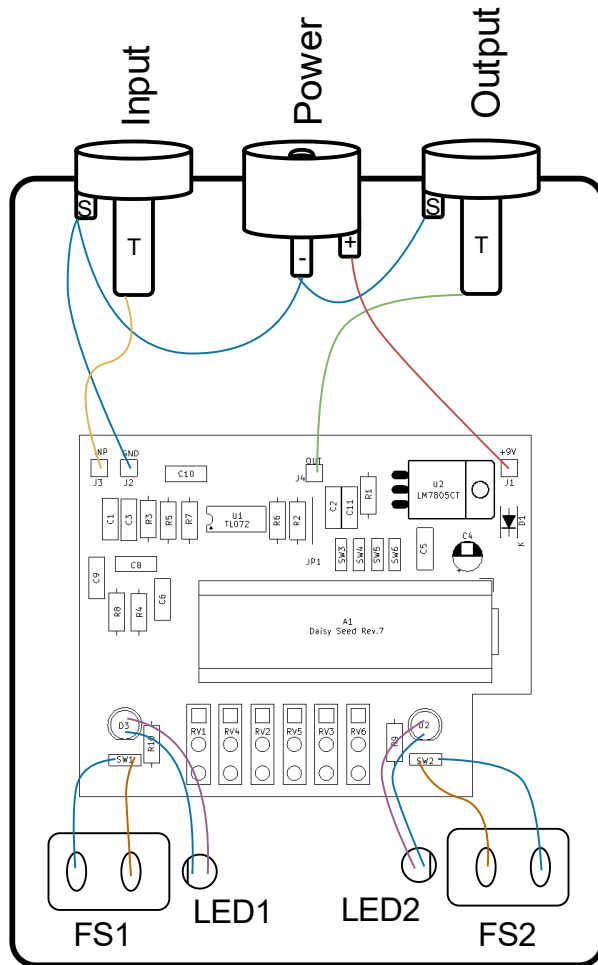

Hammond 1590BB


NOTE: You may consider using a larger enclosure. This is likely the smallest you will be able to fit everything in to.

NOTE: If you intend to drill a hole on the side here, to access the USB (as I originally intended on my first prototype,) you cannot put the Seed on standoffs; there is JUST enough room if you decide to use them, but the tradeoff is that you will need to remove the cover each time you wish to reprogram the unit.

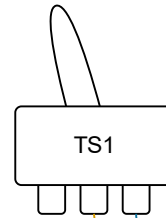

NOTE: SPDT switch is shown in the ON position

NOTE: When installing switches and pots remember this drawing is upside down so left to right will become right to left when you flip it over.

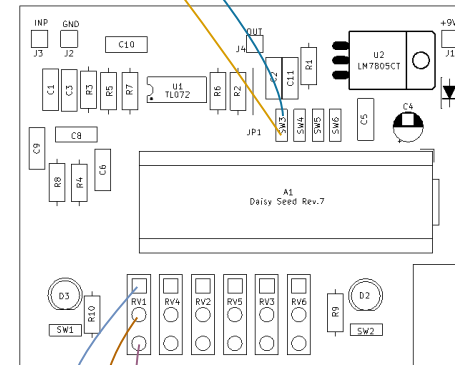

NOTE: It is entirely possible that you can reduce the amount of wiring by joining the grounds of the pots and switches at the component end, and only running one ground wire to the PCB. I have not tested this but I believe there should be no issue.

