




5 Fill the can with newspaper and spray-paint it evenly. Make sure you work in a well-ventilated area or outside. Once the can is dry, attach the handle.

TECHNIQUES

Making wire handles



1 To add handles, punch a pair of holes opposite each other 1cm ($\frac{3}{8}$ in) below the top of the can. Once you've emptied the can, cut a piece of coat hanger wire slightly longer than the final handle size.

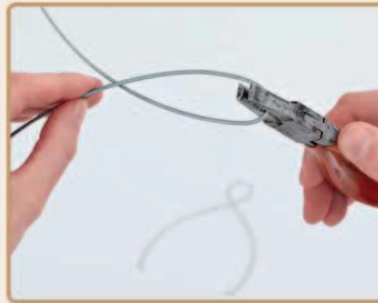

2 Use ring-bending pliers to make a tight curve in the middle of the length of coat hanger wire. Use your hands to bend the ends into gentle downward curves.



3 Bend the wire ends at right angles and trim these to about 3mm ($\frac{1}{8}$ in) with a small pair of bolt cutters. Squeeze the handle to compress it slightly, then fit the ends into the holes in the can – the handle should hold in place by natural spring action.