

1. Open Arduino IDE
2. Go to Sketch→Include Library
→Manage Libraries
3. In the Library Manager, search for Adafruit FONA
4. Click on Install next to the

Adafruit FONA Library

5. Once installed, restart the Arduino IDE to apply the changes

After installing the library, the FONA library must be included first, followed by the HardwareSerial library. Then, serial pins should be defined—any pins can be used, but by default, pins 43 and 44 are assigned for the SIM800L module. Finally, the baud rate must be set.

Fig. 2 shows the code snippet for pin

```

28 // Enable Caller ID Notification
29 if (fona.callerIdNotification(true, 0)) {
30   Serial.println(F("Caller ID notification enabled"))
31 } else {
32   Serial.println(F("Caller ID notification failed"))
33 }
34 }
35
36 void loop() {
37   char phone[32] = {0};
38
39   // Check for incoming calls
40   if (fona.incomingCallNumber(phone)) {
41     Serial.println(F("Incoming Call!"));
42     Serial.print(F("Phone Number: "));
43     Serial.println(phone);
44
45     // Check if the caller number matches 7061350809
46     if (strcmp(phone, "7061350809") == 0) {
47       Serial.println(F("Authorized number detected, an
48       fona.pickUp());
49     }
50   }
51 }
52

```

Fig. 3: The code snippet for setting up the phone number

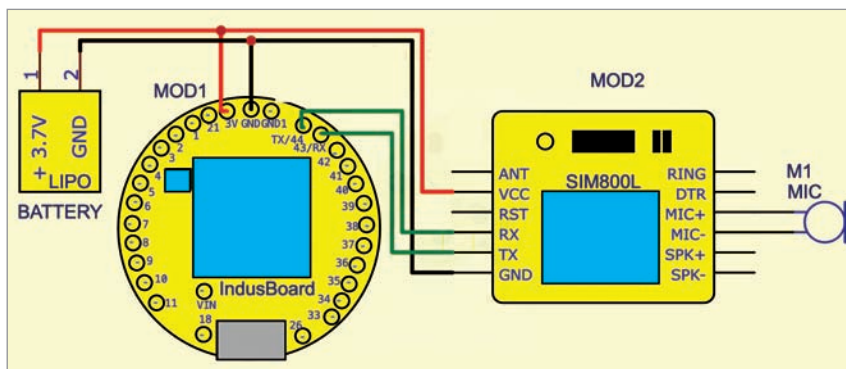


Fig. 4: Circuit diagram for the spy device

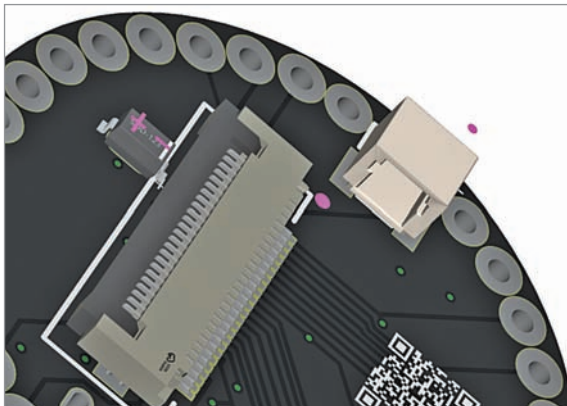


Fig. 5: Battery connector on IndusBoard Coin V2.1

definition.

Within the loop, the device checks for incoming calls. If the incoming call matches the designated phone number configured for spying, the device automatically answers and begins streaming audio. This enables remote listening to conversations and sounds from the device's

www.efy.in

EFYGROUP
YOURS SINCE 1999

“
Branding is what people say about you when you are not in the room.
”



-Jeff Bezos

