2. By using backing sheet while typing


3. No oil should be used for rubber parts. Use petrol or spirit and

4. Damaged or slippery cylinder is one of the causes for irregular line Spacing.

5. Punctuation marks should be typed gently in order to avoid injury to the Cylinder.

Thumb Wheels:

Otherwise called as Cylinder knobs. There are two thumb wheels/Cylinder

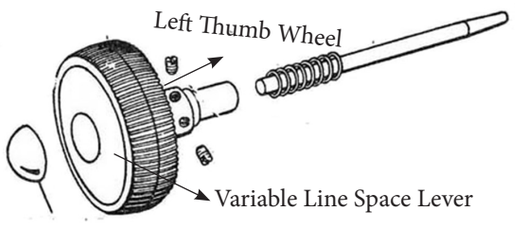

knobs, each one on both the sides. It is used to insert and remove the paper from the cylinder. It is also used to rotate the Cylinder.

Variable line Spacer:

1. To type on the ruled sheets.

2. To type Chemicals formula and Algebra sings.

3. To type component letter.

4. To Give fractional line space.

Line Space Lever:

It is fitted on the left side of the carriage. it helps to return the carriage to the next writing line. So it is also called carriage return level

Paper Bail:

It is fixed above the Cylinder and has two rollers. It holds the paper firmly at the top. It prevents the paper from flying in the air. It helps to type up to the very bottom of the paper.

Card Holders:

It helps to hold the paper. To type on cards, envelops and we can type at the top of the paper and also to the bottom edges of the paper. It is also used to draw vertical ruling.

Cylinder Ratchet Wheel:

It is also known as line space ratchet wheel. It is a toothed wheel fixed at the left end of the Cylinder. It helps to regulate the line spaces (viz. single line space, one and half, two, two and half & 3.Etc) Worn-out teeth of the Cylinder ratchet wheel is one of the causes for irregular line spacing

Detent Roller:

It is a small steel roller pressing the tooth of the Cylinder. Cylinder rotates tooth to make space between lines. Worn-out detent roller is one of the causes for irregular line spacing.

Typography_unit09.indd 323 05-03-2019 12:12:42