
It is further divided into,

1. Right Hand Thread
2. Left Hand Thread
3. Single Start Thread
4. Multi Start Thread
5. External Thread
6. Internal Thread

Right Hand Thread: When the axis of the screw is horizontal, if the slope of the thread lines are towards right hand side, then the thread is called right hand thread. A right hand thread advances into a threaded hole when turned clockwise direction.


Left Hand Thread: When the axis of the screw is horizontal, if the slope of the thread lines are towards the left hand side, then the thread is called left hand thread. A left hand thread advances into the threaded hole when turned anti clockwise direction.

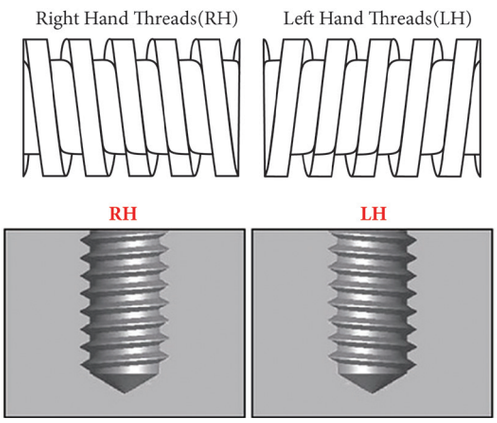

Right and Left Hand Threads

Single Start Thread: When only one helix forming the threads, run on a surface, it is called a single start thread only one starting point is seen on the beginning of the threaded portion. In a single start thread, the pitch is equal to the lead.

Multiple Start Thread: When two or more helices forming the threads run side by side on the cylindrical surface, it is called multiple start threads. Two or more than two starting points are seen on the beginning of the threaded portion. In double start thread, the lead is twice the pitch.

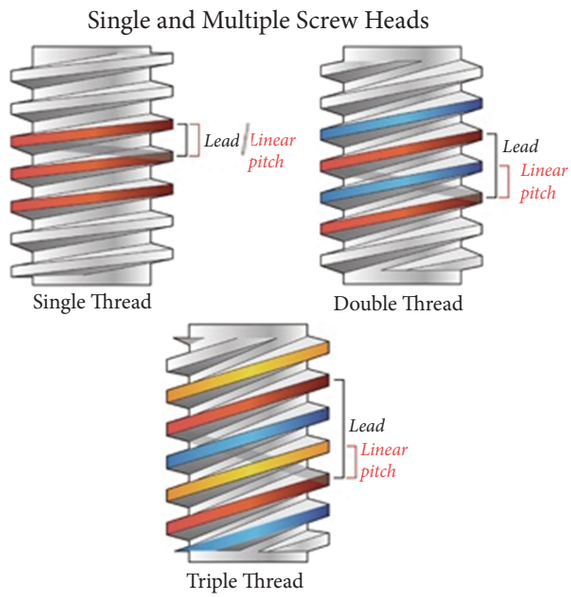

Single and Multiple Start Threads

USES OF THREADS

Multiple threads are used wherever quick motion is required and application of great force is not allowed.

APPLICATION

It is used in valves, power press screws and vice screws.

BME_Chp07.indd 90 11/9/2020 12:24:37 PM