


3-2-1 Location

3-2-1 LOCATION

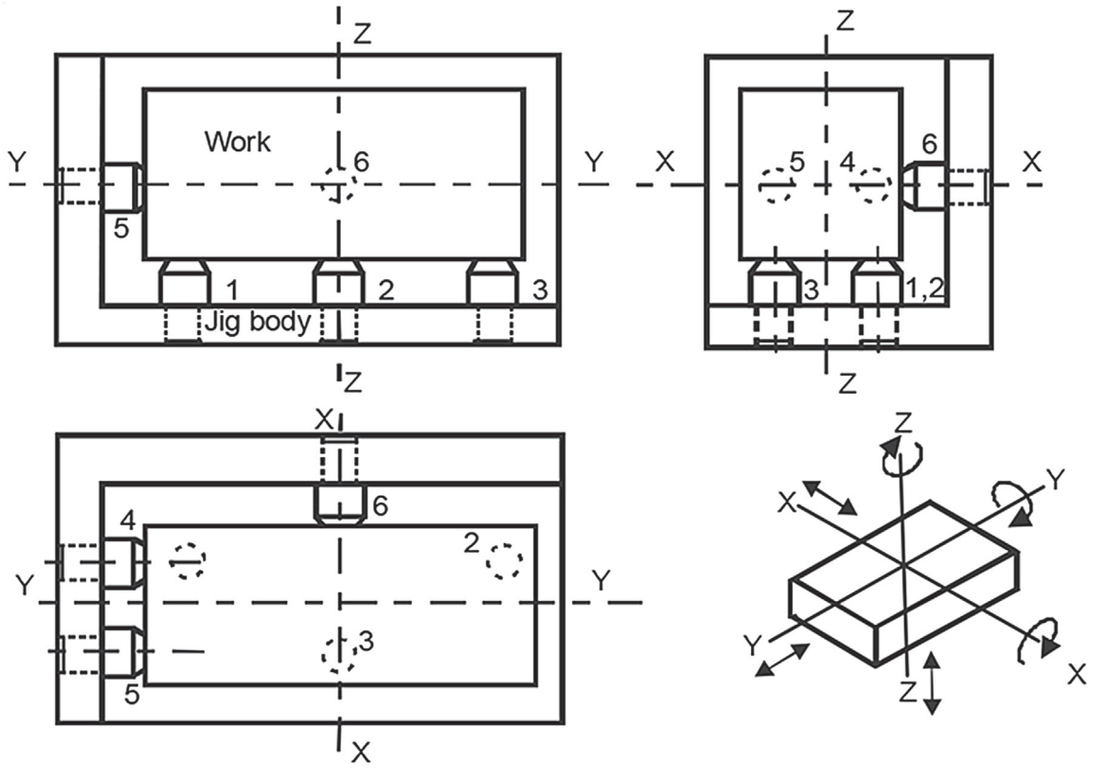

3-2-1 location is also known as "six point location"

Let us consider a rectangular block is free from holding so the rectangular block may be moved into six directions through X-X, Y-Y and Z-Z axes, and it may also be revolved through these axes. Hence the rectangular block must be arrested to avoid these movements and located in correct position.

The rectangular block is fixed in Jigs & Fixtures. The bottom side of block is supported by three pins (1, 2, & 3) and backside by two pins (4, & 5) , and rear side by one pin(6).

The movement of this rectangular block is prevented as follows:

Pins	Prevented Movements	Numbers
1, 2 & 3	Z-Z axis movement Y-Y axis rotation X-X axis rotation	3
4 & 5	Z-Z axis movement Y-Y axis rotation	2
6	X-X axis movement	1
	Total	6 axis Moment

BME_Chp07.indd 99 11/9/2020 12:24:40 PM