DIMENSIONING

Drawings are made to represent the actual shape and size of the objects to be produced. So it is necessary to place proper dimensions and related informations regarding different parts of the object. In case the dimensioning is not done properly, there will be great loss in materials, labour and time.


Dimensioning is known as the method of writing various sizes (or) measurements of an object and other important informations such as tolerances on a finished drawing. It should be done with great care that no information is left out in describing the object completely.

TYPES OF DIMENSIONS

System of Dimensions

According to B.I.S., there are two system of placing dimensions on drawing and they are

1. Aligned system
2. Unidirectional system

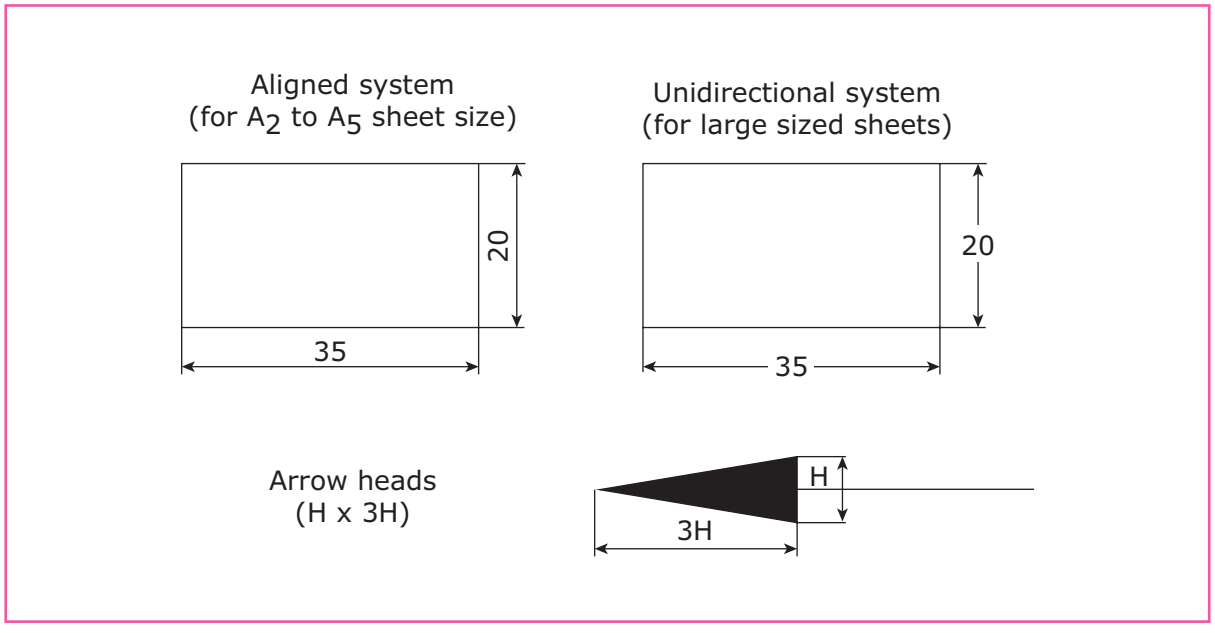

Alinged system

In this system, the dimensions are placed in a manner to read them from the bottom or from the right side of the drawing. All the dimensions are placed above the dimension lines. Alinged system dimensioning is commonly used in engineering drawing.

Unidirectional system

In this system , the dimensions are placed so that they may be read from the bottom of the drawing only. The dimensions are placed approximately at the middle of the dimension line by breaking it .There is no restriction in controlling the direction of the dimension lines.