Notation of dimensioning

The dimension lines, extension lines , leader lines, arrow head, dimension figures, notes and symbols make up the notation of dimensioning .

Dimension line

Dimension lines are used to indicate the measurement in numbers at a space above them or at a space created by breaking them approximately at their center. Dimension line is drawn as thin continuous line.


Extension line

It is the line that extends from the outline of the object on a drawing . It is a continuous thin line extending atleast about 2mm beyond the dimension line.

Leader line

When some notes are to be made regarding a specific feature of a drawing , leader lines are used. They extended from where the notes have to be applied to a point where the notes are actually written. Leader line has an arrow at one end which touches the particular feature . It is drawn at any convenient angle between 30° to 60°

Arrow head

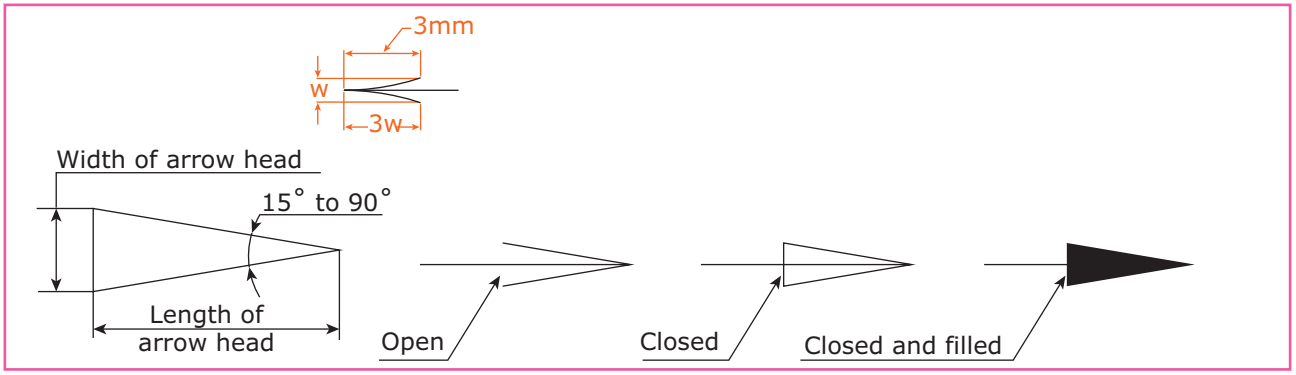

Arrow head are placed at both ends of a dimension line. They touch the extension lines drawn from the outline of the part and indicates the extend of a dimension . The length and width of the arrow should be in the ratio 3:1

Dimension figure

The size of a specific feature is indicated by the dimension figure either as a numerical or as symbols like Ø, R followed by numerals.

TYPES OF LINES

Engineering drawing is made by the combination of different types of lines. Each line shown in the drawing is meant to represent a separate meaning. So it necessary to understand the types of lines and their meaning to make or read a drawing successfully.