DOT PUNCH


Dot punches are used to make marks on the work pieces and to make scribed lines appear clearly. The end of the dot punch is ground to have an angle of 60°. Punch marks are made at regular intervals on the lines (interval may be 6mm for straight lines and 3mm for curved lines).



Dot Punch

PRICK PUNCH

Prick punches are used in some precison work and on softer materials. The end of the punch carry an angle of 30°.



Prick Punch

BELL PUNCH


It is useful in marking centres on the faces of round rods.



Bell Punch

HOLLOW PUNCH

The end of the hollow punch is concave inside. It is used to make holes on sheet materials like leather, rubber and cardboard sheets.




Hollow Punch

PIN PUNCH

Pin punch is used to make small holes on their sheet materials. It is also used insert or remove small pins into or out to holes.

TRY SQUARE

Try square is used to check whether the angular surface of internal or external is 90°. It is also useful in scribing parallel lines perpendicular to a particular surface and to check flatness of surface. Try square consists of two parts namely stock and blade. Stock is made of cast iron or cast steel and blade is made of high carbon steel or stainless steel. All sides of the stock are machined accurately and perpendicular to the adjacent sides.

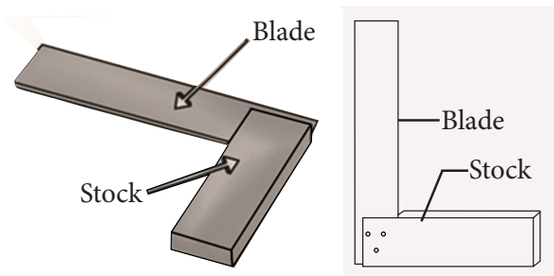

Try Square

The blade is riveted to the stock such that both of them are absolutely perpendicular (90°) to each other. There will be an undercut on the stock nearer to the bottom of the blade. It will be accommodate burrs on the work piece if any. The blade of the try square may be graduated.

The square should be maintained properly. The blade of the try square should not be used as a screw driver and stock as hammer. It should be oiled properly for avoiding rust formation on its surface.

BME_Chp02.indd 24 11/9/2020 12:17:28 PM