Standard Size of Drawing Boards as per IS 1444-1989

S.No.	Designation	Drawing-Sheet Size to be used	Size of the Board in mm (Length, Breadth, Thickness)
1	D0	A0	1500 × 1000 × 25
2	D1	A1	1000 × 700 × 25
3	D2	A2	700 × 500 × 15
4	D3	A3	500 × 350 × 15


warping. It should be softer enough to allow insertion and removal of drawing pins. Two battens are fastened to the board by screws, in slots. They prevent warping and at the same time permit expansion and contraction of the strips due to the change of moisture in the atmosphere.

One of the shorter edges of the drawing board is provided with an "Ebony edge" (hard wood) fitted perfectly straight, on which the stock of the 'T' square moves. It projects about 4 to 5mm from the board. While working, the ebony edge (working edge) side is to be placed to the left side on a table or castle at a convenient height and slope.

Now-a-days the drawing boards are available with laminated surfaces. The flatness can be checked by placing a straight edge on its surface. If no light passes between them, the surface is perfectly flat.

1.1.3.2 T-Square

It is T - shaped made of well-seasoned wood, or plastic material. It has two parts, namely the head and the blade. One edge of the blade is the working edge. The blade is screwed to this head such that the working edge is at right angle to head.

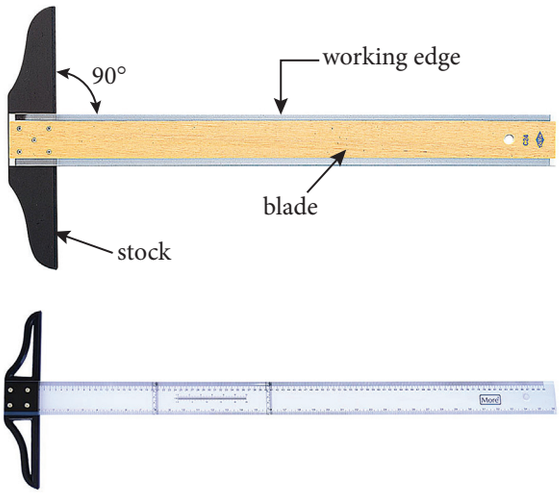

The standard size of T-Squares as per IS 1360 – 1989.

S.No	Designation	Blade Length in mm
1.	T_0	1500
2.	T_1	1000
3.	T_2	700
4.	T_3	500

The T-Square can move up and down direction only.

The T-Square is used to draw horizontal lines, parallel lines and to guide/hold the setsquares, stencils, etc.

Civil_English_Unit_1.indd 4 12/21/2019 1:06:32 PM