
iii) Sill Level

The bottom surface of a door or window opening is known as sill level.

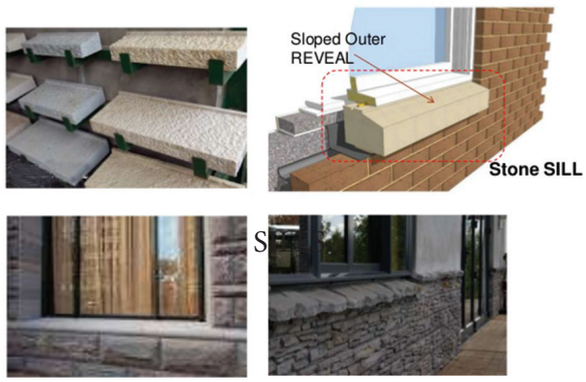

iv) Corbel

It is projection provided on the face of the wall by projecting stones. The projection is used to serve as a support for wall plates (wooden beam) for roof trusses, beams, etc.




v) Spalls


Stone chips broken off from large size stone during dressing and shaping are known as spalls. These are used as filling stones.

vi) Weathering

It is a term to indicate the bevelled top surface of the stone. It is sloped so as to allow easy drain of rain water.

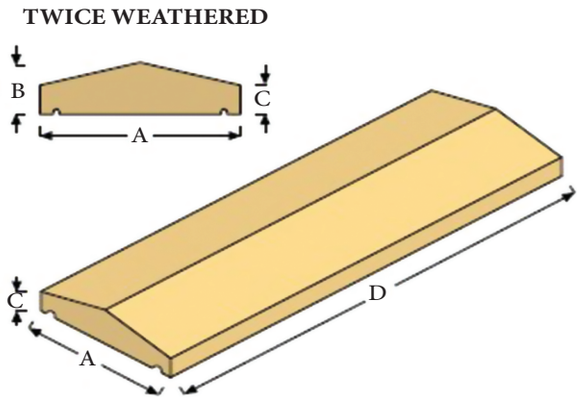

vii) Through Stones

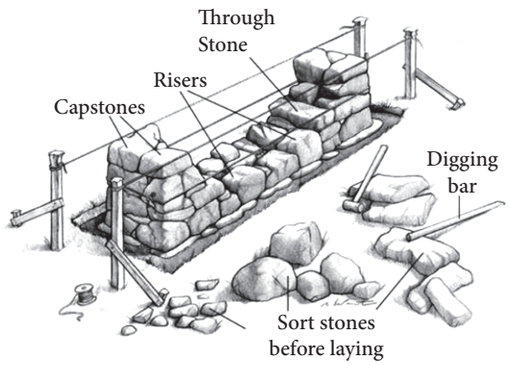

In stone masonry, some stones at regular intervals are placed through the full thickness of wall to develop bond. Such stones are known as through stones.

viii) Cornice



Civil_English_Unit_6.indd 136 12/21/2019 4:39:51 PM