smoothly dressed by means of a pointed chisel. So that, all the projections are removed and a fairly smooth surface is obtained. This type of dressing is commonly adopted for ashlar work.




6.2.3.3 Punched Dressing

This is another form of rough dressing usually used for lower portions of the buildings. The exposed face of the stone is dressed with the help of a punch, thus making depressions or punch hole on it at some regular distance.



6.2.3.4 Furrowed Dressing

This type of finish is applied to the fillets or flat bands of cornices, string courses, doors and windows, etc. A margin of about 20mm width is sunk on all the edges of the stones and the central portion is made to project about 15mm.

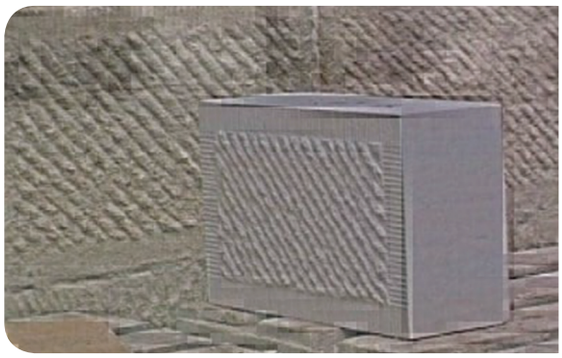

6.2.3.5 Combed Dressing

Combed finish is suitable for soft stones. Steel combs of sharp teeth is dragged on the surface of soft stones. This is done in all directions of the stone surface. This also called as dragged finish.



6.2.4 Classification Of Stone Masonry

The stone masonry classified as

1. Rubble masonry
2. Ashlar masonry

Civil_English_Unit_6.indd 139 12/21/2019 4:39:52 PM