
6.3.3 Bonds in Brick Works

The different types of bonds commonly adopted in brick work:


1. Stretcher bond.
2. Header bond.
3. English bond.
4. Flemish bond.
5. Garden wall bond.
6. Raking bond.
7. Dutch bond.
8. Brick on edge bond.

6.3.3.1 Stretcher Bond

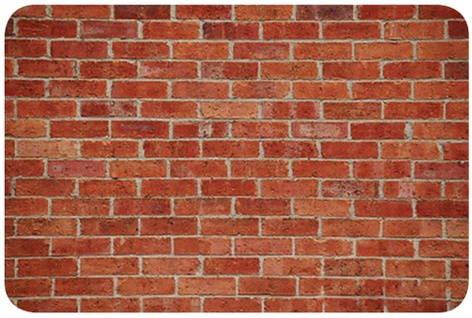

In this arrangement of bonding in brick work, all the bricks are laid as stretchers. The thickness of the wall is half brick. It is commonly adopted in the cavity walls and partition walls.

6.3.3.2 Header Bond

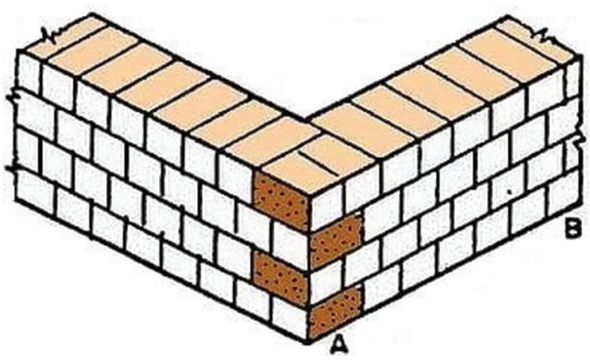


In this type of bonding, all the bricks are laid as headers on the face. It is used for walls curved on plan. The thickness of the wall is equal to one brick.

6.3.3.3 English Bond

This is the most commonly used bond because it is stronger than the other bonds.

The important features of English bond

i. The bond consists of alternate course of headers and stretchers.
ii. A queen closer will be placed next to the first header in each header course.
iii. A course consisting of headers on front face will show headers on the back face also in one brick, two brick, and three brick thick walls.
iv. In walls having their thicknesses equal to an odd number of half bricks (i.e. 1½ brick thick walls or 2½" brick thick walls and so on). The same course will show stretchers on one face and headers on the back.
v. Continuous vertical joints are eliminated.
vi. More quantity of cement mortar consumes in header course than stretcher course. As for as possible less quantity of cement mortar should be used for header course. Otherwise vertical joint will be formed in next course.

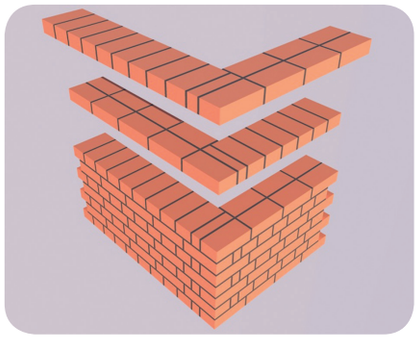

Civil_English_Unit_6.indd 147 12/21/2019 4:39:53 PM