v. **Straight Edge**: It is used to check the vertical and straight alignment of walls.

vi. **Mason Square**: It is used to set right angles.

vii. **Hammer**: It is used for breaking and rough dressing of stones.


viii. **Crowbar**: To break the stones in quarry.

ix. **Chisels**: To dress stones.

x. **Pick Axe**: To split stones and for rough dressing.

xi. **Bevel**: To set out angles.



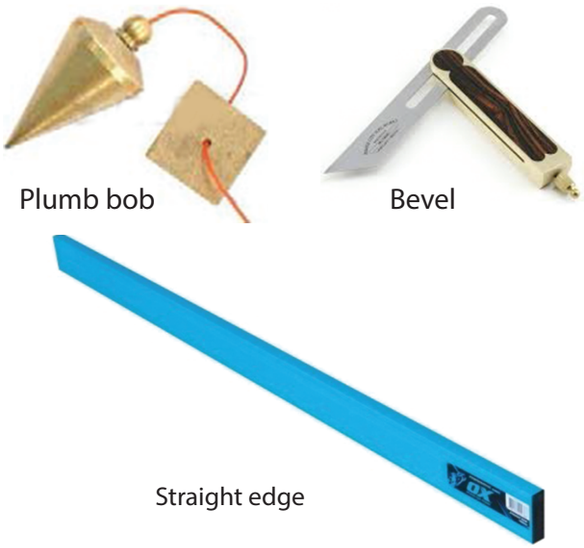











Line & Pins



Chisel

6.3.5 Points to be considered in the construction of Brick Masonry

I. The bricks used in a good work should be sound, hard and well burnt with uniform size, shape and colour.

ii. The bricks should be thoroughly soaked in water before its use. It reduces their tendency of suction of water from wet mortar.

iii. Only specified mortar of a good quality should be used.

iv. No brick bats should be used in the work except as closers.

v. The progress of work in raising masonry should be in uniform layers at one level.

Civil_English_Unit_6.indd 149 12/21/2019 4:39:54 PM