

7.1.2.6 Reinforced Cement Concrete Lintels

At present, the lintels of RCC are widely used for the openings of doors, windows, etc., in the buildings because of its strength, rigidity, fire resistance, economy and ease in construction. RCC lintels are suitable for all the loads and to any span. The width of lintel is equal to width of wall. Depth of lintel is depend upon the length of span and magnitude of loading.




7.1.3 Arches - Introduction

An arch is a structure that is curved at the top and is supported on either side by a pillar, post or wall. It is constructed of wedge shaped block of stones or bricks joined together with mortar and provided across the opening to carry the weight of the structure above the opening.



7.1.4. Technical Terms

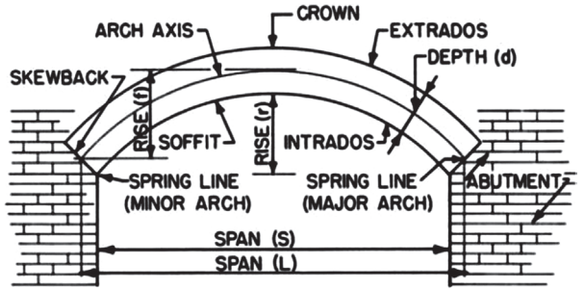

The various technical terms used in arches are as follows:

a) **Abutment**: This is the end support of an arch.
b) **Pier**: These are the intermediate supports of an arcade.
c) **Intrados**: This is the inner curved surface of an arch.
d) **Extrados**: This is the outer curved surface of an arch.
e) **Voussoirs**: The voussoirs or arch stones are the wedge shaped units forming the arch.
f) **Springing stone**: The springing stone or springer is the first voussoir at springing level on either side of the arch.
g) **Springing line**: This is an imaginary line joining the two springing points.
h) **Crown**: This is the highest point of extrados or it is the highest part of an arch.
i) **Key stone**: This is the highest central wedge shaped block of an arch.
j) **Skew back**: This is the inclined surface of the abutment on which the arch rests.

Civil_English_Unit_7.indd 156 12/21/2019 4:57:54 PM