

7.2.4.6 Glazed Door

This type of door is used in residential as well as public buildings like hospitals, schools or colleges, etc., to get extra natural lighting in addition to the lighting provided by windows. They may be partially or fully glazed. The glass should be fitted in frames by using putty.



Fully Glazed Door




Partly Glazed Door

7.2.4.7 Flush Doors


Flush doors have pleasing appearance, simple construction, high strength, durability and economic. Flush doors can be classified in following types.

i. Solid core type flush door
ii. Hollow core type flush door

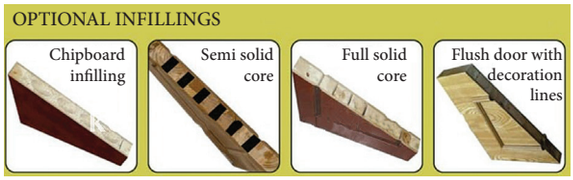

i) **Solid core type flush door:** This type of door is made out of selected pieces of timber placed in series and pasted together in between the frame work. As it is sandwiched between plywoods, it acts as a solid material. The thickness of the shutter should be 30mm.

ii) **Hollow core type flush door:** In this type, the frame consists of styles, top rail, bottom rail and minimum intermediate rails. The space between styles and the rails is divided by fixing wooden battens not less than 25mm in width. Thus the voids are equally distributed. The voids should be filled with light weight material like cork. Plywood sheets and face veneers are then glued under pressure on both faces of the core.

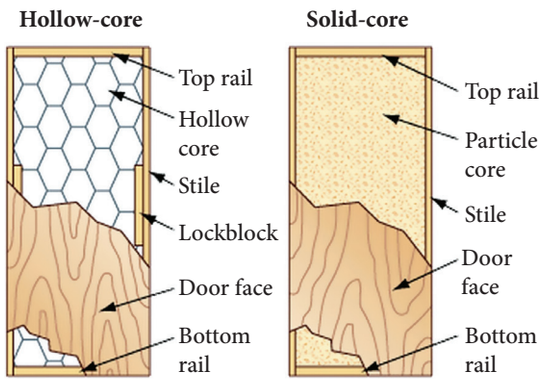

7.2.4.8 Louvered Doors

In this type, the styles of shutter are grooved to receive a series of louvers which may be of glass or wood. The Louvers are set within the grooves in inclined position, so

Civil_English_Unit_7.indd 164 12/21/2019 4:57:58 PM