

note with the corresponding feature on the drawing. It is drawn at 30°, 45° or 60° with the horizontal and it should be drawn radially to indicate the radius or diameter of a circle or an arc.

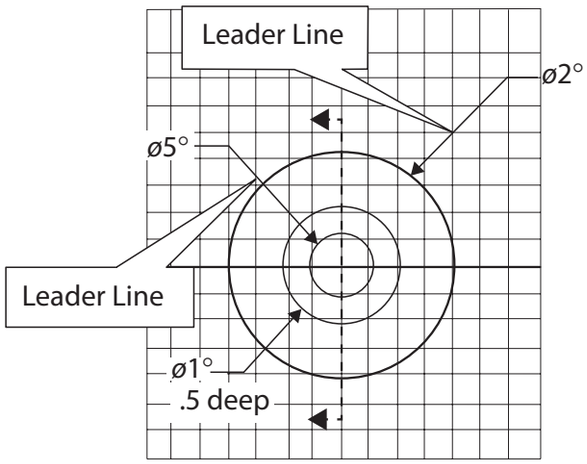

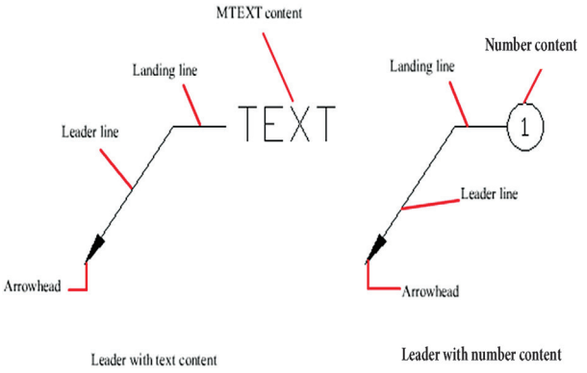

1.2.3 Lettering

Letters and numerals are used in Engineering drawing to specify the measurement of object and description of that object. H or HB pencils are used to write letters and numerals.


Capital letters are generally used in engineering drawing. But small letters recommended by international standard are also used.


To write letters and numerals, drawing instruments should not be used, as fastness cannot be achieved and also takes more time.

Generally letters and numerals are written in two methods.


1. Vertical Type
2. Inclined Type

Vertical Type: In vertical type of lettering, the letters and numerals should be written perpendicular to the horizontal level.

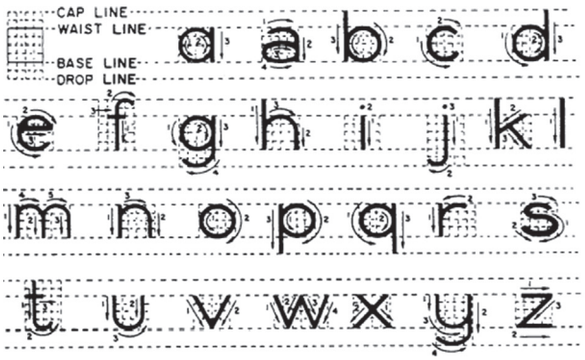

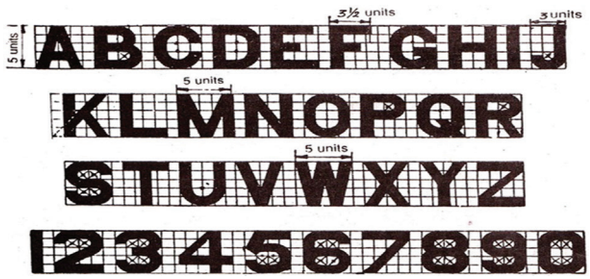

Inclined Type: In this type letters and numerals should be inclined to 75° to horizontal level.

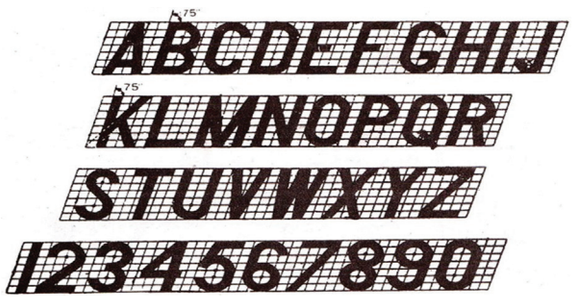

Civil_English_Unit_1.indd 17 12/21/2019 1:06:38 PM