

Lines are Drawn in Three Methods.

1. Absolute co-ordinate method.
2. Relative co-ordinate method.
3. Polar co-ordinate method.


1. **Absolute Co-Ordinate Method:** In this method, we have to give the statement of points from origin.

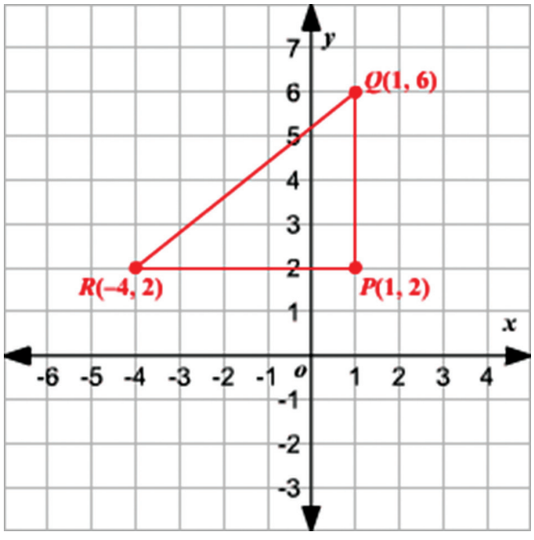


2. **Relative Co-Ordinate Method**: In this method, we have to give the co-ordinates of the starting point towards X-axis and Y-axis or distance of Y axis from the point.

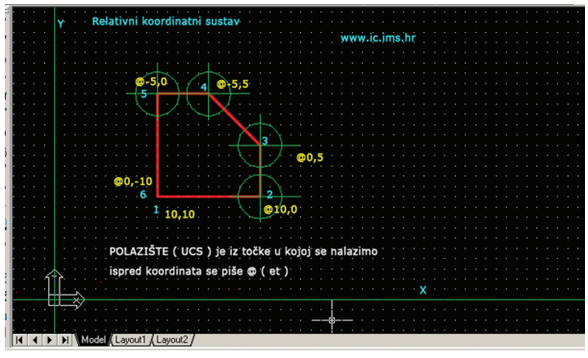

3. **Polar Co-Ordinate Method**: In this method, sketch is drawn by giving the angle of direction and distance from starting point to the next point.

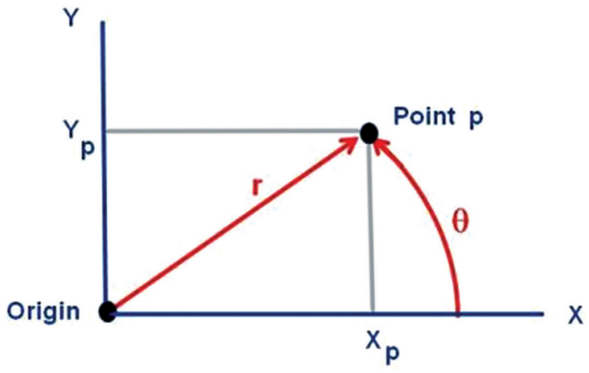

2.2.2.2 Polyline

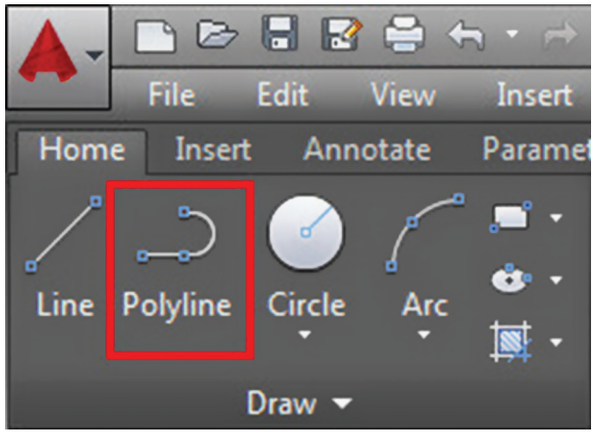

Polyline means many characteristics of a line. It can be drawn by using the polyline toolbar or by typing PL and pressing ENTER key.

Special Charecteristics of Polylines:

1. Polyline has a single characteristic feature.
2. We can enlarge the size and thickness of line.
3. With polyline, we can draw different shaped drawings with a single characteristic feature.

Civil_English_Unit_2.indd 34 12/21/2019 1:58:18 PM