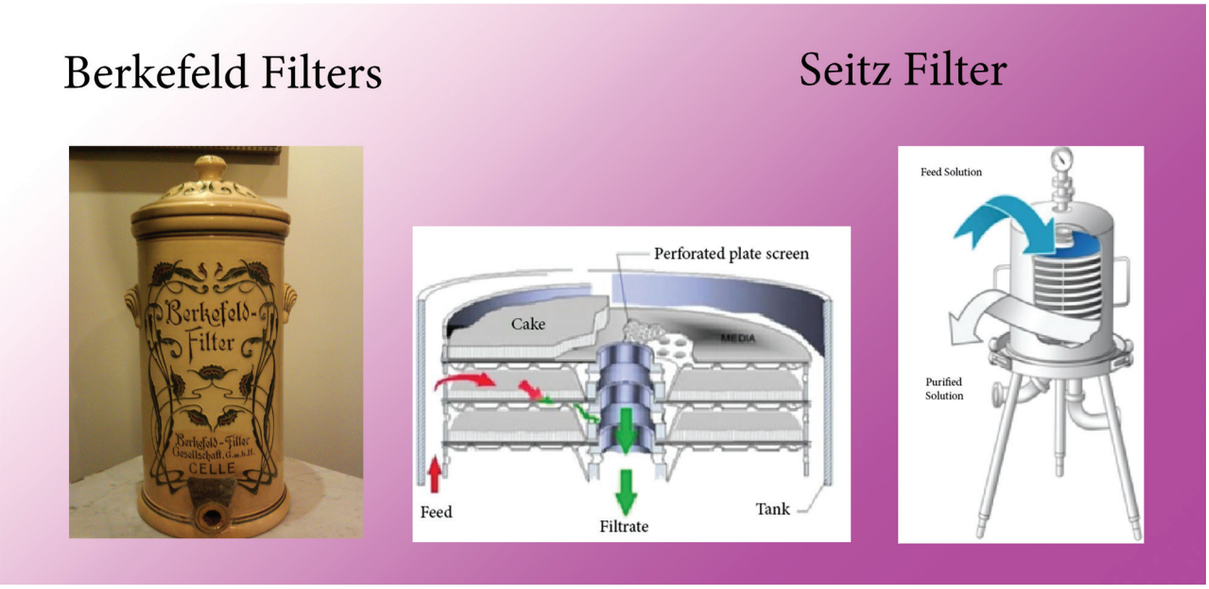


Figure 4.6: Types of depth filters

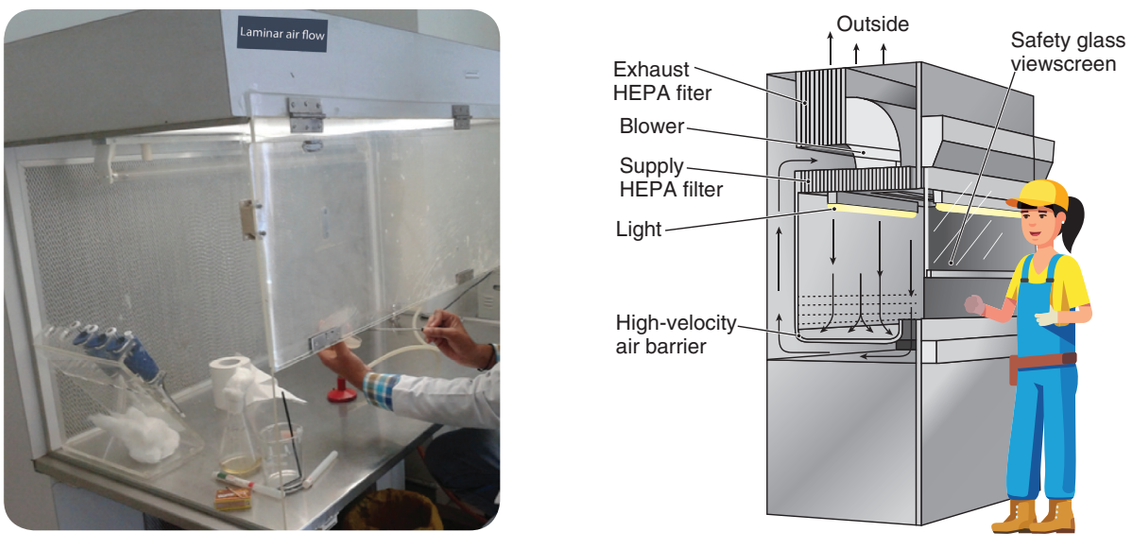


Figure 4.7: Laminar air flow

The air is freed from infection by passing it through High Efficiency Particle Arrester (HEPA) filter. Laminar air flow biological safety cabinets are one of the most important air filtration systems (Figure 4.7). It employes HEPA filters which remove 99.97% of 0.33µm particles size. Some operation theaters and rooms occupied by burn patients receive filtered air to lower the numbers of airborne microbes. HEPA filters remove almost all microorganisms above 0.3µm in diameter.

Various physical methods of sterlization is summarized in Table 4.2

TN_GOVT_XI_Micro_Biology_CH04.indd 48 16-02-2019 9.56.38 AM