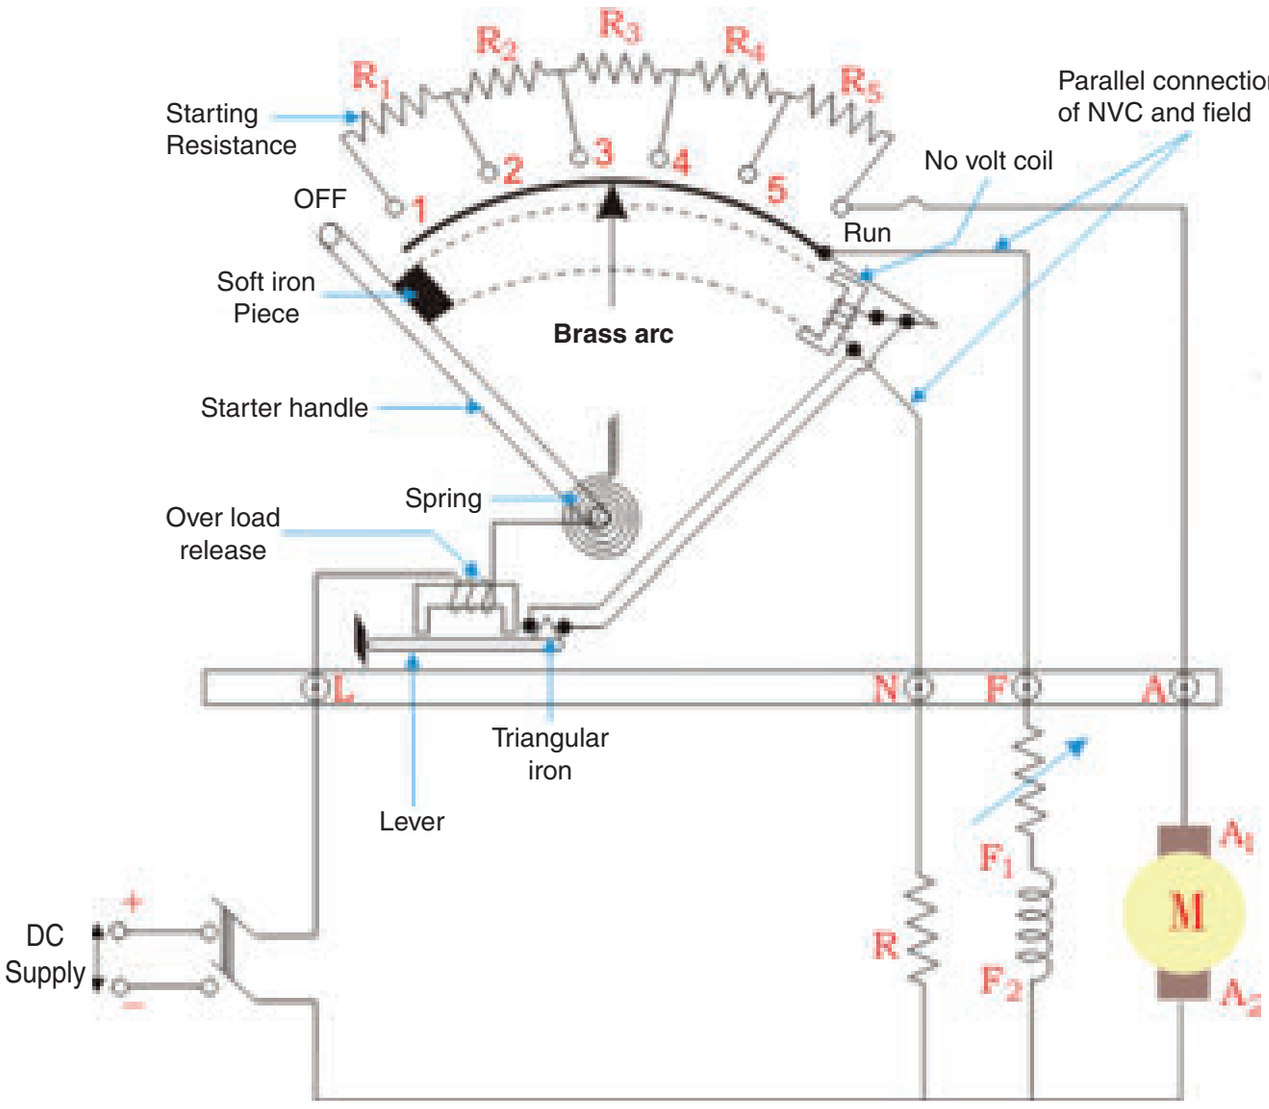


Fig. 8.2 Four point starter

The constructional details and operational details are the same as that of the three point starter, except the following difference.

In three point starter, the coil of the no volt release is connected in series with the field circuit. But in a four point starter, it is connected across the supply line through a protective resistance R_P. The no volt coil is independent from field current, so any change in shunt field current does not affect the current through the no volt coil. The current through the no volt coil does not decrease even when the field rheostat is adjusted for speed variations. The electromagnetic pull produced by the no volt coil will always be the same and sufficient to hold the handle in 'ON' position. Thus, the operation in three point starter never takes place in four point starter.

BEE_ENG_Chapter_08.indd 121 12/27/2019 10:59:53 AM