
The construction of other bays is commenced only after the concrete laid in earlier bays are dried out.

ii. Continuous bay method:

In this method, all the bays 1,2 and 3 are laid continuously without any break and construction joints are provided at the end of the day's work.

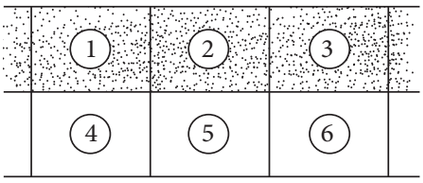

CONTINUOUS CONSTRUCTION METHOD

Construction Procedure for Cement Concrete Roads

Stages of Construction

1. Subgrade preparation
2. Base course preparation
3. Formwork
4. Watering the prepared base
5. Mixing, placing and spreading of concrete
6. Compaction and floating
7. Belting
8. Brooming
9. Checking the finished surface
10. Curing
11. Filling joints and edging



1. Subgrade Preparation

The subgrade is properly compacted and is brought to the required gradient and camber. It is checked by means of a template.

2. Base course preparation

If found necessary, a WBM base course is provided over the subgrade.

3. Formwork

After the base course is completed, formwork for the concrete slab is laid. This may be of steel or timber. It should be equal to the thickness of the slab. It should be oiled and checked for line and grade before concreting.

4. Watering the prepared base

After formwork has been set, the surface of base or subgrade is wetted with as much water as it can readily absorb. The surface should be kept wet for about 12hours before concreting. The object of watering is to avoid absorption of water from concrete by saturating the subgrade or base.

5. Mixing, placing and spreading of concrete

The concrete should be prepared to the designed water-cement ratio. Then it is placed in the form work to its full width in layers not exceeding 5cm thick and proceeded lengthwise. The topmost layer should be to the actual profile.

6. Compacting and floating

The compaction and consolidation of concrete may be done by means of hand tampers or mechanical vibrators. The surface is tamped longitudinally, and is finished

U6.indd 123 1/10/2020 1:35:02 PM