8. To execute engineering works for proper management.

3.2 Chain Surveying

3.2.1 Definition

Chain surveying is the simplest process of measuring distances with a chain. It is also called chaining.

3.2.2 Purpose of Chain surveying

1. To secure data necessary for making a plan.
2. To secure data for exact description of boundary of land.
3. To determine the area of land.
4. To divide a piece of land into a number of units.

3.2.3 Operations in Chain surveying


1. Ranging
2. Chaining
3. Offsetting

3.2.4 Instruments used in Chain surveying

1. Chain
2. Tape
3. Arrows
4. Pegs
5. Ranging rods
6. Offset rods
7. Plumb bob
8. Cross staff
9. Optical square
10. Field book

1. Chain

A chain may metric or non metric. Generally a chain is divided into 100 links or 150 links. The links are made by galvanized iron (or) steel wires of 4 mm to 6 mm diameter. The ends of the links are bent into a loop and connected to a circular or oval rings. The ends of the chain are provided with a swivel jointed brass handle as shown in figure.

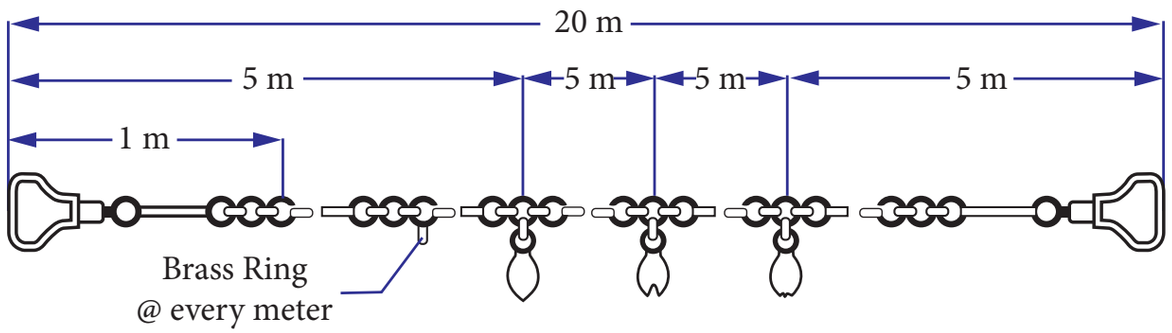



Details of metric chain

U3.indd 38 12/11/2019 5:22:11 PM