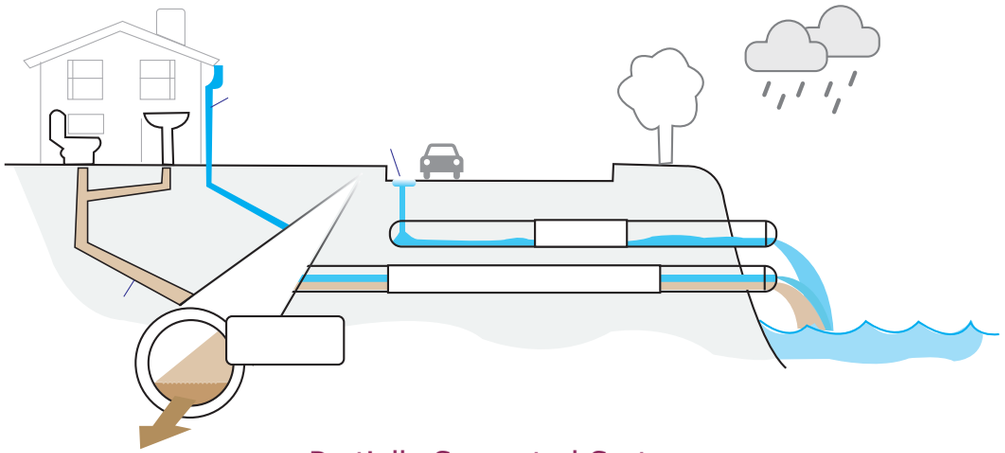


Partially Separated System

5.3 Quantity of Sewage

Generally, sewage denotes domestic and industrial waste water. The quantity of sewage depends on the population and the quantity of water utilised.

The sewage is categorised into two types

1. Dry weather flow
2. Storm water

5.3.1 Dry Weather flow

During Dry weather i.e. summer season without rain, the total quantity of sewage flows through the sewer line is called as "dry weather flow".

Factors affecting dry weather flow

1. Infiltration and exfiltration of ground water
2. Location of industries
3. Population
4. Rate of water supply

5.3.2 Storm Water

During rainfall, the rainwater flows over the surface as storm water.

The quantity of storm water is affected by various factors such as

1. Intensity of rainfall
2. Characteristics of catchment area
3. Duration of Storms, etc.

5.4 Construction of Sewers

The construction of Sewers is discussed under the following topics.

1. Shape of Sewers
2. Gradient of Sewers
3. Laying of Sewers
4. Testing of Sewers
5. Ventilation of Sewers
6. Cleaning of Sewers

5.4.1 Shape of Sewers

The efficiency of the flow depends on the cross section of the sewer. Usually circular sewers are adopted in practice.

The sewer sections are broadly classified into

a. Circular Sewer sections
b. Non-Circular Sewer sections

a. Circular Sewer sections

They are easy to manufacture or construct and handle. They are best suited for diameter up to 1.5 m and are useful in separate system.

U5.indd 90 12/11/2019 1:03:04 PM