DO YOU KNOW?

HISTORY OF ETHERNET

Bob Metcalfe **invented Ethernet** in 1973 while at Xerox PARC (Palo Alto Research Center in California, USA) and the company patented it in 1975. It was used for interconnecting advanced computer workstations, making it possible to send data to one another and to high-speed laser printers. Metcalfe and others then finalized an open **Ethernet** standard in 1980, and by 1985 it had become an IEEE standard. An industry was born, and **Ethernet** was ready for its meteoric rise.

There have been a number of networking standards published in the 802 branch of the IEEE, including the 802.3 Ethernet and 802.5 Token Ring standards. The IEEE standard was first published in 1985 with the title *IEEE 802.3 Carrier Sense Multiple Access with Collision Detection (CSMA/CD) Access Method and Physical Layer Specifications* . The IEEE standard does not use "Ethernet" in the title, even though Xerox relinquished their trademark on the Ethernet name. That's because open standards committees are quite sensitive about using commercial names that might imply endorsement of a particular company. As a result, the IEEE calls this technology *802.3 CSMA/CD* or just *802.3*. However, most people still use the Ethernet name when referring to the network system described in the 802.3 standard.

Source : www.wikipedia.org

13.4 Types of Jacks

Registered Jacks: A Registered Jack commonly known as RJ is a network interface used for network cabling, wiring and jack construction. The primary function of the registered jack is to connect different data equipment and telecommunication devices. The commonly known registered jacks are RJ-11, RJ-45, RJ-21, and RJ-28. The registered jack refers to the male physical connector (Plug), a female physical connector (Jack) and it's wiring. We will see some of the variety of registered jack below with some definitions. See Figure 13.16

1. **RJ-11:** It is the most popular modern form of registered jack. It is found in home and office. This registered jack is mainly used in telephone and landlines. When we look at the pin details of the RJ-11, there are 6 pin where the two pins give the transmission configuration, the two pins give the receiver configuration and the other two pins will be kept for reserved. The two pin will have the positive terminal and the negative terminal.

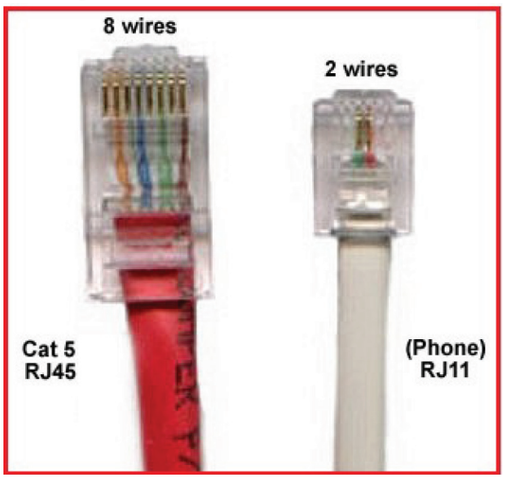


Figure 13.16 comparison of RJ-45 with RJ-11

2. **RJ-14 and RJ-61:** The RJ-14 is the same as RJ-11 which will be used for telephone lines which has 6 pins whereas the RJ-61 will have 8 pins.

XII CompApp_English version CHAPTER 13.indd 186 23-02-2020 13:00:29