at another end and vice versa. Specifically, connect the solid Green (G) with the solid Orange, and connect the green/white with the orange/white. See Figure 13.20

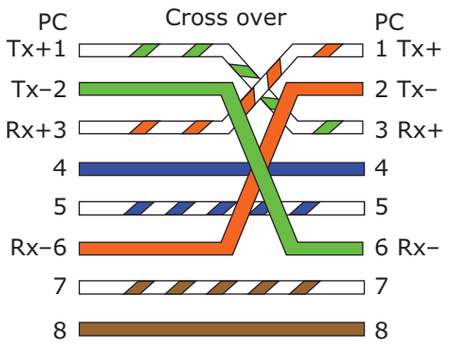


Figure 13.20 Cross over wiring

13.5.3 Roll-over Wiring

Rollover cable is a type of null-modem cable that is often used to connect a device console port to make programming changes to the device. The roll over wiring have opposite pin arrangements, all the cables are rolled over to different arrangements. In the rollover cable, The coloured wires are reversed on other end i.e. The pins on one end are connected with other end in reverse order (i.e. pin 1 to 8, 2 to 7, 3 to 6, 4 to 5, 5 to 4, 6 to 3, 7 to 2, 8 to 1).

Rollover cable is also known as Yost cable or Console cable. It is typically flat (and light blue color) to distinguish it from other types of network cabling.

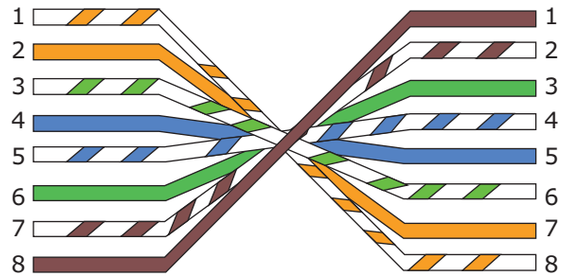


Figure 13.21 Roll over Wiring

These three arrangements are used to perform an interface change. But, all the three arrangements transmits the data at the same speed only. See Figure 13.21



How to determine the type of Ethernet cables?

Straight-through: The coloured wires are in the same sequence at both ends of the cable.

Cross-over: The first coloured wire at one end of the cable is the third coloured wire at the other end of the cable.

Roll-over: The coloured wires are in the opposite sequence at either end of the cable.

POINTS TO REMEMBER

- By using World Wide Web, now people can access the network from different parts of the world.
- The Network cables are used to transfer the data and information to another computer.
- Coaxial cables are used for connecting the television with setup box.
- Twisted cable has 13 wires which are twisted to ignore electromagnetic interference
- Two types of twisted pair cables are Unshielded Twisted Pair (UTP) and Shielded Twisted pair (STP).
- The optic cable uses light to transmit the information from one place to

XII CompApp_English version CHAPTER 13.indd 188 23-02-2020 13:00:29