has threads that are perpendicular to the selvage of the fabric. The term on grain refers to the length and crosswise thread being right angle to each other. This is very basic in woven fabric as they are made by warp and weft interlaced at right angle to each other.

7.4.2 Off Grain

When the warp and weft threads are not exactly at the right-angled ways, they are termed to be in off grain. This is usually a defect and methods are available to set the grain to the on-grain line.

7.4.3 Bias Grain

When the garment pattern is cut at 45 degrees it is called bias grain. This has a good drape as it is taken in the diagonal way. Further extending of the pattern tends to increase the fall of the fabric and gives beautiful wavy effect.

7.4.4 On Grain Print

This is when the print is neatly lined up with the warp yarns and is parallel to the selvedge. It is on grain print and results in a neat look of the design on a fabric.

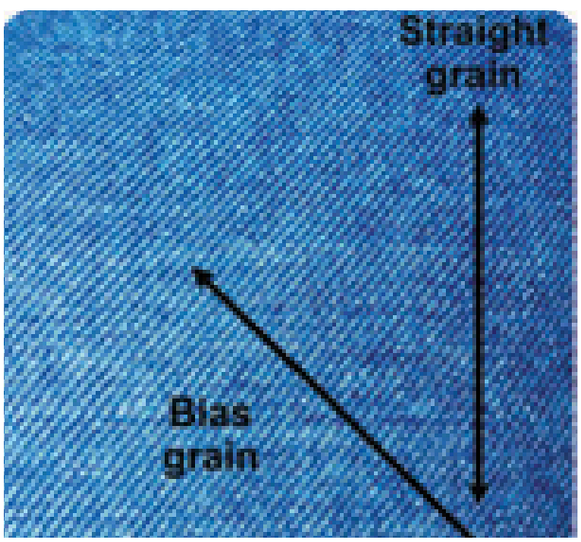


Figure 7.2 Types of Grain

7.4.5 Off Grain Print


In contrast to the above on grain print, off grain is the printed set of design which is not parallel to the selvedge. This can be considered as a defect in printing as it directly implies poor quality in printing.

It is also important to remember that when the textile material is made in a weaving loom or a knitting machine it will be in the perfect grain only. During the various textile processes like washing, calendaring, scouring, mercerisation the selvedge are held tight resulting change in the grain lines. When the grain line is not maintained in the way it should be done, there are chances for the fabric to lose shape, sag and even be uncomfortable to wear.

DO YOU KNOW?

At which angle does bias grain run in a fabric?

The bias grain runs at 45° angle, to the selvages on any fabric.

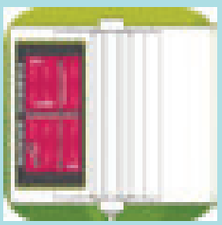

7.5 Identification of Right and Wrong Side

7.5.1 Woven Fabric

Weaving is the art of interlacing warp and weft at right angle direction. This compact construction creates a strong fabric. In order to identify the right side of the fabric, the design on the woven fabric should be observed. When the floats of a design are less and the motif is clear it is the front side of the woven fabric. Contrastingly, when the motif is of dull shade or more

XII TDD_English version CHAPTER 07.indd 102 1/13/2020 3:11:41 PM